



MY X KRONOZ 

SMARTWATCH

DESIGNED IN SWITZERLAND

ZeClock

ENGLISH

CHARGING	04	RECORDER	13
PAIRING	06	PEDOMETER	13
DISPLAYS	09	FIND MY PHONE	14
CALLS	10	CAMERA REMOTE	14
NOTIFICATIONS	11	ANTI-LOST ALERT	14
VOICE CONTROL	12	TECH SPECS	15

OVERVIEW



TOP KEY

LONG PRESS Power ON / OFF

LONG PRESS Exit menu

LONG PRESS 5-8s Reset

PRESS 1 X Scroll through menu icons

PRESS 1 X Answer incoming call

PRESS 1 X Light up the screen

BOTTOM KEY

PRESS 1 X Enter selected menu

PRESS 1 X Start a function

PRESS 1 X Reject incoming call


PRESS 1 X End current call

PRESS 1 X Light up the screen



To set the time, gently pull out the crown, turn it, and push it back. ZeClock will automatically sync the date of your paired mobile device once you have installed ZeClock App on your smartphone (iOS 7+ and select Android 4.3+ devices with Bluetooth 4.0)

1. CHARGING

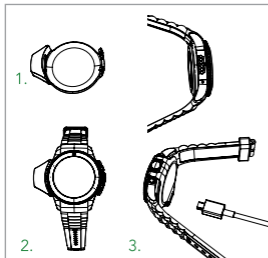

Charge ZeClock for two hours before your first use.

1. Put the charging cradle beneath the watch
2. Make sure the 4 pins on the cradle fit correctly onto the charging terminals on the left side of ZeClock
3. Connect the charging cradle with the USB cable
4. Plug the big end of the USB cable to a power source
5. A battery indicator will fill to indicate charging is in progress. Once ZeClock is charged, the battery indicator will be full

2. PAIRING

When using ZeClock for the first time, you must pair it to your phone via Bluetooth. Bluetooth is on by default.

- Enable Bluetooth on your mobile device
- Select **ZeClock** in the list of devices
- A paired icon on ZeClock display and a gentle vibration will confirm successful pairing



You only need to pair your device once. After the initial pairing, ZeClock will automatically connect to your phone as long as it is turned on and within range. To pair ZeClock to another device, repeat the same steps

System Requirements

iOS 7+

iPhone 4s, 5, 5c, 5s, 6, 6 Plus.
iPad (3rd, 4th and 5th generation)
iPad Mini, iPod touch (5th generation)

SELECT ANDROID 4.3 +

ZeClock app is available for select
Android 4.3 + devices that support
Bluetooth 4.0

Visit www.mykronoz.com to get the latest compatibility list.

Search for ZeClock App in the App store or Google Play, download and install the App on your mobile device.



3. DISPLAYS

Homepage



Bluetooth is ON



Device is connected



Voice Control



Recorder



Pedometer



Notifications



Call history



Find my phone



Camera remote



Anti lost alert



Incoming call



4. CALLS

After a successful Bluetooth pairing with your smartphone, Bluetooth calls feature is on. You can answer and make phone calls from ZeClock.

ANSWER AN INCOMING CALL

Press 1 X the TOP KEY

END CURRENT CALL

Press 1 X the BOTTOM KEY

REJECT AN INCOMING CALL

Press 1 X the BOTTOM KEY

MAKE A CALL

User can make calls from the [Call History](#) panel. Single Press BOTTOM KEY to enter the menu. Single press TOP KEY to select a record. Press BOTTOM KEY to call the selected contact. Short press BOTTOM KEY to end the call.

5. NOTIFICATIONS

After successful Bluetooth connection and installation of ZeClock App on your smartphone, ZeClock will show notifications of SMS, emails, social media, calendar events, and personal life reminders. On ZeClock App, tap **Notifications** tab to select the notifications you want to receive onto your watch. If you wish to disable certain notifications, swipe the selection button to the left.

Setting up notifications for iOS users:

- Go to the Settings of your iOS device
- Tap "Notification Center"
- Select which type of notifications you wish to receive on ZeClock
- Enable "Show in Notification Center" to receive the notification on ZeClock



The total number of notifications will be displayed on the Notifications panel of ZeClock. Single press BOTTOM KEY to view the notifications list, another single press to clear the data. Long press TOP KEY to exit

6. VOICE CONTROL

Use the **Voice Control** feature to voice command your mobile device remotely or search information from the Internet.

On the **Voice Control** panel, single press BOTTOM KEY to turn on **Voice Control**, another single press to switch between start and stop. Long press TOP KEY to exit the menu.

Examples of what you can ask or do:

- Call (name of your contact)
- Send a SMS to (name of your contact)
- What's the weather like?
- Set an alarm for tomorrow 5 am



This feature is available with iOS 7+ devices that support Siri and Select Android 4.3 + devices that support Google Now. To use voice control, your smartphone must have access to the Internet using either 3/4G or Wifi

7. RECORDER

On the **Recorder** panel, single press BOTTOM KEY to enter the menu. Short press TOP KEY to scroll between **Record** and **Play**. Single press BOTTOM KEY to select **Record** and start recording your voice memo. Press BOTTOM KEY to switch between **Recording** and **Saved** file. If you select the **Play** button, single press BOTTOM KEY to **Play** or **Pause** the latest record. Long Press TOP KEY to exit the menu.



Only 1 recording file can be saved

8. PEDOMETER

On the **Pedometer** panel, single press BOTTOM KEY to enter the menu. Short press BOTTOM KEY to turn on the pedometer, another press to turn off or pause. To clear the steps data, single press TOP KEY when pedometer is on. Long press TOP KEY to exit the menu.



The pedometer automatically resets at midnight

9. FIND MY PHONE

On the **Find my phone** panel, single press BOTTOM KEY to enter the menu. Short press BOTTOM KEY to start finding your phone. This operation will make your phone ring. Long press TOP KEY to exit the menu.

10. CAMERA REMOTE

On the **Camera Remote** panel, single press BOTTOM KEY to enter the menu. Short press TOP KEY to take pictures while the camera on your paired smartphone is on. Pictures will be saved in the smartphone. Long press TOP KEY to exit the menu.

11. ANTI-LOST

This option can be enabled from ZeClock App. If **Anti-Lost** option is on, ZeClock will alert you when your paired device leaves the Bluetooth operating range (10 meters).

12. TECH SPECS

Dimensions	45*15.2 mm
Weight	65 grs
Bluetooth	BLE 4.0
Battery type	Li-ion 200 mAh
Watch movement battery type	SR626W
Watch movement battery life	2 years
Talk time	2-3 hours
Standby time	4 days
Charging time	1 hour
Movement	Quartz
Display	OLED 96*32 pixels
Sensor	6-axis accelerometer
Operating temperature	-10°C to +60°C
Water resistance	IP 54
International warranty	1 year

ABOUT THIS MANUAL

The features of ZeClock and the contents of the user manual are subject to change. To get the latest instructions on how to use this product, please refer to the online user manual available on www.mykronoz.com

SUPPORT

If you have any question or require assistance regarding our product, please visit www.mykronoz.com/support/ or email us at support@mykronoz.com

ZeClock

FRANÇAIS

CHARGE	18	ENREGISTREUR VOCAL	27
APPAIRAGE	20	PODOMÈTRE	27
AFFICHAGES	23	LOCALISER MON TÉL.	28
APPELS	24	DÉCLENCHÉUR PHOTO	28
NOTIFICATIONS	25	ALERTE ANTI-PERTE	28
COMMANDE VOCALE	26	CARACT. TECHNIQUES	29

APERÇU



BOUTON SUPÉRIEUR

APPUI LONG Allumer / Eteindre

APPUI LONG Quitter le menu

APPUI 5-8 sec Réinitialiser

APPUI 1 X Naviguer à travers les menus

APPUI 1 X Répondre à un appel

APPUI 1 X Allumer l'écran

BOUTON INFÉRIEUR

APPUI 1 X Entrer dans le menu

APPUI 1 X Démarrer une fonction

APPUI 1 X Rejeter un appel


APPUI 1 X Terminer l'appel

APPUI 1 X Allumer l'écran



Pour régler l'heure, tirez doucement la couronne, tournez la et repoussez la. ZeClock synchronisera automatiquement la date de votre appareil mobile jumelé une fois que vous avez installé l'application ZeClock sur votre smartphone (appareils iOS 7+ et certains Android 4.3+ avec connectivité Bluetooth 4.0)

1. CHARGE

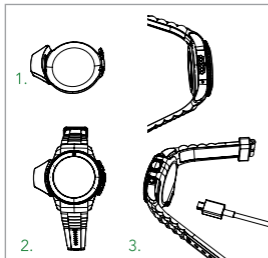

Chargez ZeClock pendant deux heures avant sa première utilisation.

1. Mettez le socle de charge sous la montre
2. Assurez-vous que les 4 bornes du socle soient bien alignées avec les contacts de charge situés sur le côté gauche de ZeClock
3. Branchez le câble USB au socle de charge
4. Branchez la grande extrémité du câble USB à une source d'alimentation
5. Un indicateur de la batterie confirme que la recharge est en cours. Une fois que ZeClock est chargée, l'indicateur de la batterie sera plein



Une charge complète dure environ 1 heure. Lorsque le niveau de batterie est faible, l'indicateur de batterie à l'écran vous avertira

2. APPAIRAGE

Lorsque vous utilisez ZeClock pour la première fois, vous devez l'appairer à votre téléphone via Bluetooth. Le Bluetooth est activé par default sur la montre.

- Activez le Bluetooth sur votre appareil mobile
- Sélectionnez **ZeClock** dans la liste des appareils
- Une icône d'appairage sur l'écran de votre ZeClock et une légère vibration confirment le succès de l'appairage



Cet appairage est nécessaire uniquement lors de la première utilisation. Par la suite, ZeClock se connectera automatiquement à votre téléphone si celui-ci est allumé et à proximité. Pour appairer ZeClock à un autre appareil, répétez la même procédure

Configurations Requises

iOS 7+

iPhone 4s, 5, 5c, 5s, 6, 6 Plus
iPad (3^{ème}, 4^{ème} and 5^{ème} génération) iPad
Mini, iPod touch (5^{ème} génération)

CERTAINS ANDROID 4.3 +

L'appli ZeClock est disponible pour
certains appareils Android 4.3 +
équipés de Bluetooth 4.0.

Consultez la liste des appareils compatibles sur www.mykronoz.com

Recherchez l'application **ZeClock** sur l'App store ou Google Play, téléchargez-la et installez-la sur votre appareil mobile



i

ZeClock synchronise les notifications de SMS, emails, réseaux sociaux, événements du calendrier et rappels quotidiens une fois que l'application ZeClock a été installée avec succès sur votre smartphone. Veuillez noter que certaines fonctionnalités fonctionneront uniquement si l'application ZeClock App a été préalablement installée sur votre smartphone

3. AFFICHAGES

Page d'accueil



Bluetooth activé



Appareil connecté



Commande vocale



Enregistreur



Podomètre



Notifications



Historique des appels



Localiser mon
téléphone



Déclencheur photo



Alerte anti-perte



Appel entrant



4. APPELS

Une fois l'appairage Bluetooth avec votre téléphone réussi, la fonction appel via Bluetooth est activée. Vous pouvez répondre et émettre des appels téléphoniques à partir de votre ZeClock.

RÉPONDRE À UN APPEL ENTRANT

Appuyer une fois sur le BOUTON SUPÉRIEUR

METTRE FIN À L'APPEL EN COURS

Appuyer une fois sur le BOUTON INFÉRIEUR

REFUSER UN APPEL ENTRANT

Appuyer une fois sur le BOUTON INFÉRIEUR

ÉMETTRE UN APPEL

L'utilisateur peut effectuer des appels à partir du menu [Historique des appels](#). Appuyez sur le BOUTON INFÉRIEUR pour entrer dans le menu. Puis appuyer sur le BOUTON SUPÉRIEUR pour faire défiler les appels. Appuyez sur le BOUTON INFÉRIEUR pour appeler le contact sélectionné. Appuyez brièvement sur le BOUTON INFÉRIEUR pour mettre fin à l'appel.



Une fois connecté via Bluetooth, ZeClock synchronise les derniers appels enregistrés à partir de votre smartphone. L'identification de l'appelant est disponible uniquement pour les caractères latins et cyrilliques (contacter support@mykronoz.com pour obtenir plus d'informations concernant la compatibilité avec d'autres caractères / langues)

5. NOTIFICATIONS

Une fois la connexion Bluetooth établie et l'installation de l'application ZeClock sur votre smartphone effectuée, ZeClock affiche les notifications de SMS, e-mails, réseaux sociaux, les événements du calendrier et rappels quotidiens. Depuis l'application ZeClock, appuyez sur l'onglet **Notifications** pour sélectionner le type de notifications que vous souhaitez recevoir sur votre montre. Si vous souhaitez désactiver certaines notifications, faites glisser le bouton de sélection vers la gauche.

Configuration des notifications pour les utilisateurs d'iOS:

- Allez dans les Réglages de votre appareil iOS
- Appuyez sur "Centre de Notifications"
- Sélectionnez le type de notifications que vous souhaitez recevoir sur ZeClock
- Activez l'option "Dans centre de notifications" pour recevoir la notification sur ZeClock



Le nombre total de notifications sera affiché sur l'écran Notifications de votre ZeClock. Appuyez sur le BOUTON INFÉRIEUR pour afficher la liste des notifications, puis un autre appui pour effacer les données. Maintenir appuyé le BOUTON SUPÉRIEUR pour quitter le menu

6. COMMANDE VOCALE

Utilisez la fonction *Commande Vocale* pour contrôler vocalement et à distance votre appareil mobile ou pour rechercher des informations sur Internet.

Depuis l'écran *Commande Vocale*, appuyez sur le BOUTON INFÉRIEUR pour activer la fonction, un autre appui pour basculer entre le démarrage et l'arrêt. Maintenir appuyé le BOUTON SUPÉRIEUR pour quitter le menu.

Exemples de ce que vous pouvez demander ou faire :

- Appeler (nom de votre contact)
- Envoyer un SMS à (nom de votre contact)
- Quel temps fait-il ?
- Configurer une alarme pour demain 5h

i

Cette fonction est disponible avec les appareils iOS 7+ compatibles avec Siri et certains appareils Android 4.3+ compatibles avec Google Now. Pour utiliser la commande vocale, votre appareil mobile doit avoir accès à Internet via la 3/4G ou le Wifi

7. ENREGISTREUR VOCAL

Depuis l'écran **Enregistreur vocal**, appuyez sur le BOUTON INFÉRIEUR pour entrer dans le menu. Appuyez brièvement sur le BOUTON SUPÉRIEUR pour naviguer entre l'option **Enregistrer** ou **Lecture**. Appuyez sur le BOUTON INFÉRIEUR pour sélectionner **Enregistrer** et commencer à enregistrer votre mémo vocal. Presser le BOUTON INFÉRIEUR pour basculer entre l'enregistrement et fichier enregistré. Si vous sélectionnez le bouton **Lecture**, appuyez sur le BOUTON INFÉRIEUR pour écouter ou mettre sur pause le dernier enregistrement. Maintenir appuyé le BOUTON SUPÉRIEUR pour quitter le menu.

i

Seul 1 fichier d'enregistrement peut être sauvegardé

8. PODOMÈTRE

Depuis l'écran **Podomètre**, appuyez sur le BOUTON INFÉRIEUR pour entrer dans le menu. Appuyez brièvement sur le BOUTON INFÉRIEUR pour démarrer le podomètre, répéter l'opération pour l'arrêter ou le mettre sur pause. Pour effacer les données, cliquez sur le BOUTON SUPÉRIEUR lorsque le podomètre est en fonction. Maintenir appuyé le BOUTON SUPÉRIEUR pour quitter le menu.

i

Le podomètre se réinitialise automatiquement à minuit

9. LOCALISER MON TÉLÉPHONE

Depuis l'écran [Localiser mon téléphone](#), appuyez sur le BOUTON INFÉRIEUR pour entrer dans le menu. Appuyez brièvement sur le BOUTON INFÉRIEUR pour retrouver votre téléphone. Cette opération fera sonner votre téléphone. Maintenir appuyé le BOUTON SUPÉRIEUR pour quitter le menu.

10. DÉCLENCHEUR PHOTO

Depuis l'écran [Déclencheur photo](#), appuyez sur le BOUTON INFÉRIEUR pour entrer dans le menu. Appuyez brièvement sur le BOUTON SUPÉRIEUR pour prendre des photos lorsque la fonction appareil photo de votre téléphone est activée. Les photos seront sauvegardées dans votre téléphone. Maintenir appuyé le BOUTON SUPÉRIEUR pour quitter le menu.

11. ALERTE ANTI-PERTE

Cette fonctionnalité est disponible à partir de l'application [ZeClock](#). Une fois que l'option [Anti-Perte](#) est activée, votre montre ZeClock vous avertira lorsque votre appareil mobile jumelé quitte le rayon de fonctionnement Bluetooth (10 mètres)

12. CARACTÉRISTIQUES TECHNIQUES

Dimensions	45*15.2 mm
Poids	65 gr
Bluetooth	BLE 4.0
Type de Batterie	Li-ion 200 mAh
Type de Batterie mouvement mécanique	SR626W
Autonomie batterie mouvement mécanique	2 ans
Autonomie en communication	2-3 heures
Autonomie en veille	4 jours
Durée de charge	1 heure
Mouvement	Quartz
Écran	OLED 96*32 pixels
Capteur	Accéléromètre à 6 axes
Température de fonctionnement	-10°C to +60°C
Résistance à l'eau	IP 54
Garantie internationale	1 an

À PROPOS DE CE MANUEL

Les fonctionnalités de ZeClock et le contenu du manuel de l'utilisateur sont susceptibles d'être modifiés. Pour obtenir les dernières instructions sur l'utilisation de ce produit, veuillez vous référer au manuel disponible en ligne sur www.mykronoz.com

ASSISTANCE

Si vous avez des questions ou si vous avez besoin d'aide concernant votre produit, veuillez consulter la page www.mykronoz.com/support/ ou nous envoyer un e-mail à l'adresse support@mykronoz.com

SAFETY INSTRUCTIONS

Before using the device, read these instructions carefully.

BATTERY

- ZeClock has built-in batteries. Do not disassemble the battery on your own. KRONOZ LLC is not responsible for any damage or personnel injury caused by the removal of the battery or any component.
- Charge the battery in a cool, ventilated room. Excessive temperature during charging could cause heat, smoke, fire or deformation of the battery or even explosion. Avoid excessive temperatures. Do not expose batteries in the sun, excessive smoke or dust.
- Do not open, crush, bend, deform, puncture or shred secondary cells or batteries. In the event of a battery break or leak, prevent battery liquid contact with skin or eyes. If this happens, immediately flush the areas with water (do not rub the eye) or seek medical help.
- Do not short-circuit. Short-circuiting can occur when a metallic object, such as coins, causes direct connection of positive and negative terminals of the battery. Short-circuiting may damage the battery.
- Do not use batteries that have been damaged or have been exhausted.
- Keep the batteries out of children's reach and in a safe place to prevent danger.
- Do not place the batteries in the water.

- Do not dispose of batteries in fire as they may cause explosion. Dispose of used batteries in accordance with your local regulations (such as recycling). Do not dispose as household waste.
- Use only the USB cable supplied to charge this battery. Do not charge for more than 24 hours.
- Do not attempt to repair or maintain the watch by yourself, service and maintenance should be performed by authorized technicians.

CAUTION

- This device has a recording function. Please be sure to comply with the relevant laws and regulations on the use of these features. In accordance with relevant regulations, without permission any personal characteristic sound recording being copied and disseminated may be seen as an invasion of privacy. Inappropriate use of photography, video and photo, video, audio recording function records could violate the copyright owner's rights. For this, the user must assume full responsibility. KRONOZ LLC is not responsible for any damage caused by improper use of the device.
- This device is not waterproof. Do not immerse the device in water or any other liquids.

REGULATORY NOTICES

USA



FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTIONS

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC NOTICE

This equipment complies within the limits of a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against radio and TV interference in residential areas. However, even during normal operation, this equipment may cause TV or radio interference. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one or more of the following corrective measures:

- Reposition the receiving antenna
- Increase the distance between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AA7D-ZECK1

CANADA

INDUSTRY CANADA (IC) STATEMENT

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme à la norme CNR d'Industrie Canada applicable aux appareils radio exempts de licence. Son utilisation est soumise aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences et (2) l'utilisateur de cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un fonctionnement indésirable du dispositif.

IC: 12131A-ZECK1

EUROPEAN UNION CE DIRECTIVE



Declaration of conformity with regard to the EU Directive 1999/5/EC.

Kronoz LLC hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive 1999/5/EC. The complete declaration of conformity is available on request via our customer service: support@mykronoz.com

Déclaration de conformité à l'égard de la directive européenne 1999/5/CE.

Kronoz LLC déclare que cet appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive R&TTE 1999/5/CE. La déclaration de conformité complète est disponible sur demande auprès de notre service client: support@mykronoz.com



DISPOSAL AND RECYCLING INFORMATION

After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies: Electrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilizing old devices, you are making an important contribution to protecting our environment.

©2014 Kronoz LLC, all rights reserved. Kronoz LLC, Route de Valavran 96, 1294 Genthod, Suisse

All brands or product names are or may be trademarks of their respective owners.

Pictures and specifications are not contractual. Les marques citées sont des marques déposées par leur fabricant respectif. Photos et caractéristiques non contractuelles.

Designed in Switzerland - Made in China

MYX KRONOZ
MORE THAN TIME

www.mykronoz.com

© 2014 KRONOZ LLC. Tous droits réservés