


*Marshall*

MAJOR IV – ON EAR HEADPHONES

MARSHALLHEADPHONES.COM

QUICK START GUIDE



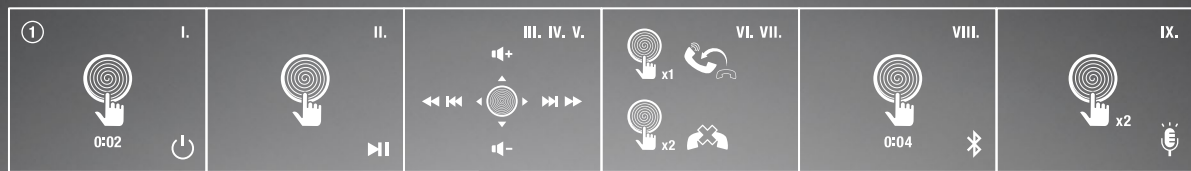

MARSHALL, Marshall Amps, their respective logos, "Marshall" and "Marshall" trade dress are trademarks and intellectual property of Marshall Amplification Plc and may not be used without permission. Permission granted to Zound Industries International AB.

The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Zound Industries International AB is under license. R.03

# CONTENTS

---

## LANGUAGES

---

ENGLISH	002.
ARABIC – العربية	003.
BULGARIAN – БЪЛГАРСКИ ЕЗИК	004.
CROATIAN – HRVATSKI	005.
CZECH – ČEŠTINA	006.
DANISH – DANSK	007.
DUTCH – NEDERLANDS	008.
ESTONIAN – EESTI	009.
FILIPINO – TAGALOG	010.
FINNISH – SUOMI	011.
FRENCH – FRANÇAIS	012.
GERMAN – DEUTSCH	013.
GREEK – ΕΛΛΗΝΙΚΑ	014.
HEBREW – עברית	015.
HUNGARIAN – MAGYAR	016.
INDONESIAN – BAHASA INDONESIA	017.
ITALIAN – ITALIANO	018.
JAPANESE – 日本語	019.
KOREAN – 한국어	020.
LATVIAN – LATVIEŠU	021.
LITHUANIAN – LIETUVIŲ	022.
NORWEGIAN – NORSK	023.
POLISH – POLSKI	024.
PORTUGUESE – PORTUGUÊS	025.
ROMANIAN – ROMÂNĂ	026.
RUSSIAN – РУССКИЙ	027.
SIMPLIFIED CHINESE – 简体中文	028.
SLOVAK – SLOVENČINA	029.
SLOVENE – SLOVENŠČINA	030.
SPANISH – ESPAÑOL	031.
SWEDISH – SVENSKA	032.
THAI – ภาษาไทย	033.
TRADITIONAL CHINESE – 繁體中文	034.
TURKISH – TÜRKÇE	035.
UKRAINIAN – УКРАЇНСЬКА	036.
VIETNAMESE – TIẾNG VIỆT	037.

## ENGLISH

### ① CONTROL KNOB

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

### ② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

### ③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

### ④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

#### GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

## العربية

### ① CONTROL KNOB

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

### ② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

### ③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

### ④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

#### GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

## 1 CONTROL KNOB

- |  |   |
|--|---|
| <p><b>I. POWER ON/OFF</b><br/>Push and hold for 2 seconds</p> <p><b>II. PLAY/PAUSE</b><br/>Push once</p> <p><b>III. SKIP FORWARD/BACK</b><br/>Push to the right or left</p> <p><b>IV. FAST FORWARD/REWIND</b><br/>Push and hold to the right or left</p> | <p><b>V. TURN UP/DOWN THE VOLUME</b><br/>Push upwards or downwards</p> <p><b>VI. ANSWER OR END A CALL</b><br/>Push once</p> <p><b>VII. REJECT AN INCOMING CALL</b><br/>Push two times</p> <p><b>VIII. BLUETOOTH PAIRING</b><br/>Push and hold for 4 seconds</p> <p><b>IX. ACTIVATE VOICE ASSISTANT</b><br/>Push two times</p> |
|--|---|

## 2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

## 3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

## 4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

### GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

## 1 CONTROL KNOB

- |  |   |
|--|---|
| <p><b>I. POWER ON/OFF</b><br/>Push and hold for 2 seconds</p> <p><b>II. PLAY/PAUSE</b><br/>Push once</p> <p><b>III. SKIP FORWARD/BACK</b><br/>Push to the right or left</p> <p><b>IV. FAST FORWARD/REWIND</b><br/>Push and hold to the right or left</p> | <p><b>V. TURN UP/DOWN THE VOLUME</b><br/>Push upwards or downwards</p> <p><b>VI. ANSWER OR END A CALL</b><br/>Push once</p> <p><b>VII. REJECT AN INCOMING CALL</b><br/>Push two times</p> <p><b>VIII. BLUETOOTH PAIRING</b><br/>Push and hold for 4 seconds</p> <p><b>IX. ACTIVATE VOICE ASSISTANT</b><br/>Push two times</p> |
|--|---|

## 2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

## 3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

## 4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

### GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |   |
|--|---|
| <p><b>I. POWER ON/OFF</b><br/>Push and hold for 2 seconds</p> <p><b>II. PLAY/PAUSE</b><br/>Push once</p> <p><b>III. SKIP FORWARD/BACK</b><br/>Push to the right or left</p> <p><b>IV. FAST FORWARD/REWIND</b><br/>Push and hold to the right or left</p> | <p><b>V. TURN UP/DOWN THE VOLUME</b><br/>Push upwards or downwards</p> <p><b>VI. ANSWER OR END A CALL</b><br/>Push once</p> <p><b>VII. REJECT AN INCOMING CALL</b><br/>Push two times</p> <p><b>VIII. BLUETOOTH PAIRING</b><br/>Push and hold for 4 seconds</p> <p><b>IX. ACTIVATE VOICE ASSISTANT</b><br/>Push two times</p> |
|--|---|

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |   |
|--|---|
| <p><b>I. POWER ON/OFF</b><br/>Push and hold for 2 seconds</p> <p><b>II. PLAY/PAUSE</b><br/>Push once</p> <p><b>III. SKIP FORWARD/BACK</b><br/>Push to the right or left</p> <p><b>IV. FAST FORWARD/REWIND</b><br/>Push and hold to the right or left</p> | <p><b>V. TURN UP/DOWN THE VOLUME</b><br/>Push upwards or downwards</p> <p><b>VI. ANSWER OR END A CALL</b><br/>Push once</p> <p><b>VII. REJECT AN INCOMING CALL</b><br/>Push two times</p> <p><b>VIII. BLUETOOTH PAIRING</b><br/>Push and hold for 4 seconds</p> <p><b>IX. ACTIVATE VOICE ASSISTANT</b><br/>Push two times</p> |
|--|---|

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- I. **POWER ON/OFF**  
Push and hold for 2 seconds
- II. **PLAY/PAUSE**  
Push once
- III. **SKIP FORWARD/BACK**  
Push to the right or left
- IV. **FAST FORWARD/REWIND**  
Push and hold to the right or left
- V. **TURN UP/DOWN THE VOLUME**  
Push upwards or downwards
- VI. **ANSWER OR END A CALL**  
Push once
- VII. **REJECT AN INCOMING CALL**  
Push two times
- VIII. **BLUETOOTH PAIRING**  
Push and hold for 4 seconds
- IX. **ACTIVATE VOICE ASSISTANT**  
Push two times

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- I. **POWER ON/OFF**  
Push and hold for 2 seconds
- II. **PLAY/PAUSE**  
Push once
- III. **SKIP FORWARD/BACK**  
Push to the right or left
- IV. **FAST FORWARD/REWIND**  
Push and hold to the right or left
- V. **TURN UP/DOWN THE VOLUME**  
Push upwards or downwards
- VI. **ANSWER OR END A CALL**  
Push once
- VII. **REJECT AN INCOMING CALL**  
Push two times
- VIII. **BLUETOOTH PAIRING**  
Push and hold for 4 seconds
- IX. **ACTIVATE VOICE ASSISTANT**  
Push two times

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.



**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**① CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**② CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**③ LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**④ 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**① CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**② CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**③ LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**④ 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**① CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**② CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**③ LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**④ 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**① CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**② CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**③ LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**④ 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.



## ① CONTROL KNOB

- |  |   |
|--|---|
| <p><b>I. POWER ON/OFF</b><br/>Push and hold for 2 seconds</p> <p><b>II. PLAY/PAUSE</b><br/>Push once</p> <p><b>III. SKIP FORWARD/BACK</b><br/>Push to the right or left</p> <p><b>IV. FAST FORWARD/REWIND</b><br/>Push and hold to the right or left</p> | <p><b>V. TURN UP/DOWN THE VOLUME</b><br/>Push upwards or downwards</p> <p><b>VI. ANSWER OR END A CALL</b><br/>Push once</p> <p><b>VII. REJECT AN INCOMING CALL</b><br/>Push two times</p> <p><b>VIII. BLUETOOTH PAIRING</b><br/>Push and hold for 4 seconds</p> <p><b>IX. ACTIVATE VOICE ASSISTANT</b><br/>Push two times</p> |
|--|---|

## ② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

## ③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

## ④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

### GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

## ① CONTROL KNOB

- |  |   |
|--|---|
| <p><b>I. POWER ON/OFF</b><br/>Push and hold for 2 seconds</p> <p><b>II. PLAY/PAUSE</b><br/>Push once</p> <p><b>III. SKIP FORWARD/BACK</b><br/>Push to the right or left</p> <p><b>IV. FAST FORWARD/REWIND</b><br/>Push and hold to the right or left</p> | <p><b>V. TURN UP/DOWN THE VOLUME</b><br/>Push upwards or downwards</p> <p><b>VI. ANSWER OR END A CALL</b><br/>Push once</p> <p><b>VII. REJECT AN INCOMING CALL</b><br/>Push two times</p> <p><b>VIII. BLUETOOTH PAIRING</b><br/>Push and hold for 4 seconds</p> <p><b>IX. ACTIVATE VOICE ASSISTANT</b><br/>Push two times</p> |
|--|---|

## ② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

## ③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

## ④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

### GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**① CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**② CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**③ LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**④ 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**① CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**② CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**③ LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**④ 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**① CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**② CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**③ LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**④ 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

- Push and hold the control knob until the LED indicator blinks blue.
- Select Major IV from your sound device's Bluetooth® list.

**① CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**② CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**③ LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**④ 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

- Push and hold the control knob until the LED indicator blinks blue.
- Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

**1 CONTROL KNOB**

- |  |  |
|--|--|
| <b>I. POWER ON/OFF</b><br>Push and hold for 2 seconds                | <b>V. TURN UP/DOWN THE VOLUME</b><br>Push upwards or downwards |
| <b>II. PLAY/PAUSE</b><br>Push once                                   | <b>VI. ANSWER OR END A CALL</b><br>Push once                   |
| <b>III. SKIP FORWARD/BACK</b><br>Push to the right or left           | <b>VII. REJECT AN INCOMING CALL</b><br>Push two times          |
| <b>IV. FAST FORWARD/REWIND</b><br>Push and hold to the right or left | <b>VIII. BLUETOOTH PAIRING</b><br>Push and hold for 4 seconds  |
|  | <b>IX. ACTIVATE VOICE ASSISTANT</b><br>Push two times          |

**2 CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

**3 LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

**4 3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

**GETTING STARTED**

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.





# VISIT US ONLINE

VISITEZ-NOUS EN LIGNE / VISITE NUESTRA WEB / BESUCHEN SIE  
UNS ONLINE / VIENI A FARCI VISITA ONLINE



**MARSHALLHEADPHONES.COM**

 MARSHALLHEADPHONES  MARSHALL\_HEADPHONES

 MARSHALLHEADPHONES  MARSHALLHP

## NEDERLANDS

### BELANGRIJKE VEILIGHEIDSinSTRUCTIES

Niet geschikt voor kinderen tot drie jaar. Bevat kleine onderdelen die verstikkings-gevaar kunnen veroorzaken.

Langdurige blootstelling aan luid muziek of geluid kan gehoorschadiging veroorzaken. Luister niet op hoge geluidsniveaus. Het is belangrijk om positieve gehoorschade te voorkomen.

Elektrische producten, kabels, batterijen, inpakking en de handeding dienen niet te worden gebruikt met de afgeleverde afval. Voor de juiste afvoer dient u deze producten naar een special inzamelpunt te brengen waar ze gratis worden ingenomen, of u brengt deze naar uw lokale winkel. De juiste afvoer bepaalt u grondstoffen met name op de afvalwetgeving en de gezondheid van mens en milieu.

Breng de defecte oplaadbare batterij naar een special ophaalpunt of naar de winkel, om mogelijke schade voor het milieu of de menselijke gezondheid door vuurotsort te voorkomen.

### WAARSCHUWINGEN

- Stel uw geluidsnivro in op laag volume voordat u de hoofdtelefoon gebruikt.
- Gebruik deze hoofdtelefoon niet als u een motorvoertuig, fiets, of machine bestuurft, of in situaties waarin het niet kunnen horen van geluiden van buitenaf een gevaar kan opleveren voor u of anderen.
- Het gebruik van deze hoofdtelefoon beperkt uw capaciteit om geluiden om u heen te horen, ongeacht het geluidsvolume.
- Buiten breed houten van vuur, water en apparatuur met hoog voltage.
- Pas de hoofdtelefoon niet aan, haal hem niet uit elkaar, maak hem niet open, laat het niet vallen, maak hem niet kapot en maak er geen gebruik van scheuren in.
- Verhit hem niet boven de 45 °C (113 °F).
- Veroorzaak geen kortsluiting van de interne batterij of de cellen daarvan.
- Laat in het geval van een lekkende batterij de vloeistof niet in contact komen met de huid of de ogen.
- De interne accu kan niet worden of de eindgebruiker vervangen worden.

### VRUWVARING

De verpakkende speelgoed wordt berekend aan de hand van een willekeurige selectie van muziek, afgespeeld op een gemiddeld volume.

De informatie in dit document is correct op het moment dat de publicatie, onder voorbehoud van programmatische veranderingen.

Dit product is software-onafhankelijk en de functies en compatibiliteit kunnen wijzigen als de software wordt bijgewerkt.

De informatie verkant Zound Industries International AB, dat dit product voo doet aan de bepalingen van richtlijn 2014/53/EU.

Maximaal RF-zendvermogen: < 20 dBm

Ga voor de conformiteitsverklaring naar deze website: [www.marshallheadphones.com/doc](http://www.marshallheadphones.com/doc)

Ontworpen in Stockholm • Geproduceerd in China

## NORSK

### VIKTIGE SIKKERHETSINSTRUKSJONER

Ikke egnet for barn under tre år. Inneholder små deler som kan utgjøre en sikkerhetsrisiko.

Dersom helsen utsettes for høyt volum over lengre tid, kan det bli farligere. For å unngå mulig helseskade, bør du ikke lytte til musikk på høyt volum over lengre tid om gehoorschade te voorkomen.

Elektriske produkter, kabeler, batterier, inpakking og manual skal ikke blandes med generell husholdningsavfall. For riktig resirkulering ta disse produktene til et separat innsamlingspunkt. For de riktige oppbeholdnings- og fjerningsprosedyrene, se bruksanvisningen eller kontakt ditt lokale miljøvernvesen. Riktig kasting av produkter sparer ressurser og forhindrer negative effekter på menneskehelsen og miljøet.

Avhend defekte oplaadbare batterier ved innsamlingsstasjoner eller lever dem i butikken. Slik hindrer du mulig miljø- eller personskade som følge av ukontrollert avfall.

Avhånd defekte oplaadbare batterier naar een special ophaalpunt of naar de winkel, om mogelijke schade voor het milieu of de menselijke gezondheid door vuurotsort te voorkomen.

### ADVARSLER

- Skru volumet på lydikden ned før du bruker hode-telefonene.
- Disse hodetelefonene må ikke brukes når du kjører sykkel, bedjere maskiner eller når din mangende evne til å høre lyder kan utgjøre en fare for deg og andre.
- Disse hodetelefonene begrenser evnen din til å høre lyder rundt deg, særlig volumet.
- Hold unna led, vann og spenningsnett.
- Du må ikke endre på, demontere, åpne, miste, knuse, stikke hull på eller dekkelegge hodetelefonene.
- Ikke varm opp til over 45 °C (113 °F).
- Ikke kortslutt del indre batteriet eller battericelleene.
- Dersom batteriet lekkas, vaske i varmt vann og kontakt med huden eller øyene.
- Det interne batteriet kan ikke skiftes ut av sluttbrukeren.

### FRASKRIVINGSKLAUSUL

Erklært spilletid regnes ut ved bruk av et tilfeldig utvalg musikk, spilt på middels volum.

Informasjonen i dette dokumentet er korrekt ved publisering, med forbehold om redigeringsfeil. Dette produktet er programvareavhengig og funksjonene og kompatibiliteten kan endres når programvare blir oppdatert.

### VRUWVARING

Zound Industries International AB erklærer herved at dette produktet er i samsvar med 2014/53/EU.

Maksimal RF-overføringsseffekt: < 20 dBm

Samsvarserklæringen finner du på den neste siden: [www.marshallheadphones.com/doc](http://www.marshallheadphones.com/doc)

Utført med i Stockholm • Produisert i Kina

## WIKANG FILIPINO

### MAHALAGANG MGA TAGUBILIN PANGKALIGATASAN

Hindi angkop para sa mga bata na mas mababa ang edad sa tatlo. Naglalaman ng mga maliit na bahagi na maaaring delikado kung mabulanan.

Ang matagal na pagkabata sa malakas na musika o tunog ay maaaring magdulot ng pagkabata sa mga maliit na bahagi na maaaring delikado kung mabulanan.

Ang mga produktong elektrikal, kable, bat-teriyales, inpakaging at manual hindi dapat ibat sa pangkalahatang basura sa bahay. Para sa angkop na pagresikulo, mangyaring magpadala sa punto de reciclo lokal. Eliminar ang mga produkong elektronik sa mga itinatagong lugar ng basura. Ang tamang pagpapalut sa produkto ay nakakatipag ng mapagkakuluan at nakakapigil ng mga negatibong epekto sa kalsugan ng tao at sa kapaligiran.

Upang malwasan ang posibleng pinsala sa kapaligiran o kalsugan ng tao mula sa hindi makontrol na pagpaton ng basura, itapon ang depektibong riye-charger na baterya sa espesyal na lugar na pagkakunin o ibalik ang mga ito sa iyong espesyalistang itagapagbenta.

### ADVARSLER

- Skru volumet på lydikden ned før du bruker hode-telefonene.
- Disse hodetelefonene må ikke brukes når du kjører sykkel, bedjere maskiner eller når din mangende evne til å høre lyder kan utgjøre en fare for deg og andre.
- Disse hodetelefonene begrenser evnen din til å høre lyder rundt deg, særlig volumet.
- Hold unna led, vann og spenningsnett.
- Du må ikke endre på, demontere, åpne, miste, knuse, stikke hull på eller dekkelegge hodetelefonene.
- Ikke varm opp til over 45 °C (113 °F).
- Ikke kortslutt del indre batteriet eller battericelleene.
- Dersom batteriet lekkas, vaske i varmt vann og kontakt med huden eller øyene.
- Det interne batteriet kan ikke skiftes ut av sluttbrukeren.

### FRASKRIVINGSKLAUSUL

Erklært spilletid regnes ut ved bruk av et tilfeldig utvalg musikk, spilt på middels volum.

Informasjonen i dette dokumentet er korrekt ved publisering, med forbehold om redigeringsfeil. Dette produktet er programvareavhengig og funksjonene og kompatibiliteten kan endres når programvare blir oppdatert.

### VRUWVARING

Zound Industries International AB erklærer herved at dette produktet er i samsvar med 2014/53/EU.

Maksimal RF-overføringsseffekt: < 20 dBm

Samsvarserklæringen finner du på den neste siden: [www.marshallheadphones.com/doc](http://www.marshallheadphones.com/doc)

Utført med i Stockholm • Produisert i Kina

## NORSK

### VIKTIGE SIKKERHETSINSTRUKSJONER

Ikke egnet for barn under tre år. Inneholder små deler som kan utgjøre en sikkerhetsrisiko.

Dersom helsen utsettes for høyt volum over lengre tid, kan det bli farligere. For å unngå mulig helseskade, bør du ikke lytte til musikk på høyt volum over lengre tid om gehoorschade te voorkomen.

Elektriske produkter, kabeler, batterier, inpakking og manual skal ikke blandes med generell husholdningsavfall. For riktig resirkulering ta disse produktene til et separat innsamlingspunkt. For de riktige oppbeholdnings- og fjerningsprosedyrene, se bruksanvisningen eller kontakt ditt lokale miljøvernvesen. Riktig kasting av produkter sparer ressurser og forhindrer negative effekter på menneskehelsen og miljøet.

Avhend defekte oplaadbare batterier ved innsamlingsstasjoner eller lever dem i butikken. Slik hindrer du mulig miljø- eller personskade som følge av ukontrollert avfall.

Avhånd defekte oplaadbare batterier naar een special ophaalpunt of naar de winkel, om mogelijke schade voor het milieu of de menselijke gezondheid door vuurotsort te voorkomen.

### ADVARSLER

- Skru volumet på lydikden ned før du bruker hode-telefonene.
- Disse hodetelefonene må ikke brukes når du kjører sykkel, bedjere maskiner eller når din mangende evne til å høre lyder kan utgjøre en fare for deg og andre.
- Disse hodetelefonene begrenser evnen din til å høre lyder rundt deg, særlig volumet.
- Hold unna led, vann og spenningsnett.
- Du må ikke endre på, demontere, åpne, miste, knuse, stikke hull på eller dekkelegge hodetelefonene.
- Ikke varm opp til over 45 °C (113 °F).
- Ikke kortslutt del indre batteriet eller battericelleene.
- Dersom batteriet lekkas, vaske i varmt vann og kontakt med huden eller øyene.
- Det interne batteriet kan ikke skiftes ut av sluttbrukeren.

### FRASKRIVINGSKLAUSUL

Erklært spilletid regnes ut ved bruk av et tilfeldig utvalg musikk, spilt på middels volum.

Informasjonen i dette dokumentet er korrekt ved publisering, med forbehold om redigeringsfeil. Dette produktet er programvareavhengig og funksjonene og kompatibiliteten kan endres når programvare blir oppdatert.

### VRUWVARING

Zound Industries International AB erklærer herved at dette produktet er i samsvar med 2014/53/EU.

Maksimal RF-overføringsseffekt: < 20 dBm

Samsvarserklæringen finner du på den neste siden: [www.marshallheadphones.com/doc](http://www.marshallheadphones.com/doc)

Utført med i Stockholm • Produisert i Kina

## NORSK

### VIKTIGE SIKKERHETSINSTRUKSJONER

Ikke egnet for barn under tre år. Inneholder små deler som kan utgjøre en sikkerhetsrisiko.

Dersom helsen utsettes for høyt volum over lengre tid, kan det bli farligere. For å unngå mulig helseskade, bør du ikke lytte til musikk på høyt volum over lengre tid om gehoorschade te voorkomen.

Elektriske produkter, kabeler, batterier, inpakking og manual skal ikke blandes med generell husholdningsavfall. For riktig resirkulering ta disse produktene til et separat innsamlingspunkt. For de riktige oppbeholdnings- og fjerningsprosedyrene, se bruksanvisningen eller kontakt ditt lokale miljøvernvesen. Riktig kasting av produkter sparer ressurser og forhindrer negative effekter på menneskehelsen og miljøet.

Avhend defekte oplaadbare batterier ved innsamlingsstasjoner eller lever dem i butikken. Slik hindrer du mulig miljø- eller personskade som følge av ukontrollert avfall.

Avhånd defekte oplaadbare batterier naar een special ophaalpunt of naar de winkel, om mogelijke schade voor het milieu of de menselijke gezondheid door vuurotsort te voorkomen.

### ADVARSLER

- Skru volumet på lydikden ned før du bruker hode-telefonene.
- Disse hodetelefonene må ikke brukes når du kjører sykkel, bedjere maskiner eller når din mangende evne til å høre lyder kan utgjøre en fare for deg og andre.
- Disse hodetelefonene begrenser evnen din til å høre lyder rundt deg, særlig volumet.
- Hold unna led, vann og spenningsnett.
- Du må ikke endre på, demontere, åpne, miste, knuse, stikke hull på eller dekkelegge hodetelefonene.
- Ikke varm opp til over 45 °C (113 °F).
- Ikke kortslutt del indre batteriet eller battericelleene.
- Dersom batteriet lekkas, vaske i varmt vann og kontakt med huden eller øyene.
- Det interne batteriet kan ikke skiftes ut av sluttbrukeren.

### FRASKRIVINGSKLAUSUL

Erklært spilletid regnes ut ved bruk av et tilfeldig utvalg musikk, spilt på middels volum.

Informasjonen i dette dokumentet er korrekt ved publisering, med forbehold om redigeringsfeil. Dette produktet er programvareavhengig og funksjonene og kompatibiliteten kan endres når programvare blir oppdatert.

### VRUWVARING

Zound Industries International AB erklærer herved at dette produktet er i samsvar med 2014/53/EU.

Maksimal RF-overføringsseffekt: < 20 dBm

Samsvarserklæringen finner du på den neste siden: [www.marshallheadphones.com/doc](http://www.marshallheadphones.com/doc)

Utført med i Stockholm • Produisert i Kina

## NORSK

### VIKTIGE SIKKERHETSINSTRUKSJONER

Ikke egnet for barn under tre år. Inneholder små deler som kan utgjøre en sikkerhetsrisiko.

Dersom helsen utsettes for høyt volum over lengre tid, kan det bli farligere. For å unngå mulig helseskade, bør du ikke lytte til musikk på høyt volum over lengre tid om gehoorschade te voorkomen.

Elektriske produkter, kabeler, batterier, inpakking og manual skal ikke blandes med generell husholdningsavfall. For riktig resirkulering ta disse produktene til et separat innsamlingspunkt. For de riktige oppbeholdnings- og fjerningsprosedyrene, se bruksanvisningen eller kontakt ditt lokale miljøvernvesen. Riktig kasting av produkter sparer ressurser og forhindrer negative effekter på menneskehelsen og miljøet.

Avhend defekte oplaadbare batterier ved innsamlingsstasjoner eller lever dem i butikken. Slik hindrer du mulig miljø- eller personskade som følge av ukontrollert avfall.

Avhånd defekte oplaadbare batterier naar een special ophaalpunt of naar de winkel, om mogelijke schade voor het milieu of de menselijke gezondheid door vuurotsort te voorkomen.

### ADVARSLER

- Skru volumet på lydikden ned før du bruker hode-telefonene.
- Disse hodetelefonene må ikke brukes når du kjører sykkel, bedjere maskiner eller når din mangende evne til å høre lyder kan utgjøre en fare for deg og andre.
- Disse hodetelefonene begrenser evnen din til å høre lyder rundt deg, særlig volumet.
- Hold unna led, vann og spenningsnett.
- Du må ikke endre på, demontere, åpne, miste, knuse, stikke hull på eller dekkelegge hodetelefonene.
- Ikke varm opp til over 45 °C (113 °F).
- Ikke kortslutt del indre batteriet eller battericelleene.
- Dersom batteriet lekkas, vaske i varmt vann og kontakt med huden eller øyene.
- Det interne batteriet kan ikke skiftes ut av sluttbrukeren.

### FRASKRIVINGSKLAUSUL

Erklært spilletid regnes ut ved bruk av et tilfeldig utvalg musikk, spilt på middels volum.

Informasjonen i dette dokumentet er korrekt ved publisering, med forbehold om redigeringsfeil. Dette produktet er programvareavhengig og funksjonene og kompatibiliteten kan endres når programvare blir oppdatert.

### VRUWVARING

Zound Industries International AB erklærer herved at dette produktet er i samsvar med 2014/53/EU.

Maksimal RF-overføringsseffekt: < 20 dBm

Samsvarserklæringen finner du på den neste siden: [www.marshallheadphones.com/doc](http://www.marshallheadphones.com/doc)

Utført med i Stockholm • Produisert i Kina

## NORSK

### VIKTIGE SIKKERHETSINSTRUKSJONER

Ikke egnet for barn under tre år. Inneholder små deler som kan utgjøre en sikkerhetsrisiko.

Dersom helsen utsettes for høyt volum over lengre tid, kan det bli farligere. For å unngå mulig helseskade, bør du ikke lytte til musikk på høyt volum over lengre tid om gehoorschade te voorkomen.

Elektriske produkter, kabeler, batterier, inpakking og manual skal ikke blandes med generell husholdningsavfall. For riktig resirkulering ta disse produktene til et separat innsamlingspunkt. For de riktige oppbeholdnings- og fjerningsprosedyrene, se bruksanvisningen eller kontakt ditt lokale miljøvernvesen. Riktig kasting av produkter sparer ressurser og forhindrer negative effekter på menneskehelsen og miljøet.

Avhend defekte oplaadbare batterier ved innsamlingsstasjoner eller lever dem i butikken. Slik hindrer du mulig miljø- eller personskade som følge av ukontrollert avfall.

Avhånd defekte oplaadbare batterier naar een special ophaalpunt of naar de winkel, om mogelijke schade voor het milieu of de menselijke gezondheid door vuurotsort te voorkomen.

### ADVARSLER

- Skru volumet på lydikden ned før du bruker hode-telefonene.
- Disse hodetelefonene må ikke brukes når du kjører sykkel, bedjere maskiner eller når din mangende evne til å høre lyder kan utgjøre en fare for deg og andre.
- Disse hodetelefonene begrenser evnen din til å høre lyder rundt deg, særlig volumet.
- Hold unna led, vann og spenningsnett.
- Du må ikke endre på, demontere, åpne, miste, knuse, stikke hull på eller dekkelegge hodetelefonene.
- Ikke varm opp til over 45 °C (113 °F).
- Ikke kortslutt del indre batteriet eller battericelleene.
- Dersom batteriet lekkas, vaske i varmt vann og kontakt med huden eller øyene.
- Det interne batteriet kan ikke skiftes ut av sluttbrukeren.

### FRASKRIVINGSKLAUSUL

Erklært spilletid regnes ut ved bruk av et tilfeldig utvalg musikk, spilt på middels volum.

Informasjonen i dette dokumentet er korrekt ved publisering, med forbehold om redigeringsfeil. Dette produktet er programvareavhengig og funksjonene og kompatibiliteten kan endres når programvare blir oppdatert.

### VRUWVARING

Zound Industries International AB erklærer herved at dette produktet er i samsvar med 2014/53/EU.

Maksimal RF-overføringsseffekt: < 20 dBm

Samsvarserklæringen finner du på den neste siden: [www.marshallheadphones.com/doc](http://www.marshallheadphones.com/doc)

Utført med i Stockholm • Produisert i Kina

## NORSK

### VIKTIGE SIKKERHETSINSTRUKSJONER

Ikke egnet for barn under tre år. Inneholder små deler som kan utgjøre en sikkerhetsrisiko.

Dersom helsen utsettes for høyt volum over lengre tid, kan det bli farligere. For å unngå mulig helseskade, bør du ikke lytte til musikk på høyt volum over lengre tid om gehoorschade te voorkomen.

Elektriske produkter, kabeler, batterier, inpakking og manual skal ikke blandes med generell husholdningsavfall. For riktig resirkulering ta disse produktene til et separat innsamlingspunkt. For de riktige oppbeholdnings- og fjerningsprosedyrene, se bruksanvisningen eller kontakt ditt lokale miljøvernvesen. Riktig kasting av produkter sparer ressurser og forhindrer negative effekter på menneskehelsen og miljøet.

Avhend defekte oplaadbare batterier ved innsamlingsstasjoner eller lever dem i butikken. Slik hindrer du mulig miljø- eller personskade som følge av ukontrollert avfall.

Avhånd defekte oplaadbare batterier naar een special ophaalpunt of naar de winkel, om mogelijke schade voor het milieu of de menselijke gezondheid door vuurotsort te voorkomen.

### ADVARSLER

- Skru volumet på lydikden ned før du bruker hode-telefonene.
- Disse hodetelefonene må ikke brukes når du kjører sykkel, bedjere maskiner eller når din mangende evne til å høre lyder kan utgjøre en fare for deg og andre.
- Disse hodetelefonene begrenser evnen din til å høre lyder rundt deg, særlig volumet.
- Hold unna led, vann og spenningsnett.
- Du må ikke endre på, demontere, åpne, miste, knuse, stikke hull på eller dekkelegge hodetelefonene.
- Ikke varm opp til over 45 °C (113 °F).
- Ikke kortslutt del indre batteriet eller battericelleene.
- Dersom batteriet lekkas, vaske i varmt vann og kontakt med huden eller øyene.
- Det interne batteriet kan ikke skiftes ut av sluttbrukeren.

### FRASKRIVINGSKLAUSUL

Erklært spilletid regnes ut ved bruk av et tilfeldig utvalg musikk, spilt på middels volum.

Informasjonen i dette dokumentet er korrekt ved publisering, med forbehold om redigeringsfeil. Dette produktet er programvareavhengig og funksjonene og kompatibiliteten kan endres når programvare blir oppdatert.

### VRUWVARING

Zound Industries International AB erklærer herved at dette produktet er i samsvar med 2014/53/EU.

Maksimal RF-overføringsseffekt: < 20 dBm

Samsvarserklæringen finner du på den neste siden: [www.marshallheadphones.com/doc](http://www.marshallheadphones.com/doc)

Utført med i Stockholm • Produisert i Kina

## NORSK

### VIKTIGE SIKKERHETSINSTRUKSJONER

Ikke egnet for barn under tre år. Inneholder små deler som kan utgjøre en sikkerhetsrisiko.

Dersom helsen utsettes for høyt volum over lengre tid, kan det bli farligere. For å unngå mulig helseskade, bør du ikke lytte til musikk på høyt volum over lengre tid om gehoorschade te voorkomen.

Elektriske produkter, kabeler, batterier, inpakking og manual skal ikke blandes med generell husholdningsavfall. For riktig resirkulering ta disse produktene til et separat innsamlingspunkt. For de riktige oppbeholdnings- og fjerningsprosedyrene, se bruksanvisningen eller kontakt ditt lokale miljøvernvesen. Riktig kasting av produkter sparer ressurser og forhindrer negative effekter på menneskehelsen og miljøet.

Avhend defekte oplaadbare batterier ved innsamlingsstasjoner eller lever dem i butikken. Slik hindrer du mulig miljø- eller personskade som følge av ukontrollert avfall.

Avhånd defekte oplaadbare batterier naar een special ophaalpunt of naar de winkel, om mogelijke schade voor het milieu of de menselijke gezondheid door vuurotsort te voorkomen.

### ADVARSLER

- Skru volumet på lydikden ned før du bruker hode-telefonene.
- Disse hodetelefonene må ikke brukes når du kjører sykkel, bedjere maskiner eller når din mangende evne til å høre lyder kan utgjøre en fare for deg og andre.
- Disse hodetelefonene begrenser evnen din til å høre lyder rundt deg, særlig volumet.
- Hold unna led, vann og spenningsnett.
- Du må ikke endre på, demontere, åpne, miste, knuse, stikke hull på eller dekkelegge hodetelefonene.
- Ikke varm opp til over 45 °C (113 °F).
- Ikke kortslutt del indre batteriet eller battericelleene.
- Dersom batteriet lekkas, vaske i varmt vann og kontakt med huden eller øyene.
- Det interne batteriet kan ikke skiftes ut av sluttbrukeren.

### FRASKRIVINGSKLAUSUL

Erklært spilletid regnes ut ved bruk av et tilfeldig utvalg musikk, spilt på middels volum.

Informasjonen i dette dokumentet er korrekt ved publisering, med forbehold om redigeringsfeil. Dette produktet er programvareavhengig og funksjonene og kompatibiliteten kan endres når programvare blir oppdatert.

### VRUWVARING

Zound Industries International AB erklærer herved at dette produktet er i samsvar med 2014/53/EU.

Maksimal RF-overføringsseffekt: < 20 dBm

Samsvarserklæringen finner du på den neste siden: [www.marshallheadphones.com/doc](http://www.marshallheadphones.com/doc)

Utført med i Stockholm • Produisert i Kina

## NORSK

### VIKTIGE SIKKERHETSINSTRUKSJONER

Ikke egnet for barn under tre år. Inneholder små deler som kan utgjøre en sikkerhetsrisiko.

Dersom helsen utsettes for høyt volum over lengre tid, kan det bli farligere. For å unngå mulig helseskade, bør du ikke lytte til musikk på høyt volum over lengre tid om gehoorschade te voorkomen.

Elektriske produkter, kabeler, batterier, inpakking og manual skal ikke blandes med generell husholdningsavfall. For riktig resirkulering ta disse produktene til et separat innsamlingspunkt. For de riktige oppbeholdnings- og fjerningsprosedyrene, se bruksanvisningen eller kontakt ditt lokale miljøvernvesen. Riktig kasting av produkter sparer ressurser og forhindrer negative effekter på menneskehelsen og miljøet.

Avhend defekte oplaadbare batterier ved innsamlingsstasjoner eller lever dem i butikken. Slik hindrer du mulig miljø- eller personskade som følge av ukontrollert avfall.

Avhånd defekte oplaadbare batterier naar een special ophaalpunt of naar de winkel, om mogelijke schade voor het milieu of de menselijke gezondheid door vuurotsort te voorkomen.

### ADVARSLER

- Skru volumet på lydikden ned før du bruker hode-telefonene.
- Disse hodetelefonene må ikke brukes når du kjører sykkel, bedjere maskiner eller når din mangende evne til å høre lyder kan utgjøre en fare for deg og andre.
- Disse hodetelefonene begrenser evnen din til å høre lyder rundt deg, særlig volumet.
- Hold unna led, vann og spenningsnett.
- Du må ikke endre på, demontere, åpne, miste, knuse, stikke hull på eller dekkelegge hodetelefonene.
- Ikke varm opp til over 45 °C (113 °F).
- Ikke kortslutt del indre batteriet eller battericelleene.
- Dersom batteriet lekkas, vaske i varmt vann og kontakt med huden eller øyene.
- Det interne batteriet kan ikke skiftes ut av sluttbrukeren.

### FRASKRIVINGSKLAUSUL

Erklært spilletid regnes ut ved bruk av et tilfeldig utvalg musikk, spilt på middels volum.

Informasjonen i dette dokumentet er korrekt ved publisering, med forbehold om redigeringsfeil. Dette produktet er programvareavhengig og funksjonene og kompatibiliteten kan endres når programvare blir oppdatert.

### VRUWVARING

Zound Industries International AB erklærer herved at dette produktet er i samsvar med 2014/53/EU.

Maksimal RF-overføringsseffekt: < 20 dBm

Samsvarserklæringen finner du på den neste siden: [www.marshallheadphones.com/doc](http://www.marshallheadphones.com/doc)

Utført med i Stockholm • Produisert i Kina

## NORSK

### VIKTIGE SIKKERHETSINSTRUKSJONER

Ikke egnet for barn under tre år. Inneholder små deler som kan utgjøre en sikkerhetsrisiko.

Dersom helsen utsettes for høyt volum over lengre tid, kan det bli farligere. For å unngå mulig helseskade, bør du ikke lytte til musikk på høyt volum over lengre tid om gehoorschade te voorkomen.

Elektriske produkter, kabeler, batterier, inpakking og manual skal ikke blandes med generell husholdningsavfall. For riktig resirkulering ta disse produktene til et separat innsamlingspunkt. For de riktige oppbeholdnings- og fjerningsprosedyrene, se bruksanvisningen eller kontakt ditt lokale miljøvernvesen. Riktig kasting av produkter sparer ressurser og forhindrer negative effekter på menneskehelsen og miljøet.

Avhend defekte oplaadbare batterier ved innsamlingsstasjoner eller lever dem i butikken. Slik hindrer du mulig miljø- eller personskade som følge av ukontrollert avfall.

## NORSK

### VIKTIGE SIKKERHETSINSTRUKSJONER

Ikke egnet for barn under tre år. Inneholder små deler som kan utgjøre en sikkerhetsrisiko.

Dersom helsen utsettes for høyt volum over lengre tid, kan det bli farligere. For å unngå mulig helseskade, bør du ikke lytte til musikk på høyt volum over lengre tid om gehoorschade te voorkomen.

Elektriske produkter, kabeler, batterier, inpakking og manual skal ikke blandes med generell husholdningsavfall. For riktig resirkulering ta disse produktene til et separat innsamlingspunkt. For de riktige oppbeholdnings- og fjerningsprosedyrene, se bruksanvisningen eller kontakt ditt lokale miljøvernvesen. Riktig kasting av produkter sparer ressurser og forhindrer negative effekter på menneskehelsen og miljøet.

Avhend defekte oplaadbare batterier ved innsamlingsstasjoner eller lever dem i butikken. Slik hindrer du mulig miljø- eller personskade som følge av ukontrollert avfall.



