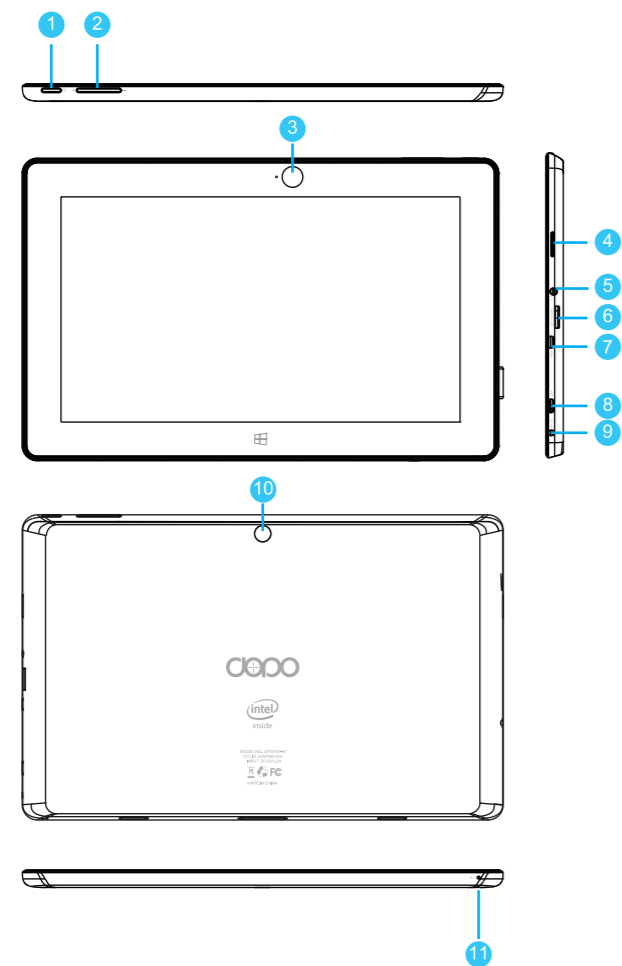# DOPO

Intel inside

Intel Tablet DPW10A-BT
Quick Start Guide

---

1 Key Layout and Definitions

All view ID:
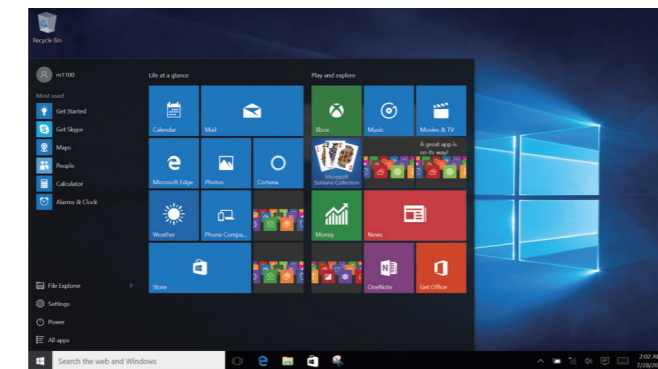
1. Power
2. Volume + / Volume -
3. Front camera
4. Loudspeakers
5. Headphone
6. Micro SD card slot
7. HDMI
8. Micro USB
9. DC IN
10. Back camera
11. MIC

---

2 FIND YOUR WAY AROUND

Start screen

Tap the ⊞ to go to the Start screen.

3 ACTION CENTER

Slide from the right borderline, then popup ACTION CENTER menu.

Rotation lock — Turn on/off Auto-rotate screen.

Note — Open OneNote app.

All settings — Set system of Windows 10.

Connect — Search for wireless display and audio devices.

Battery saver — Enter battery saving mode.

VPN — Add/edit a VPN connection.

Bluetooth — Open bluetooth devices.

100% — Adjust screen brightness.

Quiet hours — Enter quiet hours mode.

Location — Change your own location setting.
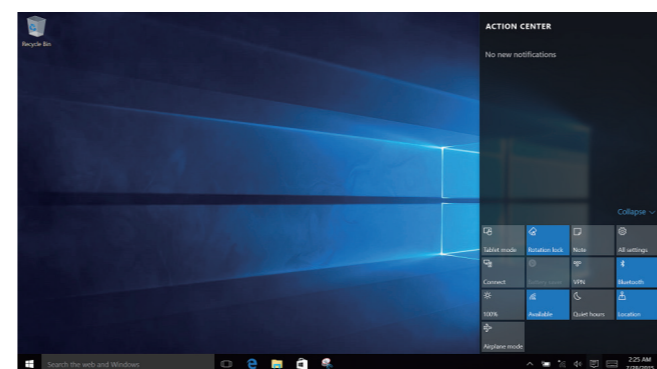
Airplane mode — Enter airplane mode.

4 Switch Non-Tablet mode

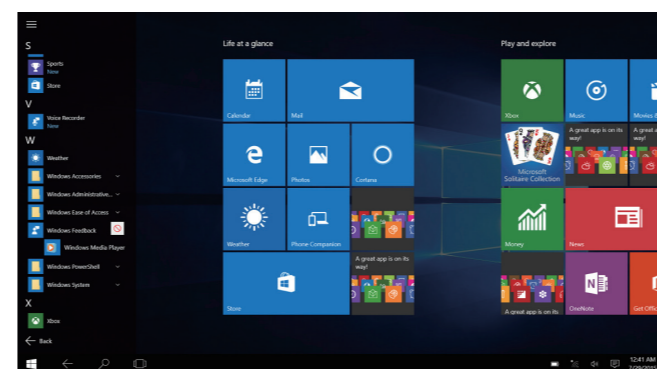In the ACTION CENTER，Touch 🔲 to switch Non-Tablet mode.

---

5 Switch tablet mode
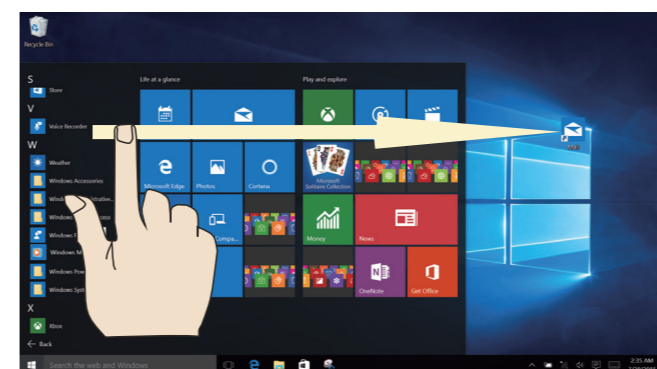
In the ACTION CENTER，Touch 🔲 to switch tablet mode.

6-1 Apps Link at Tablet mode

On start menu，Touch 📋，popup apps list, drag any app from the left list to Main UI(Life at a glance, Play and explore),then the same shortcut icon will appear.
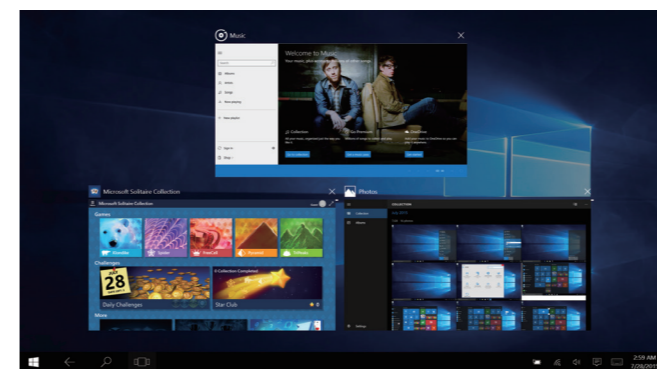

6-2 Apps shortcut at Non-Tablet mode

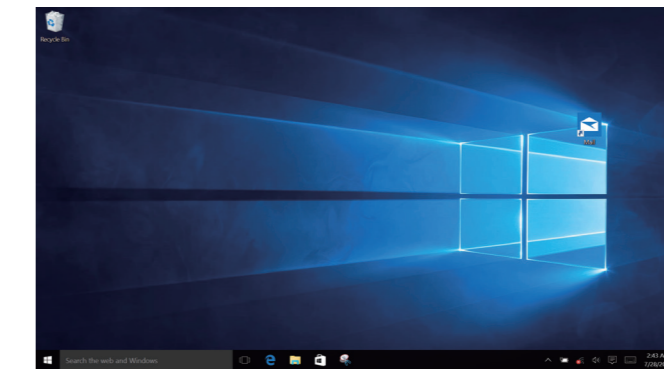In start menu，Touch 📋，popup apps list, drag the app from the left to desktop, then the same shortcut icon will appear.

7 Open recent apps

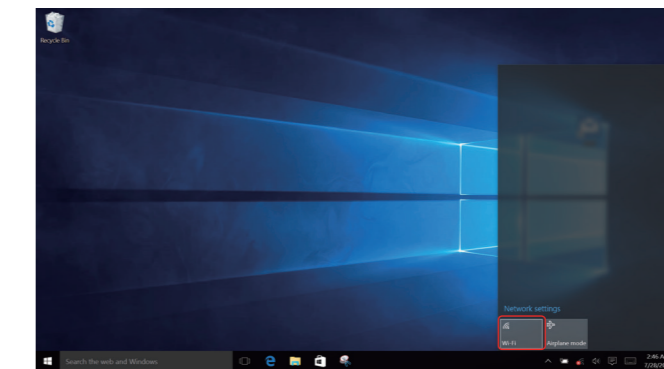In the taskbar, Touch 🔲，all recent apps will be found , double click any app to open it.
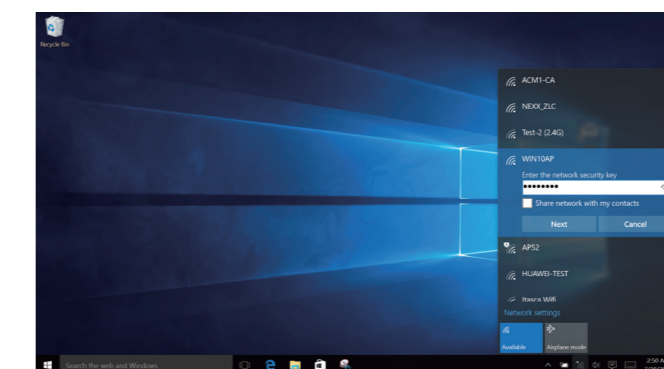
8 CONNECT TO WI-FI

(1) In taskbar，Touch 🔲 or 🔲 to start connecting Wi-Fi access point.

● If you see 📶 in taskbar，that means you've already connected to Wi-Fi.

(2) In taskbar,Touch the 🔲，and select popup 🔲 to turn on Wi-Fi.You will see taskbar changes into 🔲.

(3) Choose the suitable router you're familiar with.
Note: Tick "Connect automatically" if you want your device automatically connect to this network in future.
(4) Else enter the password, and Next till finish the settings.