


70mm

PROSCAN

Bluetooth light up speaker
MODEL NO.: PSP1721

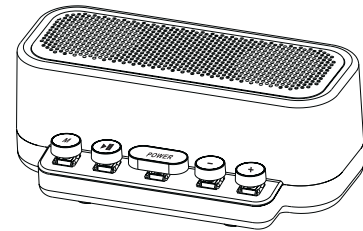

PROSCAN™ IS A REGISTERED TRADEMARK OF TECHNICOLOR USA INC. AND USED UNDER LICENSE TO CURTIS INTERNATIONAL LTD.


For service assistance and product information, pls call 1-800-968-9853.
Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3
www.curtisint.com

Product Features
Wireless Version: 5.0
Built-in Hi-Fi speaker
Supports MP3 Files Stored in Micro SD
Audio Input for Devices without Wireless Function
Built-in Rechargeable Battery
Resume/Memory Function
performance Radio function

Specifications
Output power: 5 W x 2
Battery: 3.7V 2400mAh
Charging time: 3 hours
Playing time: 3 hours (70% volume)
2 hours (100% volume)
Degree of Distortion:<10%
Effective Operating Range:8-10m
Dimensions: L200 x W115 x H82mm

What's included
Wireless Speaker x 1 PC
TYPE-C USB Charging Cable x 1 PC
User Manual x 1 PC

Function Overview

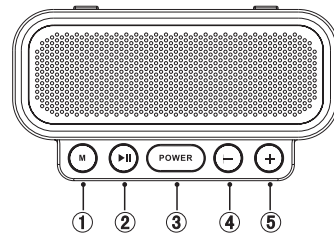


105mm

70mm

PROSCAN

Haut-parleur lumineux Bluetooth
MODEL NO.: PSP1721

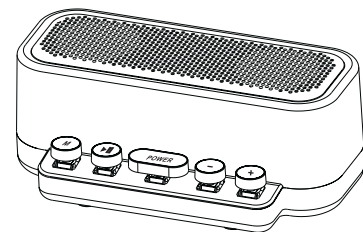

PROSCAN et le logo PROSCAN sont des marques de commerce utilisées sous licence par CURTIS INTERNATIONAL LTD.
- www.proscan-brand.com


Pour obtenir de l'aide sur les services et des renseignements sur les produits, composez le 1 - 800 - 968 - 9853.
Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

Caractéristiques du produit
Version sans fil: 5.0
Haut - parleur Hi - Fi intégré
Prise en charge des fichiers MP3 stockés dans micro SD
Entrée audio sans fonction sans fil
Batterie rechargeable intégrée
Fonctions de récupération / mémoire
Fonction radio performance


Spécifications
Puissance de sortie: 5W x 2
Batterie: 3.7V 2400mAh
Temps de charge: 3 heures
Temps de lecture: 3 heures (70% du volume)
2 heures (100% vol.)
Distorsion: < 10%
Plage de travail efficace: 8 ~ 10m
Dimensions: L200 x W115 x H82mm

Contenu inclus
Haut - parleurs sans fil x 1 pc
Câble de chargement USB type - C x 1 pc
Manuel d'utilisation x 1 pc

Aperçu des fonctionnalités

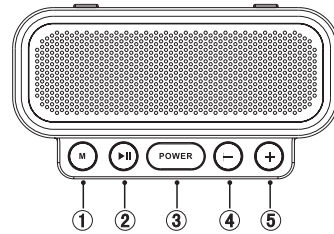

105mm

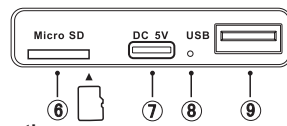

Basic Functions

1. (M) Model key :BT/radio/ Micro SD(Up to 32GB)/USB.
2. (HI) :Play/Pause , Long press will search for channels in the radio state
3. Long press: POWER: ON/OFF.
Short press: change led light color
4. (-) Long press :Volume-,Short press:
The last song / The last channel in the radio state
5. (+) Long press :Volume+,Short press:
The next song /The next channel in the radio state
6. (SD) Micro SD(Up to 32GB) port
7. DC 5 V/USB charging
8. LED
9. USB driver music playing optinal


Operating instructions:

1. Press the power key to power on this unit, press the M key to Blueooth mode, and turn on your Bluetooth device, search the pairing name from the Bluetooth device: PRO PSP1721, then connected with it.
2. Turn on the speaker again, the unit will automatically search the automatically search the last connection to the wireless device, if searching the last device more than 10 seconds, will exit the connection status.If it is found that the last connection to the bluetooth device, automatically connect.
3. Press the M key to enter to BT, Radio, USB and Micro SD card mode.
4. In radio mode, press and hold HI this key to search channels,will store the channels after searching. press

- / + this key to choose the last / the next channels selection
5. After wireless connection, Can transfer the music of the mobile , through the button control the music like the last/next song, volume +/ volume - ,pause/ play , such as action, specific see key definitions.
 6. light control: Press the Button (POWER) to change the color display of the light when the unit is turned on at any mode.
 7. When the product does not play music, the product will automatically shut down after 6 minutes.
 8. FM mode, to get a better FM sensitivity, please insert USB charging cable as an antenna.


Attentions

1. Do not use abrasive cleaners to clean this product.
2. Do not allow this product to be heated or close to fire sources, such as cooking stoves.
3. Do not expose this product to direct sunlight for a long time.
4. Do not dispose of this product in fire to avoid explosion.
5. Do not attempt to disassemble this product to make any modifications as it does not contain any after service components.
6. Do not use this product in the rain.
7. If you do not plan to use this product for a long time, please store it in a dry environment and charge the speaker at least once a month to prolong its life and avoid extreme temperatures and dust.

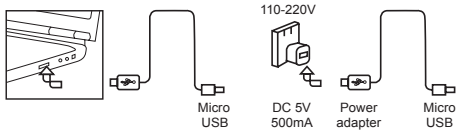

Power operation method
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
To make a warranty claim.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
To make a warranty claim.

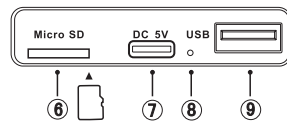

Fonctions de base

1. (M) touche de modèle: BT / radio / Micro SD (Jusqu'à 32G) / USB.
2. (HI): Play / pause, une longue pression recherchera les chaînes à l'état Radio
3. Presse longue: alimentation: on / off.
Presse courte: changer la couleur de la lumière LED
4. (-) presse longue: volume -, presse courte:
Dernière chanson / dernière chaîne en statut Radio
5. (+) presse longue: volume +, presse courte:
Chanson suivante / chaîne suivante, en état de diffusion
6. (SD) Port Micro SD (Jusqu'à 32G)
7. Charge 7 dc 5 V / USB
8. Diode électroluminescente
9. Option de lecture de musique de pilote USB

Instructions de fonctionnement:

1. Appuyez sur la touche d'alimentation pour allumer l'alimentation native, appuyez sur la touche m pour entrer en mode blueooth, puis Allumez le périphérique Bluetooth, recherchez le nom de l'appariement à partir du périphérique Bluetooth: pro psp1721, puis connectez - le.
2. Allumez à nouveau le Haut - parleur et l'appareil recherchera automatiquement. Recherchez automatiquement la dernière connexion à votre appareil sans fil, si la recherche du dernier appareil prend plus de 10 secondes, vous quitterez l'état


- de connexion. Connectez - vous automatiquement si la dernière connexion à votre appareil Bluetooth est trouvée.
3. Appuyez sur la touche m pour accéder aux modes BT, radio, USB et carte Micro SD.
 4. En mode radio, appuyez et maintenez cette touche enfoncée pour rechercher des canaux, qui seront stockés après la recherche. Presse - / + Cette touche est utilisée pour sélectionner la sélection de canal précédent / suivant
 5. Après connexion sans fil, vous pouvez transférer la musique de votre téléphone, contrôler la musique via le bouton
Comme la chanson précédente / suivante, volume + / volume -, pause / lecture, comme dans l'action, voir la définition des touches.
 6. Contrôle de la lumière: appuyez sur le bouton (alimentation) pour modifier l'affichage de la couleur de la lumière lorsque l'appareil est allumé dans n'importe quel mode.
 7. Lorsque le produit ne joue pas de musique, le produit s'éteindra automatiquement après 6 minutes.
 8. Mode FM, pour une meilleure sensibilité FM, branchez le câble de charge USB comme antenne.

Précautions

1. N'utilisez pas de nettoyant abrasif pour nettoyer ce produit.
2. Ne chauffez pas ce produit ou à proximité d'une source d'inflammation, telle qu'une cuisinière.
3. Ne pas exposer ce produit à la lumière directe du soleil pendant une longue période.
4. Ne manipulez pas ce produit dans le feu pour éviter une explosion.
5. N'essayez pas de démonter ce produit pour toute modification, car il ne contient aucun composant de service après - vente.
6. Ne pas utiliser ce produit sous la pluie.

7. Si vous ne prévoyez pas d'utiliser ce produit pendant une longue période, stockez - le dans un environnement sec et chargez le Haut - parleur au moins une fois par mois pour prolonger sa durée de vie et éviter les températures extrêmes et la poussière.

Méthode de fonctionnement de puissance

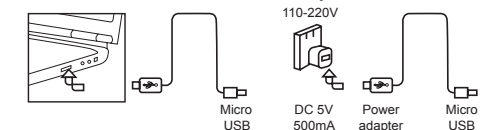

Note: l'équipement est conforme aux essais Appareils numériques de catégorie B, conformément à la partie 15 des règles de la FCC.Ces restrictions sont les suivantes: Visé à assurer une protection raisonnable contre installation résidentielle.Cet appareil peut produire de l'électricité et émettre des radios L'énergie de fréquence, si elle n'est pas installée et utilisée conformément aux instructions. Peut causer un brouillage préjudiciable aux communications radio.Mais non Assurez - vous qu'il n'y a pas d'interférence dans une installation particulière. Si ça L'équipement peut effectivement causer un brouillage préjudiciable à la réception de la radio ou de la television Cela peut être déterminé en fermant et en allumant l'appareil pour encourager l'utilisateur Tenter de corriger l'interférence par une ou plusieurs des mesures suivantes:
- Rediriger ou repositionner l'antenne réceptrice.
- Augmenter l'espacement entre l'équipement et le récepteur.
- Connectez l'appareil à une prise sur un circuit différent du circuit auquel l'appareil est connecté

Please email support2@curtiscs.com or call 1-800-968-9853.
90 day Warranty
This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except

to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.
Please have the following information available when you contact the Support Team:
• Name, address and telephone number.
• Model number and serial number.
• A clear, detailed description of the problem.
• Proof of purchase including dealer or retailer name, address and date of purchase.

l'acheteur initial ou au destinataire du cadeau. Conservez le reçu de vente original, car une preuve d'achat est nécessaire pour faire une réclamation de garantie. Cette garantie est annulée si le produit est utilisé pour un usage autre que domestique ou s'il est soumis à une tension ou une forme d'onde autre que celle indiquée sur l'étiquette (par exemple, 120V ~ 60Hz).
Nous excluons toute réclamation pour des dommages spéciaux, accessoires et consécutifs causés par une violation de la garantie explicite ou implicite. **Toute responsabilité est limitée au montant du prix d'achat. Toute garantie implicite, y compris toute garantie légale ou condition de qualité marchande ou d'adéquation à un usage particulier, est refusée sauf dans la mesure où la loi l'interdit, auquel cas cette garantie ou condition est limitée à la durée de cette garantie écrite.** Cette garantie vous confère des droits légaux spécifiques. Vous pouvez avoir d'autres droits légaux qui varient selon votre lieu de résidence. Certains états ou provinces n'autorisent pas les limitations de garanties implicites ou de dommages spéciaux, accessoires ou indirects, les limitations ci-dessus peuvent ne pas vous concerner.

Pour un service plus rapide, trouver le modèle, le type et les numéros de série sur votre appareil.

JOIGNEZ VOTRE PREUVE D'ACHAT ICI, UNE PREUVE D'ACHAT EST NÉCESSAIRE POUR OBTENIR UN SERVICE DE GARANTIE.
Veuillez avoir l'information suivantes lorsque vous contactez l'équipe d'assistance :
• Nom, adresse et numéro de téléphone.
• Numéro de modèle et numéro de série.
• Une description claire et détaillée du problème.
• Preuve d'achat comprenant le nom, l'adresse et la date d'achat du revendeur ou du détaillant.