Bluetooth Speaker User Manual

Included
• Bluetooth Speaker
• 2-in-1 cable: USB charging cable/ Auxiliary cable

Functions
• Power indicator light
• Power: Bluetooth/ off / mp3
• Previous/Volume Down, Play/Pause, Volume Up/Next
• DC 5V / Auxiliary Port
• TF card reader
• Microphone

Charging your Speaker
1. Using the USB charging cable provided, plug into your
   computer or plug into a usb powered supply of DC 5V (not provided)
2. The charging light will turn red and when charging is complete- the red light will disappear
3. The speaker requires approximately 3-4 full hours to charge but may take longer depending
   on the available current from your chosen charging option.
Note: Only use the provided USB charging cable with your speaker.

Flashing Indicators
• Green LED flash: In TF card / MP3 mode
• Green LED on: TF card/MP3 in pause or in AUX mode
• Blue LED flash: In Bluetooth mode
• Red and blue LED flash alternately: Bluetooth pairing
• Red LED on: Charging
• Red LED off: Full power
• Red LED flash: Low power

TF Card Slot
(Card not included)

USB
Charging Port

AUX Input
Interface

To Use Speaker
• Press down in the center to play or pause the music
• Pull to the left or right one time to change to the previous or next song
• Hold down to the left or right to change volume up and down

1. Bluetooth Pairing
• On your speaker- push the power switch to the left to the Bluetooth function.
• On your phone/MP3/Bluetooth enabled device- turn on the Bluetooth.
   *** Follow your device instruction manual on how to connect to the speaker*
• Your device will find "S10 Bluetooth speaker" and ask if you wish to connect to this speaker.
   Press "YES" or "CONFIRM" to accept.
• Enter password or pin 0000, and press "YES" or "CONFIRM"
• mportant notice: If the connection is successful, Blue LED will flash. If the pairing is unsuccessful,
   the LED blue and red will still flash alternately. You will need to attempt pairing again.
• Once connected, play your music or use phone function through your speaker

Multifunction Button

Bluetooth / OFF / MP3

LED   MIC

Note:
• Keep 5-10cm between speaker and mouth when using the phone function.
• Works with most Bluetooth enabled devices.

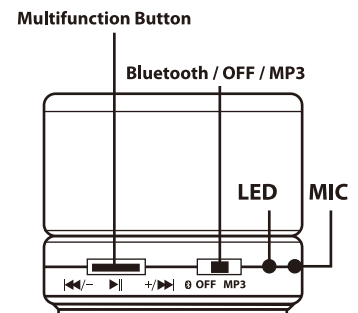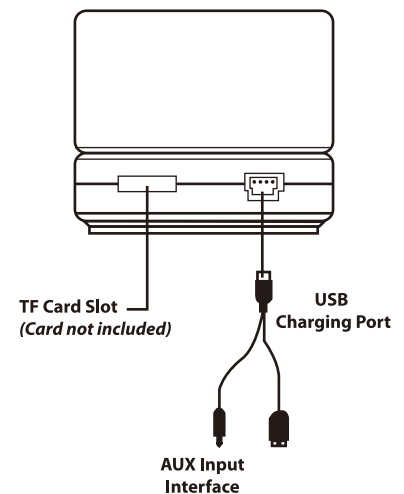### 2. MP3- (when Bluetooth is not available)
• Using the USB cable provided, plug into the speaker Auxiliary port
• Plug audio cable into your phone/mp3 player
• Play music through your speaker

3. Micro SD Card (Not Included)
• Place Micro SD card into the TF slot on your speaker
• To play music from your Micro SD card- Ensure your files are in a generic MP3 format.

Safety
• As with all electronic devices- Do not use near any water source
• Do not modify or try and repair the device yourself.
• Do not use chemical detergents to clean your device, use a soft dry cloth

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

●Reorient or relocate the receiving antenna.
●Increase the separation between the equipment and receiver.
●Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
●Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by TELEPHONE EST (HK) CO., LTD may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.