

*If you have questions or comments, contact us.*

***888-480-9885***

## **INSTRUCTION MANUAL**

# **DEWALT®**

**DXMA1902095**

**Jobsite Pro-X1 True Wireless Earbuds with Charging Case and Wall Charger**

# JOBSITE PRO-X1 TRUE WIRELESS EARBUDS WITH CHARGING CASE AND WALL CHARGER

## Instruction Manual

**⚠ WARNING: TO REDUCE THE RISK OF INJURY, USER MUST READ ALL INSTRUCTIONS BEFORE OPERATING THIS PRODUCT**

### SAVE THESE INSTRUCTIONS



Thank you for purchasing the **Jobsite Pro-X1 True Wireless Earbuds with Charging Case and Wall Charger**

With this wireless headset, you can:

- Enjoy convenient wireless hands free calls
- Control wireless music
- Switch between calls and music

### Package Contents


- True Wireless Earbuds - left and right
- Charging case
- Type C charging cable
- 1-Port Wall Charger
- Earbud cushions - 8 sets of cushions
- User manual

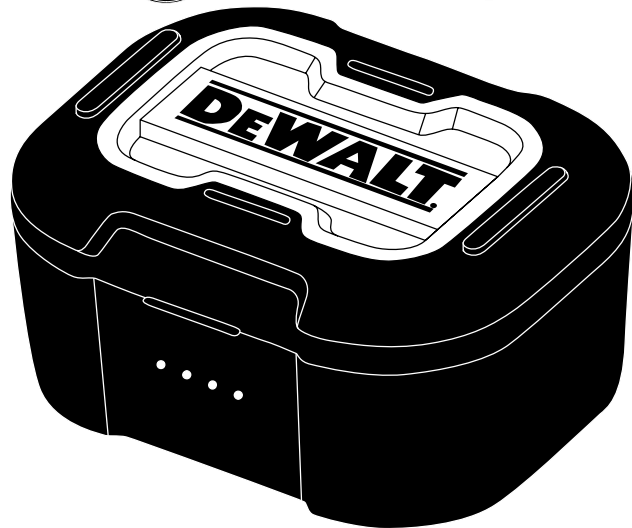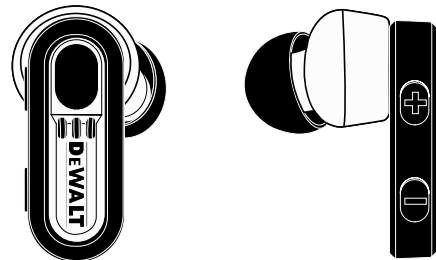

## COMPONENTS AT A GLANCE


### TRUE WIRELESS EARBUDS:

- ① In Ear Smart Sensor
- ② LED indicator (earbud)
- ③ Multi-function button (on/off/pause)
- ④ Volume + / Next song
- ⑤ Volume - / Previous song
- ⑥ Microphone (2)
- ⑦ IPX6 Rated for sweat and moisture protection

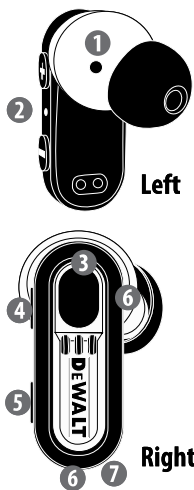


### CHARGING CASE:

- ① Battery light indicator
- ② Factory reset button
- ③ Type C charge port

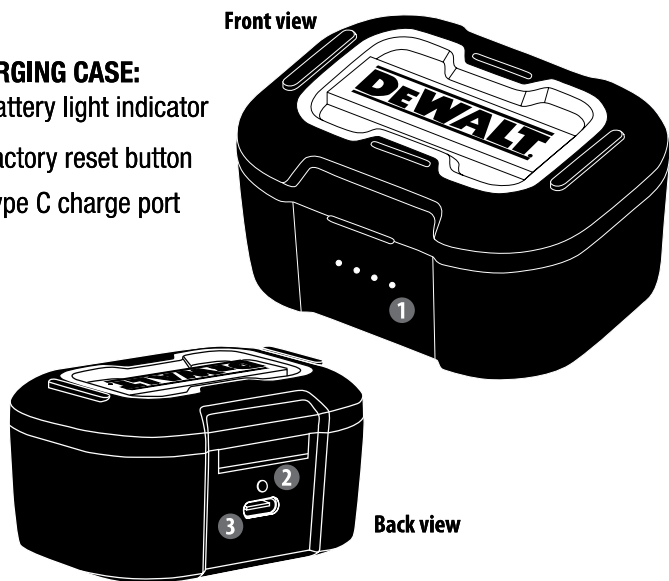

### EARBUD CUSHIONS:

- ① 8 sets of cushions:

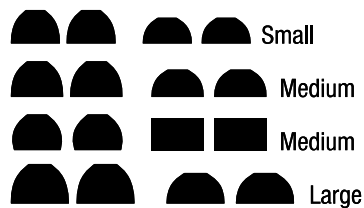


### 1-PORT WALL CHARGER:

- ① USB



### CHARGER CONNECTOR CABLE:

- ① Type C to USB

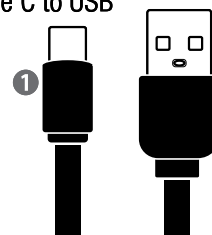

**DEFINITIONS: SAFETY GUIDELINES**

The definitions below describe the level of severity for each signal word. Please read the manual and pay attention to these symbols.

- ▲ **DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
- ▲ **WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
- ▲ **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
- ▲ **NOTICE:** Indicates a practice not related to personal injury which, if not avoided, may result in property damage.

## GETTING STARTED

**CHARGE THE CASE**

Connect the Type C end of the USB cable into the charging case, and USB A end into the included wall charger.

- Charging process is indicated by the white LED light on the front panel.
- When the charging case is fully charged, the white light stays on.

**CHARGE EARBUDS**

- Place the earbuds in the charging case. The earbuds will start charging.

**PAIR THE EARBUDS WITH YOUR BLUETOOTH DEVICE**

Take both earbuds from the charging case, the earbuds will power on automatically, entering pairing mode.

- When taking out both earbuds, there will be a voice, **“POWER ON - Battery HIGH (or battery medium or battery low)-Pairing”** after the voice you will hear two **“DOO-DOO”**, which means both earbuds are connecting to the Bluetooth device. If unable to connect to previous playing device, it will take 5-10 seconds, the earbuds will flash red and blue. The earbud is now in pairing mode and will voice **“PAIRING”** from both earbuds.

**4**

- Turn on the Bluetooth function of your Bluetooth device and pair the earbuds with your Bluetooth device.
- When successfully connected to a phone or other Bluetooth device, the Blue LED will stay on for 1 second, then voice, **“Your device is connected”**.

**THE FOLLOWING DIRECTIONS SHOW YOU HOW TO PAIR THE EARBUDS WITH YOUR BLUETOOTH DEVICE**

Turn on the Bluetooth function of your Bluetooth device, select **DEWALT TWS 209A**. Enter the earbuds password **“0000”** if prompted. For those Bluetooth device featuring Bluetooth 3.0 or higher, no need to enter a password.

**SINGLE EARBUD PAIRING (MONO MODE)**

Take either earbud from the charging case, the earpiece will power on automatically. Search for **DEWALT TWS 209A** and tap to connect. Once the pairing has succeeded, you will hear a voice **“Your device is connected”** and the indicator light will be off.

**PAIR THE EARBUDS WITH ANOTHER BLUETOOTH DEVICE**

If you have another Bluetooth device that you want to pair with the earbuds, make sure the Bluetooth function in any other previously paired or connected devices are turned off. Then follow the steps in “Pair the earbuds” with your Bluetooth device at the first time.

**CONNECT THE EARBUDS TO YOUR BLUETOOTH DEVICE**

Turn on the Bluetooth function of your Bluetooth device. Take both earbuds from the charging case, the earbuds will power on and reconnect automatically. If no device is connected, the earbuds will automatically turn off after 2 minutes. Both earbuds are now powered on and are paired with each other automatically. The earbuds will search for the previous connected Bluetooth device and reconnect to it automatically. If the last connected one is not available, the earbuds will search and reconnect to the next most recently connected device.


## CONTROLS

- **To turn earbuds ON:** remove from the charging case. Earbuds automatically power on.
- **To turn earbuds OFF:** place back in charging case and close cover. The first and fourth LED on charging case will stay on for 5 seconds. This indicates the earbuds are off and are charging.

### MANAGE YOUR CALLS AND MUSIC:

- To play or pause music:  
**Press the Multi-Function button once (left or right)**

- 1 Multi-Function button**
- 2 Forward (next song):**  
 Press V+ for 2 seconds  
**Volume increase** press V+
- 3 Backward (previous song):**  
 Press V- for 2 seconds  
**Volume decrease** press V-

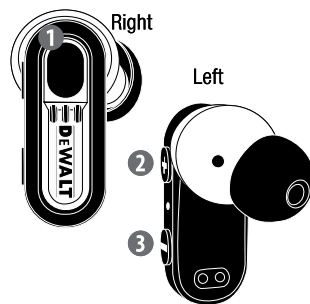

## CALL CONTROL


### USE THE MULTI-FUNCTION BUTTON

- **Answer/Hang up:**  
 Press the multi-function button once (left or right)
- **Reject incoming call:**  
 Press the multi-function button (left or right) and hold for 2 seconds
- **Switch caller during call:**  
 Press the multi-function button (left or right) twice
- **Voice Control - Siri/Google:**  
 Press the multi-function button twice (left or right)

## LED INDICATOR - EARBUDS

- **Earbuds are powered on:**  
 The Red and Blue LED flashes 1 second
- **Earbuds are pairing to a Bluetooth device:**  
 The Red and Blue LED flashes alternately
- **Earbuds are connected to a Bluetooth device:**  
 The Blue LED stays on for 1 second
- **Earbuds are powered on and connected to a Bluetooth device:**  
 The Red and Blue LED flashes. If no connection can be made, the headset will power itself off after 2 minutes

- 1 LED Indicator lights**

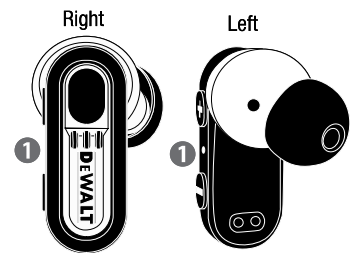

- **Low battery level:**  
 The Red LED will flash 3 times every 2 seconds and will voice, "Battery Low", every 100 seconds
- **Battery is fully charged:**  
 The LED is off

**Earbuds feature an IPX6 rating for protection against sweat and water.**

## LED INDICATOR - CHARGING CASE

- Close the charging case cover for earbuds to charge. The first and fourth LED will stay on for 5 seconds.

**4 White LED lights = 75-100% power**

**3 White LED lights = 50-75% power**

**2 White LED lights = 25-50% power**

**1 White LED lights = 0-25% power**

① LED Indicator lights:



## LED INDICATOR - CHARGE CASE WITH EARBUDS INSIDE

- While charging the case, White LED status:

**3 White LED lights stay on and the 4th LED flashes every second for 75-100% power**

**2 White LED lights stay on and the 3rd LED flashes every second for 50-75% power**

**1 White LED lights stay on and the 2nd LED flashes every second for 25-50% power**

**1 White LED light flashes every second for 0-25% power**

**6**

## FACTORY RESET

1. Place earbuds into the charging case and keep case open.
2. Press the factory reset button twice and it will be disconnected from paired mobile devices and reset to factory setting.

### TECHNICAL DATA - EARBUDS

**Music time:** Up to 7.5 hours per charge (total up to 30 hours with charging case)

**Talk time:** Up to 6 hours per charge (total up to 24 hours with charging case)

**Standby time:** 220 hours

**Charging time:** 1.5 hours

**Rechargeable Li-ion battery:** 55mAh on each earpiece

**Bluetooth version:** 5.0

**Compatible Bluetooth profiles:**

- HFP
- HSP
- A2DP
- AVRCP

**Supported audio codec:** SBC

**Frequency band:** 2.4 GHz ISM Band

**Transmitter power:** ≤ 4 dBm

**Operating range:** 10 meters (33 feet)

### TECHNICAL DATA - CHARGING CASE

**Charging time:** 2 hours

**Rechargeable Li-ion battery:** 500mAh

### TECHNICAL SPECS - WALL CHARGER

**Input:** 100-240V AC, 50-60Hz, 0.35A

**Output:** 5V=1A

### IMPORTANT SAFETY INSTRUCTIONS FOR ALL RECHARGEABLE BATTERY PACKAGING

The battery is not fully charged out of the carton. Before using the earbuds, read the safety instructions below and then follow the charging procedures outlined.

Do not incinerate the battery module even if it is severely damaged or is completely worn out. The battery can explode in a fire. Toxic fumes and materials are created when lithium batteries are burned. If battery contents come into contact with the skin, immediately wash area with mild soap and water. If battery liquid gets into the eye, rinse water over the open eye for 15 minutes or until irritation ceases. If medical attention is needed, the battery electrolyte is composed of a mixture of liquid organic carbonates and lithium salts. Contents of opened battery cells may cause respiratory irritation. Provide fresh air. If symptoms persist, seek medical attention. These earbuds are splash and water resistant and was tested under controlled laboratory conditions with a rating of IPX6 under IEC standard 60529. Splash and water resistance are not permanent conditions and resistance might decrease as a result of normal wear. Do not attempt to charge wet earbuds; To dry your earbuds, tap it gently against your hand with the port cover open to remove excess liquid. Leave your powerbank in a dry area with some airflow. Placing your earbuds in front of a fan blowing cool air directly onto the earbuds might help the drying process. The charge case does not have an IP rating. Liquid damage is not covered under warranty.

### STORAGE RECOMMENDATIONS

1. The best storage place is one that is cool and dry, away from direct sunlight and excess heat or cold.
2. For long storage, it is recommended to store the earphones in a cool dry place for optimal results.

**⚠ WARNING: DO NOT** leave earbuds or charge case in any location with excessive heat.

**⚠ WARNING: DO NOT** charge or use the battery in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

**⚠ WARNING: DO NOT** modify the battery in any way to fit a non-compatible charger as the battery may rupture causing serious personal injury.

**⚠ WARNING: DO NOT** splash or immerse in water or other liquids.

**⚠ WARNING: DO NOT** store or use the earbuds in locations where the temperature may reach or exceed 105° F (40° C) (such as outside sheds or metal buildings in summer). For best life, store earphones in a cool, dry location. The True Wireless Earbuds should not be disposed of as municipal solid waste. To recycle it, contact your local hazardous waste processor or contact Call 2 Recycle® on their website, [call2recycle.org](http://call2recycle.org), or by phone at 877-273-2925 to find the nearest drop-off location for lithium-polymer batteries.

**⚠ WARNING: Burn hazard.** Battery liquid may be flammable if exposed to spark or flame.

**⚠ WARNING: Fire hazard.** Never attempt to open the battery pack for any reason. If the battery pack is cracked or damaged, do not insert the charging cable. Do not crush, drop or damage the battery. Do not use the earphones if they have received a sharp blow, been dropped, run over or damaged in any way (e.g. pierced with a nail, hit with a hammer, stepped on).

**Damaged batteries should be returned to a service center for recycling.**

## LIMITED LIFETIME WARRANTY

We're here to help. If you are not satisfied with this product or have questions on how to use it, please contact us. **YOU DO NOT NEED TO CONTACT THE RETAILER.** Please contact one of our service representatives, using the contact info listed below. Please provide the product number when contacting us.

**PLEASE CALL CUSTOMER SERVICE: 888-480-9885,**

8:00 a.m.-5:00 p.m. PT, Monday - Friday,

or e-mail us using: **dewaltinfo@efilliate.com**

E-filliate Inc.

11321 White Rock Road

Rancho Cordova, CA 95742 USA



*Si tiene preguntas o comentarios, puede contactarnos.*

***888-480-9885***

## MANUAL DE INSTRUCCIONES

# DEWALT®

DXMA1902095

Audífonos inalámbricos auténticos para el sitio de trabajo Pro-X1 con estuche de carga y cargador para pared

# AUDÍFONOS INALÁMBRICOS AUTÉNTICOS PARA EL SITIO DE TRABAJO PRO-X1 CON ESTUCHE DE CARGA Y CARGADOR PARA PARED

## MANUAL DE INSTRUCCIONES

**⚠ ADVERTENCIA:** PARA REDUCIR EL RIESGO DE LESIONES, EL USUARIO DEBE LEER TODAS LAS INSTRUCCIONES ANTES DE UTILIZAR ESTE PRODUCTO

### GUARDE ESTAS INSTRUCCIONES


Gracias por comprar **los audífonos inalámbricos auténticos para el sitio de trabajo Pro-X1** con estuche de carga y cargador para pared.

Con estos audífonos inalámbricos, usted podrá hacer lo siguiente:

- Disfrutar de la comodidad de las llamadas en modo manos libres
- Controlar la música de forma inalámbrica
- Alternar entre llamadas y música

### Contenido del paquete

- Audífonos inalámbricos auténticos, izquierda y derecha
- Estuche de carga
- Cable de carga tipo C
- Cargador para pared de 1 puerto
- Almohadillas para audífonos, 8 pares de almohadillas
- Manual de uso

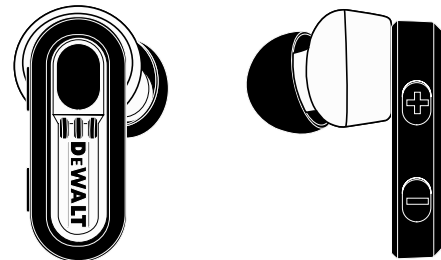


## UN VISTAZO A LOS COMPONENTES

### AUDÍFONOS INALÁMBRICOS AUTÉNTICOS:

- 1 Sensor inteligente In Ear
- 2 Indicador LED (audífono)
- 3 Botón multifunción (encendido/apagado/pausa)
- 4 Volumen + / Canción siguiente
- 5 Volumen - / Canción anterior
- 6 Micrófono (2)
- 7 Con clasificación IPX6 en protección contra el sudor y la humedad

Izquierdo

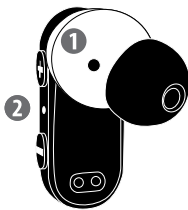

Derecho



### ESTUCHE DE CARGA:

- 1 Indicador luminoso de batería
- 2 Botón de restablecimiento de fábrica
- 3 Puerto de carga tipo C

Vista frontal




Vista trasera



### ALMOHADILLAS DE AUDÍFONOS:

- 1 8 juegos de almohadillas:

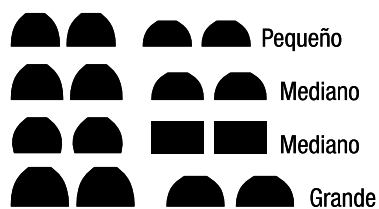


### CARGADOR PARA PARED DE 1 PUERTO

- 1 USB



### CABLE DE CONEXIÓN AL CARGADOR:

- 1 Type C to USB

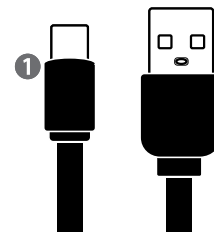

**DEFINICIONES: LINEAMIENTOS DE SEGURIDAD**

Las siguientes definiciones describen el nivel de gravedad de cada advertencia. Lea el manual y preste atención a estos símbolos.

**▲ PELIGRO:** Indica una situación inminentemente peligrosa que, si no se evita, resultará en la muerte o lesiones serias.

**▲ ADVERTENCIA:** Indica una situación potencialmente peligrosa que, si no se evita, podría resultar en la muerte o lesiones graves.

**▲ PRECAUCIÓN:** Indica una situación potencialmente peligrosa que, si no se evita, puede resultar en lesiones menores o moderadas.

**▲ AVISO:** Indica una práctica no relacionada con lesiones personales que, si no se evita, puede resultar en daños a los bienes.

**PARA COMENZAR****CARGA DEL ESTUCHE**

Conecte el extremo de Tipo C del cable USB al estuche de carga, y el extremo A del USB al cargador para pared incluido.

- La luz LED blanca en el panel frontal indica el proceso de carga.
- Cuando el estuche de carga esté totalmente cargado, la luz blanca permanecerá encendida.

**CARGA DE LOS AUDÍFONOS**

- Coloque los audífonos en el estuche de carga. Los audífonos comenzarán a cargarse

**VINCULAR LOS AUDÍFONOS CON SU DISPOSITIVO BLUETOOTH**

Tome los audífonos del estuche de carga, estos se encenderán automáticamente y entrarán en modo de emparejamiento.

- Cuando retire ambos audífonos oírás una voz que dice **"POWER ON - Battery HIGH-Pairing"** [ENCENDIDO - Batería ALTA (o media o baja), emparejando], y después de la voz escucharás dos **"TUU-TUU"**, lo que significa que los audífonos se están conectando al dispositivo Bluetooth. Si no puede conectarse con el dispositivo de reproducción anterior, le tomará de 5 a 10 segundos, y los audífonos parpadearán en rojo y azul. El audífono está en modo emparejamiento y escuchará **"PAIRING"** (EMPAREJANDO) desde ambos audífonos.

**12**

- Active la función Bluetooth en su dispositivo Bluetooth y vincule sus audífonos con su dispositivo Bluetooth.
- Cuando se haya conectado con éxito a un teléfono u otro dispositivo Bluetooth, la LED azul permanecerá encendida durante un segundo, y después oírás la voz **"Your device is connected"** (Su dispositivo está conectado).

**LAS SIGUIENTES INDICACIONES LE MUESTRAN CÓMO EMPAREJAR LOS AUDÍFONOS CON SU DISPOSITIVO BLUETOOTH**

Active la función Bluetooth de su dispositivo, seleccione **DEWALT TWS 209A**. Si se lo solicitara, ingrese la contraseña de los audífonos **"0000"**. Para los dispositivos Bluetooth 3.0, o una versión superior, no necesitará ingresar una contraseña.

**EMPAREJAMIENTO DE UN SOLO AUDÍFONO (MODO MONOFÓNICO)**

Tome cualquiera de los audífonos del estuche de carga; este se encenderá automáticamente. Busque **DEWALT TWS 209A** y selecciónelo para conectarlo. Una vez que el emparejamiento se produzca con éxito, escuchará una voz que dice **"Your device is connected"** (su dispositivo está conectado) y se apagará la luz indicadora.

**VINCULAR LOS AUDÍFONOS CON OTRO DISPOSITIVO BLUETOOTH**

Si tiene otro dispositivo Bluetooth con el que quiere emparejar los audífonos, asegúrese de desactivar la función Bluetooth de cualquier otro dispositivo que tenga conectado. Después, siga los pasos de "Pair the earbuds" (Vincular los audífonos) con su dispositivo Bluetooth, si lo hace por primera vez.

**CONECTAR LOS AUDÍFONOS CON SU DISPOSITIVO BLUETOOTH**

Active la función Bluetooth de su dispositivo Bluetooth. Tome ambos audífonos del estuche de carga, estos se encenderán y reconectarán automáticamente. Si no hay ningún dispositivo conectado, los audífonos se apagarán después de dos minutos. Ambos audífonos están encendidos y automáticamente conectados entre sí. Los audífonos buscarán el dispositivo Bluetooth conectado anteriormente y se reconectarán de forma automática. Si el último dispositivo conectado no estuviera disponible, los audífonos buscarán y se reconectarán con el siguiente dispositivo que recientemente haya estado conectado.

## CONTROLES

- Para **ENCENDER los audífonos**: retírelos del estuche de carga. Se encenderán automáticamente.
- Para **APAGAR los audífonos**: vuelva a colocarlos en el estuche de carga y cierre la tapa. La primera y cuarta LED del estuche de carga permanecerán encendidas durante 5 segundos. Esto indica que los auriculares están apagados y se están cargando.

### CONTROLAR SUS LLAMADAS Y MÚSICA::

- Para reproducir o pausar la música:  
**Presione el botón multifunción (izquierda o derecha) una vez**

- 1 **Botón multifunción**
- 2 **Adelante (canción siguiente):**  
 Presione V+ por 2 segundos  
**Para subir el volumen, presione V+**
- 3 **Atrás (canción anterior):**  
 Presione V- por 2 segundos  
**Para bajar el volumen, presione V-**



## CONTROL DE LLAMADAS

### USO DEL BOTÓN MULTIFUNCIÓN

- **Responder/finalizar:**  
 Presione el botón multifunción (izquierda o derecha) una vez
- **Rechazar llamada entrante:**  
 Presione el botón multifunción (izquierda o derecha) una vez y mantenga por 2 segundos
- **Cambiar de llamada durante una llamada activa:**  
 Presione el botón multifunción (izquierda o derecha) dos veces
- **Control por voz - Siri/Google:**  
 Presione el botón multifunción (izquierda o derecha) dos veces

## INDICADOR LED - AUDÍFONOS

- **Los audífonos están encendidos:**  
 Las LED roja y azul parpadean durante 1 segundo
- **Los audífonos se están emparejando con el dispositivo Bluetooth**  
 Las LED roja y azul parpadean alternativamente
- **Los audífonos están conectados al dispositivo Bluetooth:**  
 La LED azul permanece encendida durante 1 segundo
- **Los audífonos están encendidos y conectados al dispositivo Bluetooth:**  
 Las LED roja y azul parpadean. Si no es posible lograr una conexión, los audífonos se apagarán automáticamente después de 2 minutos.

### 1 Indicador led - audífonos



- **Nivel de batería bajo:**  
 La LED roja parpadeará 3 veces cada 2 segundos y escuchará "Battery Low" (Batería baja), cada 100 segundos
- **La batería está totalmente cargada:**  
 La LED está apagada

Los audífonos cuentan con una clasificación IPX6 de protección contra el sudor y agua.

## INDICADOR LED: ESTUCHE DE CARGA

- Cierre la tapa del estuche de carga para que los auriculares se carguen. La primera y cuarta LED permanecerán encendidas durante 5 segundos.

- 4 luces LED blancas = 75-100 % de carga
- 3 luces LED blancas = 50-75 % de carga
- 2 luces LED blancas = 25-50 % de carga
- 1 luces LED blancas = 0-25 % de carga

1 Luces LED indicadoras



## INDICADOR LED: ESTUCHE DE CARGA CON LOS AUDÍFONOS EN EL INTERIOR

- Mientras se cargan el estuche, estado de las LED blancas:

- 3 luces LED blancas se mantienen encendidas y la cuarta luz LED parpadea cada segundo para indica 75-100 % de carga
- 2 luces LED blancas se mantienen encendidas y la tercera luz LED parpadea cada segundo para indicar 50-75 % de carga
- 1 luz LED blanca se mantiene encendida y la segunda luz LED parpadea cada segundo para indicar 25-50 % de carga
- 1 luz LED blanca parpadea cada segundo para indicar 0-25 % de carga

14

## RESTABLECER A VALORES DE FÁBRICA

1. Coloque los auriculares en el estuche de carga y mantenga el estuche abierto.
2. Pulse el botón de restablecimiento a valores de fábrica dos veces y se desconectará de los dispositivos móviles emparejados y se restablecerá la configuración de fábrica.

### DATOS TÉCNICOS: AUDÍFONOS

**Tiempo de reproducción de música:** Hasta 7.5 horas por carga (30 horas totales con el estuche de carga)

**Tiempo para hablar:** Hasta 6 horas por carga (hasta 24 horas totales con el estuche de carga)

**Tiempo de espera:** 220 horas

**Tiempo de carga:** 1,5 horas

**Batería recargable de ion de litio:** 55mAh en cada audifono

**Versión de Bluetooth:** 5.0

**Perfiles Bluetooth compatibles:**

- HFP      • HSP
- A2DP    • AVRCP

**Códec de audio compatible:** SBC

**Banda de frecuencia:** Banda ISM de 2.4 GHz

**Potencia del transmisor:** ≤ 4 dBm

**Rango de funcionamiento:** 10 metros (33 pies)

### DATOS TÉCNICOS: ESTUCHE DE CARGA

**Tiempo de carga:** 2 horas

**Batería recargable de ion de litio:** 500 mAh

### ESPECIFICACIONES TÉCNICAS - CARGADOR DE PARED

**Aporte:** 100-240V AC, 50-60Hz, 0.35A

**Producción:** 5V=1A