

57818 User Guide

Manual del usuario

BAUHN

KARAOKE MICROPHONE & SPEAKER


MICRÓFONO Y ALTAVOZ PARA KARAOKE




Includes:

Karaoke Microphone with built-in smartphone holder
Micro USB to USB Cable
Micro USB to 3.5mm Audio Cable
User Manual


Micro USB to 3.5mm Audio Cable

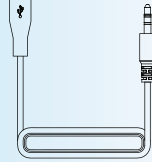


Micro USB to USB Cable

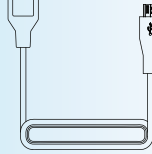


2

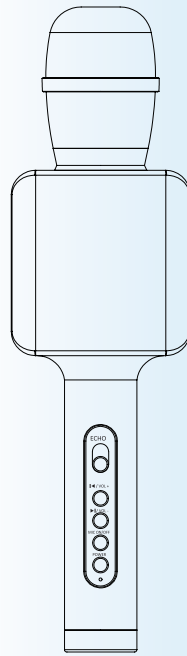


Works with Karaoke apps




phone holder

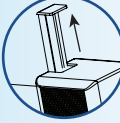

charge record port

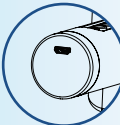

control panel

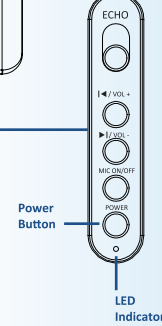

3

PAIRING TO BLUETOOTH DEVICE

Make sure the Bluetooth function is available on your electronic device. Specific pairing procedures may vary slightly depending on the device. For detailed information, please refer to your device's User Guide.


- After successful pairing, devices will remember each other. Therefore, no pairing will be needed next time.
1. Keep the distance between the device and the microphone within 3 feet (for pairing only).
 2. Turn microphone on using power button.
 3. Activate the Bluetooth function on your device to search for Bluetooth devices. Look for "BT Karaoke" in device list displayed and select.
 4. Only for some electronic devices: Enter password, 0000.
 5. Microphone is now ready for use.

BUILT-IN SMARTPHONE HOLDER


Built-in retractable phone holder is perfect for when you want to sing along while looking at the phone screen.

STEP 1: Access the phone holder by pulling it UP.

STEP 2: Place the phone into the bracket.
Fits smartphone up to 6 inches.

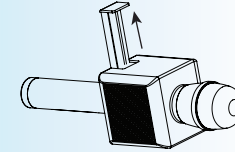

STEP 1

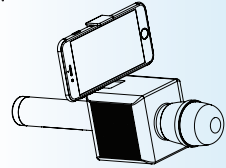

4

STEP 2

POP SOLO CONTROLS

- Turn ON/OFF _____ Press and hold
- Pause/Restart _____ Quickly press
- Accompaniment ON/OFF _____ Press and hold
- Accompaniment Feature – allows the music as an accompaniment to your voice, so your voice is more prominent. This button allows you to lower the music without lowering the volume of the microphone.
- Turn microphone ON/OFF _____ Quickly press
- Increase volume _____ Press and hold
- Go to previous song _____ Quickly press
- Decrease volume _____ Press and hold
- Go to next song _____ Quickly press
- Adjust Echo effect _____ Push

5

RECORDING WITH MICROPHONE

***Note:** Only records via audio cable. Bluetooth must be turned off.

1. Insert the audio cable to your phone, plug the micro USB port into the bottom of the microphone base.
2. Open your favorite karaoke app. Follow the instructions in the app and start recording.
3. When you are done recording, there are 2 ways to listen to your video:
LISTEN THROUGH THE MICROPHONE SPEAKERS:
Keep your phone plugged into the microphone and replay your video.


LISTEN THROUGH YOUR PHONE:
Unplug your phone from the microphone, turn the microphone off and replay your video.

Please note - iPhone* 7 & 7 Plus does not have auxiliary jack. You will need your Apple supplied adapter to use this feature.

CHARGING THE MICROPHONE

1. When battery is low, the unit will automatically shut off.
2. Connect the Micro to USB cable from the microphone to a power source. The LED Indicator will light up red.
3. Charging will take about 2 hours. When the unit is done charging, the red light will shut off.

Note: You may use your microphone while it's charging.

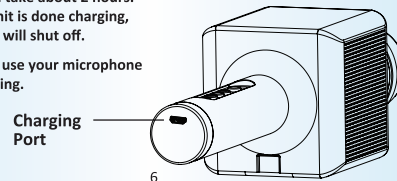

6

FAQ / TROUBLESHOOTING

Q: Why is Bluetooth not pairing?

A: The distance between your phone and the device may be too far. Bring the devices close together. OR the unit may already be paired with another device in range. Unpair the unit from the other device.

Q: Why does the microphone not turn on?

A: Make sure the unit is fully charged before use. The microphone will not turn on if the battery level is very low. A blue light indicates a substantial charge.

Q: Why is there sound distortion or static when playing music?

A: Your phone signal may be weak, the volume may be too high or the battery power of the unit may be too low. Check the volume on both the device and your phone and make sure the microphone is fully charged.

Q: Why is there loud feedback when I start to record via microphone?

A: Some apps are incompatible with external audio input and operate best with headphones, thus making loud noise when recording via microphone. Try another app that is compatible with external audio input.

Q: Why won't my recording play back though I heard it clearly while recording?

A: The Karaoke Microphone is most compatible with karaoke apps that don't require headphones. The Karaoke Microphone should be connected to your phone via 3.5 mm headphone jack to be recognized and work best. If your vocals are not recorded, the app most likely does not support your device. Try using a different app or a device with a different operating system.

7

IMPORTANT SAFEGUARDS

- Do not use this unit for anything other than its intended use.
- Keep the unit away from any heat source, direct sunlight, humidity, water or any other liquid.
- Do not expose the device to extremely high or low temperatures, as it may damage the battery.
- Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Keep the unit out of reach of infants.


SPECIFICATIONS

Bluetooth Version	Bluetooth V4.2
Standby Time	Up to 12 hours
Charge Time	2 hours
Power Source	Battery
Continuous Play Time	5 hours
Battery	Built-in Lithium: 3.7V 1200mAh
Wireless Frequency	100-10kHz


Incluye:

Micrófono para karaoke con soporte integrado para teléfono
Cable micro USB a USB
Cable micro USB a audio de 3.5 mm
Manual del usuario


Cable micro USB a audio de 3.5 mm

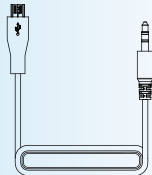


Cable micro USB a USB

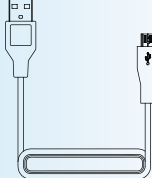


1

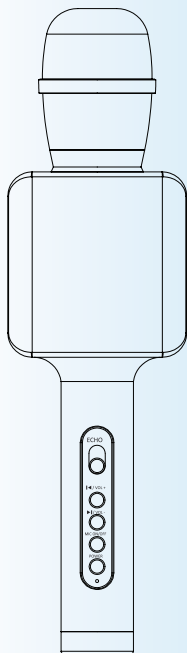


Funciona con las aplicaciones de karaoke




Soporte para teléfono

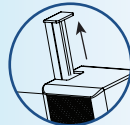

Puerto de grabación / carga

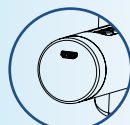

Panel de control



Botón de encendido/apagado

Indicador LED

2

GRABAR CON MICRÓFONO

***Nota: Sólo graba a través del cable de audio. El Bluetooth debe estar apagado.**

1. Conecte el cable de audio al teléfono, conecte el puerto micro USB en la parte inferior de la base del micrófono.
2. Abra su aplicación de karaoke favorita. Siga las instrucciones de la aplicación y comience a grabar.
3. Al acabar de grabar, el video puede escucharse de 2 maneras:

ESCUCHAR A TRAVÉS DE LOS ALTAVOCES DEL MICRÓFONO:

Mantenga el teléfono conectado al micrófono y reproduzca el video.

ESCUCHAR A TRAVÉS DEL TELÉFONO:

Desconecte el teléfono del micrófono, apague el micrófono y reproduzca el video.


Atención: los iPhone® 7 y 7 Plus no tienen puertos auxiliares. Deberá usar el adaptador de Apple para usar esta función.

CARGAR EL MICRÓFONO

1. La unidad se apagará automáticamente cuando la carga de la batería sea baja.
2. Conecte el cable micro USB del micrófono a una fuente de alimentación. El indicador LED se iluminará de color rojo.
3. La carga tardará unas 2 horas. Cuando la unidad haya terminado de cargarse, la luz roja se apagará.

Nota: Puede usar el micrófono mientras se está cargando.

Puerto de carga

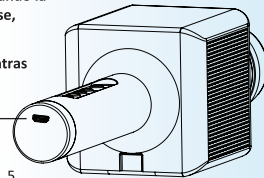

5

PREGUNTAS FRECUENTES/SOLUCIÓN DE PROBLEMAS

P: ¿Por qué no se empareja el Bluetooth?

R: La distancia entre el teléfono y el dispositivo puede ser demasiado grande. Acerque los dispositivos. O bien, la unidad podría ya estar emparejada con otro dispositivo dentro de su radio de alcance. Desempareje la unidad del otro dispositivo.

P: ¿Por qué no se enciende el micrófono?

R: Asegúrese de que la unidad esté completamente cargada antes del uso. El micrófono no se encenderá si el nivel de la batería es demasiado bajo. Una luz azul indica una carga sustancial.

P: ¿Por qué hay distorsión del sonido o estática al reproducir música?

R: La señal del teléfono puede ser débil, el volumen puede ser demasiado alto o la carga de la batería puede ser demasiado baja. Compruebe el volumen tanto en el dispositivo como en el teléfono y asegúrese de que el micrófono esté completamente cargado.

P: ¿Por qué hay reatrolimentación fuerte cuando comienzo la grabación con el micrófono?

R: Algunas aplicaciones son incompatibles con la entrada de sonido externa y funcionan mejor con auriculares, que es el motivo por el que hacen un ruido fuerte al grabar con el micrófono. Pruebe a utilizar otra aplicación que sea compatible con la entrada de sonido externa.

P: ¿Por qué no se reproduce mi grabación aunque la escuchara con claridad durante la grabación?

R: El micrófono para karaoke ofrece la mejor compatibilidad con aplicaciones que no necesitan auriculares. El micrófono para karaoke debe conectarse al teléfono mediante la entrada de 3.5 mm para auricular para ser reconocido y ofrecer el mejor funcionamiento. Si no graba su voz, la aplicación seguramente no sea compatible con su dispositivo. Pruebe a usar otra aplicación o un dispositivo con otro sistema operativo.

6

EMPAREJAMIENTO CON DISPOSITIVO BLUETOOTH

Asegúrese de tener la función Bluetooth disponible en el dispositivo electrónico. Los procedimientos específicos de emparejamiento pueden variar ligeramente en función del dispositivo. Para obtener información detallada, consulte el manual del usuario de su dispositivo.

- Después de emparejarse correctamente, los dispositivos recordarán la configuración. Por lo tanto, no será necesario emparejarlos la próxima vez.


1. Mantenga el dispositivo y el micrófono a una distancia no superior a 3 pies o 90 cm (sólo para el emparejamiento).
2. Encienda el micrófono con el botón de encendido/apagado.
3. Active la función Bluetooth en su dispositivo para buscar los dispositivos Bluetooth. Busque el dispositivo "BT Karaoke" en la lista de dispositivos y selecciónelo.
4. **Sólo en algunos dispositivos:** Introduzca la contraseña 0000.
5. El micrófono está ahora listo para usarse.

SOPORTE INTEGRADO PARA TELÉFONO


El soporte para teléfono retráctil incorporado es perfecto para cuando quiera cantar mientras mira la pantalla del teléfono.

PASO 1: Abra el soporte para teléfono tirando hacia ARRIBA.

PASO 2: Ponga el teléfono en el soporte. Compatible con teléfonos inteligentes de hasta 6 pulgadas (15.24 cm)

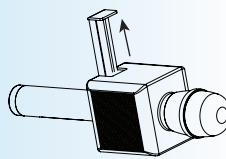

PASO 1

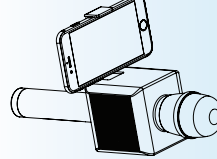

PASO 2

3

MEDIDAS DE SEGURIDAD IMPORTANTES

- No use este producto para otra cosa que no sea su uso previsto.
- Mantenga la unidad alejada de cualquier fuente de calor, luz solar directa, humedad, agua o cualquier otro líquido.
- No exponga el dispositivo a temperaturas extremadamente altas o bajas, ya que podría dañar la batería.
- Para evitar las descargas eléctricas y/o las lesiones y los daños a la unidad, no utilice la unidad si se ha mojado o humedecido.
- No utilice la unidad si se ha caído o si ha sufrido algún daño.
- Las reparaciones de equipos eléctricos sólo debe realizarlas un electricista calificado. Las reparaciones incorrectas pueden poner en grave riesgo al usuario.
- Mantenga la unidad fuera del alcance de los niños pequeños.

ESPECIFICACIONES

Versión Bluetooth	Bluetooth V4.2
Tiempo en espera	Hasta 12 horas
Tiempo de carga	2 horas
Fuente de alimentación	Batería
Autonomía de reproducción ininterrumpida	5 horas
Batería	Integrada de litio: 3.7V 1200mAh
Frecuencia inalámbrica	100-10kHz

7

CONTROLES POP SOLO

Encendido/Apagado _____ Pulse y mantenga pulsado

Pausa/Reinicio _____ Pulse brevemente

Acompañamiento encendido/apagado _____ Pulse y mantenga pulsado

Función de acompañamiento: Permite reproducir la música como acompañamiento de su voz para que su voz destaque más. Este botón le permite reducir el volumen de la música sin reducir el volumen del micrófono.

Encendido/Apagado del micrófono _____ Pulse brevemente

Subir el volumen _____ Pulse y mantenga pulsado

Ir a la canción anterior _____ Pulse brevemente

Bajar volumen _____ Pulse y mantenga pulsado

Ir a la canción siguiente _____ Pulse brevemente

Ajustar efecto eco _____ Pulsar

4



DISTRIBUTED BY • DISTRIBUIDO POR:
ALDI INC., BATAVIA, IL 60510
www.aldi.us



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction