

**PRO CONTROLPAD FOR PLAYSTATION 3 USER MANUAL**

**PRECAUTION & MAINTENANCE:**


Before use, please read the following important safety information. Following these simple guidelines will ensure trouble-free operation and optimal performance of the product and compatible electronic devices. Improper use may cause the product to stop working and may even cause serious injury to the user.

- This product is intended for private, non-commercial use only.
- Use the product for its intended purpose only.
- For indoor use only.
- Avoid exposure to external heat sources, direct, prolonged sunlight; dust, corrosive chemicals, and moisture.
- Do not drop the product or subject it to undue shock.
- This product contains small parts. Keep out of reach of children.
- Keep children away from the packaging material as there is a risk of suffocation.
- Dispose of packaging material according to applicable local regulations.
- Do not attempt to service or disassemble. If you experience problems with the unit, discontinue use and contact Customer Support for assistance. Attempting to open or service the unit will void all warranties, express or implied.
- Failure to follow these directions may void the warranty.

**PACKAGE CONTENTS:**

- 1 x Wireless Controller for PS3
- 1 x 1.5m Charge Cable
- 1 x Warranty Card
- 1 x User Manual

**PRODUCT DIAGRAM:**

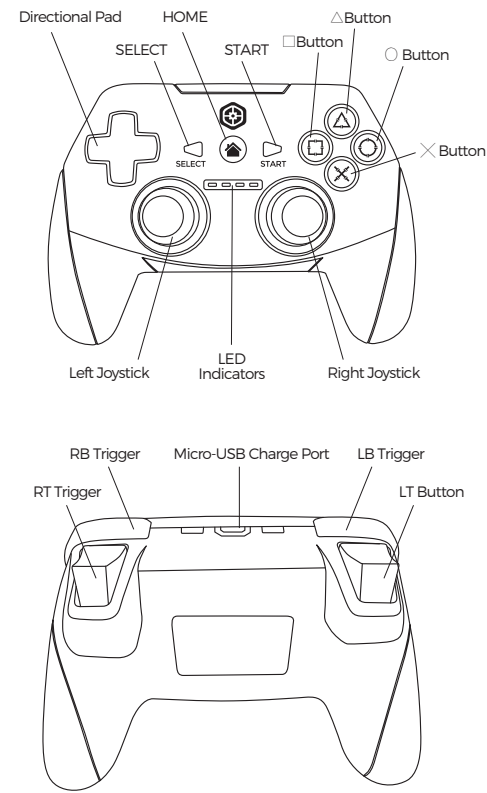

**FEATURES:**

- Operating Distance: up to 10m
- LED player indicator lights
- Twin analog control sticks
- Precise 8-way directional pad
- 1.5m charge cable
- Product Size: 151.5\*102.5\*63.5mm
- Product Weight: 184.7g

**PREPARING FOR USE:**

This Wireless Controller was designed specifically for use with the PlayStation 3 console. To use a wireless controller, you must first register or "pair" the controller with the PS3 system and assign a number to the controller.

- Step 1: Pair the system and the controller
- When using for the first time
  - When using with a different PS3 system

- Step 2: Assign a controller number
- Every time the PS3 system is turned on

**STEP 1: PAIR THE SYSTEM AND THE CONTROLLER:**

When using the controller for the first time or when using with a different PS3 system, you must first pair the devices. If you turn on the PS3 system, connect the controller using a USB cable and press the HOME button, the pairing will be completed automatically.

**STEP 2: ASSIGN A CONTROLLER NUMBER:**

- Each time you turn on the PS3 system, a number must be assigned to the controller.
- Press the HOME button (all 4 LED indicators will start to flash)
  - When the controller has been assigned a number, the LED indicators for the assigned number will turn solid red

**HINTS:**

- Pairing and assigning controller numbers can only be done when the PS3 system is turned on (when the power indicator on the PS3 system is lit solid green).
- When a paired controller is used with another PS3 system, the pairing with the original system is cleared. Pair the controller with the PS3 system again if the controller has been used with another system.
- If the controller or the system is turned off, the LED indicators on the controller will turn off and the assigned number will be cleared.

**USING THE CONTROLLER WIRELESSLY:**

If you disconnect the USB cable, you can use the controller wirelessly. To use it wirelessly, the controller's battery must be charged.

**HINTS:**

The USB cable can be connected or disconnected while the controller and the system are turned on.

**LOW POWER MODE:**

- If the controller remains untouched for 5 minutes, it will enter low power mode and go to sleep.
- To wake the controller up, simply press the HOME button.

**CHARGING THE CONTROLLER:**

With the PS3 system turned on (power indicator is lit green), connect the controller to the PS3 system using a USB cable. The LED indicators of the controller flash slowly and charging begins. When charging has completed, the LED indicators stop flashing.

**HINTS:**

- The controller can be used while charging.
- Charge in an environment where the temperature range is between 10C - 30C. Charging may not be as effective when performed in other environments.

**LEFT & RIGHT JOYSTICKS:**

The left and right joysticks must be in the neutral position during the following actions:

- Turning on the console
- Launching game software
- Quitting game software

Note: If the left and right joysticks are not in the neutral position during these actions, it can cause erratic gameplay control or cause objects on the screen to move when you are not using the controller. If this is happening, please follow the steps below to correct the issue.

1. Unplug the controller and allow both joysticks to return to a neutral untouched position.
2. With the control sticks still in a neutral untouched position, reconnect the controller to the console and the issue should now be resolved.

Note: The controller does not feature vibration feedback or motion sensing technology.

**MANETTE PRO POUR PLAYSTATION 3 GUIDE D'UTILISATION**

**PRÉCAUTIONS ET ENTRETIEN :**


Avant d'utiliser ce produit, bien lire les renseignements suivants concernant la sécurité. Le respect de ces directives simples garantira une utilisation sans tracas et un rendement optimal du produit et des appareils électroniques compatibles. Un mauvais usage peut entraîner le mauvais fonctionnement du produit et même causer des blessures graves à l'utilisateur.

- Ce produit est destiné à un usage personnel non commercial.
- N'utiliser le produit qu'aux fins prévues.
- Utiliser à l'intérieur seulement.
- Éviter d'exposer le produit à des sources de chaleur externes, aux rayons directs du soleil pendant une longue période, à la poussière, à des produits chimiques corrosifs et à l'humidité.
- Ne pas laisser tomber le produit ni le soumettre à un choc excessif.
- Ce produit contient des pièces de petite taille. Tenir hors de la portée des enfants.
- Les matériaux d'emballage posent un risque de suffocation et doivent être tenus hors de la portée des enfants.
- Jeter les matériaux d'emballage conformément aux lois locales applicables.
- Ne pas tenter de réparer ou de démonter le produit. En cas de problèmes, cesser d'utiliser le produit et communiquer avec le service à la clientèle pour obtenir de l'aide. Tenter d'ouvrir ou de réparer le produit annulera toutes les garanties, expresses ou implicites.
- Le non-respect de ces directives pourrait annuler la garantie.

**CONTENU DE L'EMBALLAGE :**

- 1 x Manette sans fil pour PS3
- 1 x Carte de garantie
- 1 x Câble de recharge de 1.5m
- 1 x Guide d'utilisation

**SCHEMA DU PRODUIT :**

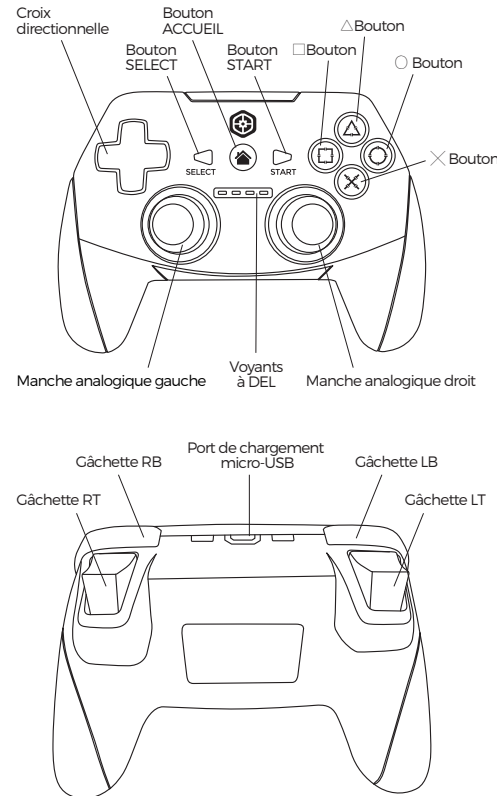

**CARACTÉRISTIQUES :**

- Distance de fonctionnement : jusqu'à 10 m
- Voyants à DEL de joueur
- Deux manches analogiques
- Croix directionnelle précise à 8 directions
- Câble de recharge de 1,5 m
- Dimensions du produit : 151,5 \* 102,5 \* 63,5 mm
- Poids du produit : 184,7g

**PRÉPARATION À L'UTILISATION :**

Cette manette sans fil est conçue spécialement pour la console PlayStation 3. Pour utiliser une manette sans fil, vous devez d'abord enregistrer ou « jumeler » la manette avec le système PS3 et lui attribuer un numéro.

- Étape 1 : Jumeler la console et la manette.
- Lors de la première utilisation
  - En cas d'utilisation avec une autre console PS3

- Étape 2 : Attribuer un numéro de manette
- Chaque fois que le système PS3 est mis en marche

**ÉTAPE 1 : JUMELER LA CONSOLE ET LA MANETTE :**

Lorsque vous utilisez la manette pour la première fois ou lorsque vous utilisez une autre console PS3, vous devez d'abord jumeler les appareils. Mettez en marche la console PS3, puis connectez la manette à l'aide d'un câble USB et appuyez sur la touche ACCUEIL. Le jumelage s'effectuera automatiquement.

**ÉTAPE 2 : ATTRIBUER UN NUMÉRO DE MANETTE:**

- Chaque fois que vous mettez la console PS3 en marche, un numéro doit être attribué à la manette.
- Appuyez sur le bouton ACCUEIL (les quatre voyants à DEL se mettent à clignoter)
  - Lorsqu'un numéro a été attribué à la manette, les voyants à DEL du numéro attribué deviennent rouges et fixes.

**CONSEILS :**

- Le jumelage et l'attribution des numéros aux manettes ne peuvent être effectués que lorsque la console PS3 est en marche (lorsque le voyant d'alimentation de la console PS3 est vert fixe).
- Lorsqu'une manette jumelée est utilisée avec une autre console PS3, le jumelage avec la console précédente est supprimé. Il faut jumeler à nouveau la manette avec la console PS3 si elle a été utilisée avec une autre console.
- Si la manette ou la console sont éteintes, les voyants à DEL de la manette s'éteignent et le numéro assigné est effacé.

**UTILISER LA MANETTE SANS FIL :**

Si vous débranchez le câble USB, vous pouvez utiliser la manette sans fil. Pour utiliser la manette sans fil, sa batterie doit être chargée.

**CONSEIL :**

- Le câble USB peut être connecté ou déconnecté lorsque la manette ou la console sont en marche.

**MODE ÉCONOMIE D'ÉNERGIE :**

- Après cinq minutes d'inactivité, la manette passe en mode économie d'énergie et se met en veille.
- Pour réactiver la manette, il suffit d'appuyer sur le bouton ACCUEIL.

**RECHARGER LA MANETTE :**

Lorsque la console PS3 est en marche (le voyant d'alimentation est allumé en vert), connectez la manette à la console à l'aide d'un câble USB. Les voyants à DEL de la manette clignoteront lentement pour indiquer que la recharge est en cours. Lorsque la recharge est terminée, ces ports cessent de clignoter.

**CONSEILS :**

- Vous pouvez utiliser la manette pendant qu'elle recharge.
- Chargez la manette à une température de 10 C à 30 C. La recharge peut ne pas être aussi efficace lorsqu'elle est effectuée à d'autres températures.

**MANCHES GAUCHE ET DROIT :**

Les manches gauche et droit doivent être en position neutre durant les actions suivantes :

- Mise en marche de la console
- Lancement d'un logiciel de jeu
- Sortie d'un logiciel de jeu

Remarque : Si les manches gauche et droit ne sont pas en position neutre durant ces actions, le mouvement en jeu pourrait être erratique ou des objets pourraient bouger à l'écran sans qu'on touche à la manette. Si cela se produit, suivre les étapes ci-dessous pour corriger le problème.

1. Débrancher la manette et laisser les deux manches revenir en position neutre.
2. Laisser les deux manches en position neutre et rebrancher la manette à la console; le problème devrait alors être résolu.

Remarque : La manette n'est pas dotée de technologie de retour de vibrations ou de détection de mouvement.

**FCC STATEMENT :**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.