

charge  worx®




**USER MANUAL**

**KH-410**

---

# Product Overview

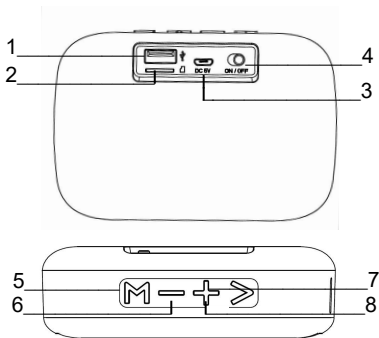

1. USB Input
2. TF Card
3. Micro USB Charging Port
4. On/Off
5. Mode
6. Previous/Decrease Volume
7. Next/Increase Volume
8. Play/Pause

---

# How to Use

## Charging Your Speaker

Connect one end of the provided Micro USB charging cable to the Speaker and the other end to a power source. While the Speaker is charging the LED indicator will turn red. When it's fully charged the light will turn off.

## Powering On & Off

**On:** Toggle the "On/Off" switch on the back of the speaker to the left to turn the speaker on. By default, a blue LED light will be displayed. The user will hear a voice prompt say "The Bluetooth® device is ready to pair." Indicating that the device has successfully turned on and entered Bluetooth® pairing mode.

**Off:** Toggle the "On/Off" switch on the back of the speaker to the right to turn off the speaker. The blue LED indicator light will turn off. Indicating that the device has been powered down.

## Connecting via Bluetooth®

Make sure to check your phones Bluetooth® settings to ensure that the Bluetooth® is turned on. Look for

---

“KH-410” on the list of nearby devices and tap the name to pair. The user will hear a voice prompt say

“The Bluetooth® device is connected successfully.” Indicating that the device has successfully paired with your phone. The speaker will automatically connect with your smart-phone the next time they’re both on, in range, and in pairing mode.

Note: If you are asked for a password, please enter "0000".


### **Phone Commands**

- **Answer call:** When you receive an incoming call, the speaker will indicate this by providing a sound prompt of a phone ringing. To answer press the “Play/Pause” Button.
- **Reject Call:** To reject the call, double tap the “Play/Pause” button.
- **End Call:** To hang up, simply press the “Play/Pause” button again.

### **Music Controls**

- **Next song:** Press the "Next" button to play the next song.
  - **Previous song:** Press the "Previous" button to play the previous song.
-

- 
- **Increase volume:** Press hold and release the "Next" button until the desired volume is reached.
  - **Decrease volume:** Press hold and release the "Previous" button until the desired volume is reached.



### **TF & Radio Mode**

- **Switching Songs/Stations:** Press the Next/Increase Volume and the Previous/Decrease Volume buttons to switch songs and increase or decrease radio stations respectively.
- **Increase/Decrease Volume:** Press hold and release the Next/Increase Volume and the Previous/Decrease Volume buttons until the desired volume is reached.

#### **TF Mode:**

- To enter TF mode, insert a TF card into the TF card slot on the back of

---

the device. The user will hear a voice prompt say "SD Card Mode" and Music will immediately begin to play.

### **Radio Mode:**

- Press the "Mode" button to switch to the radio. The user will hear a voice prompt say "The Radio Mode".
- Press the "Play/Pause" button to auto search for radio channels (necessary before using the radio).  
Note: Leaving the provided Micro USB charging cable plugged into the USB Output will enhance signals, as the USB cable will act as an antenna.

### **Problems & Solutions**

1. After playing for a long time, the device will automatically turn off. Especially if the battery is low. If this happens please charge the device to capacity and then turn on.
2. The device does not work when the paired device is beyond the effective distance of the Bluetooth® connection.

- 
3. There may be too many Bluetooth® devices around you. Try turning them off to remove interference.

### **Package Contents**

- KH-410 Speaker
- Dual Micro USB AUX Cable
- Manual

### **Specifications**

<b>Bluetooth® Version</b>	4.2
<b>Bluetooth® Range</b>	33ft
<b>Playtime</b>	10 Hours
<b>Charge Time</b>	1.5 Hours
<b>Battery</b>	Lithium Ion
<b>Power Input</b>	5V
<b>Music Input</b>	Bluetooth®, TF Card, Radio
<b>Item Dimensions</b>	4.3" x 1.3" x 2.7"
<b>Weight</b>	215g

---

## **Important Notes**

- Don't drop, knock, disassemble or attempt to repair the device by yourself.
- Keep out of reach of children.
- Don't immerse the device in water or make it wet.
- Don't use in the presence of flammable gas.
- Don't expose the device to a heat source like fire or a heater.



---

## Limited Warranty Card

The ChargeWorx® Limited 1 Year Warranty guarantees the original purchaser that the product is free from any defect in material and workmanship in conjunction with the original purchaser using the product according to any accompanying labels and instructions. THIS GUARANTEE IS VALID FOR ONE YEAR FROM THE ORIGINAL DATE OF PURCHASE. ChargeWorx® agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time period stated.

This limited warranty does not cover any damage caused by accident, misuse, modification, or normal wear and tear, and is limited to the value of the product. There are no other express or implied warranties for battery-powered products. The limited warranty described herein is in addition to applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ChargeWorx®.

The warranties described herein shall be the sole and exclusive warranties granted by ChargeWorx® and shall be the sole and

---

---

exclusive remedy available to the purchaser. Corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ChargeWorx® to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability or otherwise. In no event shall be liable or in any way responsible, for an incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. THIS LIMITED WARRANTY, GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

### **Where to ship product**

ChargeWorx® Returns Department

1 Rewe Street

2nd Floor

New York, NY 11211

Enclose proof of purchase and \$5.95 for Shipping and Handling

If you have any questions, please contact ChargeWorx® at

**support@chargeworxusa.com** or visit

**[www.chargeworxusa.com](http://www.chargeworxusa.com)**

CHARGEWORX® COPYRIGHT© 2018 ALL RIGHTS RESERVED.

---

charge  worx®




**MANUAL DE USUARIO**

**KH-410**

---

# Descripción Del Producto

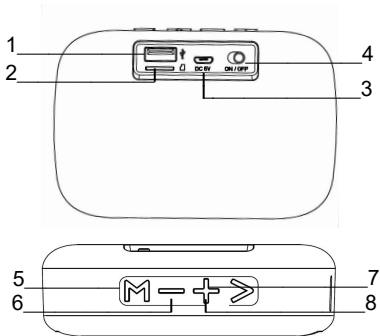

1. Entrada USB
2. Tarjeta TF
3. Puerto De Carga Micro USB
4. Encendido/Apagado
5. Modo
6. Anterior/Disminuir Volumen
7. Siguiente/Aumentar Volumen
8. Jugar/Pausa

---

# **Cómo Utilizar**

## **Cargando Su Altavoz**

Conecte un extremo del cable de carga Micro USB suministrado al altavoz y el otro extremo a una fuente de alimentación.

Mientras el altavoz se está cargando, el indicador LED se encenderá en rojo.

Cuando esté completamente cargada, la luz se apagará.

## **Encendido Y Apagado**

Encendido: mueva el interruptor de "Encendido / Apagado" en la parte posterior del altavoz hacia la izquierda para encenderlo. Por defecto, se mostrará una luz LED azul. El usuario escuchará un mensaje de voz que dice "El dispositivo Bluetooth® está listo para emparejarse". Indica que el dispositivo se ha encendido con éxito y ha ingresado en el modo de emparejamiento Bluetooth®.

Apagado: mueva el interruptor de "Encendido / Apagado" en la parte posterior del altavoz a la derecha para apagarlo. El indicador LED azul se apagará. Indica que el dispositivo ha sido apagado.

---

## Connecting via Bluetooth®

Asegúrese de verificar la configuración de Bluetooth® de sus teléfonos para asegurarse de que Bluetooth® esté activado. Busque "KH-410" en la lista de dispositivos cercanos y toque el nombre para emparejar. El usuario escuchará un mensaje de voz que dice "El dispositivo Bluetooth® está conectado correctamente". Indica que el dispositivo se ha emparejado correctamente con su teléfono. El altavoz se conectará automáticamente con su teléfono inteligente la próxima vez que se encuentren tanto en el rango como en el modo de sincronización.

Nota: Si se le solicita una contraseña, ingrese "0000".


## Comandos De Teléfono

- **Responder a la llamada:** cuando recibe una llamada entrante, el orador lo indicará con un aviso sonoro de un teléfono que suena. Para responder presione el botón "Play / Pause".
- **Rechazar llamada:** para rechazar la llamada, toque dos veces el botón "Reproducir / Pausa".

- 
- **Finalizar llamada:** para colgar, simplemente presione nuevamente el botón "Reproducir / Pausa".

## **Controles De Musica**

- **Reproducir/Pausa:** Cuando el Bluetooth® está conectado a un teléfono móvil, presione el botón "Reproducir / Pausa" para reproducir música desde el teléfono hasta el altavoz. Presiona el botón "Reproducir / Pausa" nuevamente para pausar la música que se está reproduciendo.
- **Siguiente Canción:** presione el botón "Siguiente" para reproducir la siguiente canción.
- **Canción Anterior:** presione el botón "Anterior" para reproducir la canción anterior.
- **Aumentar El Volumen:** mantenga presionado y suelte el botón "Siguiente" hasta alcanzar el volumen deseado.
- **Disminuir El Volumen:** mantenga presionado y suelte el botón "Anterior" hasta alcanzar el volumen deseado.



## **Modo TF Y Radio**

- **Cambio de Canciones/Estaciones:**  
Presione los botones Siguiete/  
Aumentar volumen Y Anterior/  
Disminuir volumen para cambiar  
canciones y aumentar o disminuir las  
estaciones de radio respectivamente.
- **Aumentar/Disminuir El Volumen:**  
mantenga presionado y suelte los  
botones Siguiete / Aumentar volumen  
y Anterior / Reducir volumen hasta  
alcanzar el volumen deseado.

## **Modo TF:**

- Para ingresar al modo TF, inserte una tarjeta TF en la ranura para tarjetas TF en la parte posterior del dispositivo. El usuario escuchará un mensaje de voz que dice "Modo de tarjeta SD" y la Música comenzará a reproducirse inmediatamente.



---

## **Modo De Radio:**

- Presione el botón "Modo" para cambiar a la radio. El usuario escuchará un mensaje de voz que dice "El modo de radio".
- Presione el botón "Reproducir / Pausa" para buscar automáticamente los canales de radio (necesarios antes de usar la radio). Nota: Dejar el cable de carga Micro USB provisto enchufado en la salida USB mejorará las señales, ya que el cable USB actuará como una antena.

## **Problemas Y Soluciones**

1. Después de jugar durante mucho tiempo, el dispositivo se apagará automáticamente. Especialmente si la batería está baja. Si esto sucede, cargue el dispositivo a su capacidad y luego enciéndalo.
2. El dispositivo no funciona cuando el dispositivo vinculado está más allá de la distancia efectiva de la conexión Bluetooth®.
3. Puede haber demasiados dispositivos Bluetooth® a tu alrededor. Intenta

---

apagarlos para eliminar la interferencia.

### **Contenidos Del Paquete**

- Altavoz KH-410
- Cable AUX Micro USB Doble
- Manual

### **Presupuesto**

<b>Versión Bluetooth®</b>	4.2
<b>Rango De Bluetooth®</b>	33 Pies
<b>Tiempo De Juego</b>	10 Horas
<b>Tiempo De Carga</b>	1.5 Horas
<b>Batería</b>	Ion De Litio
<b>Entrada De Alimentación</b>	5V
<b>Entrada De Musica</b>	Bluetooth®, Tarjeta TF, Radio
<b>Dimensiones Del Artículo</b>	4.3" x 1.3" x 2.7"
<b>Peso</b>	215g

---

## **Notas Importantes**

- No deje caer, golpee, desmonte ni intente reparar el dispositivo por sí mismo.
- Mantener fuera del alcance de los niños.
- No sumerja el dispositivo en agua ni lo humedezca.
- No usar en presencia de gas inflamable.
- No exponga el dispositivo a una fuente de calor como el fuego o un calentador.

---

## Tarjeta De Garantía Limitada

La garantía limitada de 1 año de ChargeWorx® garantiza al comprador original que el producto está libre de cualquier defecto de material y mano de obra junto con el comprador original que usa el producto de acuerdo con las etiquetas e instrucciones que lo acompañan. ESTA GARANTÍA ES VÁLIDA POR UN AÑO A PARTIR DE LA FECHA ORIGINAL DE COMPRA. ChargeWorx® acuerda que, a su opción, reparará el defecto o reemplazará el producto defectuoso o una parte del mismo sin cargo para el comprador por las piezas o la mano de obra durante el período de tiempo establecido.

Esta garantía limitada no cubre ningún daño causado por accidente, mal uso, modificación o desgaste normal, y se limita al valor del producto. No hay otras garantías explícitas o implícitas para productos alimentados por batería. La garantía limitada aquí descrita es adicional a la ley aplicable. TODAS LAS GARANTÍAS IMPLÍCITAS, INCLUIDAS LAS GARANTÍAS DE COMERCIABILIDAD Y ADECUACIÓN PARA EL USO, ESTÁN LIMITADAS AL PERÍODO A PARTIR DE LA FECHA DE LA CONFIGURACIÓN DEL ORIGINAL. Algunos estados no permiten limitaciones sobre la duración de una garantía implícita, por lo que es posible que la limitación anterior no se aplique en su caso. Ni el personal de ventas del vendedor ni ninguna otra persona está autorizada para otorgar garantías que no sean las descritas en este documento o para extender la duración de cualquier garantía más allá del período de tiempo descrito en este documento en nombre de ChargeWorx®.

Las garantías descritas aquí serán las únicas y exclusivas otorgadas por ChargeWorx® y serán las únicas y

---

---

Remedio exclusivo a disposición del comprador. Las correcciones de defectos, en la forma y por el período de tiempo aquí descrito, constituirán el cumplimiento total de todas las responsabilidades y responsabilidades de ChargeWorx® con el comprador con respecto al producto y constituirán la plena satisfacción de todas las reclamaciones, ya sea basadas en la negligencia del contrato, estricta responsabilidad o no. En ningún caso será responsable o de ninguna manera responsable, por un daño fortuito de daños económicos o de propiedad. Algunos estados no permiten la exclusión de daños incidentales o consecuentes, por lo que la exclusión anterior puede no aplicarse a usted. ESTA GARANTÍA LIMITADA LE OTORGA DERECHOS LEGALES ESPECÍFICOS. TAMBIÉN PUEDE TENER OTROS DERECHOS, QUE VARÍAN DE ESTADO A ESTADO.

### **Dónde Enviar El Producto**

Departamento De Devoluciones De ChargeWorx®

1 Rewe Street

2nd ° piso

New York, NY 11211

Adjunte comprobante de compra y \$ 5.95 para envío y manejo.

Si tiene alguna pregunta, comuníquese con ChargeWorx® en

**support@chargeworxusa.com** o visite

[www.chargeworxusa.com](http://www.chargeworxusa.com)

CHARGEWORX® COPYRIGHT © 2018 TODOS LOS DERECHOS  
RESERVADOS.

---

## **FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.