

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may

cause undesired operation.



Ref.: 369-61491 369-61492



REMOTE CONTROL VEHICLE

Frequency bands: 26.957MHZ to 27.283MHz
Carrier Frequencies: 26.957MHZ to 27.283MHz
Maximum Transmitting Power (ERP) : Not more than 10mW.

"Hereby, Juguetes Pastor S.L. declares that the radio equipment type radio control car 369-61491 and 369-61492 are in compliance with Directive 2014/53/EU."

⚠ PRECAUTIONS:


Electric Product

Do not give this product to children aged 6 or below. Like other electric products, this product is also to be used in a safe way to avoid electric shock.

CHARGING

- (1) The new lithium battery pack included in this set needs to be charged before use.
- (2) Plug the USB cable into the charger, and then connect the charging port of the remote control car.
- (3) Please charge for at least 8 hours for the first 2 times. Then, it's enough to charge for 5-6 hours during normal use. Do not overcharge as it will not fill the battery with more power.
- (4) Please check on a regular basis the wire, plug and other electric parts on the toy, batteries and charger. If any damage is found, please repair it before use.


TRANSMITTER & TRIMMER

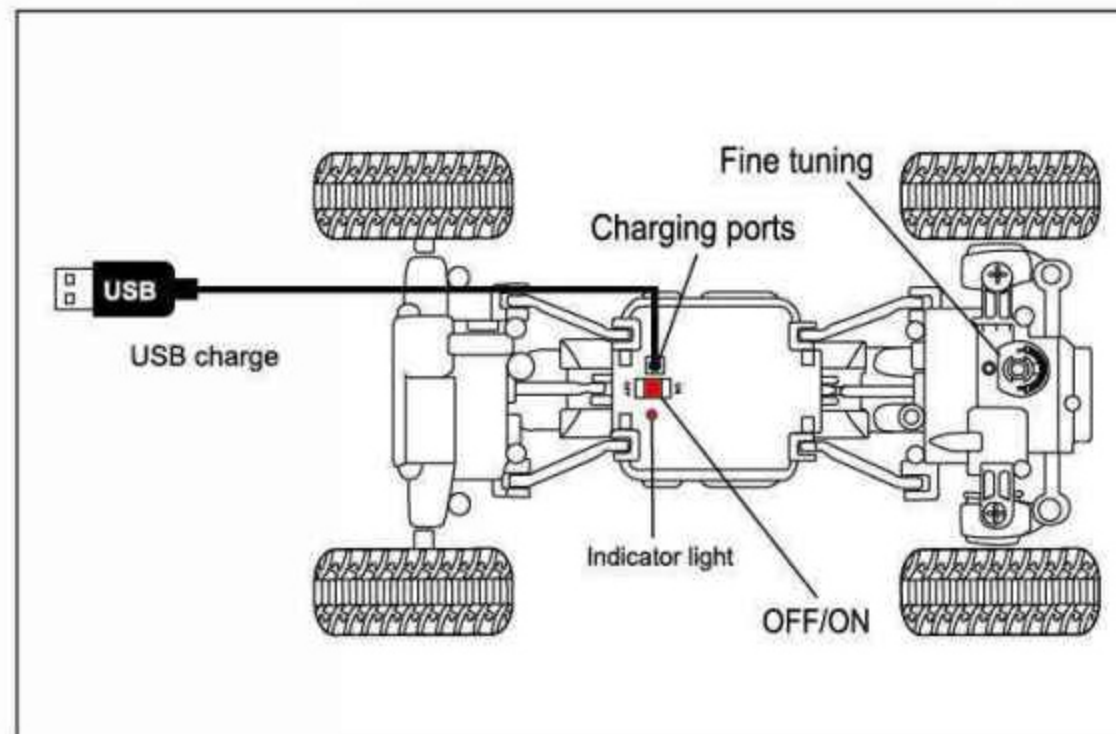

The product uses a 3.7V built-in lithium battery and distributes the USB charging cable.

BATTERY SAFETY

- (1) Adult's supervision is required for charging.
- (2) The product uses a 3.7V built-in lithium battery
- (3) Timely remove exhausted batteries from the transmitter.
- (4) Ensure that the main switch is set to OFF before charging the toy.
- (5) Note polarity marks in the battery compartments when installing the batteries.
- (6) Do not try to charge non-rechargeable batteries.
- (7) Do not short-circuit the batteries.

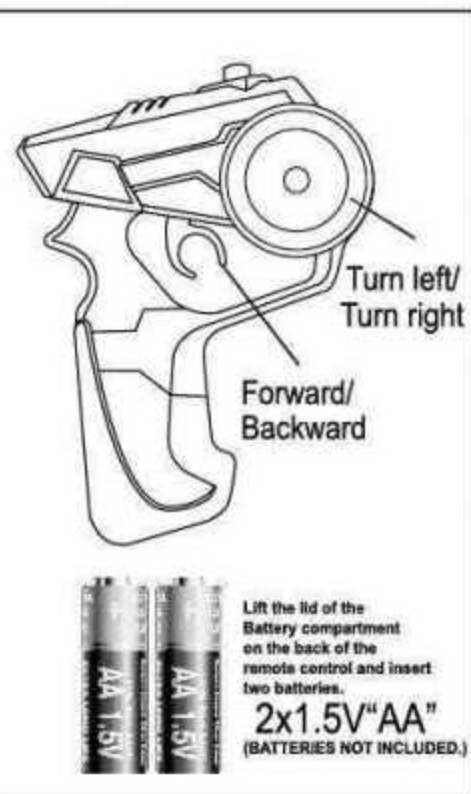

BASIC OPERATIONS

- (1) Turn on the car and set the band selectors on the transmitter and the chassis to the same position.
- (2) Use the 2 control levers on the transmitter to control the car to run forward/backward or to turn left/right.
- (3) If the car can't run along a straight line, please use the trimmer on the chassis for adjustment.
- (4) Remember to turn off the car and the transmitter after use.




CARE & MAINTENANCE


- (1) If you plan to stop use for a long time, remember to remove all the batteries.
- (2) If necessary, use a wet towel to gently wipe the car body clean.
- (3) Do not expose this toy to high temperature, high humidity or direct sunlight.
- (4) Do not put this toy in water to avoid damaging its electronic components.

USE CAUTIONS


When the car is in motion, do not touch the wheels by hand to avoid damages to the car.

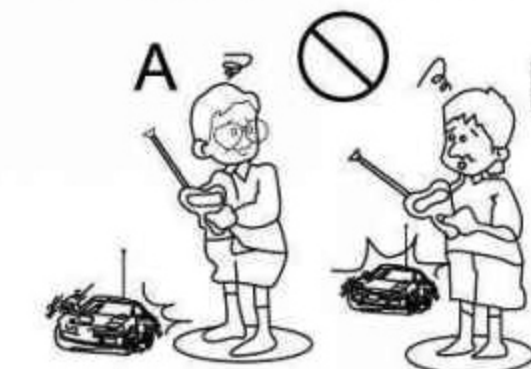

When there's more than one car played in the same place, set the cars to different bands to avoid mutual interference.

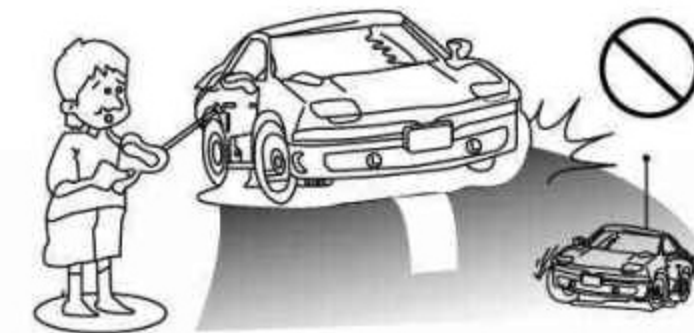

Do not play by the roads or in any other dangerous places to avoid accidents.

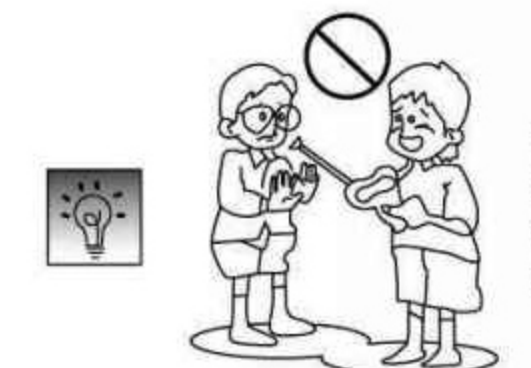

Do not bend the antenna or point it at other people or articles to avoid hurts.



Do not play in a place with puddle, mud or sand.



Ref.: 369-61491 369-61492



VEHÍCULO CON CONTROL REMOTO

Bandas de frecuencia: 26.957MHZ a 27.283MHz
Frecuencias portadoras: 26.957MHZ a 27.283MHz
Máxima potencia de transmisión (ERP): No más de 10mW.

"Por la presente, Juguetes Pastor S.L. declara que el tipo de equipo radioeléctrico con ref.: 369-61491 y 369-61492, es conforme con la Directiva 2014/53/UE."

⚠ ADVERTENCIAS:


Producto eléctrico

Este producto no es recomendable a niños menores de 3 años. Al igual que otros productos eléctricos, este producto también se debe suministrar de manera segura para evitar descargas eléctricas.

Cargar el vehículo

- (1) La batería de litio incluida es nueva, por lo que debe cargarse antes de usarla.
- (2) Enchufe el cable USB en el cargador, y luego conecte el puerto de carga del vehículo R-C.
- (3) Por favor, cargue por lo menos 8 horas, las primeras 2 veces. Para las próximas cargas, es suficiente cargar durante 5 a 6 horas durante el uso normal.
- (4) No sobrecargue ya que no llenará la batería con más energía.
- (4) Compruebe regularmente el cable, enchufe y otras piezas eléctricas del juguete, las baterías y el cargador. Si encuentra algún daño, repárelo antes de usarlo.

USO Y ALIMENTACIÓN DEL CONTROL REMOTO Y VEHÍCULO

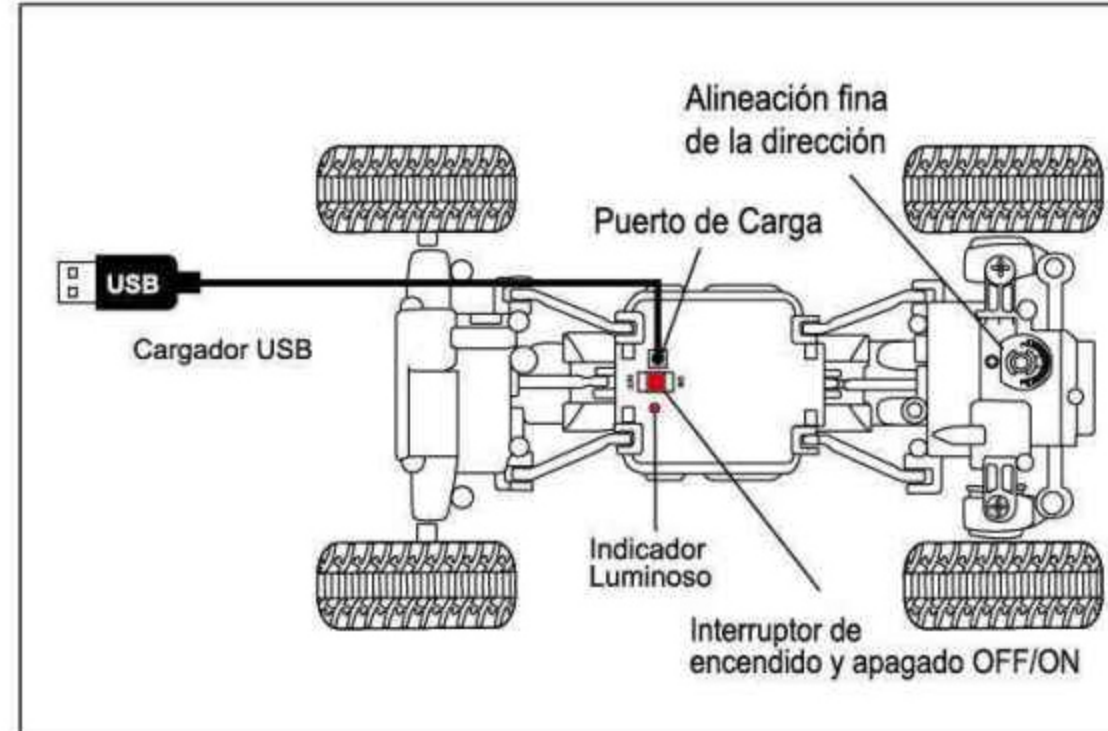

Funciones Básicas

- (1) Encienda el automóvil y coloque los selectores de banda en el transmisor y el chasis en la misma posición.
- (2) Use las 2 palancas de control en el Transmisor para controlar el automóvil para avanzar / retroceder o para girar a la izquierda / derecha.
- (3) Si el automóvil no puede correr en línea recta, use la Alineación de dirección en el chasis para el ajuste.
- (4) Recuerde apagar el automóvil y el transmisor después de su uso.



El producto utiliza una batería de litio INCLUIDA de 3.7 V y se carga mediante el cable USB.

⚠ Advertencias de seguridad de la batería.


- (1) Sólo un adulto puede cargar y recargar las baterías..
- (2) El producto utiliza una batería de litio de 3.7 V (incluida) .
- (3) Retire oportunamente las baterías agotadas del transmisor.
- (4) Asegúrese de que el interruptor principal esté en la posición de apagado (OFF) antes de cargar la batería.
- (5) Compruebe la polaridad cuando instale las baterías.
- (6) No intente cargar baterías no recargables.
- (7) No cortocircuite las baterías.
- (8) Si No va a usar por mucho tiempo el vehículo, retire las baterías del transmisor.
- (9) Nunca arroje las baterías al fuego para evitar explosiones o fugas.
- (10) No mezcle baterías de diferentes fabricantes o baterías nuevas y viejas.
- (11) Use solo las baterías recomendadas o equivalentes.
- (12) Revise las baterías regularmente para evitar fugas.
- (13) Guarde este manual para futuras referencias, ya que contiene información importante sobre este producto

Mantenimiento y cuidados


- (1) Si planea dejar de usarlo por un tiempo prolongado, recuerde retirar todas las baterías.
- (2) Use una toalla húmeda para limpiar suavemente el vehículo.
- (3) No exponga este juguete a altas temperaturas, humedad elevada, lluvia o luz solar directa.
- (4) No exponga a líquidos este vehículo (agua, abrasivos, bebidas o barro) para evitar dañar sus componentes electrónicos.

Precauciones de uso

Cuando el vehículo esté en movimiento, no toque las ruedas con la mano para evitar daños al vehículo.

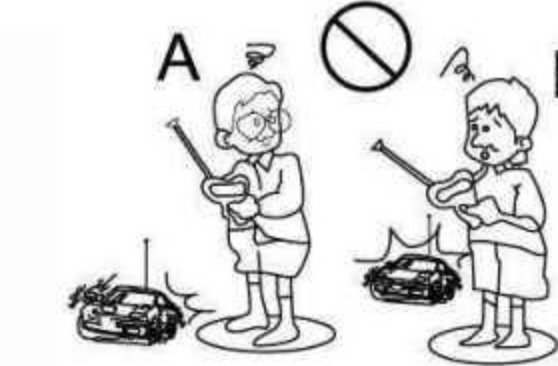


Quando haya más de un vehículo jugando en el mismo lugar, configúrelos en diferentes bandas para evitar la interferencia cruzada.

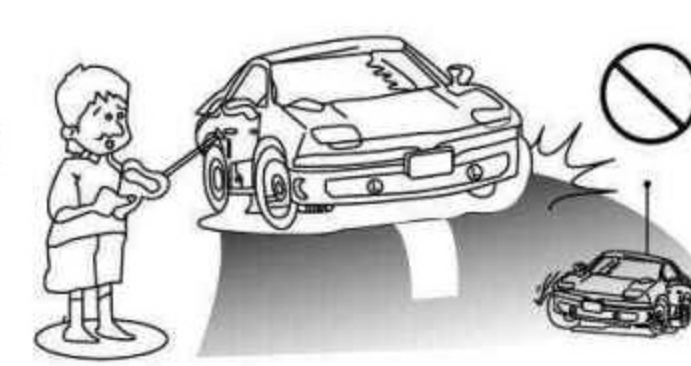

No jugar cerca de carreteras, firme irregular, desniveles, cerca de escaleras ni cerca de piscinas, cerca de zonas de calor para evitar accidentes.



No doble la antena ni la apunte hacia otras personas o artículos para evitar heridas o roturas.

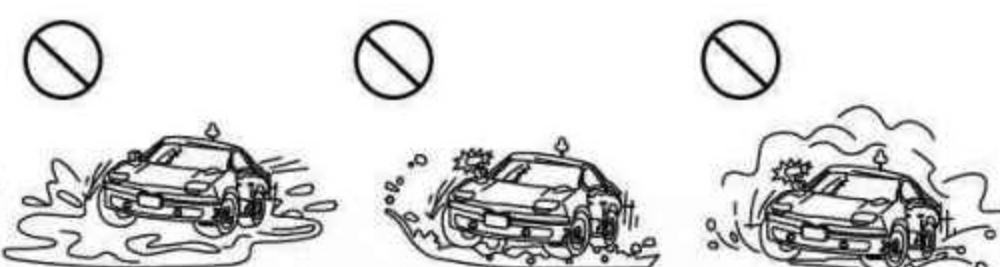

No juegue en lugares de charcos, barro o arena para evitar roturas.