

## INSTRUCTION MANUAL

使用說明 / 使用说明


**momax** *smart*

### Smart Bell

IoT IP Camera Doorbell

IoT 智能網絡門鈴

IoT 智能网络门铃

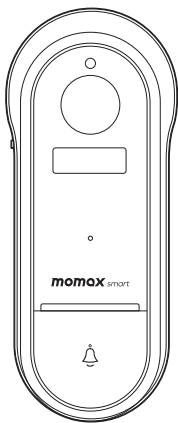

**SL3S**

**Product Information** p.2 - 11

產品資料 p.12 - 19

产品资料 p.20 - 27



## Introduction

### IoT IP Camera Doorbell (SL3S)

This is a IoT IP camera that helps make your place safe whether you are home or not. This camera carrying instant motion detection alert is designed for your safety, and can easily installed at home or office.

### Find “SL3S” in MOMAX’s channel

[helpdesk.momaxsmart.com](https://helpdesk.momaxsmart.com)

Get step-by-step setup and support.

Watch the latest video tutorial to learn to setup and operate your SL3S.

Keep up to date with the latest updates.



## Quick Start Guide

### 1. Download ‘MOMAX Smart’ APP

Download “MOMAX Smart” from iOS App Store, Android Google Play Store or other platforms.

### 2. Register

Register an account and log in using your mobile number or email address.

### 3. Wireless Pairing

Click “+”, then tap “MOMAX Smart IP Camera Doorbell” to add device.

Power on the device until you hear a prompt or the indicator is flashing, tap “Confirm the indicator is flashing or a prompt tone is heard”. Then, tap ‘Next’ to proceed.

Scan the QR code from 15 to 20 cm away until you hear a prompt, tap “I Heard a Prompt” to proceed.

- This product cannot be paired directly through the Bluetooth list of the mobile phone.
- The pairing process may take 2 minutes, please do not perform other operation.


### 4. Successfully connected

Once the connection is completed, you can edit the name of the IP Camera.

## Installation


### Mode 1 : Battery supply

1. Fix the bracket to the wall with the mounting screws.
2. Install the camera in the bracket and lock it with the screw.

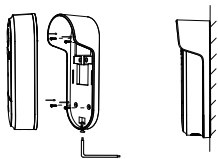


### Mode 2 : AC supply (optional)

1. Prepare the accessories which are needed in AC supply.
2. Connect the bracket with the AC supply.
3. Install the camera in the bracket and lock it with the screw.

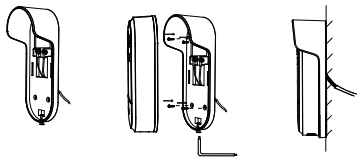

Warning:  
AC supply mode should be installed by a qualified electrician. If the connection or repairing is done improperly, it may cause electric leakage, malfunction or other hazards.

## Product Overview

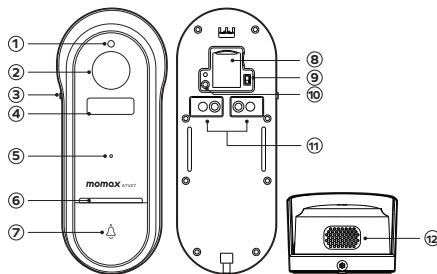

- |                         |                         |
|-------------------------|-------------------------|
| 1. Ambient Light Sensor | 7. Doorbell Button      |
| 2. Lens                 | 8. SD Card Slot         |
| 3. Micro USB Port       | 9. Power                |
| 4. PIR                  | 10. Reset               |
| 5. Microphone           | 11. External Power Port |
| 6. Status Light         | 12. Speaker             |

<b>Status Light</b>	Solid red light on	The camera is turning on or malfunctional
	Blinking red light	Awaiting WiFi connection
	Solid blue light on	Camera running correctly
<b>Microphone</b>	Captures sound from the monitoring place	
<b>SD Card Slot</b>	Supports local SD card storage (Max. 128G)	
<b>Reset</b>	Press and hold for 5 seconds to reset the camera (camera setting return to factory defaults)	

#### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and consider removing the nocollocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Caution!

Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Function

#### Full-duplex Audio :

- When the visitor presses the doorbell button, you will get a call. You can see and hear the visitor in MOMAX Smart APP from the doorbell if you answer.

#### Motion Detection :

- Built-in motion sensors detect movement, and the doorbell will send you a push notification and app alert.

#### Shared device :

- The doorbell device can be shared with friends and family. They can also preview online. There is no limit to the number of sharing devices, but only 6 accounts are supported for online preview at the same time.

#### Record :

- Support 24H continuous recording with high capacity SD storage or Cloud storage. (Requires in-app setting)

#### Night-vision :

- Able to auto switch to night vision, maintain normal operation even in dark environment.

#### Wireless Ring Chime (Optional) :

- Connect the Wireless ring chime to a USB port, then go to Setting in Device page, find Bell Settings and change the Chime Type to Digital.
- Short press the reset button at the back of the Chime.
- Press Bell Settings and then press the bind button.
- You can set the ringtone or the volume for the Chime in this setting page.

## Specification

Model No.	: SL3S
Voltage	: DC5V or AC12V~24V
Battery Capacity	: 6700 mAh
Resolution	: 2304 x 1296
Battery standby period	: 10 Months
Battery usage period	: 3 Months
Video Codec	: H.264
IR Distance	: 5m
Storage	: MicroSD Card (Max: 128G)
Work Temperature	: -20°C ~ 50°C
Waterproof level	: IP65
Wireless	: 2.4G Wifi (IEEE802.11b/g/n)
Wireless Security	: 64/128-bit WPA/WPA2, WPA-PSK/WPA2-PSK, WPS
Size	: 57 x 145 x 41mm
Weight	: 235g ± 10g (Camera Doorbell) 30g ± 5g (Wireless Ring Chime)

## Contains

1. Smart Bell lot Ip Camera Doorbell
2. Wireless Ring Chime
3. Back Panel
4. Mounting Screws Pack
5. Torx Screwdriver
6. Pin
7. USB Cable
8. Instruction Manual and Warranty Card

## Warnings

### Points for attention

Before using, please read this user manual carefully and keep it for future reference.

1. The operating temperature range for this camera is between -20°C and 50°C. Do not use the camera in environments with temperatures above or below the specific range.
2. Make sure the camera is installed in an area with a strong Wi-Fi signal.
3. Do not place the camera near the objects that may affect its Wi-Fi signal, such as microwave ovens.
4. Under normal use of condition, this equipment should be kept a separation distance of at least 20 cm between the camera and the body of the user.
5. AC supply mode should be installed by a qualified electrician. If the connection or repairing is done improperly, it may cause electric leakage, malfunction or other hazards.
6. The device can only unbind through manually remove it in the APP. Pressing the reset button on the device will not unbind it to the account.

## Service Agreement of Smart Mobile Application Platform

Please reference Mobile Apps content: Before accepting the Agreement, you are supposed to thoroughly read all the contents of the Agreement, and fully understand its terms, especially restrictive clauses or exceptions and Privacy Notice. Restrictive clauses or exceptions are bold or highlighted in other forms to catch your attention. In case of any doubt about the terms of the Agreement, please contact the relevant business department of Tuya. You are not allowed to use the service before you have read and accepted all the terms of the Agreement, relevant agreements, and rules, etc. Once you select "agree and submit the Agreement" (see registration page for detailed wordings) and complete the registration procedure, or you use the service in any form, it will be deemed that you have read and agreed with the restriction of the Agreement and rules above. In case of any breach of the Agreement, Tuya has the right to unilaterally restrict, suspend or terminate the service for you, and has the right to investigate your relevant responsibilities.

## Disposal of Electronic Products

1. Do not place the product as household waste;
2. Please dispose of discarded electronic products properly according to local regulations;
3. MOMAX encourages you to participate in the electronic recycling program.

## Warranty Conditions

1. For any defect, in the judgment of our technician, caused under normal use, we are responsible for repairing free of charge 12 months commencing from the date of purchase at the discretion of our company;
2. A valid warranty card and original purchase invoice must be presented upon request of warranty service;
3. This warranty card shall not apply to the product if:
  - (a) It is consumable part(s), such as Filter, or;
  - (b) It has explicitly modified or repaired in any way by persons other than technicians of this company, or;
  - (c) It has been damaged through misuse, malicious acts, negligence, the inflow of any liquid, or;
  - (d) losses or damages are caused by force majeure or natural disasters.
4. No alteration to this warranty card will be allowed;
5. The warranty terms and conditions are subject to change without prior notice;
6. Please retain your proof of purchase for warranty service;
7. Please consult the dealer about the product compatibility with your cell phone/ PDA before purchase. Product specifications are subject to change without prior notice;
8. Please visit [www.momax.net](http://www.momax.net) for the latest product information.

## 簡介

### IoT 智能視像門鈴 (SL3S)

本產品是一款智能視像門鈴，無論您是否在家，都可以幫助確保您的地方安全。當有人按門鈴時，無線門鈴會響起，並在手機APP上附有通知及視頻通話。

搜尋 “SL3S” in [helpdesk.momaxsmart.com](http://helpdesk.momaxsmart.com)

獲取有關設定和支援。

觀看最新的視頻教學，學習設置和操作您的 SL3S。

隨時了解最新資訊。



## 快速入門指南

### 1. 下載 “MOMAX Smart” 應用程式

從iOS App Store、安卓、Google Play Store或其他平台下載 “MOMAX Smart” 應用程式。

### 2. 註冊

註冊一個帳戶，然後使用您的手機號碼或電子郵件地址登錄。

### 3. 無線配對

按 “+”（添加設備），選取 “MOMAX 智能視像門鈴” 以添加設備。

將設備接上電源。當指示燈在快閃或聽到指示音後，按 “確定指示燈在快閃或聽到指示音”，再按 “下一步” 繼續配對。

將二維碼正對本產品的鏡頭來掃描，保持15-20cm距離，直到你聽到提示音後，按 “聽到指示音” 繼續配對。

- 不能透過手機的藍牙清單直接配對本產品。
- 搜索過程可能需要兩分鐘。請在此期間不要執行任何操作。

### 4. 成功連接


如果配對成功，你會在應用程式中看到本產品的圖標。你可以修改此 SL3S的名稱。



## 安裝教學


### 模式1：電池供電

1. 用掛牆螺絲將掛牆底座安裝在牆壁上。
2. 將設備安裝在底座上，並用六角星批扭緊底部螺絲。

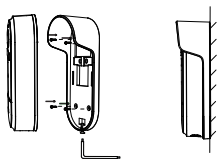

### 模式2：AC供電 (可選擇)


1. 自行準備AC供電所需的配件。
2. 將AC電源連接到掛牆底座的金屬片。
3. 將設備安裝在底座上，並用六角星批扭緊底部螺絲。

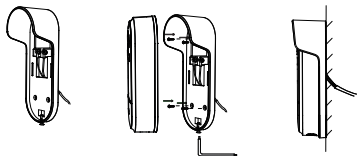

#### 警告:

AC供電模式需由合資格的電氣技工進行安裝，如連接和維修工作不當，則可能會導致漏電、故障或其他災害。

## 產品總覽

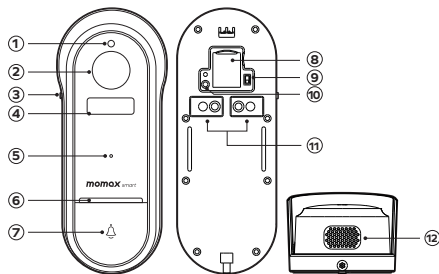

- |                |         |            |
|----------------|---------|------------|
| 1. 環境光敏器       | 5. 咪高風  | 9. 電源鍵     |
| 2. 鏡頭          | 6. 指示燈  | 10. 重設鍵    |
| 3. MicroUSB 插口 | 7. 門鈴按鍵 | 11. 外置電源接口 |
| 4. 紅外感應器       | 8. SD卡槽 | 12. 喇叭     |

指示燈	紅燈亮起	設備正在開啟或故障
	紅燈快閃	正等待Wi-Fi連接
	藍燈亮起	設備正在正常運作
咪高風	接收設備所在地的聲音	
SD卡槽	支援最大128G SD卡儲存空間	
重設鍵	按住5秒將設備回復原廠設定 (但不會解綁)	

## 功能

### 雙向通話：

- 當訪客按下門鈴按鈕時，你會接到電話。接聽後可以在MOMAX Smart APP看到門鈴鏡頭的畫面及與訪客通話。

### 移動偵測：

- 當內置的動態偵測傳感器偵測到有人移動時，設備會向用家發出推送通知及APP警報

### 分享設備：

- 此設備可以與朋友和家人共熟。他們可以在線預覽。共享設備數量不限，但僅支持6個帳號同時在線預覽。

### 紀錄：

- 支援外置SD卡和雲端儲存以作24小時連續紀錄 (需在APP內設定)

### 夜視：

- 具備紅外夜視功能，即使在暗的環境也可維持正常運作

### 無線門鈴 (可選擇裝配與否)：

- 將無線門鈴連接到USB接口，然後按設備頁面中設置鍵，找到鈴鑰設置並將鈴鑰類型設為無線鈴鑰。
- 短按無線門鈴背面的重置按鈕。
- 按下鈴鑰設置鍵，然後按綁定。
- 你可以在此設置頁面設置鈴聲和音量。

## 產品規格

型號	: SL3S
電壓	: DC5V or AC12V ~ 24V
電池容量	: 6700 mAh
解像度	: 2304 x 1296
待機時間	: 10個月
使用時間	: 3個月
影片編碼	: H.264
紅外線距離	: 5m
儲存	: MicroSD card (最大: 128G)
工作溫度	: -20℃ ~ 50℃
防水等級	: IP65
無線標準	: 2.4G Wifi (IEEE802.11b/g/n)
無線安全	: 64/128-bit WPA/WPA2, WPA-PSK/WPA2-PSK, WPS
尺寸	: 57 x 145 x 41mm
重量	: 235g ± 10g (視像門鈴) · 30g ± 5g (無線門鈴)

### 包裝內容

- Smart Bell IoT智能視像門鈴
- 無線門鈴
- 掛牆底座
- 掛牆鐫絲包
- 六角星批
- 卡針
- 電源線
- 使用說明書及保用證

## 注意事項

使用前，請仔細閱讀本用戶手冊，並妥善保存以備將來參考。

1. 本產品的工作溫度範圍為-20℃至50℃。請勿在溫度高於或低於特定範圍的環境中使用本產品。
2. 確保設備安裝在Wi-Fi訊號強的區域。
3. 請勿將設備靠近可能影響其Wi-Fi訊號的物體，例如微波爐。
4. 在正常使用情況下，本設備應與用戶身體保持至少20厘米的距離。
5. AC供電模式需由合資格的電氣技工進行安裝，如連接和維修工作不當，則可能會導致漏電、故障或其他災害。
6. 按下設備上的重設鍵並不會解除與帳號的綁定，只有在APP中手動移除才能解綁。

## 智能移動應用平台服務協議

請參考移動應用程式內容：在接受本協議之前請您務必仔細閱讀本協議的移動應用程式全部內容，充分理解條款內容，特別是限制及免責條款。限製或免除責任條款，私隱聲明，將以加粗或其他醒目形式提示您注意。如果您對本協議的條款有疑問的，請聯繫相關業務部門進行詢問。除非您已閱讀并接受本協議及相關協議、規則等所有條款，否則，您無權使用本服務。一旦您選“同意協議並提交”（具體措辭詳見註冊頁面）並完成註冊流程，或您以任何方式使用本服務，即視為您已閱讀並同意上述協議、規則等的約束。如您有違反本協議的任何行為時，智能生活有權根據您違反的情況隨時單方採取限制、中止或終止向您提供服務等措施，並有權追究您相關責任。

## 如何處理廢棄電子產品

1. 請勿將電子產品當成家庭廢棄物丟棄；
2. 請依當地的法例規定處理廢棄的電子產品；
3. MOMAX鼓勵您積極參與電子產品回收計劃。

## 保養條款

1. 由購買日期起12個月內，如產品有損壞或故障，經本公司技術人員證實為在正常使用之情況下發生，本公司將提供免費維修服務；
2. 維修時必須出示本保用證及購買商號之發票正本，如果用戶不能提供，本公司有權不提供維修服務。用戶可能需要支付相關維修費用；
3. 保用期內，出現以下條款產品保用證自動失效：
  - (a) 是可消耗的部件，例如過濾網；
  - (b) 非本公司人員恣意拆解或維修產品之任何部分；
  - (c) 錯誤的操作如：非法接駁電源，以及水、污穢物滲入產品內導致產品損；
  - (d) 不可抗拒意外事件或天然災害導致產品損壞；
4. 此保用證如經塗改，保用證自動失效；
5. 本公司有權增刪任何維修及保用條款而不作通知；
6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞，本公司不會承擔任何責任；
7. 有關 MOMAX 原裝產品和您的手機或電子產品的相容性，請在購買時向經銷商確認。此產品規格隨時可能變更，恕不另行通告；
8. 請瀏覽 [www.momax.net](http://www.momax.net) 瞭解最新產品資訊。

## 简介

### IoT 智能可视门铃 (LS3S)

本产品是一款智能可视门铃，无论您是否在家，都可以帮助确保您的地方安全。当有人按门铃时，无线门铃会响起，并在手机APP上附有通知及视频通话。

搜寻“SL3S” in [helpdesk.momaxsmart.com](http://helpdesk.momaxsmart.com)

获取有关设定和支援。

观看最新的视频教学，学习设置和操作您的 SL3S。

随时了解最新资讯。



## 快速入门指南

### 1. 下载“MOMAX Smart”应用程序

从iOS App Store、安卓、Google Play Store或其他平台下载“MOMAX Smart”应用程序。

### 2. 注册

注册一个账户，然后使用您的手机号码或电子邮件地址登录。

### 3. 无线配对

按“+”（添加设备），选取“MOMAX 智能可视门铃”以添加设备。

将设备接上电源。当指示灯在快闪或听到指示音后，按“确定指示灯在快闪或听到指示音”，再按“下一步”继续配对。

将二维码正对本产品的镜头来扫描，保持15-20cm距离，直到你听到提示音后，按“听到指示音”继续配对。

- 不能透过手机的蓝牙清单直接配对本产品。
- 搜索过程可能需要两分钟。请在此期间不要进行任何操作。


### 4. 成功连接

如果配对成功，你会在应用程序中看到本产品的图标。你可以修改此SL3S的名称。

## 安装教学


### 模式1：电池供电

1. 用挂墙螺丝将挂墙底座安装在墙壁上。
2. 将设备安装在底座上，并用六角星批扭紧底部螺丝。

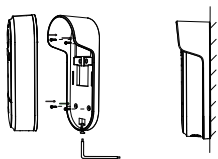

### 模式2：AC供电 (可选择)


1. 自行准备AC供电所需的配件。
2. 将AC电源连接到挂墙底座的金属片。
3. 将设备安装在底座上，并用六角星批扭紧底部螺丝。

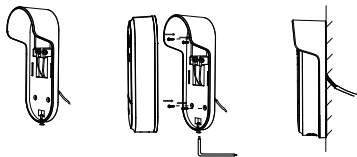

#### 警告:

AC供电模式需由合格的电气技工进行安装，如连接和维修工作不当，则可能会导致漏电、故障或其他灾害。

## 产品总览

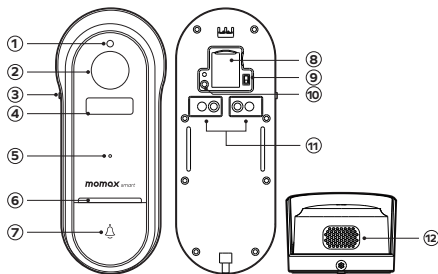

- |                |         |            |
|----------------|---------|------------|
| 1. 环境光敏器       | 5. 麦克风  | 9. 电源键     |
| 2. 镜头          | 6. 指示灯  | 10. 重设键    |
| 3. MicroUSB 接口 | 7. 门铃按键 | 11. 外置电源接口 |
| 4. 红外感应器       | 8. SD卡槽 | 12. 喇叭     |

指示灯	红灯亮起	设备正在开启或故障
	红灯快闪	正等待Wi-Fi连接
	蓝灯亮起	设备正在正常运作
麦克风	接收设备所在地的声音	
SD卡槽	支援最大128G SD卡储存空间	
重设键	按住5秒将设备回复原厂设定 (但不会解绑)	

## 功能

### 双向通话：

- 当访客按下门铃按钮时，你会接到电话。接听后可以在MOMAX Smart APP看到门铃镜头的画面及与访客通话。

### 移动侦测：

- 当内置的动态侦测传感器侦测到有人移动时，设备会向用户发出推送通知及APP警报。

### 分享设备：

- 此设备可以与朋友和家人共享。他们可以在线预览。共享设备数量不限，但仅支持6个账号同时在线预览。

### 纪录：

- 支持外置SD卡和云端储存以作24小时连续纪录 (需在APP内设定)。

### 夜视：

- 具备红外夜视功能，即使在暗的环境也可维持正常运作。

### 无线门铃 (可选择装配与否)：

- 将无线门铃连接到USB接口，然后按设备页面中设置键，找到铃铛设置并将铃铛类型设为无线铃铛。
- 短按无线门铃背面的重置按钮。
- 按下铃铛设置键，然后按绑定。
- 你可以在此设置页面设置铃声和音量。

## 产品规格

型号	: SL3S
电压	: DC5V or AC12V ~ 24V
电池容量	: 6700 mAh
解像度	: 2304 x 1296
待机时间	: 10个月
使用时间	: 3个月
影片编码	: H.264
红外线距离	: 5m
储存	: MicroSD card (最大: 128G)
工作温度	: -20℃ ~ 50℃
防水等级	: IP65
无线标准	: 2.4G Wifi (IEEE802.11b/g/n)
无线安全	: 64/128-bit WPA/WPA2, WPA-PSK/WPA2-PSK, WPS
尺寸	: 57 x 145 x 41mm
重量	: 235g ± 10g (可视门铃) · 30g ± 5g (无线门铃)

### 包装内容

- Smart Bell IoT智能可视门铃
- 无线门铃
- 挂墙底座
- 挂墙螺丝包
- 六角星批
- 卡针
- USB 电源线
- 使用说明书及保用证

## 注意事项

使用前，请仔细阅读本产品用户手册，并妥善保存以备将来参考。

1. 本产品的工作温度范围为-20℃至50℃。请勿在温度高于或低于特定范围的环境中本产品。
2. 确保设备安装在Wi-Fi讯号强的区域。
3. 请勿将设备靠近可能影响其Wi-Fi讯号的物体，例如微波炉。
4. 在正常使用情况下，本设备应与用户身体保持至少20厘米的距离。
5. AC供电模式需由合格的电气技工进行安装，如连接和维修工作不当，则可能会导致漏电、故障或其他灾害。
6. 按下设备上的重置键并不会解除与账号的绑定，只有在APP中手动移除才能解绑。

## 智能移动应用平台服务协议

请参考移动应用程序内容：在接受本协议之前请您务必仔细阅读本协议的移动应用程序全部内容，充分理解条款内容，特别是限制及免责条款。限制或免除责任条款，隐私声明，将以加粗或其他醒目形式提示您注意。如果您对本协议的条款有疑问的，请联系相关业务部门进行询问。除非您已阅读并接受本协议及相关协议、规则等所有条款，否则，您无权使用本服务。一旦您选“同意协议并提交”（具体措施详见注册页面）并完成注册流程，或您以任何方式使用本服务，即视为您已阅读并同意上述协议、规则等的约束。如您有违反本协议的任何行为时，智能生活有权根据您违反的情况随时单方采取限制、中止或终止向您提供服务等措施，并有权追究您相关责任。

## 如何处理废弃电子产品

1. 请勿将电子产品当成家庭废弃物丢弃；
2. 请依当地的法规规定处理废弃的电子产品；
3. MOMAX鼓励您积极参与电子产品回收计划。

## 保养条款

1. 由购买日期起12个月内，如产品有损坏或故障，经本公司技术人员证实为在正常使用之情况下发生，本公司将提供免费维修服务；
2. 维修时必须出示本保用证及购买商号之发票正本，如果用户不能提供，本公司有权不提供维修服务。用户可能需要支付相关维修费用；
3. 保用期内，出现以下条款产品保用证自动失效：
  - (a) 是可消耗的部件，例如过滤网；
  - (b) 非本公司人员恣意拆解或维修产品之任何部分；
  - (c) 错误的操作如：非法接驳电源，以及水、污秽物渗入产品内导致产品损坏；
  - (d) 不可抗拒意外事件或自然灾害导致产品损坏；
4. 此保用证如经涂改，保用证自动失效；
5. 本公司有权增删任何维修及保用条款而不作通知；
6. 如因错误使用本公司产品而导致手提电话或其他电子产品有任何损坏，本公司不会承担任何责任；
7. 有关 MOMAX 原装产品和您的手机或电子产品的相容性，请在购买时向经销商确认。此产品规格随时可能变更，恕不另行通告；
8. 请浏览 [www.momax.net](http://www.momax.net) 了解最新产品资讯。

# **momax**

## **Warranty / 保用證 / 保用证**

Model / 型號 / 型号: \_\_\_\_\_

Date of Purchase / 購買日期 / 购买日期: \_\_\_\_\_

Remarks / 備註 / 备注: \_\_\_\_\_

### **Customer Service / 客戶服務中心 / 客户服务中心**

Hong Kong and Macau:

Unit A, 4/F., Cheung Lung Industrial Building,  
10 Cheung Yee Street, Lai Chi Kok, Kowloon, Hong Kong  
Hotline: 852-2402 3186 E-Mail: info@momax.net

香港及澳門:

香港九龍荔枝角長義街10號昌隆大廈4樓A室  
服務熱線: 852-2402 3186 電郵: info@momax.net

中国内地:

摩米士科技(深圳)有限公司  
广东省深圳市深南大道7006号万科富春东方大厦7楼  
邮编: 518000 全国服务热线: 86-400-886-0010  
电邮: info@momax.net.cn

Copyright © 2022 MOMAX Technology Ltd. All rights reserved.  
MOMAX is registered trademark of MOMAX Technology Ltd.  
All other trademarks are the property of their respective owners.

版權所有 © 2022 MOMAX Technology Ltd. 保留所有權利。  
MOMAX是MOMAX Technology Ltd 的註冊商標。  
所有其他商標均為其各自擁有者的財產。

版权所有 © 2022 MOMAX Technology Ltd. 保留所有权利。  
MOMAX是MOMAX Technology Ltd 的注册商标。  
所有其他商标均为其各自拥有者的财产。





[www.momax.net](http://www.momax.net)