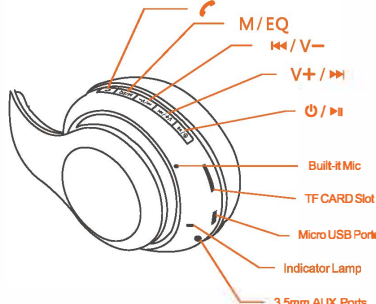
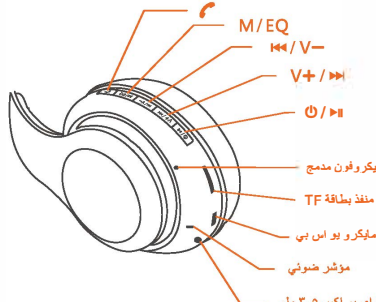


 Rhythm L5 (EA205) Wireless Headphones Before using this product, read user manual instructions carefully.	PRODUCTION DESCRIPTION The wireless earphone is a high quality stereo wireless headphone which possesses wireless music, calling, radio and MP3 function. Appearance vogue, beautifully designed, easy to carry, suitable for household, outdoor travel and other places, enjoy music anytime and anywhere. Provide super perfect sound quality for your computer, digital music players, and mobile phones and so on audio-visual products. FUNCTION KEY DESCRIPTION 	HOW TO USE MULTIFUNCTION BUTTONS 0 / P Long press about 3 second, it was default to the wireless mode after power on, the blue light and green light alternately flashes, now the wireless enter match mode. Again long press about 3 second to power off, Indicator light will be off. In listening to TF card music or mobile phone music via wireless, short press thematic will be suspended, short press again music from the new play. In listening to the radio, short press for all automatic channel search platform, and store these search to radio down (for the first time to use this headphones listening to the radio, please make a full channel searching operation), it will take about 1 minute to complete the whole channel searching time. V+ / P In listening to TF card music or mobile phone music via wireless, long press for play the next song. Listening to the radio, long press to select radio stations that broadcast the next stored. Short press for turn up the volume in any mode. P / V- In listening to TF card music or mobile phone music via wireless, long press for play the previous song. Listening to the radio, long press to select radio stations that broadcast the previous stored. Short press for turn down the volume in any mode.	M / EQ Long press can switch to radio, wireless, TF card mode (only insert TF card can switch to the TF card mode) in turn. Listen to mobile phone music via wireless or TF card music, short press can choose natural, pop, rock, jazz, country, heavy bass six kinds of sound in turn. After the success connection of the wireless and phone, when short press for answering the phone call, long press can refuse to answer the phone. After the call short press for hang up, continue press two times will redial the last time phone number. TF CARD Slot It supports 128 MB -32GB memory card, you can insert memory card filled with your playlist and enjoy music on the go. Indication Light It shows device is powered on/off, connected, under pairing mode. Micro USB Port Use the micro USB cable provided on the packaging to charge this device.	3.5 mm AUX Port With the help of AUX cable provided in the box you can use this device with your laptop/mobile in case headphones are running out of battery. Built-in mic With the help of built-in mic you can answer all your calls, also it can be used to give voice commands to your phone to call google assistant / Siri for Android & iOS respectively. METHOD OF CHARGING Insert the end of the charging cable to native Micro USB socket, the other end of the USB plug into the mobile phone charger, the indicator light turns red when charging, the green light will extinguish when full of. CAUTION 1. Do not use. 2. Use only rechargeable batteries model 502030 supplied by Dongguan Huili Liming Electricity Technology Co., Ltd. 3. CAUTION: Risk of explosion if battery is replaced by incorrect type. Dispose of used batteries according to the instruction. 4. Please use appropriate battery in case of explosion risk, please dispose of it as a battery under guidance. 5. The WEEE logo shown at the left appears on the product to indicate that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by according to the specified collection point for recycling of such household waste. 6. To prevent possible heating damage, do not listen at high volume levels for long periods. 7. The maximum allowable temperature of the battery is 100°C.	Safety Instruction 1. Please use the original or with safety certification wire harness for charging. 2. When using earbuds, please adjust the volume appropriately to avoid damaging the hearing. 3. Please use the product correctly to avoid falling or heavy extrusion. 4. Children should be accompanied by adults to avoid eating by mistake. 5. Keep away from extreme environments such as high temperatures or humidity. 6. Please do not disassemble this product. LOW BATTERY When there was a low voltage power, the machine will prompt "Dong Dong Dong", please recharge in time at this time. It is not to be used for a long time, charging one time every month at least, it can protect the battery and extend battery life. AUTO POWER OFF If not connected wireless mode, it will turn off automatically after 5 minutes, don't worry about waste of electricity for standby. RESET When the headphones suddenly crashed, please long press the power button for 8s, the headphones will boots again and back to normal state.
 www.riversongtech.com RIVERSONG TECHNOLOGY CO., LTD. Address: No. 1108 tower B, Tian on High-Tech Plaza Phase 1, Futian District, Shenzhen, Guangdong, China Official website: www.riversongtech.com	FAQ Why the Bluetooth cannot be linked? 1. Please check if the Bluetooth function on your device is turned on. 2. Please check and confirm headphone must not be connected to other device. 3. Please check if headphone is in pairing mode (indication light will display blue & green alternately) Why the green light flashes once every 20s, accompanied by the voice No battery, please charge? If indicates headphone battery is low and you need to charge your headphone. When charging, why does the red light not light up? 1. Please make sure that the charging device is well connected to the headphone. 2. If the headphone has not been used for a long time, the battery will get in standby mode. It will take about 10-30 minutes for the red light to light up again. Why can't I hear any sound from my headphones? 1. Confirm that the volume of the headphones is appropriate. 2. Confirm that the headphone is properly connected to the phone. 3. Please check if your headphones are within Bluetooth range.	Why the headphone call is not good? 1. Confirm whether the mobile network is strong enough. 2. Please confirm that the headphone is with in effective working distance of 10 meters from your mobile phone, also it must not have any major obstacle causing interference to connection. When the music is playing, why the music cannot be controlled with the play/pause, previous/next song and volume up/down buttons? This feature requires the mobile device to be paired with the headphone to support the AVRCP (Audio/Video Remote Control Profile) protocol. Why when playing the FM mode, there is no radio sound? 1. Please confirm whether it is in the FM broadcast signal area. 2. The FM broadcast segment has weak signal in the basement or tunnel, which causes the FM to have no broadcast station signal. Please ensure that it is used in the FM broadcast station area. Why memory card can not play local songs? 1. Please check if songs are copied on the memory card and format must be MP3. 2. Please confirm if the memory is not damaged. 3. Please check if Memory card mode is enabled.	When I use AUX audio cable, there is no sound/ noise? 1. Please check whether the AUX interface of the output device is normal (not damaged) and whether the AUX 3.5mm audio cable is not damaged. SPECIFICATION Product name: Rhythm L5 Model: EA205 Bluetooth solution: A2DP, AVCTP, AVRCP, HFP, SDP, L2CAP Frequency response: 50Hz-20KHz Frequency range: 2402-2480MHz FM Range: 87.5-108MHz Maximum EIRP: 5.1dBm Connection distance: 10m Speaker size: Ø40mm Impedance range: 32Ω±15% Battery capacity: 200mAh Input: 5V=500mA Charging time: ~1.5h Playback time: ~6H (70% volume) Charging interface: Micro USB Support: Aux/TF card Net weight: ~196g	FCC Caution: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. IMPORTANT NOTE Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:	—Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help. FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

 Rhythm L5 (EA205) سماعة رأس لاسلكية قبل استخدام هذا المنتج، الرجاء قراءة هذه الإرشادات بعناية والاحتفاظ بها.	وصف المنتج إن سماعة الرأس اللاسلكية عبارة عن سماعة رأس لاسلكية شمسة فائقة الجودة تتميز بإمكانية تشغيل الموسيقى والاتصال اللاسلكي وتشغيل الراديو ومكالمات ما بين ٢ لا سلكيًا، وهي تتميز بتصميم إيداعي وتصميم جمالي ومريح لة الحمل وبلائحة الميقات المنزلي وبسهولة الانتقال خارجة وغير ذلك من الأماكن حيث يمكنك الاستماع والموسيقى في كل الأوقات والأماكن. كما توفر صوت مثالي فائق الجودة لمكالماتك وأجهزة تشغيل الموسيقى الرقمية والهواتف الجواله وكذلك المنتجات الصوتية/الرقمية. وصف المفاتيح الوظيفية 	كيفية استخدام الأزرار المتعددة الوظائف 0 / P يمكن للضغط المطول التحويل إلى نمط الراديو، أو اللاسلكي، أو بطاقة TF (إن إدخال بطاقة TF فقط هي ما يمكنه التحويل إلى نمط بطاقة TF). على الجانب الآخر، عند الاستماع إلى موسيقى الهاتف الجوال عبر النمط اللاسلكي أو عبر بطاقة TF، يمكن لضغطة قصير ة أن تختار نوع الصوت من بين أنماط الموسيقى الستة التالية الطبيعي، البوب، الروك، الجاز، كانترّي، هيفي ماس. عقب نجاح الاتصال بين اللاسلكي والهاتف، يمكن الرد على مكالمات هاتفية عبر الضغط قصيرًا، ويمكن رفضها عبر الضغط مطوّلًا. عقب الضغط القصير المتتابع المكالمات، استمر في الضغط لمزيد من وسائط الاتصال بأخر رقم هاتفي لديك. TF CARD Slot تدعم بطاقة ذاكرة ١٢8 ميجا بايت-٣٢ جيجا بايت، يمكن إدخال بطاقة ذاكرة ملبية بقلامة التشغيل خاضعت واستمع بالموسيقى في أثناء حركتك. المؤشر الضوئي يظهر أن الجهاز يعمل/مُطفأ، متصل، قيد نمط الاقتران. منفذ مايكرو يو إس بي استخدم كبل مايكرو يو إس بي المتوفر في الحزمة لتجهيز الجهاز. منفذ إي يو إس بي يمكن استخدام سماعة الرأس مع الحاسب المحمول/الهاتف الجوال في حال نفاذ بطارياتها بالاستماع بكبل إي يو إس بي المزود في الحزمة.	M / EQ يمكن للضغط المطول التحويل إلى نمط الراديو، أو اللاسلكي، أو بطاقة TF (إن إدخال بطاقة TF فقط هي ما يمكنه التحويل إلى نمط ي بالنمط النظامي التشغيل أندرويد وأي أو إس على التوالي. طريقة الشحن أدخل طرف كابل الشحن إلى منفذ مايكرو يو إس بي المحلي، وطرف البوآن بي الآخر في شاحن الهاتف الجوال، سيحول المؤشر الضوئي إلى اللون الأحمر عند الشحن، وسيحول إلى اللون الأخضر عند امتلاء البطارية. تحذير 1. يمنع التعرض لدرجة حرارة مسبوحة بما 45 درجة مئوية 2. لا تستخدم فقط البطاريات القابلة لإعادة الشحن ضمن موديل 502030 المدمج من دون حقن هوالي للتكنولوجيا كبرياء التبريد 3. يمكن التعرض لحظر حدوث انفجار في حال تم إدخال البطارية بدو عن مدمج، كما يمكن التعرض من البطاريات المستعملة وفقًا للتعليمات 4. ممن استخدام البطارية المشونة في حدة وجود خطر الانفجار، كما يُمنع التخلص من البطارية التي لا تعمل تحت ترميم 5. لا تعثر على WEEE (الموضح على الحزمة) الموجود على المنتج للإشارة إلى أنه يجب عدم التخلص من هذا المنتج أو التخلص مع النفايات المنزلية الأخرى. ألت مسؤول عن التخلص من جميع منتجات المصناعات الكهربائية والإلكترونية التي يجب عن طريق تسليمها إلى نقاط التجميع المحددة لإعادة تدوير مثل هذه المنتجات الخطرة 6. يمنع درجة الحرارة القصوى المسموح بها لبطارية 105 درجة مئوية تعليمات السلامة 1. رجاء استخدام مجموعة أسلاك الفصح الأصلية أو أسلاك مواءمته سلامة 2. عند استخدام سماعات الرأس اللاسلكية، يرجى ضبط الصوت بشكل مناسب 3. يرجى استخدام المنتج بشكل صحيح لتجنب السقوط أو التلف المحتمل. 4. يجب أن يتجنبوا الأطفال مصحة الأسنان لتجنب تلفها بها. 5. يجب الابتعاد عن المنتجات المشونة مثل دباب الحارة الرطبة والظلمة والظلمة. 6. يجب عدم هذا المنتج	ميكروفون مدمج يمكنك الرد على كل الاتصالات بمساعدة الميكروفون المدمج، كما يمكن استخدامه لتوجيه أوامر صوتية إلى هاتفك للاتصال بمساعد جوجل/سير ي بالنمط النظامي التشغيل أندرويد وأي أو إس على التوالي. طريقة الشحن أدخل طرف كابل الشحن إلى منفذ مايكرو يو إس بي المحلي، وطرف البوآن بي الآخر في شاحن الهاتف الجوال، سيحول المؤشر الضوئي إلى اللون الأحمر عند الشحن، وسيحول إلى اللون الأخضر عند امتلاء البطارية. تحذير 1. يمنع التعرض لدرجة حرارة مسبوحة بما 45 درجة مئوية 2. لا تستخدم فقط البطاريات القابلة لإعادة الشحن ضمن موديل 502030 المدمج من دون حقن هوالي للتكنولوجيا كبرياء التبريد 3. يمكن التعرض لحظر حدوث انفجار في حال تم إدخال البطارية بدو عن مدمج، كما يمكن التعرض من البطاريات المستعملة وفقًا للتعليمات 4. ممن استخدام البطارية المشونة في حدة وجود خطر الانفجار، كما يُمنع التخلص من البطارية التي لا تعمل تحت ترميم 5. لا تعثر على WEEE (الموضح على الحزمة) الموجود على المنتج للإشارة إلى أنه يجب عدم التخلص من هذا المنتج أو التخلص مع النفايات المنزلية الأخرى. ألت مسؤول عن التخلص من جميع منتجات المصناعات الكهربائية والإلكترونية التي يجب عن طريق تسليمها إلى نقاط التجميع المحددة لإعادة تدوير مثل هذه المنتجات الخطرة 6. يمنع درجة الحرارة القصوى المسموح بها لبطارية 105 درجة مئوية تعليمات السلامة 1. رجاء استخدام مجموعة أسلاك الفصح الأصلية أو أسلاك مواءمته سلامة 2. عند استخدام سماعات الرأس اللاسلكية، يرجى ضبط الصوت بشكل مناسب 3. يرجى استخدام المنتج بشكل صحيح لتجنب السقوط أو التلف المحتمل. 4. يجب أن يتجنبوا الأطفال مصحة الأسنان لتجنب تلفها بها. 5. يجب الابتعاد عن المنتجات المشونة مثل دباب الحارة الرطبة والظلمة والظلمة. 6. يجب عدم هذا المنتج	البطارية منخفضة حين تنخفض البطارية، سيصدر الألة صوت "دونغ دونج دونج"، الرجاء إعادة الشحن في أقرب وقت ممكن. إذا كانت السماعة لن يجري استخدامها لفترة طويلة، اشحنها مرة واحدة شهريًا على الأقل بما يسمى البطارية وزيد من عمرها. الإطفاء التلقائي في حال نمط عدم الاتصال اللاسلكي، ستطفئ تلقائيًا عقب مرور ٥ دقائق، لا تتراجع حيال فقدان الطاقة في أثناء وضعية الاستعداد. إعادة الضبط حين تتوقف سماعة الرأس فجأة عن العمل، الرجاء الضغط مطوّلًا على زر الطاقة لمدة ٨ ثواني، سيكمل سماعة الرأس مرة أخرى عائدة إلى وضعية الطبيعي. الأسئلة الشائعة لم لا يمكن توصيل البلوتوث؟ 1. الرجاء التحقق من تشغيل وظيفة البلوتوث في جهازك. 2. الرجاء التحقق والتأكد من أن سماعة الرأس غير متصلة بجهاز آخر. 3. الرجاء التحقق من أن سماعة الرأس في وضعية الاقتران (سيتظهر المؤشر الضوئي اللونين الأزرق والأخضر تبادليًا).
 www.riversongtech.com شركة ريفرسونج تكنولوجي كو ليميتد المقر: رقم ١١٠٨ برج ب، تيانان هاي تانغ بلازا المرحلة ١، منطقة فو يان، غوانغ، قوانغ دونغ، الصين الموقع الإلكتروني الرسمي: www.riversongtech.com	لماذا يوضع الضوء الآخر مرة كل ٢٠ ثانية يصاحبه في ذلك صوت "لا توجد بطارية، الرجاء الشحن؟" يشير إلى أن بطارية سماعة الرأس منخفضة ويلزم شحنها. لم لا يضيء الضوء الأحمر في أثناء الشحن؟ 1. الرجاء التحقق من توصيل الشاحن جيدًا بسماعة الرأس. 2. في حال عدم استخدام سماعة الرأس لفترة طويلة، سيخطف البطارية نمط الاستعداد. 3. وسيستغرق الأمر ١-٢ دقيقة حتى يظهر الضوء الأحمر مرة أخرى. لم لا يمكنني سماع أي صوت من سماعات الرأس؟ 1. تتأكد من ملائمة مقدار صوت سماعة الرأس. 2. تتأكد من توصيل سماعة الرأس كما ينبغي بالهاتف. 3. الرجاء التحقق من وجود هاتفك ضمن نطاق البلوتوث. لماذا ليست مكالمات سماعات الرأس جيدة؟ 1. تتأكد من أن شبكة الهاتف الجوال قوية بما يكفي. 2. الرجاء التأكد من أن سماعة الرأس ضمن مسافة العمل الفعالة للهاتف. 3. أمتار من هاتفك الجوال، وتلك أيضًا لا يكون هناك عائق رئيسي يتسبب في تشويش الاتصال. لم لا يكون هناك صوت/مضوضاء حين استخدام كابل الصوت ت أي يو إس بي؟ 1. الرجاء التحقق مما إذا كانت أجهة أي يو إس بي لجهاز الإخراج ممتلئة (غير تالفة) وسواء كان كابل أي يو إس بي ٣.٥ ملم ثنائي أم لا.	حين تعمل الموسيقى، لم لا يمكن التحكم في الموسيقى عبر أزرار تشغيل/إيقاف مؤقت، والأغنية السابقة/التالية، وزيادة/خفض الصوت؟ شحن؟ تتطلب هذه الميزة اقتران الجهاز سماعة الرأس لدعم بروتوكول AVRCP (نمط التحكم عن بعد في الصوت/الفيديو). لم لا يكون هناك صوت للراديو عند التشغيل في نمط FM؟ 1. الرجاء التأكد مما إذا كنت ضمن منطقة بث إشارة MF. 2. يعني قطاع بث FM ضعف الإشارة في الأقيية أو الأتفاق ما يُسبب فقدان إشارة محطة بث FM. الرجاء التأكد من استخدامها في منطقة محطة بث FM. لم لا يمكن لبطاقة الذاكرة تشغيل الأغاني المحلّة؟ 1. الرجاء التحقق إذا كانت الأغاني منسوخة على بطاقة الذاكرة أو لا، كما يجب أن يكون تنسيقها بصفة MP3 2. الرجاء التحقق من أن بطاقة الذاكرة غير تالفة. 3. الرجاء التحقق إذا كان نمط بطاقة الذاكرة مُنشأ أم لا. لم لا يكون هناك صوت/مضوضاء حين استخدام كابل الصوت ت أي يو إس بي؟ 1. الرجاء التحقق مما إذا كانت أجهة أي يو إس بي لجهاز الإخراج ممتلئة (غير تالفة) وسواء كان كابل أي يو إس بي ٣.٥ ملم ثنائي أم لا.	المواصفات اسم المنتج: Rhythm L5 الموديل: EA205 أجهزة البلوتوث المدعومة: A2DP, AVCTP, AVRCP, HFP, SDP, L2CAP نطاق التردد: 50 هرتز-20 كيلوهرتز مدى التردد: 2402-2480 ميجا هرتز نطاق إلف: 87.5-108 ميجا هرتز الحد الأدنى EIRP: 5.1 ديسيبل مسافة الاتصال: 10 أمتار حجم/المساحة الخارجية: 40 ملم المقاومة الكهربائية: 32-40 أوم، 15% سعة البطارية: 200 ميلي أمبير/الساعة الإدخال: ٥ فولت/500 ميلي أمبير وقت التشغيل: حوالي ٦ ساعات (بمقدار صوت 70%) زاجة الشحن: مايكرو يو إس بي الدعم: أي يو إس بي/بطاقة TF صافي الوزن: حوالي 196 جرام		