



POPSKY TURNTABLE

Vintage Suitcase Turntable Player with Bluetooth
and USB Encoding Model ST230

User manual



Thank you for choosing POPSKY turntable

- **Brief Introduction**

POPSKY turntable ST230 is a vintage suitcase-styled portable turntable with multi-function. With this turntable, you can play your vinyl record, or play the music list in your phone or mp3 player via Bluetooth or 3.5mm Aux cable. By connecting RCA out, you can also realize playing your vinyl record with HIFI speaker and enjoy high-quality lossless music.

- **Note before Using**

Choose a safe location and avoid placing the unit in direct sunlight or near any heat source.


Avoid locations subject to vibrations, excessive dust, cold or moisture.

Do not open the cabinet as this may result in electrical shock. If a foreign object is inserted accidentally, contact your dealer.

Do not attempt to clean the unit with chemical solvents as this might damage the finishing. A clean, dry cloth is recommended for cleaning.

Keep this manual for future reference.

- **Functions**

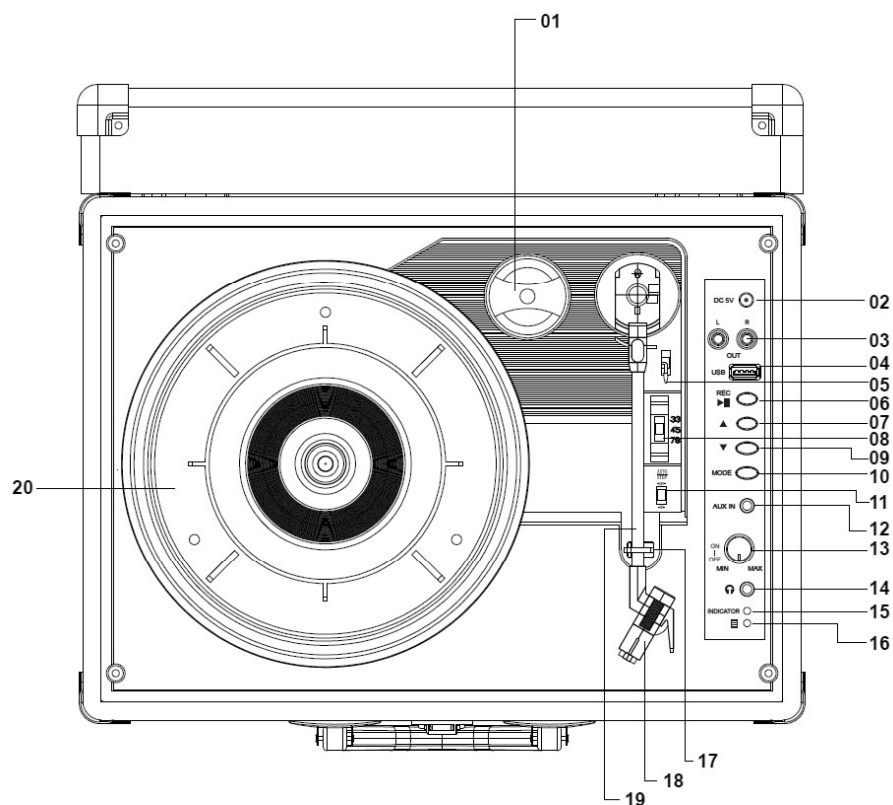

- | | |
|--|----------------------------------|
| 1. 45RPM adaptor | |
| 2. DC IN port—to connect the power adaptor | |
| 3. RCA out port---to connect external speaker system with built-in amplifier | |
| 4. USB port | 9. NEXT button |
| 5. Lift lever | 10. Mode button |
| 6. REC/PLAY/PAUSE button | 11. AUTO-STOP ON/OFF switch |
| 7. PREV button | 12. Line in(AUX IN) port |
| 8. Speed switch | 13. Power ON/OFF and volume knob |

- 14. Headphone port—to connect headphone or earphone
- 15. Status indicator
- 16. Battery indicator
- 17. Tone arm lock
- 18. Cartridge with needle
- 19. Tone arm
- 20. Platter

■ PHONO Mode(RED without flashing).

The default mode is PHONO Mode.

The status indicator becomes RED without flashing.

- 1. Lift the buckle on the front of the turntable and open the lid.
- 2. Turn the power & volume control knob clockwise.
- 3. Place a record on the turntable platter and select the desired speed (33/45/78) according to the record. NOTE: when playing a 45RPM record, use the included 45RPM adapter located in the holder near the tone arm.
- 4. Open the tone arm clip to release the tone arm. Push the lift lever backward to raise the tone arm and gently move the tone arm to the desired position over the record. The turntable will begin to spin when the arm is moved toward the record. Push the lift lever forward to lower the tone arm slowly onto the desired position on the record to begin playing the record. Please note: The record will

begin to spin only when the tone arm is moved toward the record if the Auto Stop is turned on.

5. If the AUTO STOP ON/OFF Switch is turned ON, the record will stop automatically when finished(For some few vinyl records, it will stop when it does not come to the end OR it will not stop when it comes to the end.). If Auto Stop Control is turned OFF, record will NOT stop automatically when finished.

How to record the vinyl to mp3.

Plug your USB stick into the USB port..Long Press the REC ►|| button till the status indicator becomes red flashing. The vinyl recording starts. Long Press the REC ►|| button until the status indicator become red without flashing to stop the recording.

■ USB Playback Mode(purple color).

Step1: Plug your USB stick into the USB port.

Step2: Press the Mode button and you will see the status indicator becomes **purple color**.

Step3: The USB playback starts. Press the REC/PLAY/PAUSE button to pause.

Turn the VOLUME CONTROL KNOB to adjust the volume.

Press the NEXT button for next song, press the PREV button for

previous song.

Please adjust that as well if necessary.

■ **Bluetooth Playback Mode(blue flashing).**

Step1: Press the Mode button and the status indicator becomes **blue flashing**.

Step2: Search the device name **Popsky turntable ST230** on your mobile phone or tablet PC. After connection, the status indicator becomes blue without flashing. Then you can enjoy Bluetooth playback.

Turn the VOLUME CONTROL KNOB to adjust the volume. The mobile phone or tablet PC' s volume control also impact the over-all volume level.

Press the NEXT button for next song, press the PREV button for previous song.

Please adjust that as well if necessary.

■ **Line-in Mode(blue and red flashing alternately).**

Step1: Press the Mode button and the status indicator becomes **blue and red flashing alternately**.

Step2: Connect your iPod, MP3 player, mobile phones etc. to the

AUX IN port with a 3.5mm-3.5mm audio cable (not included).

You can enjoy the music of iPod, MP3 player, mobile phones etc. at the turntable player.

Turn the VOLUME CONTROL KNOB to adjust the volume. (The iPod, MP3 player, mobile phones' volume control also impact the overall volume level. Please adjust that as well if necessary.).

Plug your USB stick into the USB port. During the line-in music playing, press the REC/PLAY/PAUSE button till the status indicator becomes red flashing. The line-in recording starts. Press the REC/PLAY/PAUSE button till the status indicator becomes blue and red flashing alternately to stop the recording.

Remark: When USB stick is plugged into the turntable player, the mode change order is phono->USB playback->Bluetooth playback->Line in.

When USB stick is not plugged into the turntable player, the mode change order is phono->Bluetooth playback->Line in.

■ Battery Charging

1.This turntable player is powered by the built-in rechargeable battery instead of the power adaptor. The power adaptor is used to charge the battery.

2.During charging, the battery indicator is in red color; when fully charged, the battery indicator will light off.

■ How to replace the needle

To replace the needle, please refer to the instructions below.

Removing the needle from the cartridge

1. Place a screwdriver at the tip of the stylus and push downward as shown in direction "A" .
2. Remove the stylus by pulling the stylus forward and pushing downward.

Installing the Stylus

1. Hold the tip of the stylus and insert the stylus by pressing as shown in direction "B" .
2. Push the stylus upward as in direction "C" until the stylus locks into the tip position.



NOTES

We advise you to clean your records with an anti-static cloth to gain maximum enjoyment from them.

We would also point out that for the same reason your stylus should be replaced periodically (approximately every 250 playback hours)

■ Tips for better turntable performance

1. When opening or closing the turntable cover, handle it gently, gripping it either at the centre or at each side.
2. Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
3. Frequently clean the needle tip-use a soft brush in a "back-to-front" motion only.
4. If you must use a needle cleaning fluid, use very sparingly.
5. Gently wipe the turntable player housing with a soft cloth. Use only a small amount of mild detergent to clean the turntable player.
6. Never apply harsh chemicals or solvents to any part of the turntable system.



POPSKY DREHSCHREIBE

erlesene Koffer Drehschreibe Abspielgerät mit Bluetooth
und USB chifferierend Modus ST230

Bedienungsanleitung



Vielen Dank für Ihre Wahl von POPSKY Drehschreibe

• **1. Kurze Vorstellung**

POPSKY Drehschreibe ST230 ist eine Drehschreibe mit dem erlesenen Koffer Stil und Multi-Funktion. Damit können Sie Ihre Schallplatten spielen, die Musikliste in Ihrem Handy oder in MP3 durch Bluetooth oder 3.5mm Stereo-Audiozeile spielen. Wenn es mit RCA verbunden ist, ermöglicht es Ihnen, Ihre Schallplatten mit HIFI Lautsprecher spielen zu können. Auf diese Weise können Sie die verlustfreie Musik mit hoher Qualität genießen.

• **Anmerkung vor Benutzen**

Wählen Sie zuerst einen sicheren Ort und nie legen Sie das Gerät direkt in die Sonne oder in der Nähe von Wärmequelle.


Vermeiden Sie das Gerät in Orten zu legen, wo es Erschütterung, Staub, Kälte oder Feuchtigkeit gibt.

Sie dürfen den Kabinett öffnen, wenn es die Gefahr von Elektrischem Schlag besteht. Steckt etwas Fremdes darin zufällig, bitte kontaktieren Sie Ihren Zulieferer.

Versuchen Sie nie das Gerät mit chemischer Reinigungsmittel, weil es dadurch den Lack beschädigen kann. Ein sauberes und trockenes Tuch ist vorzuschlagen.

Behalten Sie die Bedienungsanleitung für die spätere Referenz.

• **Funktionen**

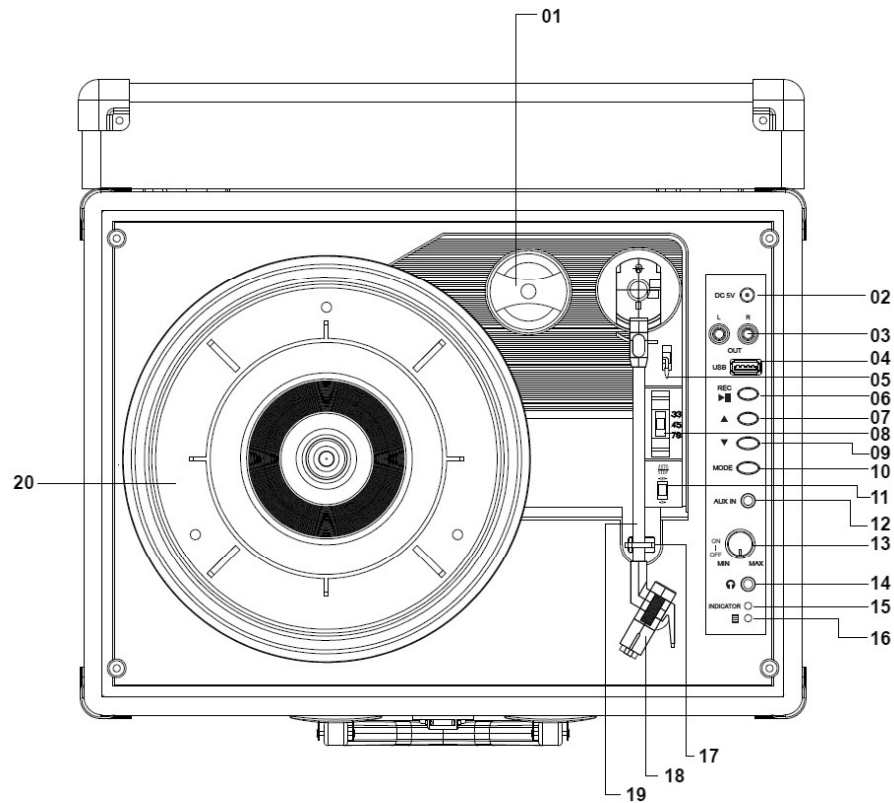

1. 45RPM Adaptor
2. DC Einfügung Anschluss—um den Strom zu verbinden
3. RCA Ausgang Anschluss---um den äußerlichen Sprecher System mit eingebautem Verstärker
4. USB Anschluss
5. Aufheben Steuerstab
6. Tasten von Aufnehmen/Spielen/Aufhören
7. Taste von dem Letzten
8. Schalter von Schwindigkeit
9. Taste von dem Nächsten

- 10. Taste von Modus
- 11. Automatisch-Aufhören Ein/Aus Schalter
- 12. Leitung (AUX IN) von Einfügung Anschluss
- 13. Strom ein/ausschalten und Volumen Griff
- 14. Kopfhörer Anschluss—um den Kopfhörer zu verbinden
- 15. Zustand Zeiger
- 16. Batterie Zeiger
- 17. Ton Klammerarm
- 18. Kassette mit Nadel
- 19. Ton Arm
- 20. Servierplatte

■ PHONO Modus(Rot und nicht schimmernd).

Die nichtwiderlegbare Modus ist PHONE Modus.

Der Zustand Zeiger wird ROT und nicht schimmernd.

- 1. Heben die Schnalle auf der Vorderseite der Drehschreibe und öffnen Sie bitte Deckel.
- 2. Schalten Sie den Strom & Volumen Kontrolle Griff im Uhrzeigersinn.
- 3. Legen Sie eine Schallplatte auf die Drehschreibe und wählen Sie die gestellte Schwindigkeit (33/45/78) nach der Schallplatte. Achtung: wenn Sie eine 45RPM Schallplatte spielen, benutzen Sie den einbezogenen 45RPM Adapter im Halter neben dem Ton Arm.
- 4. Heben Sie den Ton Arm Klammer um den freizulassen. Schieben Sie den Aufheben Steuerstab nach hinten, um den Ton Arm zu heben und schieben Sie den Ton Arm sanft zu der gestellten Position über der Schallplatte. Die Drehschreibe beginnt zu spinnen, wenn der Arm nach der Schallplatte gezogen ist. Schieben Sie den Aufheben Steuerstab vorwärts, damit Sie den Ton Arm langsam auf

die gestellte Position der Schallplatte herunterbringen können, danach können Sie die Schallplatte spielen. Bitte achten Sie : Die Drehschreibe beginnt zu spinnen, wenn der Ton Arm nach der Schallplatte gezogen ist und wenn der Automatisch-Aufhören Ein/Aus Schalter eingeschaltet ist.

5. Wenn der Automatisch-Aufhören Ein/Aus Schalter eingeschaltet ist, die Schallplatte wird aufhören, wenn es fertig ist. (Für einige Schallplatte wird es unterbrechen wenn es noch fertig ist oder es wird nicht stoppen wenn es zum Ende kommt.). Wenn der Automatisch-Aufhören Ein/Aus Schalter ausgeschaltet ist, wird die Schallplatte nicht automatisch aufhören, sogar wenn es fertig ist.

Wir verwandelt die Schallplatte zu MP3.

Stecken Ihren USB Speicher in den USB Anschluss .Drücken Sie lange den Knopf REC ► || bis der Zustand Zeiger rot und schimmernd wird. Dann beginnt die Schallplatte aufzunehmen. Drücken Sie den Knopf REC ► || bis der Zustand Zeiger rot und nicht schimmernd wird. Dann mit der Aufnahme aufhören.

■ USB Wiederholung Modus(lila Farbe).

Schritt1: Stecken Ihren USB Speicher in den USB Anschluss.

Schritt2: Drücken Sie die Modus Knopf und Sie werden sehen, dass der Zustand Zeiger **lila** wird.

Schritt3: Dann beginnt die USB Wiederholung. Drücken Sie Tasten von Aufnehmen/Spielen/Aufhören, um es zu unterbrechen.

Schalten Sie den Volumen Kontrolle Knopf ein und Stellen Sie das

Volumen.

Drücken Sie Taste von dem Nächsten für das nächste Lied und drücken Sie Taste von dem Letzten für das letzte Lied.

Bitte stellen Sie das so gut wie möglich.

■ **Bluetooth Wiederholung Modus (blau schimmernd).**

Schritt1: Drücken Sie die Modus Knopf und der Zustand Zeiger wird **blau und schimmernd**.

Schritt2: Suchen Sie den Gerätenamen **Popsky Drehschreibe ST230** in Ihrem Handy oder Tablet PC. Nach der Verbindung wird der Zustand Zeiger blau und nicht schimmernd. Dann können Sie Bluetooth Wiederholung genießen.

Schalten Sie den Volumen Kontrolle Knopf ein und Stellen Sie das Volumen. Die Volumen Kontrolle vom Handy oder Tablet PC kann auch das weitreichende Volumen Stufe beeinflussen.

Drücken Sie Taste von dem Nächsten für das nächste Lied und drücken Sie Taste von dem Letzten für das letzte Lied.

Bitte stellen Sie das so gut wie möglich.

■ **Leitung- Einfügung Modus (blau und rot schimmernd abwechselnd).**

Schritt1: Drücken Sie die Modus Knopf und der Zustand Zeiger wird blau und rot schimmernd abwechselnd.

Schritt2: Verbinden Sie Ihre iPod, MP3 Spielgerät, Handy und so weiter mit AUX Einfügung Anschluss durch eine 3.5mm-3.5mm Audio Leitung (nicht einbezogen).

Sie können die Musik von iPod, MP3 Spielgerät, Handys etc. auf das Drehschreibe Spielgerät hören.

Schalten Sie den Volumen Kontrolle Knopf ein und stellen Sie das Volumen. (Die Volumen Kontrolle vom von iPod, MP3 Spielgerät, Handys kann auch das weitreichende Volumen Stufe beeinflussen. Bitte stellen Sie das so gut wie möglich.)

Stecken Ihren USB Speicher in den USB Anschluss. Während der Spiele der Leitung-Einfügung Musik, drücken Sie die Tasten von Aufnehmen/Spielen/Aufhören bis der Zustand Zeiger rot schimmernd wird. Dann beginnt die Aufnahme. Drücken Sie die Tasten von Aufnehmen/Spielen/Aufhören bis der Zustand Zeiger blau und rot schimmernd abwechselnd wird, um die Aufnahme zu unterbrechen.

Bemerkung: Wenn der USB Speicher in das Drehschreibe Gerät gesteckt ist, die Reihenfolge der Veränderung vom Modus ist phono->USB Wiederholung->Bluetooth Wiederholung->Leitung Einfügung.

Wenn der USB Speicher nicht in das Drehschreibe Gerät gesteckt ist, die Reihenfolge der Veränderung vom Modus ist phono->Bluetooth Wiederholung->Leitung Einfügung.

■ Batterie Aufladung

1. Statt Strom Adapter ist das Drehschreibe Gerät durch eingezogene wiederaufladbare Batterien versehen. Der Strom Adapter ist

verwandt, um die Batterie aufzuladen.

2. Während der Aufladung ist die Farbe von Batterie Zeiger rot.
Wenn es aufgeladen ist, ist die Lampe von Batterie Zeiger aus.

■ wie sollen Sie die Nadel ersetzen

Um die Nadel zu ersetzen, bitte folgen Sie die Anweisung unten.

Entfernen die Nadel von der Kassette

1. Legen Sie einen Schraubenzieher bei der Spitze von dem Abtastnadel und schieben nach unten wie gezeigt in Richtung "A" .
2. Entfernen Sie den Abtastnadel dadurch, dass Sie den Abtastnadel vorwärts ziehen und schieben nach unten.

Installierung vom Abtastnadel

1. Halten Sie die Spitze vom Abtastnadel und legen Sie den Abtastnadel ein durch Druck wie gezeigt in Richtung "B" .
2. Schieben Sie die Abtastnadel aufwärts wie in Richtung "C" bis die Abtastnadel geschlossen in die Spitze Position.



Anmerkungen

Wir schlagen Sie vor, dass Sie mit einem Anti-statische Elektrizität Tuch die Schallplatten reinigen, um sie am besten zu genießen.

Dafür empfehlen wir, dass Sie regelmäßig Ihre Abtastnadel zu ersetzen. (gegen alle 250 Wiederholung Stunden)

■ Tipps für bessere Drehschreibe Leistung

1.1.Beim Öffnen oder Schließen den Drehschreibe Deckel, behandeln Sie es sanft. Sie sollen weder das Zentrum noch beide Seiten festhalten.

2.Sie dürfen die Spitze von der Abtastnadel berühren. Sie sollen vermeiden, den Abtastnadel gegen die Drehschreibe oder den Rand der Schallplatten zu stoßen.

3.Reinigen Sie oft die Spitze von der Abtastnadel. Benutzen Sie eine weiche Bürste, aber nur mit einer Weise von "zurück-bis-vorwärts" .

4.Wenn Sie die Abtastnadel mit Reinigungsflüssigkeit benutzen müssen, benutzen Sie die nur sehr wenig.

5.Putzen Sie Drehschreibe Spielgerät sanft mit einem weichen Tuch. Nur sehr wenig mild Reinigungsmittel ist erlaubt, um Drehschreibe Spielgerät zu reinigen.

6.Nie benutzen Sie stark chemische Substanzen oder Lösungsmittel auf irgend einen Teil von Drehschreibe System.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.