
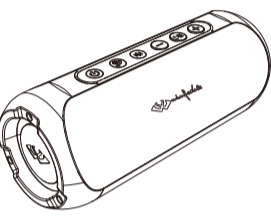


B2101说明书
 尺寸：成品L130*W68mm;展开L544*130mm。
 材质与印刷要求：120g铜版纸，四色印刷。
 装订方式：折页。

正面



USER'S MANUAL | EXSON S
B2101



Product specification.

The item is an outdoor stereo bluetooth speaker. It connects to smartphone, tablet and notebook to play music. The Exson M is IPX7 waterproof and it comes with LED emergency light and S.O.S light. The built-in rechargeable lithium battery can be charged with USB adapter (DC 5V/1-3A).

1)Bluetooth+Aux in.
 2)Rated power(1%THD): 10W*2.
 3)IPX7 waterproof.

Accessory.

1)USB Cable*1.
 2)User's Manual*1

Bluetooth connection.


When it connects speaker to device at first time, please turn on bluetooth devices (like smartphone, tablet and notebook), then search the compatible device. Find this speaker and pair with it. Please enter password "0000" if it needs password for pairing. You can play music or video on your device after pairing.

Warnings:
 This product contains magnets. Please keep the magnetically sensitive items away from it.

Notice

- It is forbidden to disassemble, bump, extrude this item and throw it into fire.
- Please do not keep on using it if there is a bloating.
- Please do not use it after battery was soaked and do not place it in high temperature environment.
- Danger of explosion will happen if change into the wrong battery. Please dispose the used battery according to instructions.
- The adapter is only used for charging Wharfedale Exson Pro bluetooth speaker. Please do not use it on other device. That may damage the device.


Buttons and power indicator light.

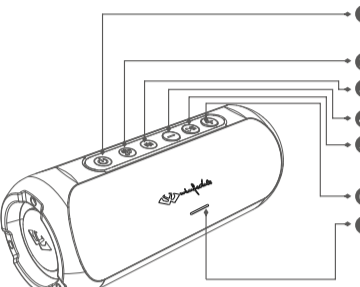

- On/Off: press it for 2 seconds to turn on. Short press to indicate dump energy of battery.
- TWS: short press to TWS mode. Short press TWS button to exit TWS mode. TWS is True Wireless Stereo that two bluetooth speakers are connected each other and create stereo sound.
- Bluetooth: short press to turn on bluetooth.
- "-": short press to turn down the volume. extended press for 1 seconds to play the last music.
- Play button or pause button: short press to play or pause. Short press to receive the call when a call arrives. Short press to end a call. Extended press for 1 seconds to refuse a call.
- "+": short press to turn up the volume. extended press for 1 seconds to play the next music.
- Power indicator light (at the inside of mesh, can be seen when speaker is On).


1)white: dump energy 275%.
 2)blue: dump energy 25%-75%.
 3)red: low battery, recommend to charge battery.

Instruction about connectors.

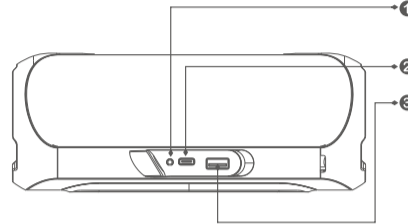

- Aux in: 3.5mm stereo Aux connector for connected to notebook, smartphone and MP3.
- DC in (5V/1-3A): Charge the device with USB via Type C connector.
- DC out: Provide emergency charging for portable device like smartphone. (Output DC 5V/1A).

Warnings.

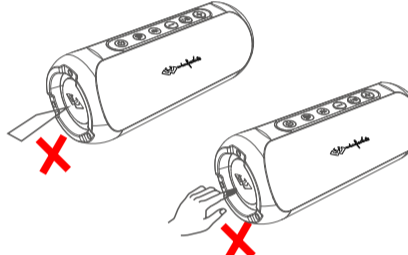

Handle the simple problems.

Pls refer to the following solutions when encountered the problems as follows. If it still has a problem, pls contact local distributor. Do not repair it to prevent electric shock and making a secondary damage on device.

- How to do when no sound from speaker?
 - Check whether the speaker is on.
 - Check whether the battery is charged.
 - Check whether the Aux line is connected.
- How to do when it has distortion of sound at the high volume.
 - Pls check whether battery is out of power or USB cable is OK. Change the USB cable.
 - Pls check whether Aux line is well connected.

Safety regulations.

- Please follow the rules outlined in this guide closely to ensure your safety.
- Be cautious of any edges, uneven surface, metal parts, accessories or packaging to prevent possible injury or damage.
- The device is not edible. Keep out of reach of children.
- Please do not modify, repair or dismantle the product. Incorrect handling may cause short circuit, damage and even fire and it will void the warranty.
- Pls do not clean the speaker's surface by any cleanser or liquid. The device only can be wiped with a clean dry cloth.
- Improper controlling the speaker's volume may affect speaker's sound or causes damage.
- Refrain from dropping, bumping or over pressing the product.
- Please do not use it in hazardous locations (especially in laboratory). The device may cause disturbance on sensitive conditions.
- Should any abnormal situations or problems occur while using this product, discontinue its use immediately.
- Exposing it in the environment of open fire and high temperature may cause a blast.

Warranty card

Item name: _____
 Item model: _____
 Buyer's address: _____
 Seller's address: _____
 Customer support: _____
 phone number: _____
 Purchase date: _____
 Seller's stamp: _____

www.wharfedale.com (+86) 400-8352-778
 Sanecore Science & Technology Industry Park,
 Jiuwei, Xixiang, ShenZhen, China

About product warranty

According to the policy, the warranty is within 12 months of purchase this product. Materials and the defectives are guaranteed but must show purchase voucher (receipt or invoice that shows purchase date, purchase address, product warranty card). Defective product should be packed in original package and sent back to wholesaler. Wholesaler takes charge of repairing defective product or replace new one after checking it. All man-made damage are out of warranty. Warranty does not cover the update of smartphone's WiFi and Bluetooth, data recovery, external damage. Wharfedale will not take the any responsibility of data storage, data loss and data damage in use and shipping. Ineffective products that were confirmed will be sent back to sender and the sender needs to pay for test charge and freight.

功能参数

本产品是一款应用于户外运动和休闲的立体声蓝牙音箱，手机、平板电脑和笔记本等播放设备通过蓝牙连接播放音乐。IPX7级防水，内置可充电锂电池，可以通过DC 5V/1-3A的USB充电器给音箱充电。

1)蓝牙无线传输+Aux in。
 2)额定功率(1%THD): 10W*2。
 3)IPX7级防水。

随机附件

1)USB线*1
 2)说明书*1

蓝牙连接


第一次蓝牙连接时，打开蓝牙设备（如手机、平板电脑、笔记本电脑），开启蓝牙，搜索蓝牙设备，找到本音箱，点击配对连接，如提示密码输入“0000”，显示连接成功后，播放蓝牙设备中的音乐或视频，音箱即可无线播放音乐了。

注意：
 此产品有磁性，请与对磁有敏感的产品保持安全距离。

警告

- 禁止拆解、撞击、挤压或投入火中。
- 如出现严重鼓胀，请勿继续使用。
- 电池浸水后禁止使用，请勿置于高温环境中。
- 用错型号号电池更换会有爆炸危险，务必按照说明处用置完好的电池。
- 本机配备适配器只能用于本机充电，不能用作其它设备充电，以免电压不符烧坏其它设备。


按键与电量灯说明

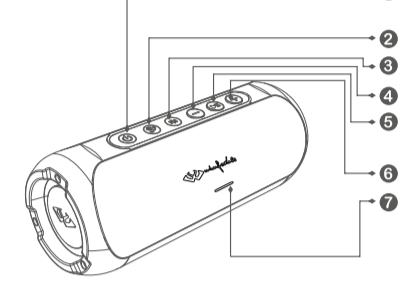

- 开关键：长按约2秒开、关机；短按电量显示。
- TWS：短按进入TWS模式，TWS模式下短按退出TWS。
- 蓝牙：在蓝牙模式下长按约1秒断开已连接设备进入蓝牙搜索状态。
- "-": 短按音量减，长按约1秒上一曲。
- 播放或暂停键：短按播放或暂停，来电时短接接听电话，通话中短接挂断电话；长按约1秒接听来电。
- "+"：短按加大音量，长按约1秒下一曲。
- 电量指示灯（位于网布里面，关机后不可见，开机亮灯可见）：
 - 白色：电量≥75%。
 - 蓝色：电量25%~75%。
 - 红色灯：低电状态，建议要对本设备充电。


反面

产品接口说明

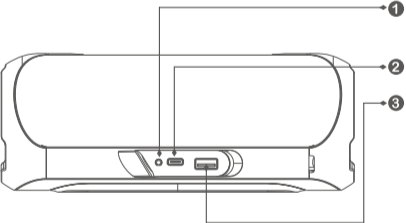

- Aux in：连接笔记本电脑、手机、MP3的3.5mm立体声音频输出孔。
- DC in (5V/1-3A)：通过此Type-C接口，用随机配备的适配器给本设备充电。
- DC out：为手机等便携设备提供应急充电（输出DC 5V/1A）。

注意

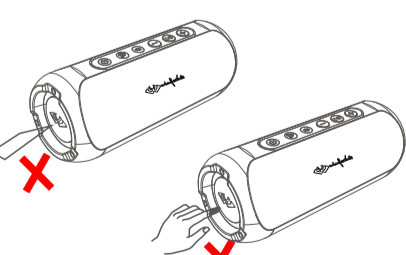

简单问题处理

当您在使用本机遇到下列情况时，请参照以下所述办法解决，若处理仍有故障，请与当地经销商联系，切勿自行修理！防止触电事故或扩大故障范围。

- 音箱无声怎么办？
 - 检查电源是否打开。
 - 检查电池是否有电（充一会电）。
 - 检查Line in线是否连接好。
- 使用时，在大音量时出现失真怎么办？
 - 请检查USB电源、电池是否供电不足，并更换电源。请检查音源是否出现松动，并插好。

安全守册

- 为确保安全，请先仔细阅读及遵守以下的安全守则：
- 任何边缘切割利、不平滑的表面、金属零件、配件或包装均有可能因意外而引致流血或受伤，请务必小心使用。
- 此产品不能食用，请置于儿童不能拿取的地方以避免意外。
- 请勿擅自改装，修理或拆卸本产品。不当的处理可能导致电线短路、产品损坏甚至火灾。曾被擅自打开或改动产品，均会失去保修效力。
- 请勿使用任何清洁剂或液体来清洁扬声器之表面，本产品只可使用干布清洁。
- 不当量控制扬声器的音量（如频繁将音量调整），均有可能影响扬声器的效果，或损害扬声器。
- 请尽量避免跌落、碰撞或过份加压。
- 请勿于危险的环境（特别工作环境如实验室）下使用，本产品可能会对敏感环境造成干扰。
- 如在使用时，发生任何异常现象，请立即停止使用本产品。
- 弃置在明火或高温环境里可能引起爆炸。

保修卡

产品名称：_____
 产品型号：_____
 用户姓名：_____
 用户地址：_____
 销售单位：_____
 售后服务：_____
 购买日期：_____
 销售单位盖章：_____
 深圳市宝安区西乡街道九围先歌科技园
 www.wharfedale.com (热线:400-8352-778)

保修

在尊重法律保障的情况下，产品保修期为：自消费者最初购买日期起12个月。保修涵盖材料和制造瑕疵，并需出示购买凭证（收据或发票显示购买日期、购买地点及产品序列号保修期间，有缺陷的产品应该放置原包装箱中，返还到零售商的售后部门。产品经过鉴定后，负责对有缺陷的产品或者部件进行修复或者更换。所有其他破损不在质保范围之内，保修不涵盖配置于Bluetooth移动手机的产品中的兼容性软件的升级、数据恢复。由于非正常使用造成的外部损坏、因意外、非正常使用或因非授权产品、产品造成的各种损坏。在运输或修理期间，Inshed对数据的储存、丢失或损毁不负任何责任。所有经证实无瑕疵的产品将退回发件人，并向发件人收取修理检测费用和运输费用。》

製品仕様

本製品はアウトドアBluetoothスピーカーで、Bluetooth接続によって、スマートフォン、タブレットとパソコンなどのデバイスから音楽を再生することができます。

IPX7レベル防水、内蔵充電可能リチウム電池、USB充電器 (DC 5V/1-3A) でスピーカーに充電する。

1)Bluetooth無線伝送+Aux in。
 2)消費電力(1%THD): 10W*2。
 3)IPX7レベル防水。

付属品

1)USBケーブル*1
 2)取扱説明書*1

Bluetooth接続


初めて使用する時、デバイスのBluetoothをonにして、使用可能なBluetoothデバイスをサーチして、Exsonスピーカーにペアリングさせる。パスワードを必要とすれば、“0000”を入力してください。接続完了したら、デバイスの音楽をスピーカーで再生することが可能である。

注意：
 本製品が磁気を持ったため、磁気に敏感な製品から遠く離れてください。

注意


- 本製品を解体、衝突、押す、火に捨てることは禁止です。
- 過大な影響が出る場合、続けて使わないでください。
- バッテリーが浸水した後、使用禁止です。高温環境に置かないでください。
- 間違えたバッテリーを取り換えれば、爆発危険の可能性がります。取扱説明書によってバッテリーを処理してください。
- 付属のアダプターは本製品の充電だけに適用する。別のデバイスの充電に使わないでください。デバイスを壊す可能性があります。

ボタンとバッテリー残量のパイロットランプに関する説明

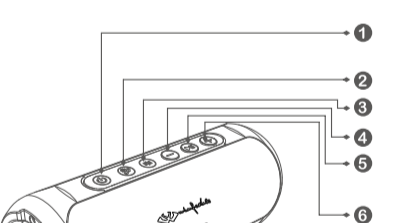


- 電源オン/電源オフ：2秒長押しすると、電源オンまたは電源オフになる。短押しすると、バッテリーの残量を確認する。
- TWS：短押しすると、TWSモードになる。短押ししてTWSモードを停止する。TWSはTrue Wireless Stereo、2台繋げるとケーブル無しでステレオになる。
- Bluetooth：短押しすると、Bluetoothモードになる。“-”：短押しすると、音量が下がる。1秒長押しすると、前の曲に戻る。
- 再生、中止：短押しすると、再生または中止になる。電話がかかってくる時、短押しで電話に回答する。通話中、短押しで電話を切る。1秒長押しで電話に回答しない。
- "+"：短押しすると、音量が上がる。1秒長押しすると、次の曲に行く。
- パイロットランプ(内部に付けられて、電源オフの場合には見られる)：
 - ホワイト：バッテリー残量≥75%。
 - ブルー：バッテリー残量25%-75%。
 - 赤：バッテリー残量が足りないので、バッテリーに充電するのはお薦め。

製品ポートの説明

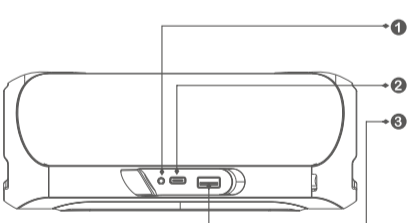

- Aux in：3.5mmステレオオーディオミニジャック：ノートパソコン、スマートフォン、MP3に接続する。
- DC in (5V/1-3A)：付属のアダプターでスピーカーを充電する。
- DC out：携帯電話などのポータブルデバイスに対応充電する(輸出DC 5V/1A)

注意

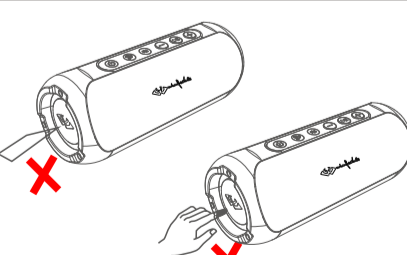

簡単な問題の解決方法

本製品を使用する時、以下のような問題が起こった場合に、次の解決方法をご参考ください。問題が未解決された場合、当地の店舗にご連絡ください。感電や故障範囲拡大を避けるために、勝手に製品を修理しないでください。

- 音がない場合はどうしたら？
 - 電源を入れたかどうかご確認ください。
 - バッテリーの残量があるかどうかご確認ください(充電してください)
 - Auxケーブルがしっかりと繋がっているかどうかご確認ください。
- 大音量の時、音が歪む場合はどうしたら？
 - 電気が足りないので、USB電源ケーブルが問題あるかどうかご確認ください。

安全使用のルール

- 安全確保のため、真面目に安全ルールを読んで、従ってください。
- ヘリの切断面、スラムズではない表面、金属部品、付属品とパッケージによる怪我や出血の可能性があるので、お気をつけてご使用ください。
- 事故を防ぐために、児童が触れない場所に置いてください。
- 勝手に製品を改装、修理、解体しないようにご注意ください。不適切なやりかたは短絡、製品壊し、火事や起こる可能性があります。解体された製品は無料修理が保証されません。
- 洗剤や液体でスピーカーの表面を清潔にしないようにしてください。布だけで拭いてください。
- 不適切に音量を調整することにより、スピーカーの効果を下げる可能性がある。スピーカーが壊れることさえ起こる。
- 製品の転落、衝突と押されることを避けてください。
- 危険な環境(例えば：実験室)使用を避けてください。敏感な環境でスピーカーの使用を避けてください。
- 使用中、異常な現象が起こる場合は製品使用をご中止ください。
- 火気と高温環境に捨てられれば、爆発を起こす可能性があります。

修理保証カード

品名：_____
 モデル：_____
 お取引様の名前：_____
 お取引様の住所：_____
 販売元：_____
 フォーターサービス電話番号：_____
 注文の日付：_____
 販売元の印鑑：_____
 住所：深圳市宝安区西郷九围先歌工業園
 メールアドレス：iagyo@bzsz. iagzgroup. com
 Website: www. wharfedale. com

保証について

法律に基づいて、製品の保証期間は消費者が注文した日から12月である。保証に含まれるのは原材料、欠点である。保証の前提は注文証拠を出せなければなりません。不良品を元のパッケージに入れて、販売元へ発送してください。製品を検査した後、販売元が不良品や壊れた部品を修理、交換した。他の人為原因による故障した製品が保証されない。スマートフォンWiFiとBluetoothの互換性ソフトの更新、データ回復、乱暴な使用による故障と損傷が保証に含まれない。修理中と運送中、Inshedはデータ保存、消失と損害に一切の責任を負わない。検査された欠点のない製品が差出人に発送されて、差出人が検査費用と送料を支払うことになる。

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note 2: 1.Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. The minimum separation generally be used is at least 20 cm.