

WARNING

TO ENJOY A SAFE GAMING ENVIRONMENT

Please use the wall anchor kit that is included with the product.



WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Set up Arcade1UP on a level floor.
- Never allow children to climb or hang on product.
- Always set up an anti-tip device!

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

WARNING: Arcade1UP assumes no liability for improper installation or excessive loads placed on screws or bracket. This wall anchor is not a substitute for proper adult supervision.

Make sure to locate your Arcade1UP on a flat surface

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Game will not turn on.	- Power cord is not plugged into wall outlet. - Wires/Plugs are hooked up incorrectly. - ON/OFF Switch is in the OFF position. - Upload switch on back of monitor is in the OFF position.	- Make sure power cord is plugged into the wall outlet and there is power to that outlet. (Plug other electrical equipment into the power outlet to make sure the outlet normally works.) - Make sure all Wires/Plugs are properly connected and all the way set in as directed in assembly instructions. - Slide ON/OFF Switch located on control deck to the ON position. - Slide upload switch on back of monitor to the ON position.
Game will turn ON, but there is no sound.	- Wires/Plugs were hooked up incorrectly. - Volume Switch is in the OFF position.	- Make sure all Wires/Plugs are properly connected and all the way set in as directed in assembly instructions. - Slide Volume Switch located on control deck to the right. NOTE: Push volume slide switch right to increase volume, left to lower volume.
You hear sound but there is no picture.	- Wires/Plugs were hooked up incorrectly.	- Make sure all Wires/Plugs are properly connected and all the way set in as directed in assembly instructions.
The game screen is frozen.	- The game encountered a problem when processing the data.	- Hold ON/OFF Switch OFF 5 seconds.
Marquee won't light up.	- Marquee power cord is not plugged in at the back of the monitor. - Marquee power cord is plugged into the wrong input.	- Make sure all Wires/Plugs are properly connected and all the way set in as directed in assembly instructions.
The game screen looks pixelated or there are lines running through the image.	- Wires/Plugs were hooked up incorrectly.	- Make sure all Wires/Plugs are properly connected and all the way set in as directed in assembly instructions. - You may need to RESET the game. Turn the ON/OFF switch to the OFF position. Unplug the game from the wall outlet and wait 60 seconds to RESET the game. Plug the game back in and turn the ON/OFF switch back to ON.
One of the buttons on the control deck is stuck in the down position.	- Debris may have gotten between the button and the button housing.	- Take something thin (like a business card) and place it between the button and the button housing and slide it back and forth to loosen the debris.
You are not able to scroll through the games on the game selection menu.	- You may be using the wrong joystick or pressing the incorrect buttons to scroll through the games.	- Look at the game control section in the instruction manual to make sure you are using the correct joystick or pressing the correct buttons to scroll through the game selection menu.
You are able to scroll through the games on the game selection menu, but you can't enter a game to begin playing.	- You may be pressing the wrong button to enter the game.	- Look at the game control section in the instruction manual to make sure you are pressing the correct button to enter the game.
You have entered the game, but you can't get the game to start.	- You may be pressing the wrong button to start the game.	- Look at the game control section in the instruction manual to make sure you are pressing the correct button to start the game.
You have entered the game, but you can't exit the game to get back to game selection menu.	- You may be pressing the wrong button to exit the game. - You may not be holding down the exit button long enough.	- Look at the game control section in the instruction manual to make sure you are pressing the correct button to exit the game. - Make sure you are holding the exit button down for 5 seconds to exit the game.
The control functions that are printed on the control deck do not match the gameplay on the screen for the game you are playing.	- You may be pressing the wrong game control buttons for the game you are playing.	- Look at the game control section in the instruction manual to make sure you are pressing the correct control buttons for that game. - Look at the game control loading screen on the monitor to make sure you are pressing the correct control buttons. (NOTE: The game controls that are printed on the control deck are only for the feature cabinet game. The other games in the cabinet will utilize the same buttons but react differently.)
The game will not let me select 2 or 3 players for a chosen game.	- The game may only be a 1 or 2 player game.	- Refer to the game control section in the instruction manual to see how many players are able to play that game.

OTHER TITLES

Colors, style and decoration may vary.



GOLDEN TEE CLASSIC™ GOLDEN TEE™ GOLDEN TEE 99™ GOLDEN TEE 99™ MORTAL KOMBAT™ MORTAL KOMBAT 2™ ULTIMATE MORTAL KOMBAT 3™ TENENGE MUTANT NINJA TURTLES™ TURTLES IN TIME™ FINAL FIGHT™ FINAL FIGHT™ 2™ THE LOOP MASTER™ GHOSTS 'N GOBLINS™ STRIDER™ FROGGER™ TIME PILOT™ TIME PILOT 84™

visit **ArcaDe1up.com**
TO SIGN UP FOR OUR MAILING LIST AND SEE A COMPLETE LIST OF GAMES

GOLDEN TEE® GOLF, ITS®, INCREDIBLE TECHNOLOGIES®, IT®, and IT Incredible TECHNOLOGIES® are the properties of Incredible Technologies, Inc. All Rights Reserved. © Copyright 2018 Incredible Technologies, Inc. All Rights Reserved. Unauthorized duplication is a violation of applicable law. All other marks are the properties of their respective owners. All Rights Reserved.
MORTAL KOMBAT CLASSIC and all related characters and elements © & ™ Warner Bros. Entertainment Inc. WB GAMES LOGO: TM & © WBEL (s15)
©2020 Viacom International Inc. All Rights Reserved. Nickelodeon, Teenage Mutant Ninja Turtles and all related titles, logos and characters are trademarks of Viacom International Inc.
FINAL FIGHT® ©CAPCOM U.S.A., INC. 1989, 2019 ALL RIGHTS RESERVED. 1944. THE LOOP MASTER ©CAPCOM CO., LTD. 2000, 2019 ALL RIGHTS RESERVED. GHOSTS 'N GOBLINS® ©CAPCOM CO., LTD. 1989, 2019 ALL RIGHTS RESERVED. STRIDER® ©MOTO KIKAKU. ©CAPCOM CO., LTD. 1989, 2019 ALL RIGHTS RESERVED.
This product is manufactured by Tastemakers, LLC under the license from Konami Digital Entertainment. ©Konami Digital Entertainment



The NBA and individual NBA member team identifications reproduced on this product are trademarks and copyrighted designs, and/or other forms of intellectual property, that are the exclusive property of NBA Properties, Inc. and the respective NBA member teams and may not be used, in whole or part, without the prior written consent of NBA Properties, Inc. ©2020 NBA Properties, Inc. All rights reserved.

MADE IN CHINA

REV 01.14.20

AGES 14+

Owners Manual

WARNING

To ensure safe operation of the product, be sure to read this Owners Manual before use. Keep this Owners Manual in a safe place for easy reference when needed.

ARCADE1UP LIVE

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

"ISED RF Radiation Exposure Statement Caution: To maintain compliance with the ISED's RF exposure guidelines, place the product at least 20cm from nearby persons."



CAUTION

Servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

WARNING

READ BEFORE USING THE Arcade1UP

SAFETY PRECAUTIONS

The following symbols are used in labels on the game to draw attention to potentially hazardous situations:

WARNING : Failure to avoid the risk may result in death or serious injury

Electrical Shock Hazard. Disconnect power before removing cover. Should only be done by a qualified technician.

WARNING : To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

1. Please read and comprehend all warnings stated in this manual.
2. Do not get arcade wet when cleaning.
3. Parents and guardians: Please read entire manual before allowing gamer to play.
4. The AC/DC adapter and apparatus shall not be exposed to dripping or splashing and that no object filled with liquids, such as vases, shall be placed on apparatus.
The AC/DC adapter is used as disconnect device.
The AC/DC adapter of apparatus should not be obstructed OR should be easily accessed during intended use. To be completely disconnect the power input, the AC/DC adapter of apparatus shall be disconnected from the mains.
5. If appliance is provided with protective earth terminal, it should be connected to main outlet with a protective earth connection.
6. Minimum distances 10 cm / 3.94 inches around the apparatus for sufficient ventilation.
7. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
8. No naked flame sources such as lighted candles should be placed on the apparatus.
9. The apparatus should only be used in moderate climates.

EPILEPSY WARNING

A very small percentage of individuals may experience epileptic seizures or blackouts when exposed to certain light patterns or flashing lights. Exposure to certain patterns or backgrounds on a television screen or when playing video games may trigger epileptic seizures or blackouts in these individuals. To reduce the risk of such a seizure incident, it is recommended to take a 10-15 minute break at each hour of playing.

FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet that is on a circuit different from the receiver
- Consult the dealer or an experienced radio / TV technician for help.

WARNING: Arcade1UP assumes no liability for improper installation or excessive loads placed on screws or bracket. This wall anchor is not a substitute for proper adult supervision.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Use only with a riser specified by the manufacturer, or sold with the apparatus. When a riser is used, use caution when moving the riser/apparatus combination to avoid injury from tip-over.
15. The equipment shall be used at maximum 95°F (35°C) ambient temperature.

INSTALLATION

This game is designed for indoor and personal use only. It must not be installed outdoors. The following conditions must be avoided.

1. Direct exposure to sunlight, high humidity, direct water contact, dust, high heat, or extreme cold.
2. Vibration. The game must be installed on a level surface.
Do not install in an area such that the game would present an obstacle in case of an emergency (i.e., near fire equipment or emergency exits).

SPECIFICATIONS

POWER SUPPLY: AC/DC Adapter
INPUT POWER: AC100-240V~50/60Hz 1.2A Max
OUTPUT POWER: DC12V=3A
MONITOR: 17" LCD
ASSEMBLED DIMENSIONS: 45.8" x 31.5" x 24.75" (116.33cm x 80cm x 63cm)


ASSISTANCE OR SERVICE

Before contacting us for assistance or service, please check the "Troubleshooting" section in the Owners Manual. If you still have questions regarding your Arcade1Up product or require technical support Contact Arcade1Up Customer Service at www.ArcaDe1up.com and click on "Contact Us".

GAME CONTROLS

*ARCADE MAY TAKE 10-15 SECONDS TO POWER ON AFTER SWITCHING ON

1. SLIDE SWITCH TO RIGHT TO TURN ON
2. MOVE ANY JOYSTICK TO SCROLL THROUGH GAME LIST
3. PRESS ANY BUTTON (EXCEPT LIVE) TO CHOOSE GAME
4. FOLLOW GAME CONTROLS BELOW FOR EACH GAME
5. HOLD PLAYER 1 (5 SECONDS) TO RETURN TO MAIN MENU
6. SLIDE SWITCH TO LEFT TO TURN OFF

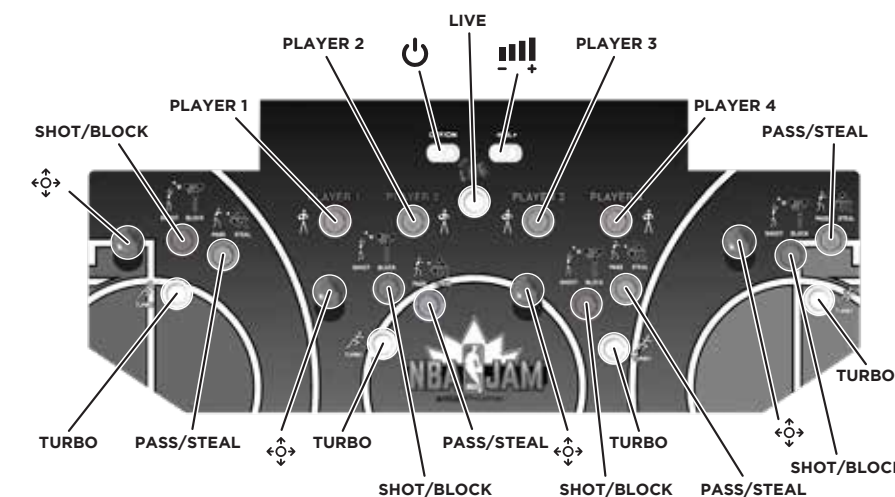

- PRESS "LIVE" BUTTON DURING PLAY THE GAME, YOU CAN CHANGE "AVAILABILITY" & "LEAVE THE GAME".
- PRESS "LIVE" BUTTON IN MAIN MENU, YOU CAN SET UP NETWORK, ACCOUNT & SOCIAL OPTIONS.



ATTENTION / ADVERTENCIA

POUR PROFITER D'UN ENVIRONNEMENT DE JEU SÉCURITAIRE / DISFRUTAR DE UN ENTORNO DE JUEGOS SEGUROS

Veillez utiliser le kit d'ancrage mural fourni avec le produit. Utilice el kit de anclaje de pared que se incluye con el producto.



ATTENTION / ADVERTENCIA

Des blessures par écrasement graves ou mortelles peuvent survenir d'un basculement du produit. Se pueden producir lesiones por aplastamiento graves o fatales por vuelco del aparato.

- Installez l'Arcade1UP au niveau du sol / Coloque Arcade1UP en un suelo plano.
• Ne laissez jamais un enfant escalader ou s'accrocher au produit / No permita que los niños se suban o se cuelguen del producto.
• Installez toujours un dispositif anti-basculement! / Ponga siempre un dispositivo antivuelco!

L'utilisation de dispositifs anti-basculement ne peut que réduire le risque de basculement et non l'éliminer. / Usar barreras antivuelco solamente reduce pero no elimina el riesgo de vuelco.

ATTENTION: Arcade1UP décline toute responsabilité en cas de mauvaise installation ou de surcharge sur les vis ou les équerres. Ce système d'ancrage ne remplace pas la surveillance d'un adulte. / ADVERTENCIA: Arcade1UP no acepta responsabilidades por instalación incorrecta o por cargas excesivas colocadas en tornillos o en soportes. Este anclaje de pared no sustituye a una supervisión adulta adecuada.

Assurez-vous de placer votre Arcade1UP sur une surface plane Asegúrate de ubicar tu Arcade1UP en una superficie plana



RÉPARATION / RESOLUCIÓN DE PROBLEMAS

Table with 3 columns: PROBLÈME / PROBLEMA, CAUSE POSSIBLE / POSIBLE CAUSA, SOLUTION / SOLUCIÓN. Contains troubleshooting steps for various issues like power, volume, and connectivity.



AUTRES TITRES / OTROS TÍTULOS

Les couleurs, modèles et motifs peuvent varier. / Los colores, el estilo y la decoración pueden variar.



Visitez / Vistar Arcade1up.com

POUR VOUS INSCRIRE À NOTRE LISTE DE DIFFUSION ET VOIR UNE LISTE COMPLÈTE DES JEUX / PARA INSCRIBIRSE EN NUESTRA LISTA DE CORREO Y VER UNA LISTA COMPLETA DE JUEGOS.

GOLDEN TEE® GOLF, ITS®, INCREDIBLE TECHNOLOGIES®, ITB et IT Incredible TECHNOLOGIES® sont les propriétés d'Incredible Technologies, Inc. Tous droits réservés.
MORTAL KOMBAT CLASSIC et tous les personnages et éléments associés © & TM Warner Bros. Entertainment Inc.
FINAL FIGHT® © CAPCOM U.S.A., INC. 1989, 2019 TOUS DROITS RÉSERVÉS.

Ce produit est fabriqué par Tastemakers, LLC sous licence de Konami Digital Entertainment.



TASTEMAKERS

Les identifications NBA et de tous membres individuels de l'équipe NBA reproduites sur ce produit sont des marques commerciales et des conceptions protégées par le droit d'auteur, et / ou d'autres formes de propriété intellectuelle, qui sont la propriété exclusive de NBA Properties, Inc. et des équipes membres respectives de la NBA et ne peuvent pas être utilisées, en tout ou en partie, sans le consentement écrit préalable de NBA Properties, Inc.

La NBA y a les identifications individuelles de l'équipe membre de la NBA reproduites en este producto son marcas comerciales y diseños con derechos de autor, y / u otras formas de propiedad intelectual, que son propiedad exclusiva de NBA Properties, Inc. y los respectivos equipos miembros de la NBA y no pueden utilizarse, en su totalidad o en parte, sin el consentimiento previo por escrito de NBA Properties, Inc.

FABRIQUÉ EN CHINE / FABRICADO EN CHINA

REV 01.14.20

ARCADE1UP THE LIVE



ATTENTION

Afin de garantir le bon fonctionnement du produit, veuillez lire le manuel de fonctionnement avant utilisation. Conservez ce manuel dans un endroit sûr afin de pouvoir vous y référer si besoin.

ADVERTENCIA

Para garantizar el funcionamiento seguro del producto, asegúrese de leer este manual de funcionamiento antes de usar. Guarde este manual de funcionamiento en un lugar seguro para tener acceso fácil a referencias cuando las necesite.

Manuel pour le propriétaire / Manual del propietario

14 ANS ET PLUS / EDAD 14+

ATTENTION / ADVERTENCIA

À LIRE AVANT D'UTILISER L'Arcade1UP / LEER ANTES DE USAR EL Arcade1UP

MESURES DE SÉCURITÉ / PRECAUCION DE SEGURIDAD. Les symboles suivants sont utilisés sur les étiquettes du jeu afin d'attirer l'attention sur d'éventuelles situations dangereuses. / Los siguientes símbolos se usan en etiquetas en el juego para llamar la atención sobre situaciones potencialmente peligrosas:

- ATTENTION : Ne pas éviter ce risque peut entraîner la mort ou de graves blessures. ADVERTENCIA: No evitar el riesgo puede resultar en muerte o en lesiones graves.
Risque de décharge électrique. Couper l'alimentation avant de retirer le couvercle.
ATTENTION : Pour réduire le risque d'incendie ou de décharge électrique, n'exposez pas l'appareil à la pluie ou à l'humidité.

- 1. Veuillez lire et comprendre tous les avertissements mentionnés dans ce manuel.
2. Ne réalisez pas la borne lorsque vous l'installez.
3. Parents et tuteurs légaux: Veuillez lire avant de laisser votre enfant jouer.
4. L'adaptateur CACC de l'appareil ne doit pas être exposé aux décharges ou aux débranchements.
5. Si l'appareil est fourni avec une borne de terre de protection, il doit être branché à la prise secteur avec une connexion de terre de protection.
6. La distance minimum pour une ventilation suffisante doit être de 10 cm / 3,94 pouces.
7. L'appareil ne doit pas être installé en recouvrant les sorties d'aération avec des objets tels qu'un journal, une nappe, des rideaux, etc.
8. Aucune source de flamme nue telle que des bougies ne doit être placée sur l'appareil.
9. L'appareil doit être utilisé à des températures modérées.

AVERTISSEMENT CONCERNANT L'ÉPILEPSIE / AVERTENCIA DE EPILEPSIA

Un petit nombre de personnes peuvent être sujettes à des crises d'épilepsie ou à des pertes de connaissance lorsqu'elles sont exposées à certains motifs lumineux ou lumières clignotantes. Une exposition à certains motifs ou à certains plans sur un écran de télévision ou dans des jeux vidéo peut déclencher des crises d'épilepsie ou des pertes de connaissance chez ces individus.

ATTENTION / ADVERTENCIA

Le remède des meubles peut provoquer des blessures par écrasement graves ou mortelles. Pour éviter les renversements / Se pueden producir lesiones por aplastamiento graves o fatales a causa de la caída de los muebles. Para evitar el vuelco:
• Installez Arcade1UP sur un sol nivelé.
• Ne laissez jamais les enfants grimper ou accrocher à Arcade1UP en un piso nivelado.

DÉCLARATION FCC / DECLARACIÓN DE LA COMISIÓN FEDERAL DE COMUNICACIONES

Cet appareil répond à la partie 15 de la réglementation FCC. Le fonctionnement est soumis aux deux conditions suivantes: (1) Cet appareil ne doit pas causer de brouillage indésirable. (2) Cet appareil doit tolérer tout interférence reçue, y compris des interférences provenant des communications par radio. Si embargo, no hay garantía de que no se produzcan interferencias en una instalación específica.

Avertissement : Des changements ou des modifications apportés à cet appareil et non approuvés expressément par le partie responsable de la conformité peuvent entraîner la révocation de l'autorisation d'utilisation de l'appareil. / ADVERTENCIA: Los cambios o las modificaciones a esta unidad que no estén expresamente aprobados por la parte responsable del cumplimiento pueden invalidar la autorización del usuario de manejar el equipo.

Cet équipement a été testé et a été conforme aux limites de l'appareil numérique de Classe B, conformément à la partie 15 de la réglementation FCC. Ces limites ont été pondérées pour offrir une protection contre les interférences indésirables dans une installation résidentielle.
ATTENTION / ADVERTENCIA: Este equipo genera, usa y puede radiar energía de radiofrecuencia y si no se instala ni se usa de conformidad con las instrucciones, puede causar interferencias perjudiciales para las comunicaciones por radio.

- Reorientez ou déplacez l'antenne de réception / Reorientar o recolocar la antena receptora
• Éloignez l'équipement du récouver / Aumente la separación entre el equipo y el receptor
• Branchez l'équipement à une prise qui se trouve sur un circuit différent de celui du récouver / Conecte el equipo a un enchufe que esté en un circuito diferente del receptor



ATTENTION / ADVERTENCIA

ATTENTION: Arcade1UP décline toute responsabilité en cas de mauvaise installation ou de surcharge sur les vis ou les équerres. Ce système d'ancrage ne remplace pas la surveillance d'un adulte. / ADVERTENCIA: Arcade1UP no acepta responsabilidades por instalación incorrecta o por cargas excesivas colocadas en tornillos o en soportes. Este anclaje de pared no sustituye a una supervisión adulta adecuada.

INSTRUCTIONS IMPORTANTES DE SÉCURITÉ / IMPORTANTES INSTRUCCIONES DE SEGURIDAD

- 1. Lisez ces instructions. / Lea estas instrucciones.
2. Conservez ces instructions. / Guarde estas instrucciones.
3. Tenez compte des avertissements. / Preste atención a todas las advertencias.
4. Suivez toutes les instructions. / Siga todas las instrucciones.
5. N'utilisez pas cet appareil à l'approche d'une source d'eau.
6. Nettoyez uniquement avec un chiffon sec. / Limpie solamente con un trapo seco.
7. N'obstruez pas les sorties d'aération.
8. N'installez pas à proximité de sources de chaleur telles que des radiateurs, des registres de chaleur, des cuisinières ou d'autres appareils (dont des amplificateurs) qui produisent de la chaleur.
9. N'utilisez pas à l'approche des objets de sécurité de la fiche polarisée ou de terre.
10. Protégez le câble d'alimentation du plâtrisme ou des pinçements, notamment au niveau des fiches, des prises de courant, et du point où il sort de l'appareil.
11. Vérifiez que le câble de commande de ce jeu se place sur des pinces spécialement en les encloués, les recaptuchés et / ou le point en qui salen del aparato.
12. Débranchez cet appareil en cas d'urgence ou de non-utilisation prolongée.
13. Corriger toute réparation à la personnel qualifié.
14. Utilisez uniquement avec une colonne montante spécifiée par le fabricant ou vendue avec l'appareil.
15. L'équipement doit être utilisé à une température ambiante maximale de 35 ° C (95 ° F).

INSTALLATION / INSTALACIÓN

Ce jeu doit être utilisé en intérieur et à des fins privées uniquement. Il ne doit pas être installé à l'extérieur. Les situations suivantes doivent être évitées. / Este juego está diseñado solamente para uso interior y personal. No se debe instalar en el exterior. Se deben evitar las siguientes condiciones.

SPÉCIFICATIONS / ESPECIFICACIONES

ALIMENTATION ÉLECTRIQUE: Adaptateur CACC
FUENTE DE ENERGÍA: Adaptador CACC
PUISANCE D'ENTRÉE / POTENCIA DE ENTRADA: AC 100-240V, 50/60Hz 1.2A Max
PUISANCE SORTIE: DC 12V 253A
POTENCIA DE SALIDA: DC 12V 253A
ÉCRAN: 43,18 cm (17 PO) ACL
MONITOR: 17" (43,18 cm) LCD
DIMENSIONS LINES FOIS ASSEMBLÉE: 116,33 x 80 x 57,80 cm (45,8 x 31,5 x 22,75 po)
DIMENSIONS MONTADAS: 45,8" x 31,5" x 22,75" (116,33 x 80 x 57,80 cm)

ASSISTANCE OUR RÉPARATION / ASISTENCIA O REPARACIÓN

Avant de nous contacter pour une assistance ou un service, veuillez consulter la section "Dépannage" du manuel d'utilisation. Si vous avez encore des questions concernant votre produit Arcade1Up ou si vous avez besoin d'assistance technique, contactez le service clientèle d'Arcade1Up à l'adresse www.Arcade1Up.com ou cliquez sur "Contactez-nous".



ARCADE1UP THE LIVE

Cet appareil contient des émetteurs / récepteurs exemptés de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada. Son fonctionnement est soumis aux deux conditions suivantes:
1. Cet appareil ne doit pas provoquer d'interférences.
2. Cet appareil doit accepter toute interférence, y compris les interférences pouvant entraîner un fonctionnement indésirable de l'appareil.

Este dispositivo contiene transmisores / receptores exentos de licencia que cumplen con los RSS (s) exentos de licencia de Innovación, Ciencia y Desarrollo Económico de Canadá. La operación está sujeta a las siguientes dos condiciones:
1. Este dispositivo no puede causar interferencia.
2. Este dispositivo debe aceptar cualquier interferencia, incluida la interferencia que pueda causar un funcionamiento no deseado del dispositivo.

"Déclaration sur l'exposition aux radiations ISED RF Attention: Pour maintenir la conformité avec les directives d'exposition RF de ISED, placez le produit à au moins 20 cm des personnes à proximité."

"Declaración de exposición a la radiación de ISED RF Precaución: para mantener el cumplimiento de las pautas de exposición a RF de ISED, coloque el producto al menos a 20 cm de personas cercanas."

ATTENTION

Les instructions concernant l'entretien du produit sont réservées exclusivement au personnel d'entretien qualifié. Afin de réduire les risques de choc électrique, n'effectuez aucun autre entretien que celui qui est décrit dans le mode d'emploi, à moins d'être qualifié pour le faire.

ADVERTENCIA


Las instrucciones de servicio son para uso exclusivo del personal de servicio calificado. Para reducir el riesgo de descarga eléctrica, no realice ningún servicio que no sea el contenido en las instrucciones de funcionamiento a menos que esté calificado para hacerlo.



COMMANDES DU JEU / CONTROLES DE JUEGO

*LA BORNE ARCADE PEUT METTRE 10 à 15 SECONDES à S'ALLUMER APRÈS AVOIR POSITIONNÉ LE COMMUTATEUR SUR ON / *ARCADE PUEDE TARDAR 10 - 15 SEGUNDOS EN ARRANCAR DESPUÉS DE ENCENDERLO

- 1. COMMUTATEUR DE GLISSEMENT à DROITE POUR ALLUMER / INTERRUPTOR DESLIZANTE A LA DERECHA PARA ENCENDER
2. DÉPLACER N'IMPORTE QUEL JOYSTICK POUR DÉFILER à TRAVERS LA LISTE DES JEUX / MOVER CUALQUIER JOYSTICK PARA DESPLAZARSE POR LA LISTA DE JUEGOS
3. APPUYEZ SUR N'IMPORTE QUEL BOUTON (SAUF VIVRE) POUR CHOISIR LE JEU / PRESIONE CUALQUIER BOTÓN (EXCEPTO VIVIR) PARA ELEGIR EL JUEGO
4. SUIVEZ LES COMMANDES DE JEU CI-DESSOUS POUR CHAQUE JEU / SIGA LOS CONTROLES DEL JUEGO A CONTINUACIÓN PARA CADA JUEGO
5. MAINTIEN LE JOUEUR 1 (5 SECONDES) POUR RETOURNER AU MENU PRINCIPAL / SOSTENGA AL JUGADOR 1 (5 SEGUNDOS) PARA VOLVER AL MENU PRINCIPAL
6. COMMUTATEUR DE GLISSEMENT à GAUCHE POUR ÉTENDRE / INTERRUPTOR DESLIZANTE A LA IZQUIERDA PARA APAGAR

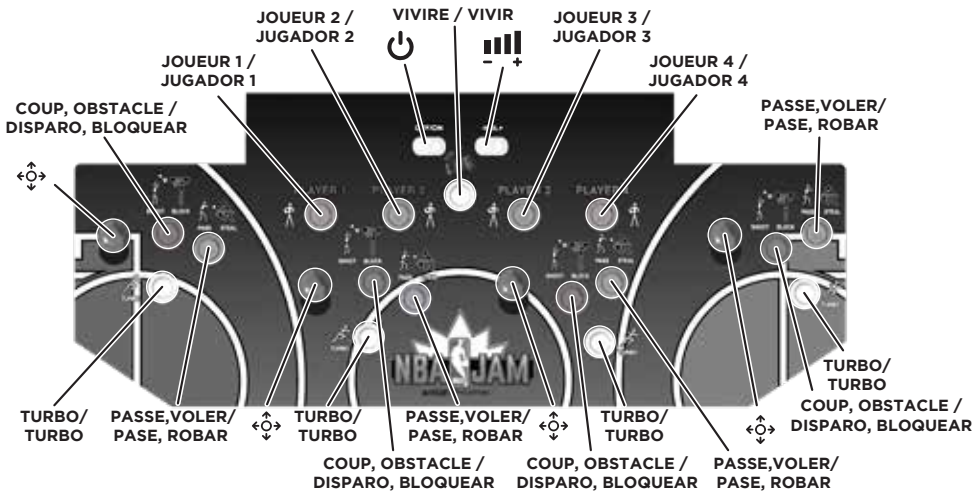

- APPUYEZ SUR LE BOUTON "VIVRE" PENDANT LE JEU, VOUS POUVEZ MODIFIER "DISPONIBILITÉ" ET "QUITTER LE JEU" / PRESIONE EL BOTÓN "EN VIVO" DURANTE EL JUEGO, PUEDE CAMBIAR LA "DISPONIBILIDAD" Y "DEJAR EL JUEGO".
- APPUYEZ SUR LE BOUTON "VIVIR" DANS LE MENU PRINCIPAL, VOUS POUVEZ CONFIGURER LES OPTIONS RÉSEAU, COMPTE ET SOCIAL / PRESIONE EL BOTÓN "EN VIVO" EN EL MENU PRINCIPAL, PUEDE CONFIGURAR LA RED, LA CUENTA Y LAS OPCIONES SOCIALES.

