

FRONT

MODE D'EMPLOI:

1. Bras du plateau tournant - utilisez-le pour allumer/éteindre l'appareil.
2. Lorsqu'il est allumé, le plateau tourne.
3. Tournez le bouton de commande supérieur pour basculer entre Bluetooth^{MD}, sortie audio et carte SD. Une invite vocale "Bluetooth^{MD} Mode" sera entendue en mode Bluetooth^{MD}. Allumez l'appareil compatible que vous souhaitez connecter et recherchez "BT SPEAKER" pour l'appairage. Un son "Ta-Da" sera entendu une fois jumelé avec succès.
4. Ajustez le bouton de volume à l'avant de l'appareil pour augmenter ou diminuer le volume.
5. Appuyez une fois sur le bouton avant pour passer à la chanson suivante, deux fois pour lire la chanson précédente. Appuyez et maintenez pendant quelques secondes pour mettre en pause.
6. Pour lire à partir de la fente pour carte SD, insérez une carte SD dans la fente à l'arrière avec des fichiers MP3 dessus.
7. Le voyant d'alimentation à l'arrière de l'appareil indiquera si l'appareil est allumé ou éteint.
8. Pour charger l'article, branchez le câble USB inclus dans le port de charge à l'arrière de l'appareil et connectez-le à une prise USB compatible.

CARACTÉRISTIQUES:

Modèle de produit: UO-BTSPPTT	Haut-parleur: 10mm, 4Ohms, 5W
Taille du produit: 112,4 x 105 x 57mm	Entrée: CC 5V1A
Poids du produit: 250g	Portée: 10M
Capacité de la batterie: 3,7V, 1,000 mAh	
Temps de charge: 2-3 heures	

DIRECTIVES DE SÉCURITÉ:

Veuillez lire attentivement les instructions avant d'utiliser l'appareil pour la première fois et conservez-les pour référence.


- Gardez l'appareil à l'écart de la chaleur et des flammes nues.
- N'insérez pas d'objets pointus ou métalliques dans l'appareil.
- Ce produit ne peut pas être réparé et ne doit pas être ouvert par l'utilisateur final.
- Si le produit surchauffe, arrêtez immédiatement de l'utiliser.
- N'utilisez pas le produit s'il est tombé dans l'eau.
- Si vous devez acheter un câble de charge USB de remplacement, assurez-vous que il est certifié CCC et répond aux exigences des unités.

ENTRETIEN DE LA BATTERIE INTERNE:

- Chargez complètement le produit avant de l'utiliser pour la première fois.
- N'insérez pas d'objets pointus ou métalliques dans l'appareil.
- Ne surchargez pas l'appareil. Charger pendant plus de 2-3 heures à la fois raccourcir la durée de vie de la batterie.
- Si le produit n'est pas utilisé pendant des périodes prolongées, la batterie peut perdre sa charge.
- Utilisez un adaptateur 5V DC standard ou un câble USB compatible pour charger l'élément. En utilisant toute autre chose peut endommager l'article.
- Lorsque l'enceinte est complètement chargée, le voyant lumineux passe du rouge au bleu.

ACCESSOIRES:

- 1 Haut-parleur
- 1 Câble de chargement USB
- 1 Câble audio
- 1 Manuel d'instructions

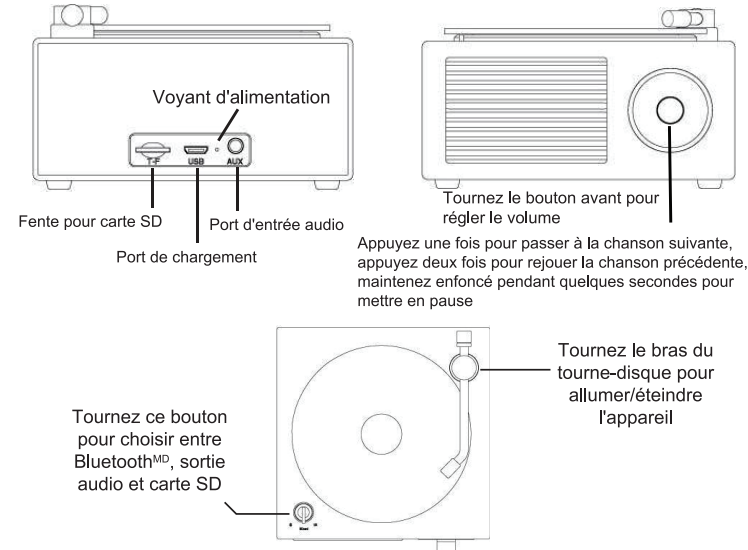

Bluetooth speaker MANUAL



MANUEL DE L'ENCEINTE DE LA PLATINE VINYLE

BACK

OPERATING INSTRUCTIONS:

1. Turntable Arm - use this to turn the unit on/off.
2. When turned on, the platter will rotate.
3. Turn the top control knob to switch between Bluetooth™, audio output and SD card. A "Bluetooth™ mode" voice prompt will be heard when in Bluetooth™ mode. Turn on the compatible device you want to connect and search "BT SPEAKER" for pairing. A "Ta-Da" sound will be heard when paired successfully.
4. Adjust the volume knob on the front of the unit to turn the volume up or down.
5. Press the front knob once to skip to the next song, twice to play the previous song. Press and hold for a few seconds to pause.
6. To play from the SD card slot, insert an SD card into the slot on the rear with MP3 files on it.
7. The power indicator light on the back of the unit will show if the unit is on or off.
8. To charge the item, plug the included USB cable into the charging port on the back of the unit and connect to a compatible USB outlet.

SPECIFICATIONS:

Product Model: UO-BTSPTT
Product Size: 112.4 x 105 x 57mm
Product Weight: 250g
Battery Capacity: 3.7V, 1000mAh
Charging Time: 2-3 hours
Speaker: 10mm, 4 Ohms, 5W
Input: DC 5V1A
Range: 10M

SAFETY GUIDELINES:

Please read the instructions carefully before using the unit for the first time and keep them for reference.


- Keep the unit away from heat and open flames.
- Do not insert sharp objects or metal into the unit.
- This product cannot be repaired and should not be opened by the end user.
- If the product overheats stop use immediately.
- Do not use the product if it has fallen into water.
- If you need to purchase a replacement USB charging cable please be certain that it is CCC certified and meets the units requirements.

CARING FOR THE INTERNAL BATTERY:

- Charge the product fully before using it for the first time.
- Do not insert sharp objects or metal into the unit.
- Do not overcharge the unit. Charging for more than 2-3 hours at a time will shorten the battery life.
- If the product is not used for prolonged periods of time, the battery may lose its charge.
- Use a standard 5V DC adapter or compatible USB cable to charge the item. Using anything else can damage the item.
- When the speaker is fully charged, the indicator light will switch from red to blue.

ACCESSORIES:

- 1 Speaker
- 1 USB Charging Cable
- 1 Audio Cable
- 1 Instruction Manual

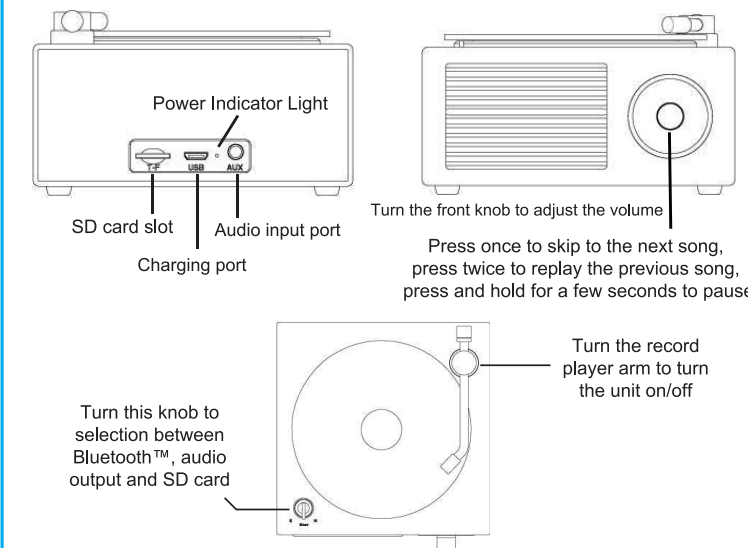

FCC Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Compliance

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.