

PetTec

Remote Vibra Trainer Advance 2.0

Ferntrainer mit Vibration



TEACH
YOUR **DOG**

For a rewarding
relationship



JETZT GEHT'S LOS....

Vielen Dank, dass Sie sich für unser Produkt entschieden haben. Der PetTec Remote Vibra Trainer Advance 2.0 ist eine ganz neue effektive Hilfe, um Ihren Hund schonend zu erziehen.

Sicherheitshinweise

Für die sichere Inbetriebnahme des PetTec Remote Vibra Trainer Advance 2.0 beachten Sie bitte folgende Hinweise.

- Unsere Produkte sind ausschließlich für das Training mit Hunden ausgelegt.
- Nur für gezielte Trainingseinheiten (1-2 Std./Tag) und nicht für den Dauereinsatz geeignet.
- Außerhalb der Reichweite von Kindern aufbewahren.
- Zur Sicherheit vermeiden Sie, dass Ihr Hund mit dem Trainer schwimmen geht. Das Gewicht oder die Vibration könnte das Schwimmvermögen ihres Hundes beeinflussen.
- Die Geräte nicht selbstständig aufschrauben.

Lieferumfang

PetTec Remote Vibra Trainer Advance 2.0 mit Hundehalsband

Fernbedienung

Handschlaufe für Fernbedienung

Ladekabel für Trainer und Fernbedienung

Bedienungsanleitung



Übersicht Fernbedienung

- 1 LED Statusanzeige
- 2 LCD-Display zur Funktionsübersicht
- 3 Auswahl des Trainers (maximal zwei Geräte)
- 4 Einstellbare Vibrationsstärke (16 Stufen)
- 5 Unterschiedliche Tastenoberflächen für intuitive Bedienung
- 6 Antenne
- 7 Ladeanschluss mit gummiertem Verschluss
- 8 Öffnung für Handschlaufe



Übersicht Trainer

- 1 Halsband
- 2 Festverbaute Kontaktstellen
- 3 Ladeanschluss mit gummiertem Verschluss
- 4 Taste zum Ein- und Ausschalten





TECHNISCHE DATEN

Features

- ✔ 600m Reichweite

✔ Bis zu 10 Tage Akkulaufzeit
- ✔ Zusätzliches Tonsignal

✔ 16 Vibrationsstufen
- ✔ IPX7 wasserdicht

✔ Erweiterbar um 2. Halsband*

Fakten

	Trainingshalsband	Fernbedienung
Maße	3,4 x 7,6 x 3 cm	15 x 4,9 x 2,2 cm
Gewicht	109g	80g
Halsbandlänge	22 - 67 cm	

*2 Hunde mit einer Fernbedienung trainierbar.

INBETRIEBNAHME



Fernbedienung

Das Display sowie die Hintergrundbeleuchtung der Fernbedienung werden eingeschaltet, sobald eine der Tasten betätigt wird. Anschließend ist die Hintergrundbeleuchtung für 30 Sekunden aktiv und erlischt, wenn keine weitere Nutzung erfolgt. Wird die Fernbedienung für weitere 5 Minuten nicht genutzt, schaltet sich das komplette Display aus und die Fernbedienung befindet sich im Energiesparmodus. Bei erneutem betätigen einer Taste ist die Fernbedienung sofort wieder einsatzbereit.

Trainer

Durch Betätigen der Ein/Aus Taste (ca. drei Sekunden) beginnt die LED grün zu blinken. Im Normalfall leuchtet die LED einmal alle fünf Sekunden auf und signalisiert die Empfangsbereitschaft.

Durch erneutes Bestätigen der Ein/Aus Taste (ca. drei Sekunden) wird der Trainer ausgeschaltet. Der Trainer befindet sich im ausgeschalteten Zustand sobald das rote LED Licht erlischt.

Anwendung

1 Trainer Wechselschalter (1 / 2)

Der Wechselschalter erlaubt dem Nutzer zwischen zwei verschiedenen Trainern auszuwählen. Es können somit zwei Trainer mit einer Fernbedienung genutzt werden.

2 Tonsignaltaste (obere Taste „TONE“)

Gibt einen hörbaren Ton wieder. Es wird kein Vibrationssignal übermittelt.

3 Vibrationstaste (mittlere Taste „VIBRA“)

Durch Betätigen der Vibrationstaste wird mit Hilfe der Kontaktstellen ein Vibrationssignal übermittelt. Die Intensität des Vibrationssignals wird durch die Einstellungstasten manuell festgelegt. Die Vibrationstaste kann für maximal 10 Sekunden am Stück betätigt werden, anschließend pausiert der Trainer für fünf Sekunden. Erst danach ist ein erneutes Auslösen des Vibrationssignals durch Drücken der Vibrationstaste wieder möglich. Die Vibrationsstärke wird durch die Auf- und Abtasten um

4 jeweils eine Stufe eingestellt (▲ ▼).

5 Vibrations-/Tonsignaltaste (untere Taste „DUAL“)

Durch Betätigen dieser Taste wird gleichzeitig ein Vibrations- wie auch Tonsignal übermittelt.


PetTec-Tipp:

Zum Verbinden eines zweiten Trainers den Wechselschalter bitte auf 2 stellen und den zu verbindenden Trainer einschalten. Durch gleichzeitiges Drücken der Tonsignal- und Vibrationstaste verbindet sich der neue Trainer mit der Fernbedienung. **Mehr dazu finden Sie auf Seite 14.**



Anbringung des Halsbandes

Das Halsband muss fest angelegt werden, sodass die Kontaktstellen eng am Hund anliegen und die Vibrations Signale effektiv übertragen werden können. Die richtige Anbringung des Halsbandes können Sie testen, indem Sie prüfen, ob noch ein bis zwei Finger unter das Halsband passen. Die priorisierte Position des Trainers ist direkt unter der Schnauze des Hundes.

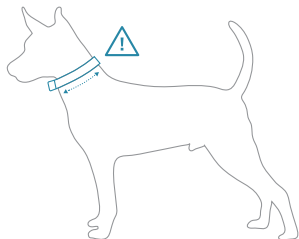

Bitte achten Sie darauf, dass das Halsband nicht zu eng sitzt, da der Hund sonst Probleme mit der Atmung bekommt. Ebenso darf das Halsband nicht verrutschen, da sonst das Vibrations signal ineffektiv wird.

Individuell geeignete Vibrationsstufen

Der PetTec Remote Vibra Trainer Advance 2.0 bietet 16 verschiedene Vibrationsstufen, dabei ist Stufe 1 das schwächste Signal und Stufe 16 das stärkste. Das passende Vibrations signal für Ihren Hund ist abhängig vom Temperament und der Empfänglichkeit für Vibrationen. Deshalb starten Sie immer mit dem schwächsten Vibrations signal und arbeiten sich nach oben, bis Sie die passende Vibrationsstärke gefunden haben.

Ihr Hund zeigt eine leichte Reaktion, wenn das passende Vibrations signal gefunden wurde. Eine dieser Reaktionen kann zum Beispiel durch die Anspannung der Nacken muskulatur ersichtlich werden. Bleibt das Vibrations signal unbemerkt, ist eine höhere Stufe notwendig.

Maximale Reichweite

Der PetTec Remote Vibra Trainer Advance 2.0 kann Trainings signale über 600m übermit teln. Die Reichweite kann je nach Umgebung abweichen. Um die Reichweite zu maximie ren, kann die Fernbedienung in die Höhe gehalten werden.

Display und LED Benachrichtigungen



Gibt die jeweilige Vibrationsintensität an, welche von 1 – 16 variieren kann.




Gibt den derzeit aktiven Trainer an.



Gibt den aktuellen Akkustand an. Signal fängt an zu blinken, wenn der Akkustand sehr niedrig ist.

LED Benachrichtigungen der Fernbedienung

Taste	Funktion	Bedeutung der LED
TONE		Gibt ein hörbares Tonsignal wieder.
VIBRA		Überträgt ein Vibrationssignal, welches mit Hilfe der Fernbedienung festgelegt wird.
DUAL		Kombiniert die Trainingssignale Vibration und Ton.
TONE und VIBRA gleichzeitig drücken	Verbindet die Fernbedienung mit einem Trainer.	Rotes LED Licht leuchtet als Benachrichtigung solange die Taste gedrückt wird.

LED Benachrichtigungen des Trainers

Trainer Funktionen	Grüne LED Benachrichtigungen
Einschalten	Blinkt einmalig
Normale Bedienung – guter Akkuzustand	Blinkt alle fünf Sekunden
Tonsignal	Leuchtet solange die Taste gedrückt wird
Dual-Signal	Blinkt fünf Mal innerhalb von drei Sekunden
Synchronisationsmodus	Blinkt sekundenweise für 16 Sekunden
Synchronisation abgeschlossen	Blinkt fünf Mal hintereinander
Akku geladen	Blinkt bis das Ladekabel entfernt wird

Trainer Funktionen	Rote LED Benachrichtigungen
Ausschalten	Leuchtet für drei Sekunden auf
Normale Bedienung – niedriger Akkuzustand	Blinkt schnell auf
Vibrationssignal	Leuchtet solange die Taste gedrückt wird
Laden	Leuchtet solange der Akku geladen wird

Laden der Akkus


1. Laden Sie den Akku beider Geräte vor der ersten Anwendung vollständig auf.
2. Laden Sie den Akku nicht in der Nähe von brennbaren Substanzen auf.
3. Der Akku beider Geräte muss komplett aufgeladen werden, wenn die letzte Nutzung schon über drei Monate zurückliegt.

Der Akku muss aufgeladen werden, wenn:

1. die Kontrollleuchte auf dem Trainer rot blinkt.
2. die Batterieanzeige auf der Fernbedienung nur noch einen Balken statt drei Balken anzeigt.
3. die Kontrollleuchte auf der Fernbedienung oder auf dem Trainer nicht aufleuchtet.
4. die Kontrollleuchte auf der Fernbedienung oder auf dem Trainer nur bei Betätigung einer der Eingabetaste aufleuchtet.

Wichtiger Hinweis:

Die Fernbedienung und der Trainer sind nur teilweise aufgeladen, wenn diese versendet werden. Die erste vollständige Akkuladung dauert bis zu 4 Stunden.

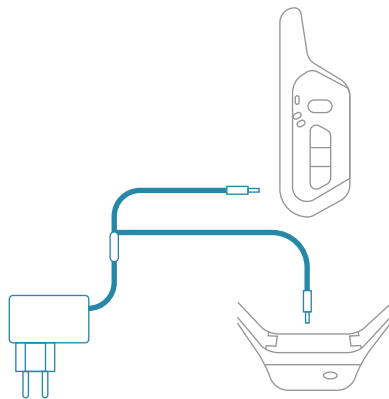

Fernbedienung und Trainer aufladen

Laden Sie die Fernbedienung und den Trainer mit Hilfe des Ladekabels vollständig auf, bis die Ladenbalken auf der Fernbedienung voll sind bzw. die LED auf dem Trainer dauerhaft grün leuchtet. Solange keiner von beiden Fällen eingetroffen ist, sind die Geräte nicht vollständig geladen.

Öffnen Sie dazu die Gummiabdeckung auf der Rückseite der Fernbedienung bzw. des Trainers und stecken Sie den Ladestecker in die vorgesehene Öffnung. Schließen Sie anschließend den USB-Anschluss an den Adapter und stecken Sie das Ladegerät in eine Steckdose. Eine volle Ladephase dauert ungefähr 2 Stunden.

Verbinden von Fernbedienung und Trainer

Wenn die Fernbedienung und der Trainer nicht mehr miteinander kommunizieren, sodass bei Betätigung der Tasten auf der Fernbedienung keine Reaktion vom Trainer erfolgt, müssen diese wie folgt neu verbunden werden.

1. Schalten Sie den Trainer aus und erneut wieder an. Halten Sie die Taste solange gedrückt, bis die Kontrollleuchte sekundlich für 16 Sekunden am Stück aufleuchtet. In diesen 16 Sekunden befindet sich der Trainer im Verbindungszustand.
2. Innerhalb dieses Zeitfensters drücken und halten Sie gleichzeitig die Ton- wie auch die Vibrationstaste auf der Fernbedienung, bis die Kontrollleuchte auf der Fernbedienung 5-mal grün aufleuchtet. Danach ist die Fernbedienung erfolgreich mit dem Trainer verbunden.

Verbinden eines zweiten Trainers

1. Legen Sie den Schalter zur Auswahl der Trainer auf der Fernbedienung von 1 auf 2.
2. Schalten Sie den zu verbindenden Trainer ein und drücken Sie entweder die Ton- oder Vibrationstaste, um die Verbindung zu prüfen.
3. Wenn die beiden Geräte nicht miteinander kommunizieren, müssen Sie die Fernbedienung und den Trainer wie zuvor beschrieben verbinden.

RICHTIGES HUNDETRAINING

Eine gute Hundeerziehung ist der Schlüssel für ein harmonisches Zusammenleben von Hund und Mensch. Doch häufig stoßen Hundehalter bei der Erziehung ihrer Vierbeiner an die eigenen Grenzen.

Der Remote Vibra Trainer Advance 2.0 ist eine schonende Hilfe für Ihr Hundetraining, um Ihrem Liebling effektiv ungewünschte Verhaltensweisen abzugewöhnen. Mit dem Remote Vibra Trainer Advance 2.0 können Sie auch aus der Ferne direkt eingreifen und somit unmittelbar auf das Fehlverhalten reagieren. Die meisten Hunde stellen bereits nach nur

ein- bis zweimaligem Einsatz des Trainers dieses Verhalten dauerhaft ein.

Bitte beachten Sie, dass der Trainer ein Trainingsgerät und kein Spielzeug ist, welches stets bedacht eingesetzt werden sollte. Daher möchten wir Sie an dieser Stelle bitten, folgende Ratschläge zu berücksichtigen:

Vor dem Training

1. Stellen Sie sicher, dass das Fehlverhalten des Hundes nicht auf mangelnde körperliche Aktivität oder gesundheitliche Probleme zurückzuführen ist! In diesem Fall verzichten Sie bitte auf den Einsatz des Trainers und suchen sich professionellen Rat.
2. Gewöhnen Sie Ihren Hund an das Trainer-Halsband, bevor Sie es einschalten
3. Zur Sicherheit vermeiden Sie, dass Ihr Hund mit dem Trainer schwimmen geht. Das Gewicht oder die Vibration könnte das Schwimmvermögen Ihres Hundes beeinflussen. Falls der Trainer nass wird, einfach trocknen lassen. Bitte keinesfalls nach dem Kontakt mit Wasser die Gummiaabdeckung des Ladeanschlusses öffnen, um zu verhindern, dass Feuchtigkeit in den Trainer gelangt!

Im Training

1. Nehmen Sie den Trainer bei verstörtem Verhalten Ihres Hundes sofort ab!
2. Setzen Sie den Trainer stets kontrolliert ein. Wie im normalen Training gilt es, gezielt klare Kommandos zu geben. Ihr Hund muss natürlich diese erst erlernen, um entsprechend darauf reagieren zu können.
3. Trainieren Sie maximal 1-2 Stunden pro Tag mit Ihrem Hund. Nehmen Sie den Trainer nach jedem Training ab und schalten ihn aus.
4. Belohnen Sie Ihren Hund stets nach erfolgreichen Trainingsdurchläufen

KUNDENSERVICE

Konformitätserklärung

Hiermit erklärt die Ströer Products GmbH, dass die in dieser Bedienungsanleitung beschriebene Funkanlage Remote Vibra Trainer Advance 2.0 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:



<https://support.pettec.de/hc/de/categories/360000050209-FAQ-Vibra-Trainer>



Konformitätserklärung (siehe Kapitel „Konformitätserklärung“): Mit diesem Symbol gekennzeichnete Produkte erfüllen alle anzuwendenden Gemeinschaftsvorschriften des Europäischen Wirtschaftsraums.



Dieses Symbol bescheinigt, dass die elektromagnetische Störausstrahlung des Geräts unter dem von der US-amerikanischen Federal Communications Commission genehmigten Grenzwert liegt.

ENTSORGUNG

Verpackung entsorgen



Entsorgen Sie die Verpackung sortenrein:

- Pappe und Karton zum Altpapier
- Folien in die Wertstoffsammlung

Gerät entsorgen

(Anwendbar in der Europäischen Union und anderen europäischen Staaten mit Systemen zur getrennten Sammlung von Wertstoffen)



Altgeräte dürfen nicht in den Hausmüll!

Sollte Ihr GPS Tracker einmal nicht mehr benutzt werden können, so ist jeder Verbraucher **gesetzlich verpflichtet, Altgeräte getrennt vom Hausmüll**, z. B. bei einer Sammelstelle seiner Gemeinde/seines Stadtteils, abzugeben. Damit wird gewährleistet, dass Altgeräte fachgerecht verwertet und negative Auswirkungen auf die Umwelt vermieden werden. Deswegen sind Elektrogeräte mit dem hier abgebildeten Symbol gekennzeichnet.

Herstellerinformationen und Service

Wenn Sie Rückfragen zum Remote Vibra Trainer Advance 2.0 haben oder falls Probleme bei der Bedienung auftreten o. Ä., wenden Sie sich zunächst per E-Mail an folgende Stelle:

info@PetTec.de

PetTec is a trademark of Ströer Products GmbH | Torstr. 49 | 10119 Berlin



HERE WE GO....

Many thanks for choosing for PetTec! The PetTec Remote Vibra Trainer Advance 2.0 is a new and effective aid for gently training your dog.

Safety Advice

To ensure safe operation of the PetTec Remote Vibra Trainer Advance 2.0, please adhere to the following safety advice.

- Our products are exclusively intended for dog training.
- Only intended for targeted training sessions (1-2hrs/day) and not for prolonged use.
- Keep out of the reach of children.
- Do not allow your dog to swim while wearing the trainer. The weight or the vibration could affect the buoyancy of your dog.
- Do not disassemble at home.

Includes

Trainer (receiver) with dog collar

Remote control

Hand strap for the remote control

Charging cable for trainer and remote control

Operation manual



Overview of remote control

- 1 LED status indicator
- 2 Blue LED backlit LC display
- 3 Toggle to select channels
- 4 Intensity level adjustment
- 5 Blind operation buttons
- 6 Antenna
- 7 Charging port with rubberized cover
- 8 Opening for hand strap



Overview of trainer

- 1 Dog collar
- 2 Inbuilt contact area
- 3 Charging port with rubberized cover
- 4 On/off button





SPECIFICATIONS

Features

- ✓ 600m range
- ✓ Up to 10 days battery life
- ✓ Additional sound signal
- ✓ 16 vibration levels
- ✓ IPX7 waterproof
- ✓ Expandable by additional collar*

Facts

	Receiver collar	Remote
Dimensions	3.4 x 7.6 x 3 cm	15 x 4.9 x 2.2 cm
Weight	109g	80g
Length Collar	22 - 67 cm	

*2 dogs trainable with one remote.



OPERATION GUIDE

Remote control

The blue backlight on the display stays on for approximately 30 seconds after a button press. After that with no button press, the blue backlight shuts off first, and if no button is pressed within another five minutes, the display shuts off and the remote control goes into battery conversation mode. Pressing any button will turn the display back on.

Trainer

To turn the trainer on, press and hold the On/Off button until the green LED light comes on. Release the On/Off Button and if the trainer is in normal mode, the green LED will flash once every five seconds, indicating the trainer is on and ready to receive a signal from the remote control. To turn the trainer off, press and hold the On/Off button until the red LED light shuts off. (This takes approximately three seconds) After that release the On/Off button.

Note: To extend the life of the batteries, turn the trainer off when it is not in use.



How the remote control buttons work

- 1 Dog toggle switch (1 / 2)**
Located on the upper left face of the remote control is a toggle switch, allowing switch between Dog 1 and Dog 2.
- 2 Tone only button (TONE)**
Sends an audible tone to the trainer. No vibration is delivered.
- 3 Vibration only button (VIBRA)**
Delivers vibration through the Contact Area on the remote control at the level shown on the digital display. When held down for ten consecutive seconds, the trainer will "time-out", and vibration cannot be delivered for five seconds. You must release and press the button again after the five second time-out period, before additional vibration can be delivered.
- 4 Vibra Up Button (▲): Increase vibration intensity by 1.
Vibra Down Button (▼): Decrease vibration intensity by 1.**
- 5 Vibration/sound signal button (DUAL)**
Pressing this key transmits both a vibration and a sound signal at the same time.

PetTec-Tipp:


To connect a second trainer, please set the toggle switch to 2 and switch on the trainer to be connected. The new trainer connects to the remote control by simultaneously pressing the tone signal and vibration buttons. **Read more on page 30.**





Fit the collar

The trainer should be fitted so that the contact area presses firmly against the dog's skin. When properly fitted, you should be able to fit a finger or two snugly in between the collar and the dog's skin. When properly fitted, the trainer should not move on the dog. The best location for the trainer is either side of the dog's windpipe.

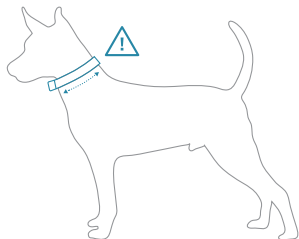

A loose fit can allow the trainer to move around on the dog's windpipe. When this happens, the contact area may rub the skin and cause irritation. If the trainer is too tight, the dog may have difficulty breathing.

How to find the best vibration level



The PetTec Remote Vibration Trainer Advance offers up to 16 different vibration levels. Level 1 is the weakest signal and level 16 the strongest. The level of vibration best suited for your dog depends on your dog's temperament and threshold for vibration. Always start at the lowest level and work your way up.

The appropriate level can be found when the dog responds to the vibration with a mild reaction, such as a tensing of the neck muscles. The vibration level may vary depending on the training situation. When highly distracted, dogs will require a higher level of vibration.

How to maximize the distance

The unit has a 600 meter range. The range may vary depending on the way the remote control is held. Hold the remote control away from your body to receive the greatest range. For maximum signal strength, keep the devices properly charged.

LCD and LED indicator



Indicates vibration intensity ranging from 1 - 16, and appears in the middle part.






Indicates the active trainer and appear in the left part.



Indicates battery's power level. Note: The battery indicator will flash every second to indicate low battery.



Remote Control LED indicator light function and response

Button	Button function	Transmitter indicator light response
TONE 	Delivers audible tone to collar	Red LED on for length of button press.
VIBRA 	Delivers vibration to collar based on current level shown on digital display	
DUAL 	Combines the vibration and sound training signals.	
TONE and VIBRA buttons held simultaneously	Transmits pairing command to trainer.	



Trainer indicator light function and response

Trainer function	Green LED response
Power on	Flashes once
Normal operation – good battery	1 flash every 5 seconds
Training tone	Length of TONE button press
Dual signal	5 flashes within 3 seconds
In pairing position	Flashes once every second within 16 seconds
Pairing complete	Flashes rapidly for five times
Charging complete	As long as charger is connected

Trainer function	Red LED response
Power off	On for 3 seconds
Normal operation – battery low	Flashes rapidly
Vibration	Length of VIBRA button press
Charging	Length of charging period



Charging the battery


1. Charge the unit before using the unit for the first time.
2. Do not charge the batteries near any flammable substances.
3. Fully charge the batteries if the unit is to be stored without use for a period of 3 months or more.

Recharge the unit if:

1. The indicator light on the trainer is emitting a red color and flashes rapidly.
2. The 3 bar indicator on the remote control LCD shows just 1 bar.
3. The indicator light on the remote control or the trainer will not come on.
4. The indicator light on the remote control or the trainer comes on momentarily when any of the mode buttons is pushed.

Note:

The unit has a partial charge when it leaves our facility, upon receipt of the collar, be sure to give it a 4-hour initial charge before the first use.

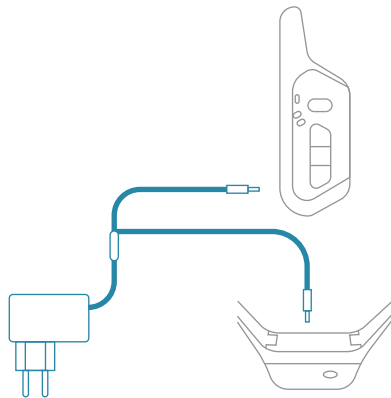

Charging receiver and remote

Lift the rubber covers protecting the remote control / trainer charging jack. Connect the charger connectors to the remote control and the trainer charging jack, and as shown below. Connect the USB port to the charging adapter. Plug the charger into a standard wall outlet. Charge the unit for 4 hours for the first charge. Recharges take only 2-3 hours. When charging is completed, remove the charger connector.

Note: The battery indicator on the remote control will scroll and the indicator light in steady red while charging; and the battery indicator will become steady, and the LED indicator light flashes when fully charged. The indicator light on the trainer will be in steady red while charging and green light turned on when fully charged.



How to pair remote control and trainer

If your trainer does not beep when the TONE button of the remote control is pushed, or if you feel the trainer is not responding to the remote control, follow these steps to pair:

1. With the trainer off your pet, turn the trainer off. Restart, press and hold the On/Off button until the green LED light flashes every second on the trainer. This continues for 16 seconds, within which pairing should be completed.
2. Press and hold the TONE and VIBRA button of the remote control at the same time until the green LED light on the trainer flashes rapidly for 5 times, indicating pairing is completed.

Pairing second trainer

1. Set the toggle switch to 2.
2. Turn on the trainer of dog 2, press any mode buttons to verify function.
3. If dog 2 trainer does not respond, pairing may be needed. Repeat steps in How to pair remote control and trainer.



PROPER DOG TRAINING

Proper training is the key to a harmonious coexistence between dog and man. But dog owners often reach the limits of their abilities when training their four-legged friends. The Remote Vibra Trainer Advance 2.0 is a gentle dog-training aid which helps to effectively discourage your pet from undesirable behaviors.

With the Remote Vibra Trainer Advance 2.0 you can intervene directly, even from a distance, to immediately react to bad habits. Most dogs permanently adjust their behavior after just one or two uses of the Trainer. Please note that the Trainer is a training device and not a toy, and always should be used with care. So at this point we ask you to observe the following guidelines:

Before Training

1. Be sure that your dog's undesirable behavior is not a result of insufficient physical activity or health problems. In this case please do not use the Trainer, and seek professional advice.
2. Get your dog accustomed to the Trainer collar before you turn it on.
3. For safety, do not allow your dog to swim while wearing the Trainer. The collar's weight or vibration could hinder your dog's ability to swim. If the Trainer gets wet, simply let it dry. After exposure to water, never open the rubber cover to the charging connector, to prevent moisture from getting into the Trainer.

During Training

1. Immediately remove the Trainer if your dog appears agitated!
2. Always use the Trainer in a controlled manner. Just as with normal training, it helps to give clear commands. Your dog must first learn these to be able to react appropriately to them.
3. Train your dog for a maximum of 1-2 hours per day. Remove the Trainer after each training session and turn it off.
4. Always reward your dog after a successful training session.



CUSTOMER SUPPORT

Declaration of conformity

Ströer Products GmbH hereby declares that the PetTec training device Remote Vibra Trainer Advance 2.0 described in this user manual complies with the Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following Internet address:



<https://support.pettec.de/hc/de/categories/360000050209-FAQ-Vibra-Trainer>



Declaration of conformity (see chapter "Declaration of conformity"): This symbol indicates products that fulfil all applicable Community regulations in the European Economic Area.



This symbol certifies that the radiated electromagnetic interference of the device is under the limit approved by the US Federal Communications Commission.

DISPOSING

Disposing of the packaging



Dispose of the packaging sorted into single-type materials:

- Paperboard and cardboard for recycled paper
- Films in the recyclable material collection service



Disposing of the device

[Applicable in the European Union and other European states with systems for the separate collection of reusable waste materials]



Old devices must not be disposed of with household waste!

If the GPS Tracker is no longer operational, every consumer is required by law to dispose of used devices separately from household waste, e.g. at a collection point run by the communal authority/borough. This ensures that old devices are recycled in a professional manner and also rules out negative consequences for the environment. For this reason, electrical equipment is marked with the symbol shown here.

Manufacturer information and service

If you have questions regarding the PetTec Remote Vibra Trainer Advance 2.0 or if any problems occur during operation or similar, first contact the following body via e-mail:

info@PetTec.de

PetTec is a trademark of Ströer Products GmbH | Torstr. 49 | 10119 Berlin

FCC Comply

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

PetTec[®]

Torstraße 49
10119 Berlin
Deutschland

www.PetTec.com

E-Mail: info@PetTec.com

**PetTec ist eine Marke
der Ströer Products GmbH**

PetTec[®] Remote

Vibra Trainer Advance 2.0

Artikel-Nr. 15614

FCC ID No. 2ARHV-15614



4 250541 922309



Made in China