

TCL

RAY.DANZ

3.1 CH Atmos Sound Bar with Built-in Subwoofer


Short user manual



Important safety instructions

Make sure you read all the safety information before you use this product.

TCL Entertainment Solutions Limited bears no responsibility for accidents or damages caused by unauthorized changes, modifications or improper use of the product.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



This symbol indicates that this product incorporates double insulation between hazardous main voltage and user accessible parts. When servicing, use only identical replacement parts.

Warnings

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. This product should not be exposed to dripping or splashing. No objects filled with liquids, such as vases, should be placed on or near the product.
- The product is unstable if it is not properly placed or mounted to the wall. Be sure to follow the wall mounting instructions provided in the user manual to ensure your safety.
- Do not expose batteries to excessive heat such as sunshine, fire, and so forth.

Safety

- Read these instructions** - Read all the safety and operating instructions before operating the product.
- Retain these instructions** - Retain the safety and operating instructions for future reference.
- Heed all warnings** - Adhere to all warnings on the product and in the operating instructions.
- Follow all instructions** - Follow all operating and use instructions.
- Do not use this apparatus near water** - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool and the like
- Clean only with a dry cloth.**
- Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources** such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose** of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord** from being walked on or pinched particularly at plugs, convenience receptacles, and the point where it exits from the product.
- Use only attachments/accessories** specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table** specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- Unplug this apparatus** during lightning storms or when unused for long periods of time.
- Refer all servicing** to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Cautions

- To prevent electric shock, match wide blade of plug to wide slot, fully insert.
- Do not place any sources of danger on the product (for example: liquid filled objects, lighted candles).
- Disconnect the power cord to shut off when find trouble or not in use. The power cord shall be regularly operate.
- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- The power cord/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- The rating label is located at the bottom or back of the product.

Battery precautions

- Do not mix batteries (old and new or carbon and alkaline).
- Do not dispose of batteries in fire or water.
- Recycle or dispose of batteries as per state and local guidelines.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- When the remote control is not to be used for a long time (more than a month), remove the battery from the remote control to prevent it from leaking.
- If the batteries leak, wipe away the leakage inside the battery compartment and replace the batteries with new ones.
- Keep away the batteries from heat or moisture.
- Do not carry or store batteries with other metallic objects. Doing so could cause batteries to short circuit, leak or explode.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

Disposal of your old product and battery

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities.

- This product contains non-removable batteries:
- Do not incinerate. Batteries may explode if overheated.
- For disposal or recycling information, please contact your local authorities.

CAUTION: Risk of explosion if the battery is replaced by an incorrect type.

CAUTION: replacement of a battery with an incorrect type that can defeat a safeguard.

CAUTION: disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;

CAUTION: leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

CAUTION: a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

For 5G WIFI Device

The device for operation in the band 5150-5350 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Shielded cables which incorporates ferrite cores must be used with this unit to ensure compliance with the Class B FCC limits.

Compliance notice

Notice for US

FCC Information

Warning

- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*
- To maintain compliance with the RF exposure guidelines, place the product at least 20cm from nearby persons.

Note

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device must accept any interference received, including interference that may cause undesired operation. (2) this device must not cause harmful interference, and

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

WARNING: Changes or modifications made to this equipment not expressly approved by TCL Corporation may void the FCC authorization to operate this equipment.

Warning

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits

Notice for Canada

Class B Cause

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

This Class B digital apparatus complies with Canadian ICES-003

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

ICN ICES-3(B)/NMB-3(B)

IC Radiation Exposure Statement

This equipment complies with Canada radiation exposure limits set forth for uncontrolled environments. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Warning:The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Consignes de sécurité importantes

Assurez-vous de lire toutes les informations de sécurité avant d'utiliser ce produit.

TCL Entertainment Solutions Limited ne prendra aucune responsabilité pour tous accidents ou endommagements causés par des changements non autorisés, des modifications ou des utilisations inappropriées du produit.



Le symbole de l'éclair en forme de flèche, situé dans un triangle équilatéral, a pour but d'alerter l'utilisateur de la présence d'une tension dangereuse non isolée à l'intérieur du boîtier du produit pouvant être suffisamment importante pour constituer un risque d'électrocution.



Le point d'exclamation dans un triangle équilatéral est destiné à alerter l'utilisateur de la présence de consignes importantes d'utilisation et de maintenance (entretien) dans la documentation accompagnant le produit.



Ce symbole indique que ce produit comporte une double isolation entre la tension principale dangereuse et les pièces accessibles à l'utilisateur. Lors de l'entretien, utilisez uniquement des pièces de rechange identiques.

Avertissements

- Pour réduire les risques d'incendie ou d'électrocution, n'exposez pas ce produit à la pluie ou à l'humidité. Ce produit ne doit pas être exposé à des gouttes ou des éclaboussures. Aucun objet rempli de liquide, tel qu'un vase, ne doit être placé au-dessus ou à proximité du produit.
- Le produit est instable s'il n'est pas correctement placé ou fixé au mur. Veuillez suivre les instructions de montage mural fournies dans ce manuel d'utilisation pour assurer votre sécurité.
- N'exposez pas les piles à une source de chaleur excessive telle que le soleil, le feu, etc.

Sécurité

- **Lisez ces consignes** – Lisez toutes les consignes de sécurité et d'utilisation avant d'utiliser le produit.
- **Conservez ces consignes** – Conservez les consignes de sécurité et d'utilisation pour une consultation ultérieure.
- **Respectez tous les avertissements** – Respectez tous les avertissements sur le produit et dans le mode d'emploi.
- **Observez toutes les consignes** – Observez le mode d'emploi et toutes les consignes d'utilisation.
- **N'utilisez pas cet appareil à proximité d'eau** – Cet appareil ne doit pas être utilisé à proximité d'eau ou d'humidité – par exemple, dans un sous-sol humide ou près d'une piscine, etc.
- **Nettoyez uniquement avec un chiffon sec.**
- **Ne bloquez aucune bouche d'aération.** Installez conformément aux instructions du fabricant.
- **Ne l'installez pas près de sources de chaleur** telles que les radiateurs, les bouches de chaleur, les poêles ou autres appareils (y compris les amplificateurs) produisant de la chaleur.
- **Ne détruisez pas l'objectif de sécurité** de la fiche polarisée ou mise à la terre. Une fiche polarisée à deux lames avec une plus large que l'autre. Une fiche de type mise à la terre à deux broches et une troisième broche de mise à la terre. La lame large ou la troisième broche sont fournies pour votre sécurité. Si la fiche fournie ne rentre pas dans votre prise, consultez un électricien pour remplacer la prise obsolète.
- **Protégez le cordon d'alimentation** des piétinements et des pincements, en particulier au niveau des fiches, des prises de courant et du point de sortie du produit.
- **N'utilisez que les pièces jointes / accessoires** spécifiés par le fabricant.
- **N'utilisez que avec le chariot**, le pied, le trépied, le support ou la table spécifiés par le fabricant ou vendus avec l'appareil. Lorsqu'un chariot est utilisé, faites attention lorsque vous déplacez la combinaison chariot/appareil pour éviter les blessures dues au renversement.



- **Débranchez cet appareil** lors d'orages ou lors de non-utiliser pendant une longue temps.
- **Confiiez tout entretien** au personnel qualifié. Un entretien est requis lorsque l'appareil a été endommagé de quelque manière que ce soit, par exemple au niveau du cordon d'alimentation ou de la fiche ou si un liquide a été renversé ou des objets sont tombés dans l'appareil, s'il a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement ou s'il a été abandonné.

Mises en garde

- Pour éviter les électrocutions, faites correspondre la lame large de la fiche à la fente large et retirez-la complètement.
- Ne placez aucune source de danger sur le produit (par exemple, objets remplis de liquide, bougies allumées).
- Débranchez le cordon d'alimentation pour l'entretien en cas de problème ou si vous ne l'utilisez pas. Le cordon d'alimentation doit être facilement utilisable.
- L'utilisation de commandes ou de réglages, ou l'exécution de procédures autres que celles décrites dans les présentes, peut entraîner une exposition à des radiations dangereuses ou toute autre opération dangereuse.
- Le couteleur du cordon d'alimentation/de l'appareil est utilisé comme dispositif de déconnexion; le dispositif de déconnexion doit rester facilement utilisable.
- L'étiquette d'identification se trouve au bas ou à l'arrière du produit.

Précautions relatives à la batterie

- Ne mélangez pas les piles (usées et neuves, au carbone et alcalines).
- Ne jetez pas les piles au feu ou dans l'eau.
- Recyclez ou jetez les piles conformément aux directives nationales et locales.
- Danger d'explosion si la pile est remplacée de manière incorrecte. Remplacez uniquement par le même type ou un type équivalent.
- Lorsque vous le télécommande ne doit pas être utilisé pendant une longue période (plus d'un mois), retirez la pile du télécommande pour l'empêcher de couler.
- Si les piles coulent, essayez les écoulements à l'intérieur du compartiment des piles et remplacez les piles par des neuves.
- Gardez les piles à l'écart de la chaleur ou de l'humidité.
- Ne transportez pas et ne stockez pas les piles avec d'autres objets métalliques. Cela pourrait provoquer un court-circuit, un écoulement ou une explosion des piles.
- Ne rechargez jamais une pile sauf s'il est prouvé qu'elle est rechargeable.

Mise au rebut de votre produit usagé et de la batterie

Votre appareil est conçu et fabriqué avec des composants et des matériaux de haute qualité, pouvant être recyclés et récupérés.

Ce produit peut contenir du plomb et du mercure. L'élimination de ces matériaux peut être réglementée pour des raisons environnementales. Pour plus d'informations sur la mise au rebut ou le recyclage, contactez les autorités locales.

Ce produit contient des piles non amovibles :

- Ne pas incinérer. Les piles peuvent exploser si elles sont surchauffées.
- Pour plus d'informations sur la mise au rebut ou le recyclage, contactez les autorités locales.

ATTENTION: Risque d'incendie ou d'explosion si la batterie est remplacée par un type incorrect
ATTENTION: Remplacement d'une batterie par un type incorrect pouvant supprimer une protection
ATTENTION: mise au rebut d'une batterie dans un feu ou dans un four chaud, ou écrasement mécanique ou coupure d'une batterie, susceptible de provoquer une explosion
ATTENTION: maintien d'une batterie dans un environnement à très haute température pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables.
ATTENTION: batterie soumise à une pression de l'air extrêmement faible pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables.

Power 5G WIFI Device

L'appareil destiné à fonctionner dans la bande 5150-5350 MHz est destiné uniquement à une utilisation en intérieur afin de réduire le risque de brouillage préjudiciable causé aux systèmes de télécommunication par satellite mobiles dans le même canal.

Des câbles blindés comportant des nœuds en ferrite doivent être utilisés avec cet appareil pour garantir la conformité avec les limites FCC de classe B.

Avis de conformité

Avis pour les États-Unis

Informations sur la FCC

Avertissement

- Les changements ou les modifications sur cet appareil non expressément approuvés par la partie responsable de la conformité pourraient invalider l'autorité de l'utilisateur pour manipuler l'équipement.
- Pour rester en conformité avec les consignes d'exposition aux RF, placez le produit à au moins 20 cm des personnes proches.

Remarque

- Cet équipement a été testé et déclaré conforme aux limites imposées aux appareils numériques de classe B, conformément à la section 15 du règlement de la FCC. Ces limites sont conçues pour fournir une protection suffisante contre les interférences préjudiciables dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie radioélectrique et, s'il n'est pas installé et utilisé conformément aux instructions fournies, peut produire des interférences affectant les communications radio. Cependant, rien ne garantit que des interférences ne se produiront pas dans certaines installations.

Si cet équipement génère des interférences préjudiciables à la réception de signaux radio ou de télévision (ce qui peut être constaté en éteignant puis en rallumant l'appareil), nous conseillons à l'utilisateur d'essayer une ou plusieurs des mesures suivantes pour tenter de corriger le problème :

- Réorienter ou déplacer l'antenne de réception.
- Éloigner davantage le récepteur de l'équipement.
- Brancher l'équipement sur une prise de circuit différent de celle sur laquelle le récepteur est branché.
- Consulter le revendeur ou un technicien qualifié spécialisé en équipements radio/de télévision.

Pour garantir la conformité continue, tout changement ou modification non expressément approuvé par la partie responsable de la conformité peut annuler l'autorité de l'utilisateur à utiliser cet équipement. (Exemple : utiliser uniquement des câbles d'interface blindés lors de la connexion à un ordinateur ou à des périphériques).

Cet appareil est conforme à la section 15 de la réglementation de la FCC. Le fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles, et
- (2) Cet appareil doit accepter toutes les interférences reçues, y compris celles susceptibles de provoquer un fonctionnement indésirable.

Déclaration de la FCC sur l'exposition aux rayonnements : Cet appareil est conforme aux limites de la FCC sur l'exposition aux rayonnements définies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps. Cet émetteur ne doit pas être placé au même emplacement ni être utilisé avec toute autre antenne ou tout autre émetteur. **AVERTISSEMENT : Les modifications apportées à cet équipement non expressément approuvées par TCL Corporation peuvent annuler l'autorisation de la FCC d'utiliser cet équipement.**

Avertissement

Le fabricant n'est pas responsable des interférences de radio ou de télévision causées par des modifications non autorisées de cet équipement. De telles modifications pourraient annuler l'autorité de l'utilisateur à utiliser l'équipement.

Avis pour le Canada

Classe de classe B

Cet appareil numérique ne dépasse pas les limites de classe B relatives aux émissions de bruit radioélectrique émises par un appareil numérique, telles que définies dans le Règlement sur les interférences radio du ministère des Communications du Canada.

Cet appareil numérique de classe B est conforme à la norme canadienne ICES-003.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAN ICES-3(B)/NMB-3(B)

Déclaration IC relative à l'exposition aux rayonnements


Cet appareil est conforme aux limites canadiennes sur l'exposition aux rayonnements définies pour des environnements non contrôlés. Cet émetteur ne doit pas être situé au même endroit ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

Attention : le droit de l'utilisateur de faire usage de l'appareil peut être annulé par des modifications ou changements non approuvés expressément par l'entité en charge de la conformité de l'appareil par rapport aux normes.


1

What's in the box


Make sure you read all the safety information before you use this product.




Sound Bar main unit




Subwoofer



AC power cord x 2



Optical cable




HDMI cable



Remote control



AAA battery x 2



Wall mount bracket x 2



Wall screws x 2



Wall anchor x 2



Wall mounting screw x 2



Warranty





Short user manual



Wall mount template

2a Overview


Sound Bar main unit

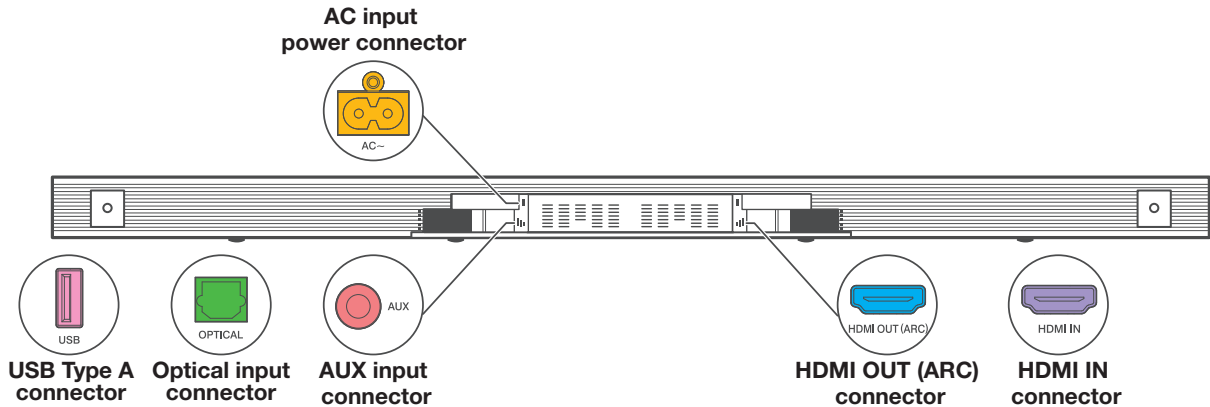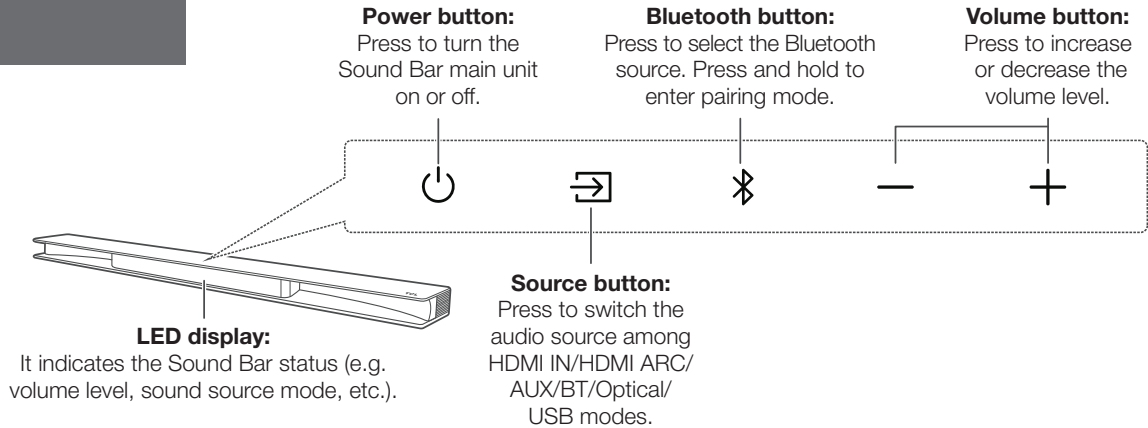


2b

Overview

Wireless subwoofer

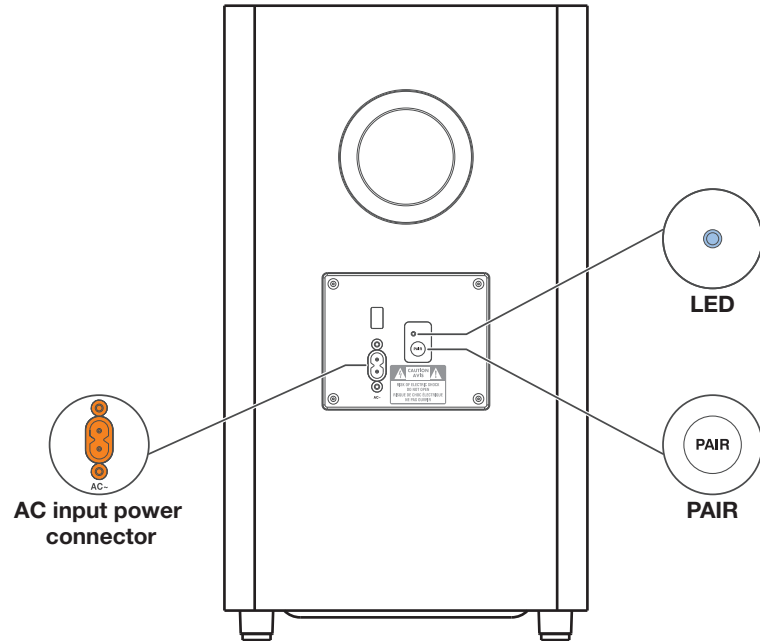

Remote control

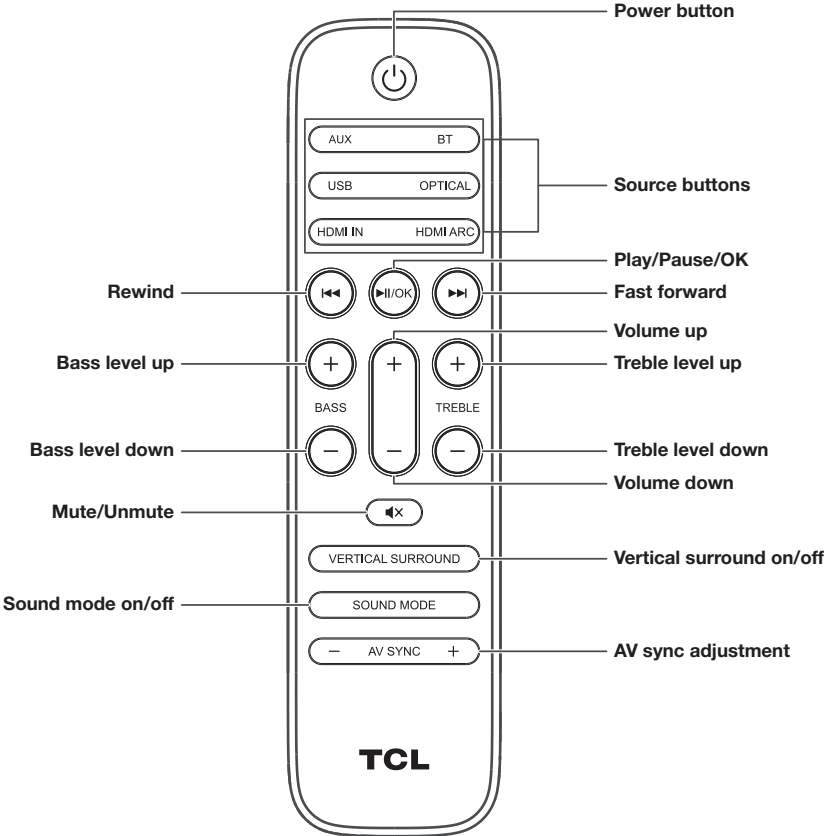


3a

Place your Sound Bar and subwoofer

You are recommended to place the Sound Bar on the top of the table and right below the center of your TV.


The distance between the subwoofer and the Sound Bar main unit should be within 3 meters (9.8 feet).

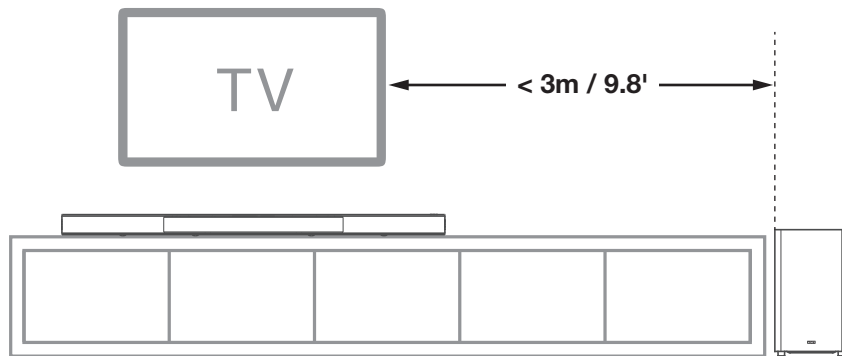


3b

Wall mount your Sound Bar

Required tools:



- Place the supplied wall mount template on the wall. Make sure the wall mount template is at least 2 inches (5cm) below the center of the TV. **1**
- Use a level to make sure the Sound Bar is positioned accurately. **2**
- Use the tape to stick the wall mount template firmly on the wall. **3**
- Mark on the wall using each marking on the template through the mounting holes. **4**
- Take away the wall mount template. **5**
- Drill a screw hole at each marking on the wall. **6**

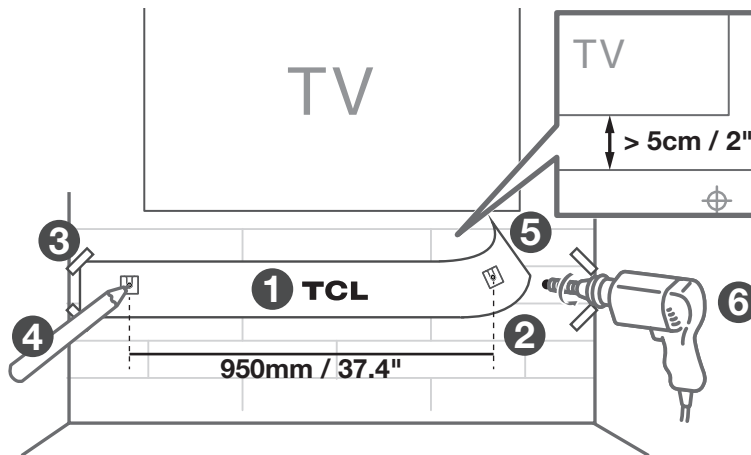


3b

Wall mount your Sound Bar

Required tools:





- Insert the supplied wall anchors into 2 screw holes on the wall. **7**
- Insert the supplied wall bracket screws through the wall brackets into the wall anchors. **8**
- Fix and tighten the wall bracket screws on the wall. **9**

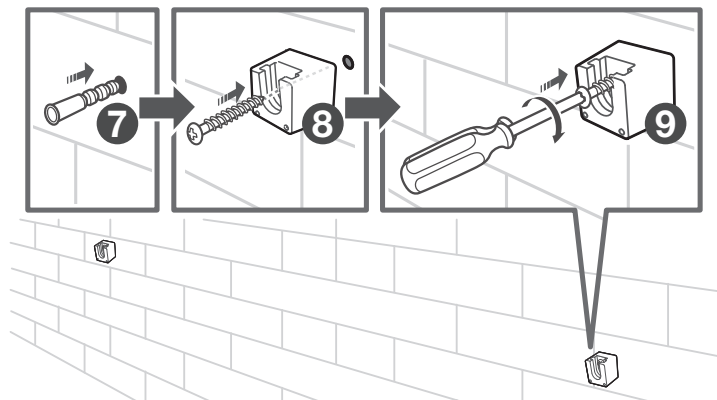

Required tools:




- Insert the supplied wall mounting screws into the screw holes in the back of the Sound Bar main unit. **10**
- Hang the Sound Bar main unit on the wall mount brackets. **11**

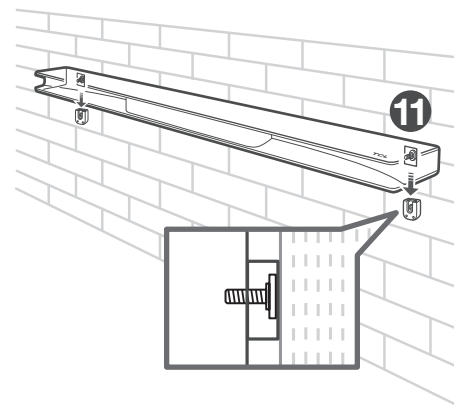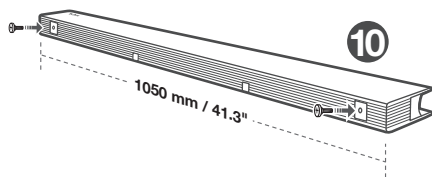

4a

Remove the back cover of your Sound Bar


Remove the back cover of your Sound Bar before connecting cables.

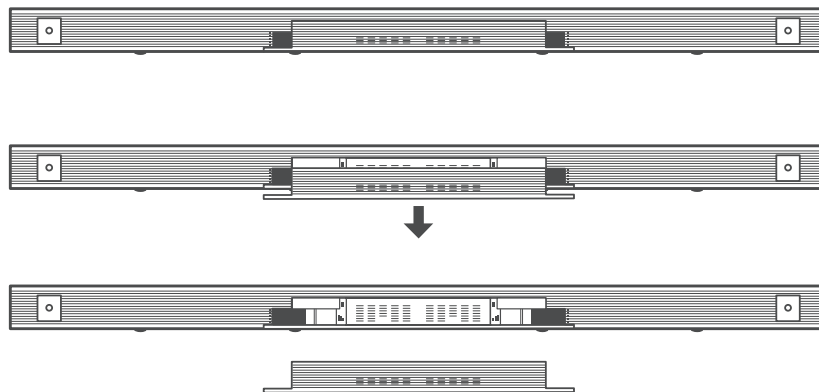

4b

Connect to your TV by HDMI ARC

Connect the Sound Bar with your TV through the HDMI cable.

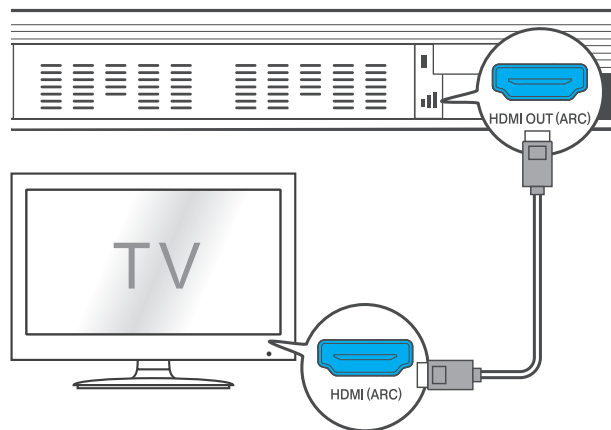


4c

Connect to your AV device by HDMI IN

Connect the Sound Bar with the audio device (Bluray player or set top box) through the HDMI cable.


Bluray player, set top box, etc.

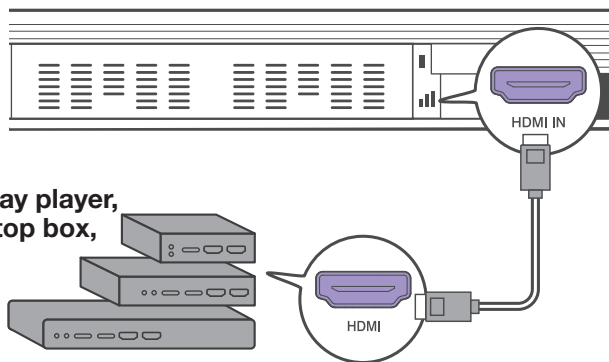

4d

Optical connection


You can also connect the Sound Bar with your TV or other audio devices through the supplied optical cable.

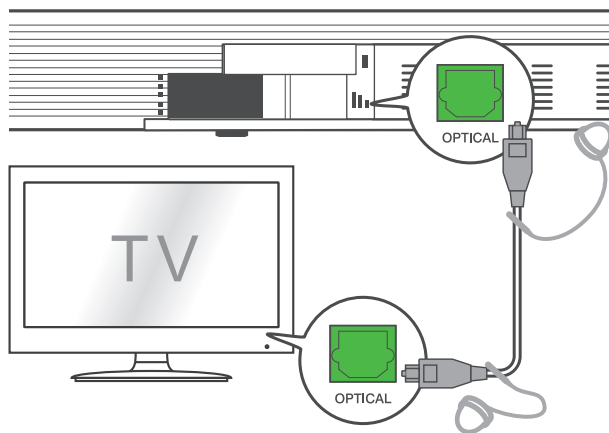

4e

AUX connection


You can also connect the Sound Bar with your TV or other audio devices through the supplied AUX cable.

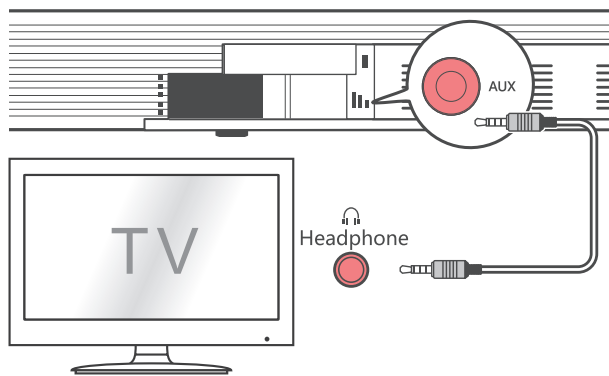

4f

Connect to power


Use the power cord.

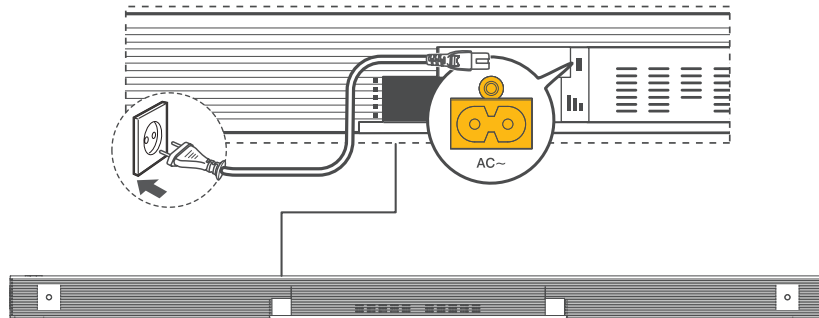

Standby power consumption: < 2W

5

Install or replace the remote batteries

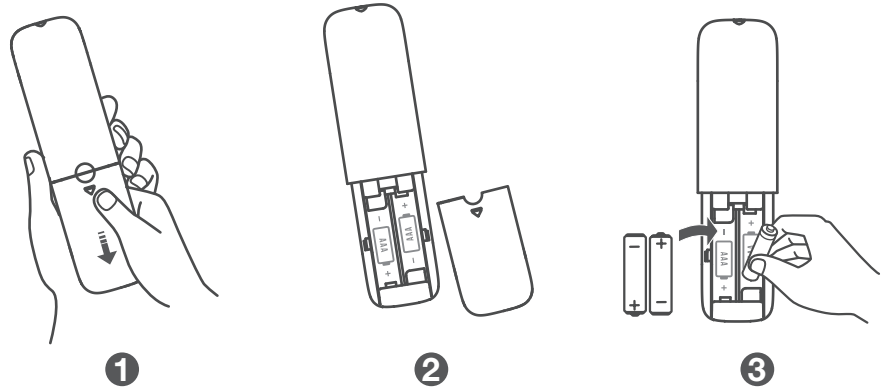





Battery type: 1.5V AAA Alkaline battery x 2

6a

Pair your Bluetooth device

You can stream music from your mobile device via Bluetooth.

1. Press .
2. Press .
- >  is flashing on the LED display. The Sound Bar is ready to pair.
3. Power on your Bluetooth device and activate its Bluetooth function.
4. Select **TCL RAY-DANZ**.
- > You hear a sound signal.
- > Pairing is successful.

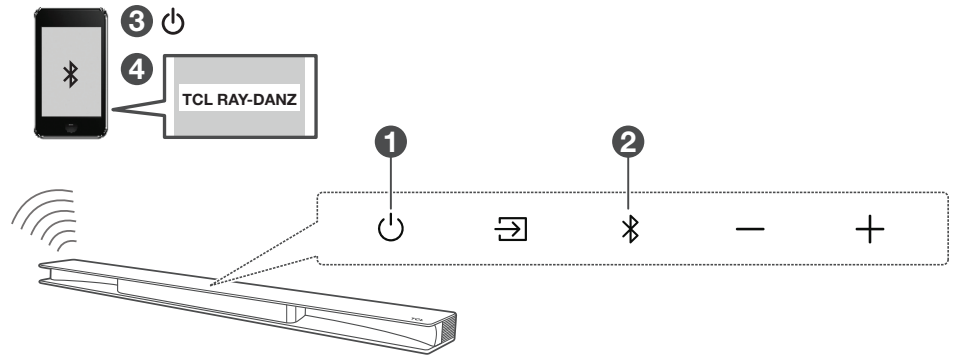


6b

Pair your subwoofer

The Sound Bar will pair with the Subwoofer automatically. If not successful, press and hold **PAIR** to activate pairing manually.

- > The LED will flash when pairing is in progress.
- > The LED will remain on solidly when pairing is successful.

Frequency range/Max transmitting power:
2402-2480 Mhz/5dBm

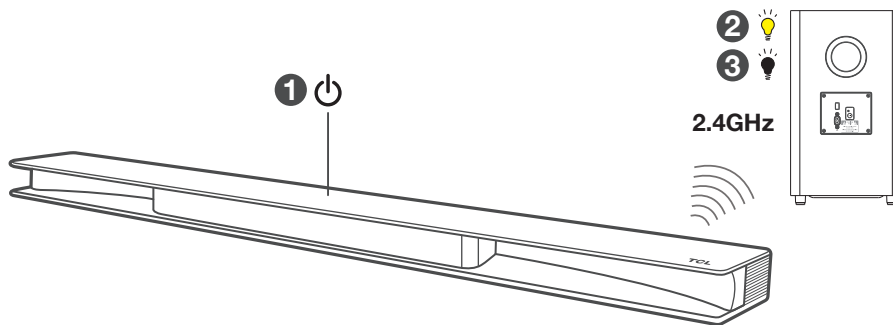


7

Setup WIFI connection

Upgrade the software through the webpage:

1. Power on the Sound Bar.
 - > The LED on the Sound Bar lights up.
2. Activate Wi-Fi on your smartphone or device.
 - > **TCL_RAY-DANZ-xxxx** is identified.
3. Open a browser and type 192.168.255.249:8001 in the address field.
4. Follow the on-screen instruction to complete the setup process.
 - > The Sound Bar will re-start and connect the selected network automatically.

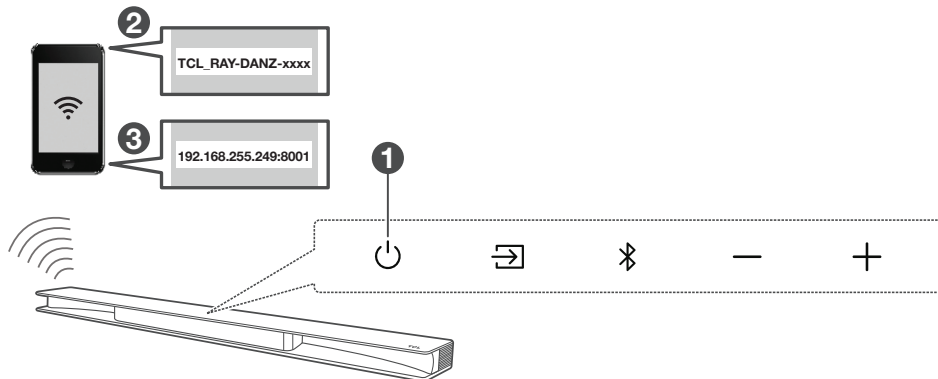

8

Sound Bar LED display

The LED display on the front of the Sound Bar gives you information about different Sound Bar status.

	Sound Bar status	LED display
Power	Power on Power off Standby	HELLO STANDBY •
Source	Bluetooth Optical HDMI IN HDMI ARC USB	BT OPT HDMI 1 IN HDMI 2 ARC USB
Bluetooth	Searching mode Pairing mode	BT (flashing) PAIR
Volume control	Volume level Minimum volume reached Maximum volume reached Mute	VOL 00 V MIN V MAX MUTE
Bass/Treble	BASS + / - TREBLE + / -	BAS+3 TRE-3
Vertical surround mode	SURROUND ON / SURROUND OFF	SUR ON / SUR OFF
Sound modes	Movie, Music, TV, BOOST	MOVIE-MUSIC-TV-BOOST HDMI in: Movie mode HDMI ARC/Optical/AUX: TV mode Bluetooth: Music mode
Others	Unsupported format USB unavailable Audio format detected	NOTSUPPORT FORMAT NOUSB PCM AUDIO / DOLBY AUDIO / DOLBY ATMOS

Does this Sound Bar work with any TV?

The Sound Bar is compatible with any TV that has one of the below ports:

1. HDMI
2. Optical
3. AUX

Will this Sound Bar work with any HDTV that is not a smart TV?

Yes, the Sound Bar will work with any TV as long as it supports one of the below ports:

1. HDMI
2. Optical
3. AUX

When Sound Bar and TV are both on, there's an echo effect and audio is out of sync.

Turn the speaker off. If you have a TCL Roku TV, please follow the steps below to turn off the TV speakers:

1. Navigate to setting menu.
2. Navigate to Audio menu under settings menu.
3. Select TV Speakers and uncheck the enable TV Speakers.

If you have non-smart TCL TV, please follow below given step:

1. Navigate to setting menu, by pressing the setting button on the TV remote.
2. Select speaker option.
3. Set 'TV Speaker' as "Off".

If you have a non-TCL TV, please contact your TV manufacturer to find how you can disable your TV speaker.

How many sound modes are available?

Three auto sound modes - Movies, Music and News are available. The Sound Bar will automatically switch to HDMI or optical mode when watching movies and USB or Bluetooth mode when listening to music.

How do I get the best Wi-Fi connection?

- Use the 5GHz band on your wireless router if available for best Wi-Fi performance.
- If you see a lock icon, your Wi-Fi network requires a password, so make sure you have it available.
- Ensure your Internet is working properly. Restarting your router and modem will solve most Wi-Fi network issues.

What is the LED indicator on the wireless subwoofer when it is pairing with the Sound Bar?

- It flashes slowly when the subwoofer is in idle mode.
- It flashes quickly when pairing is in progress.
- It remains on solidly when pairing is successful.

Wireless Specification

- Bluetooth Version /profiles: V5.0 (A2DP, AVRCP)
- Bluetooth Maximum E.I.R.P: 9.7dBm
- Bluetooth Frequency bands: 2402 MHz ~ 2480 MHz
- 2.4G Wi-Fi Maximum E.I.R.P: 17.0dBm
- 2.4G Wi-Fi Frequency bands: 2412 MHz ~ 2462 MHz
- 5G Wi-Fi (Band 1, Band 2, Band 3) Maximum E.I.R.P: 17.99dBm
- 5G Wi-Fi (Band 4) Maximum E.I.R.P: 10.0dBm
- 5G Wi-Fi Frequency bands: 5150 MHz ~ 5350 MHz, 5470 MHz ~ 5850 MHz
- 2.4G SRD Maximum E.I.R.P: -3.11dBm
- 2.4G SRD Frequency bands: 2404.5 MHz ~ 2479.5 MHz

Main Unit

- Power Supply: 100-240V~ 50/60Hz
- MAX Output Power by speaker: 30W x 4
- Power Consumption: 30 W
- Standby Consumption: < 2 W
- USB: 5V, 500mA
- Frequency Response: 40Hz - 20kHz
- Audio input Sensitivity (AUX): 500mV
- Speakers Impedance: 8 Ω x 3
- Dimension (W x H x D): 1050 X 110 X 55 mm
- Operating temperature: 0°C - 45°C

Subwoofer

- Power Supply: 100-240V~ 50/60Hz
- Power Consumption: 30 W
- Standby Consumption: < 1 W

- Impedance: 4 Ω
- Frequency Response: 40Hz - 120Hz
- Dimension (WxHxD): 120 x 410 x 300 mm

Remote Control

- Distance/Angle: 6m/30°
- Battery Type: AAA (1.5V X 2)



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.

We hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



**WE ARE
READY TO
HELP** contact us first
with any questions



TCL SUPPORT:
www.tcl.com/support



**TAKE CARE WHEN
REMOVING THE SOUNDBAR**