

Saitake




STK-7024S  
Use manuel


### First Time to Pair & Connect

(Power on your console, then follow the steps to pair and connect your controller.)


Step 1: Find Controllers Option.-Image1

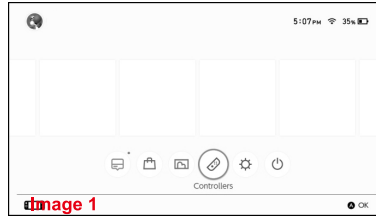

Step 2: Click Change Grip/Order.-Image2

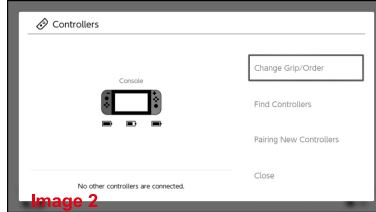

Step 3: Press Y+HOME button power on gamepad with 5 seconds till 4 LED lights flashes fastly, waiting for the connection to complete.-Image3

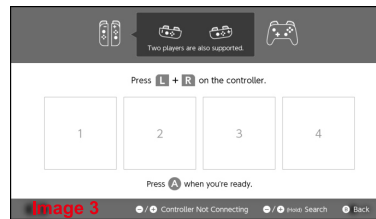

\*Please make sure turn off the Airplane Mode when you connect controller to switch console.

### Reconnect(HOME)

Reconnect: Press HOME Button  
If your controller was once paired and connected to your console, press the HOME button to rapidly connect next time.

Note:  
For reconnecting, please turn on the switch console firstly, does not support press HOME button to wake up the console under sleep mode.

When one of the following conditions occur, please reconnect referring to first time to pair and connect.

1. Upgrade
2. Reset
3. You can not reconnect to console by pressing HOME button.

### Adjust Vibration Intensity

There are 3 levels of vibration intensity: weak, moderate and strong

- Step 1:** Please make sure you connect the controller to the switch console.  
**Step 2:** Press 4 buttons (L, ZL, R and ZR) simultaneously for 5 seconds.  
**Step 3:** Then release the 4 buttons when you feel the vibration.

The vibration mode can be adjusted by repeating the above operations.

### FCC DECLARATION

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Saitake




STK-7024S  
取扱説明書


### 第1次オンライン

(コンソールの電源を入れたら、次に各ステップに従って、ペアリングしてコントローラーを接続する。)


ステップ1:コントローラオプションを見つけよう。

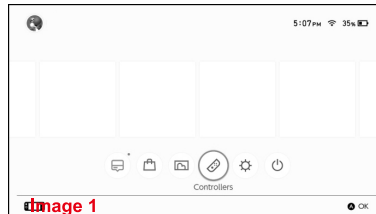

ステップ2:クリック変化している/ためのグリップ。

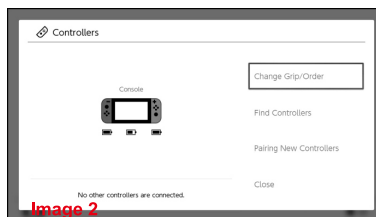

ステップ3 : 4つのLEDライトが完全に点滅するまで、5秒でゲームパッドを押してください ( Y + Home ) ボタンPower

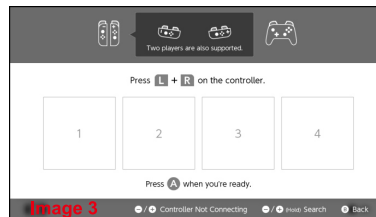

\*コントローラーとコンソールの切り替えの際には、機能モードを確認してください。

### 回連

劇的な再接続:ホームボタンを押す  
コントローラーがペアリングされ、スイッチコンソールに接続されている場合は、HOMEボタンを押して次の接続を迅速に行います。

メモ:  
再接続の場合は、まずスイッチコンソールの電源を入れてください、スリープモードでコンソールを起動するためにHOMEボタンを押すことをサポートしていません。

以下のいずれかの状況が発生した場合は、初めてペアリングして接続することを参照して、劇的に再接続してください。

1. アップグレード
2. リセット
- 3.ホームボタンを押してコンソールに再接続することはできない。

### 振動強度の調整

振動強度の3つのレベルがあります:弱い、中程度と強い。

ステップ 1: コントローラーをスイッチ コンソールに接続していることを確認します。  
ステップ2:4つのボタン(L、ZL、R、ZR)を同時に5秒間押します。  
ステップ3:振動を感じたら4つのボタンを放します。

振動モードは、上記のオペラトンを繰り返すことで調整できます。