


Greetings from realme Mobile

This guide will show you how to use the phone and its important functions. You may also visit realme official website to get more information about the phone.

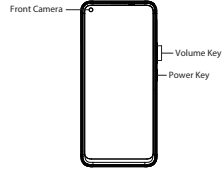

Warning:

- Do not place the phone or battery near or inside the heating equipments, cooking equipments, high pressure vessels (such as microwave ovens, induction cooker, electric oven, heater, pressure cooker, water heater, gas stove, etc.) to prevent the battery overheating which may lead to an explosion.
- The original charger, data cable and battery shall be used. Unapproved chargers, data cables, or batteries that are not certified by the manufacturer may result in electric shock, fire, explosion, or other hazards.

- When charging, please place the device in an environment that has a normal room temperature and good ventilation. It is recommended to charge the device in an environment with temperature ranging from 5°C-35°C.

- Back cover can't be removed.

How to reboot the phone:

Press and hold the Power Button and Volume Up Button at the same time until the realme boot animation is displayed to reboot the phone.

How to transfer contents from an old phone to a new phone

You can quickly transfer contents such as photos, videos, music, contacts, messages, and apps from an old phone to a new phone via realme Clone Phone.

- Scan the QR code below using the old phone to install "Clone Phone"; on the new phone, launch "Clone Phone" directly.



- Follow the prompts on the screen to complete the data transfer.

Standard accessories

You are provided with the following standard accessories:

- 1 Phone, 1 Charger, 1 USB data cable, 1 Safety Guide, 1 Quick Guide, 1 SIM Ejector Tool, 1 Protective Case.

English

Specification

Product	RMX3081	
Main screen parameter	16.3cm(6.4")	
Dimension	160.6x73.9x8.1(mm)	
Battery	4400mAh/17.02Wh(Min) 4500mAh/17.41Wh(Typ)	
Camera	16Megapixels Front 108Megapixels+8Megapixels +2Megapixels+2Megapixels Rear	
Operating temperature	0°C-35°C	
SAR Values	CE SAR	<2.0W/kg(Head) <2.0W/kg(Body)

Radio Waves Specifications					
Radio	Frequency (V1.0)	Frequency (V2.0)	Frequency (V3.0)	Frequency (V4.0)	Max. Output Power
GSM	850MHz/900MHz				32.5±1dBm
	1800MHz				30±1dBm
	1900MHz				29.5±1dBm
WCDMA	Band 1	Band 1	Band 1	Bands 1/2/4	23±1dBm
	Bands 5/8	Bands 5/8	Bands 5/8	Bands 5/8	23.3±1dBm
LTE FDD	Bands 1/3	Bands 1/3	Bands 5/8/20/28	Bands 1/2/3/4	23±1dBm
	Bands 5/8	Bands 5/8/20/28	Bands 5/8/20/28	Bands 5/8/12/17/26/28/66	23.3±1dBm
	—	Band 7	Band 7	Band 7	22.5±1dBm
LTE TDD	Bands 38/40/41			Bands 38/41	23±1dBm
Bluetooth	2.4-2.4835GHz				7±2dBm(EIRP)
2.4G Wi-Fi	2.4-2.4835GHz				15±2dBm(EIRP)
5G Wi-Fi	5.15-5.35GHz; 5.47-5.725GHz				14±2dBm(EIRP)
	5.725-5.85GHz				10.5±2dBm(EIRP)
NFC	—	—	13.56MHZ	—	≤42dBuA/m @10m

عند الشحن، يرجى وضع الجهاز في بيئة ذات درجة حرارة غرفة عادية وتهوية جيدة. يوصى بشحن الجهاز في بيئة ذات درجة حرارة تتراوح بين 5 درجة مئوية و35 درجة مئوية.

كيفية إعادة تشغيل الهاتف:

اضغط مع الاستمرار على زر التشغيل و زر رفع الصوت في الوقت نفسه حتى يتم عرض الرسم المتحرك لتشغيل هاتف realme لإعادة تشغيل الهاتف.

كيفية نقل المحتويات من هاتف قديم إلى هاتف جديد

يمكنك نقل محتويات مثل الصور والفيديوهات والموسيقى وجهات الاتصال والرسائل والتطبيقات من هاتف قديم إلى هاتف جديد بسرعة عبر تطبيق نسخ الهاتف من realme.

- اسح رمز QR أدناه باستخدام الهاتف القديم لتثبيت "نسخ الهاتف";
- على الهاتف الجديد، افتح "نسخ الهاتف" مباشرة.




- اتبع التعليمات الموجودة على الشاشة لإكمال نقل البيانات.

الملحقات القياسية

سيتم تزويدك بالملحقات القياسية التالية:

- هاتف، 1 شاحن، 1 سماعة أذن، 1 أداة لإدخال وإخراج بطاقة SIM
- كابل بيانات USB، 1 دليل أمان، 1 دليل سريع.

خلاص التحيات من الهاتف المحمول realme
يسيطر لك هذا الدليل كيفية استخدام الهاتف ووظائفه الهامة. يمكنك أيضاً زيارة موقع الويب الرسمي للهاتف realme للحصول على مزيد من المعلومات حول الهاتف.

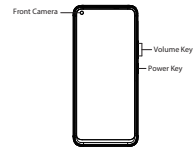

تنبيه:

- لا تضع الهاتف أو البطارية بالقرب من أجهزة التسخين أو الطبخ أو الأواني ذات الضغط العالي أو بداخلها (على سبيل المثال أفران الميكروويف والموقد الذي يعمل بالغاز والفرن الكهربائي والسخان والموقد الذي يعمل بالضغط وسخان المياه وموقد الغاز، وما إلى ذلك). وذلك لمنع سخونة البطارية بدرجة مفرطة مما قد يتسبب في حدوث انفجار.

- يُصح باستخدام الشاحن والبطارية وكابل البيانات الأصليين. فقد تتسبب الشواحن أو كابلات البيانات أو البطاريات غير المعتمدة من الشركة المصنعة في حدوث

صدمة كهربائية أو حريق أو انفجار أو مخاطر أخرى.

- الغطاء الخلفي لا يمكن نزع.

Arabic

المواصفات الفنية

مواصفات الموجات اللاسلكية					
لاسلكي	التردد (V1.0)	التردد (V2.0)	التردد (V3.0)	التردد (V4.0)	أقصى طاقة إخراج
GSM	850MHz/900MHz				32.5±1dBm
	1800MHz				30±1dBm
	1900MHz				29.5±1dBm
WCDMA	Band 1	Band 1	Bands 1/2/4	Bands 5/8	23±1dBm
	Bands 5/8	Bands 5/8	Bands 5/8	Bands 5/8	23.3±1dBm
LTE FDD	Bands 1/3	Bands 1/3	Bands 5/8/20/28	Bands 1/2/3/4	23±1dBm
	Bands 5/8	Bands 5/8/20/28	Bands 5/8/20/28	Bands 5/8/12/17/26/28/66	23.3±1dBm
	—	Band 7	Band 7	Band 7	22.5±1dBm
LTE TDD	Bands 38/40/41			Bands 38/41	23±1dBm
Bluetooth	2.4-2.4835GHz				7±2dBm(EIRP)
2.4G Wi-Fi	2.4-2.4835GHz				15±2dBm(EIRP)
5G Wi-Fi	5.15-5.35GHz; 5.47-5.725GHz				14±2dBm(EIRP)
	5.725-5.85GHz				10.5±2dBm(EIRP)
NFC	—	—	13.56MHZ	—	≤42dBuA/m @10m

طراز المنتج	RMX3081	
خصائص شاشة العرض الرئيسية	6.4 بوصة	
الأبعاد	160.6x73.9x8.1 (ملليمتر)	
البطارية	4400mAh/17.02Wh(Min) 4500mAh/17.41Wh(Typ)	
الكاميرا	16 ميجابكسل أمامية 108 ميجابكسل + 8 ميجابكسل + 2 ميجابكسل + 2 ميجابكسل خلفية	
درجة حرارة التشغيل	35°C — 0°C	
قيم SAR	CE SAR	(رأس) <2.0W/kg (جسم) <2.0W/kg

realme

Quick Guide

RMX3081

realme

