


Greetings from realme Mobile

This guide will show you how to use the phone and its important functions. You may also visit realme official website to get more information about the phone.

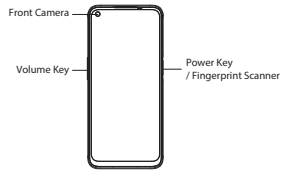

Warning:

- Do not place the phone or battery near or inside the heating equipments, cooking equipments, high pressure vessels (such as microwave ovens, induction cooker, electric oven, heater, pressure cooker, water heater, gas stove, etc.) to prevent the battery overheating which may lead to an explosion.
- The original charger, data cable and battery shall be used. Unapproved chargers, data cables, or batteries that are not certified by the manufacturer may result in electric shock, fire, explosion, or other hazards.

- When charging, please place the device in an environment that has a normal room temperature and good ventilation. It is recommended to charge the device in an environment with temperature ranging from 5°C–35°C.
- Back cover can't be removed.

How to reboot the phone:

Press and hold the Power Button and Volume Up Button at the same time until the realme boot animation is displayed to reboot the phone.

How to transfer contents from an old phone to a new phone

You can quickly transfer contents such as photos, videos, music, contacts, messages, and apps from an old phone to a new phone via realme Clone Phone. 1 Scan the QR code below using the old phone to install "Clone Phone"; on the new phone, launch "Clone Phone" directly.



2 Follow the prompts on the screen to complete the data transfer.

Standard accessories

You are provided with the following standard accessories:
1 Phone, 1 Charger, 1 USB data cable, 1 SIM Ejector Tool, 1 Safety Guide, 1 Quick Guide, 1 Protective Case.

Specification

Product	RMX3241
Main screen parameter	16.5cm(6.5")
Dimension	162.5x74.8x8.5(mm)
Battery	4890mAh/18.92Wh(Min) 5000mAh/19.35Wh(Typ)
Camera	48Megapixels+2Megapixels +2Megapixels Rear 16Megapixels Front
Operating temperature	0°C-35°C
SAR Values	CE SAR <2.0W/kg(Head) <2.0W/kg(Body)

Radio Waves Specifications		
Radio	Frequency	Max. Output Power
GSM	850MHz	32.5±0.8dBm
	900MHz	33±0.8dBm
	1800MHz	29.5±0.8dBm
WCDMA	1900MHz	29.5±0.8dBm
	Bands 1/2/4	23±0.8dBm
LTE FDD	Bands 5/6/8/19	23.5±0.8dBm
	Bands 1/2/3/4/66	23±0.8dBm
LTE TDD	Bands 5/8/12/17/18/19/20/26/28	23.5±0.8dBm
	Band 7	22.7±0.8dBm
5G NR	Bands 38/39/40/41	23±0.8dBm
	n1/n3/n38/n40/n41/n77/n78	23±0.8dBm
Bluetooth	n7	22.7±0.8dBm
	n5/n8/n20/n28	23.5±0.8dBm
2.4G Wi-Fi	2.4-2.4835GHz	15±2dBm(EIRP)
5G Wi-Fi	5.15-5.35GHz; 5.47-5.725GHz	14±2.5dBm(EIRP)
	5.725-5.85GHz	10.5±2.5dBm(EIRP)
NFC	13.56MHz	≤42dBuA/m @10m

عند الشحن، يرجى وضع الجهاز في بيئة ذات درجة حرارة غرفة عادية وتهوية جيدة. يرجى بشحن الجهاز في بيئة ذات درجة حرارة تتراوح بين 5 درجة مئوية و35 درجة مئوية.

كيفية إعادة تشغيل الهاتف:

اضغط مع الاستمرار على زر التشغيل و زر رفع الصوت في الوقت نفسه حتى يتم عرض الرسم المتحرك لتشغيل هاتف realme لإعادة تشغيل الهاتف.

كيفية نقل المحتويات من هاتف قديم إلى هاتف جديد

يمكنك نقل محتويات مثل الصور والفيديوهات والموسيقى وجهات الاتصال والرسائل والتطبيقات من هاتف قديم إلى هاتف جديد بسرعة عبر تطبيق نسخ الهاتف من realme.

1 امسح رمز QR أدناه باستخدام الهاتف القديم لتثبيت "نسخ الهاتف"، وعلى الهاتف الجديد، افتح "نسخ الهاتف" مباشرة.



2 اتبع التعليمات الموجودة على الشاشة لإكمال نقل البيانات.

الملحقات القياسية

سيتم تزويدك بالملحقات القياسية التالية: 1 هاتف، 1 شاحن، 1 أداة لإزالة وإخراج بطاقة SIM 1 كابل بيانات USB، 1 دليل أمان، 1 دليل سريع، 1 غطاء حماية.

خلاص التحيات من الهاتف المحمول realme
سيظهر لك هذا الدليل كيفية استخدام الهاتف ووظائفه الهامة. يمكنك أيضاً زيارة موقع الويب الرسمي للهاتف realme للحصول على مزيد من المعلومات حول الهاتف.



تحذير:

لا تضع الهاتف أو البطارية بالقرب من أجهزة التسخين أو الطبخ أو الأواني ذات الضغط العالي أو بداخلها (على سبيل المثال أفران الميكروويف والموقد الذي يعمل بالغاز والفرن الكهربائي والسخان والموقد الذي يعمل بالضغط وسخان المياه وموقد الغاز، وما إلى ذلك) وذلك لمنع سخونة البطارية بدرجة مفرطة مما قد يتسبب في حدوث انفجار.

- ينصح باستخدام الشاحن والبطارية وكابل البيانات الأصليين. فقد تتسبب الشواحن أو كوابل البيانات أو البطاريات غير المعتمدة من الشركة المصنعة في حدوث صدمة كهربائية أو حريق أو انفجار أو مخاطر أخرى.
- الغطاء الخلفي لا يمكن نزع.

Arabic

مواصفات الموجات اللاسلكية		
التردد	أقصى طاقة إخراج	لاسلكي
850MHz	32.5±0.8dBm	GSM
900MHz	33±0.8dBm	
1800MHz	29.5±0.8dBm	
1900MHz	29.5±0.8dBm	WCDMA
Bands 1/2/4	23±0.8dBm	
Bands 5/6/8/19	23.5±0.8dBm	LTE FDD
Bands 1/2/3/4/66	23±0.8dBm	
Bands 5/8/12/17/18/19/20/26/28	23.5±0.8dBm	LTE TDD
Band 7	22.7±0.8dBm	
Bands 38/39/40/41	23±0.8dBm	5G NR
n1/n3/n38/n40/n41/n77/n78	23±0.8dBm	
n7	22.7±0.8dBm	Bluetooth
n5/n8/n20/n28	23.5±0.8dBm	
2.4-2.4835GHz	8.5±3dBm(EIRP)	2.4G Wi-Fi
2.4-2.4835GHz	15±2dBm(EIRP)	5G Wi-Fi
5.15-5.35GHz; 5.47-5.725GHz	14±2.5dBm(EIRP)	
5.725-5.85GHz	10.5±2.5dBm(EIRP)	NFC
13.56MHz	≤42dBuA/m @10m	

المواصفات الفنية

طراز المنتج	RMX3241
خصائص شاشة العرض الرئيسية	6.5 بوصة
الأبعاد	162.5x74.8x8.5 (مليمتر)
البطارية	4890mAh/18.92Wh(Min) 5000mAh/19.35Wh(Typ)
الكاميرا	48 ميجابكسل + 2 ميجابكسل خلفية 2 ميجابكسل أمامية 16 ميجابكسل أمامية
درجة حرارة التشغيل	35°C-0°C
قيم SAR	CE SAR <2.0W/kg (رأس) <2.0W/kg (جسم)

realme

Quick Guide RMX3241

realme

