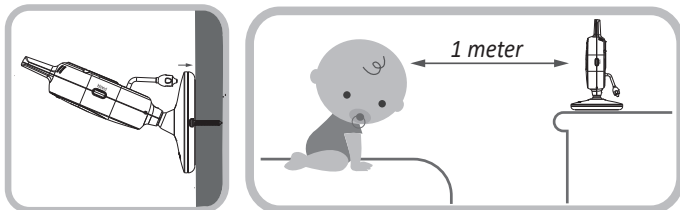B024T **JouSecu**

INSTRUCTION MANUAL

1 Setup and use your digital video baby monitor
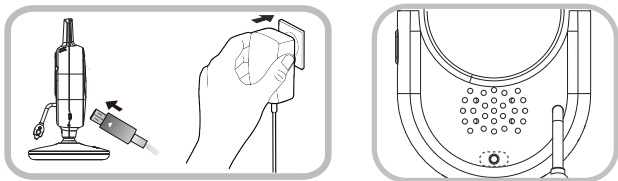
Installing Baby Unit

A. Place Baby Unit on a flat surface, such as a desk or shelf or mount the camera on a wall.
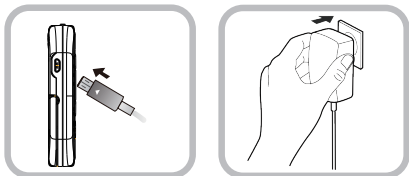
1 meter

Never place the baby unit or the cord within 1 meter of the crib.

B. Connect the small plug of the power adapter to the Baby Unit and the other end to a suitable electrical outlet. Only use the enclosed adapter (5V DC 1000mA). The baby unit is turned on and the power LED will be green.

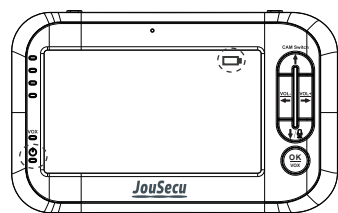**C.** Connecting the power supply for the Parent Unit. Connect the small plug of the power adapter to the parent unit and the other end to a electrical outlet. Only use the enclosed adapter (5V DC/1000mA). Recommend charging time of at least 3 hours before first use.

2 Precaution: use of battery for Parent Unit

Only charge the battery when the battery life indicator is low. Constant recharging of your battery before the low battery indicator light comes on will decrease the life of your batteries.

When battery is low, the power on off LED (icon) will flash red and on screen display battery icon will flash red indicating that the battery needs to be charged.

Notice:
If you use the parent unit for the first time, when you turn on the parent unit, some boot menus will pop-up on the screen, we try to explation status and function on these menus, please according to the tips to switch to the monitor system interface. When you are fimaliar with this monitor, you could switch off these on screen tips in menu.

3 Function of keys and LED indicators

Parent Unit

Sound Level indicator
Visual indicator for sound picked up from baby unit. The louder the sound is from Baby unit, the more LEDs are light on.

Power Savingn off status
Steady Green: Power saving mode is activated.
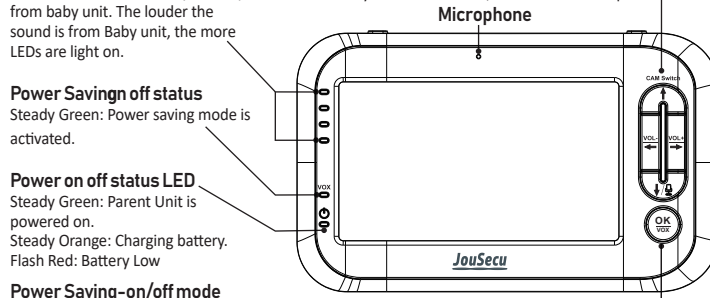
Power on off status LED
Steady Green: Parent Unit is powered on.
Steady Orange: Charging battery.
Flash Red: Battery Low

Power Saving-on/off mode
Screen is switched off to save battery energy. When keep audio on in power saving mode, the screen will always be off. When keep audio off in power saving mode, when baby cry loud enough, screen is switched on to display baby's video. Baby cry level is adjustable from Menu setting (Sensitivity Level L, M, H, AUTO).

Short cut to switch camera view
Press this key to view camera 1, camera 2 and etc. paired camera.

Microphone

Antenna
Lift up antenna to have better reception of audio and video
Reset
Short press to turn off the parant unit, and need to restart.
USB port
Battery Door
Open the battery door to change battery.
Kick Stand
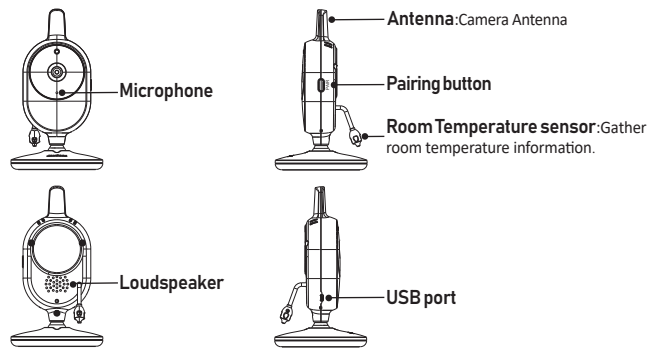Flip out the kick stand and place the Parent Unit on a stable, level surface.

Loudspeaker

MENU
Press to open and exit menu options.

Power :Press and hold to switch "On/Off" the unit.

VOL- VOL+	Volume down/up	Press to decrease and increase volume.
🎤	Talk	Press and hold to talk to baby unit.
OK VOX	Power Saving-on/off	Press to switch on/off Power Saving (voice activation mode).
	Select	Menu mode (Press to select menu option)
↑ ↓	Up/Down	Menu mode (Press to adjust menu settings)
← →	Left/Right	Menu mode (Press to adjust menu settings)

Baby Unit

Antenna :Camera Antenna

Pairing button

Room Temperature sensor :Gather room temperature information.

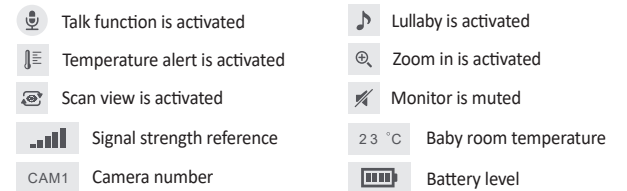**Microphone**

Loudspeaker

USB port

PAIR	Pairing button	When camera is powered on, press it the power LED starts to blink, the camera is in pairing mode, and press it again to exit pairing mode.

4 Start to use monitor

Status bar

🎤	Talk function is activated	♪	Lullaby is activated
	Temperature alert is activated	🔍	Zoom in is activated
👁	Scan view is activated		Monitor is muted
📶	Signal strength reference	23 °C	Baby room temperature
CAM1	Camera number	🔋	Battery level

Menu operation

Adjust Parent Unit LCD Brightness lighter or darker.	Adjust camera volume : Sound level from 1 to 5.

♪ Activate or deactivate lullaby function, 5 lullabies can be chosen. When turn on lullaby, on Baby Unit side will always hear the ringtone from Parent Unit.

Repeat: Repeat all lullabies.
OFF: Deactivate lullaby function.

ADD: Add additional camera.
Step 1: Move the parent unit to the same area as the camera. Both parent and baby unit are switched on.
Step 2: Select ADD in Menu. The next available camera will automatically be highlighted. Press "Select" to begin pairing.
Step 3: Within 10 seconds, press "Pairing button" of camera.
Step 4: Once successfully paired, the camera light will stop flashing and video will appear on the monitor screen within 20 seconds.

Delete: Delete paired camera from the list.
SCAN: Display paired camera one by one.
View: Select and display the camera.

Zoom
Out / **In**

High: Beep Alarm is issued when room temperature is higher than this setting.
Low: Beep Alarm is issued when room temperature is lower than this setting.
C: Display temperature in Celsius scale.
F: Display temperature in Fahrenheit scale.
Temperature calibration: calibrate room temperature display to your standardized one.
ON: Activate room temperature alarm function.
OFF: Deactivate room temperature alarm function.

Baby's crying sound level
To activate Parent unit from Power saving mode

Activation sound level selection and leave audio off in power saving mode.
Auto: Learning environment sound and activation. Recommend for users having white noise machine, fans and lulllabies near by.
Quiet: Baby cry a little bit to activate the Parent Unit.
Medium: Baby cry moderate to activate the Parent Unit.
Loud: Baby cry louder to activate the Parent Unit.
Turn off screen and leave audio on: Keep audio continuously on when screen is off in power saving mode.
Sound Bar: This sound bar is disigned for deaf parents to reflect sound level picked up from camera. You can turn visual sound level indication on or off.
Explanation On/Off: We try to explation status and function on the boot menu. You can turn the explanation on or off based on your usage.