


# Wi-Fi Digital Photo Frame

## USER MANUAL

Model: WF150N

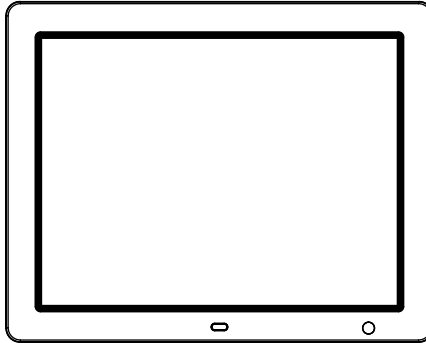

Congratulations on purchasing your new Wi-Fi Digital Photo Frame. With this Digital Photo Frame, you can easily and quickly receive photos directly from your android/iOS smartphones and iPad through the included (downloadable) App or web portal. You can also view photos directly from an external memory card or USB Flash Drive. The Digital Photo Frame is compatible with the following external memory devices: Secure Digital (SD) card, Secure Digital High Capacity (SDHC), Multi Media Card (MMC) and USB Flash Drives.

# English


V20210520

# Contents


WHAT'S IN THE BOX .....	2
GET TO KNOW YOUR DIGITAL PICTURE FRAME .....	3
PRODUCT FEATURES.....	3
PRODUCT SPECS.....	3
SYSTEM REQUIREMENTS.....	4
FRONT AND BACK SIDE OF FRAME.....	4
REMOTE CONTROL.....	6
WALL MOUNT YOUR FRAME.....	7
IMPORTANT SAFETY PRECAUTIONS .....	7
SAFETY INSTRUCTIONS.....	8
CARE AND MAINTENANCE.....	9
SETUP AND CONNECTION.....	9
SEND AND VIEW PHOTOS/VIDEOS FROM OK FRAME APP.....	17
OK FRAME APP INSTRUCTIONS.....	21
WEB PORTAL.....	30
INSTRUCTIONS OF THE WIFI FRAME.....	31
CONNECTING WITH A USB DRIVE OR SD CARD.....	33

# WHAT'S IN THE BOX

Please check the accessories as soon as you receive the frame to make sure you have all of them:

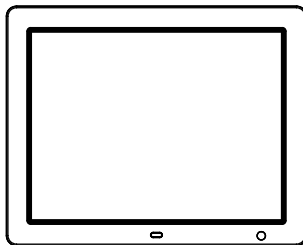


JEEMAK Digital Picture Frame \*1 pcs

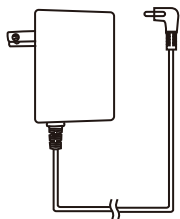


Power Adaptor \* 1pcs



Remote Control \* 1 pcs

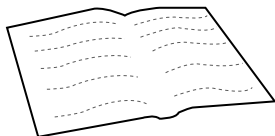

User Manual \* 1pcs

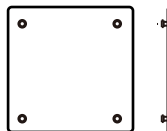

VESA Bracket \* 1 pcs

# GET TO KNOW YOUR DIGITAL PICTURE FRAME

## 1 PRODUCT FEATURES

- 1024 x 768 high resolution screen for better visual effect of photos
- Free 10GB cloud storage for storing your favorite photos
- Wi-Fi enabled internet photo frame with OK Frame App or Web Portal
- Wi-Fi connected frame allows you to send photos/videos from Android/iOS smart phones and iPad to the frame
- Pair multiple phones/devices (Android/iOS) to one frame or one phone/device to multiple frames
- Personalized playlist group your treasured photos and enable sharing to be easy
- Customizable slideshow transition effects
- Programmable sleep timer turns display on/off automatically
- Motion sensor available; the frame turns on when someone is near the picture frame and turns off when no one is around
- View photos, musics, videos from your USB drive or SD card.

## 2 PRODUCT SPECS

- Wi-Fi: WLAN built-in Wi-Fi module; supports IEEE 802.11 b/g/n
- File format: supports JPG, BMP, PNG pictures files; supports MP4 video files with resolution of 1920x1080; supports MP3, WMA audio files
- I/O interface: USB 2.0 port\*1, SD/MMC port\*1, 3.5mm earphone jack\*1
- Power: adaptor input (100-240V, 50/60Hz), adaptor output (DC output, 12V/1.5A)
- Screen: Non-touch screen with high-resolution 1024x768, Aspect Ratio 4:3
- Storage: 10GB cloud storage
- Supported external memory devices: SD, SDHC, MMC, and USB flash drive, Maximum support 64GB, not included in the standard package
- Operating temp: 0°C to 40°C, storage temp: -10°C to 60°C
- Operating humidity: 10-90% (non-condensing)


### 3 SYSTEM REQUIREMENTS

- Wi-Fi router with a 2.4GHz internet connection
- Android mobile device with OS 6.0 or higher, or Apple mobile device with iOS 10.0 or higher


**NOTE:** These products are NOT compatible with Linux or Windows phones

### 4 FRONT AND BACK SIDE OF FRAME

Front of Frame

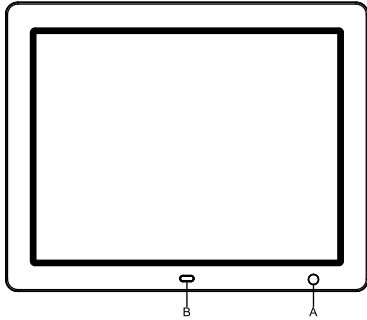

Back of Frame

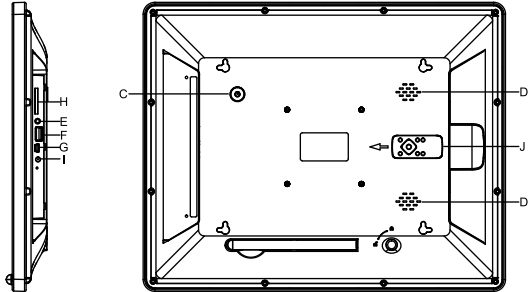

#### A: Motion Sensor

Senses movement and turns the Digital Frame on and off.

#### B: Infra-red Sensor

Receives signals from the remote control.

#### C: Power Button

Turns the Digital Frame on or puts it into standby.

#### D: Loudspeakers

Built-in loudspeakers for musics and videos.

#### E: Headphone/Speaker Port

Connect your headphones or speakers.

#### F: USB Port

Insert a USB drive to view photos, musics and videos.

#### G: Mini USB Port

For after sale service only.

#### H: SD/SDHC Card Slot

Connect and view photos, musics and videos from the memory card.

#### I: Power Adaptor DC-IN (12V)

Plug in power adaptor for power.


#### J: Storage Cabinet of Remote Control


Plug in remote control when not using it.




1. Blocking the infrared or motion sensor will cause those functions to fail.
2. The USB port designed only for reading USB drives, neither for charging or other use.

## 5 REMOTE CONTROL

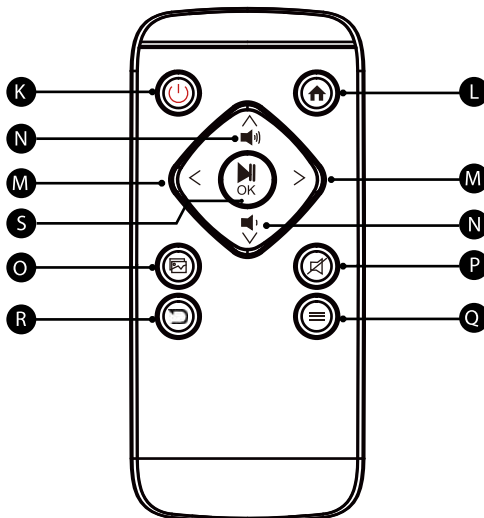


K:  ON/OFF Button - Turns the frame on or puts it into standby


L:  Home - Go back to home menu


M:  or  Move cursor left/right

N:  or  Move cursor up/down. Up/Down volume when playing videos, musics

O:  Slideshow -Starts slideshow

P:  Mute

Q:  Sub-menu - Enter sub-menu

R:  Back - Return to the previous menu

S:  Play - Select/Play/Pause



1.Push catch toward slot.

2.With the catch pushed, pull the battery compartment at the same time.

3.Use the Lithium cell, CR-2025 type.

4.Remove battery stopper for first time use. Maximum working distance is six meters.




## 6 WALL MOUNT YOUR FRAME

You have two ways to mount your frame on the wall.

- 1) Drill two screws on the wall, leave a 10mm gap between the wall and the head of screw. Mount the frame onto the screws by wall mount hole and slide down to lock into place.
- 2) Prepare a VESA mount bracket. Lock the VESA mount bracket into the VESA holes on the back side of the frame. Then you can hang the frame on the wall.

**NOTE:** A VESA mount bracket is included in our merchandise.

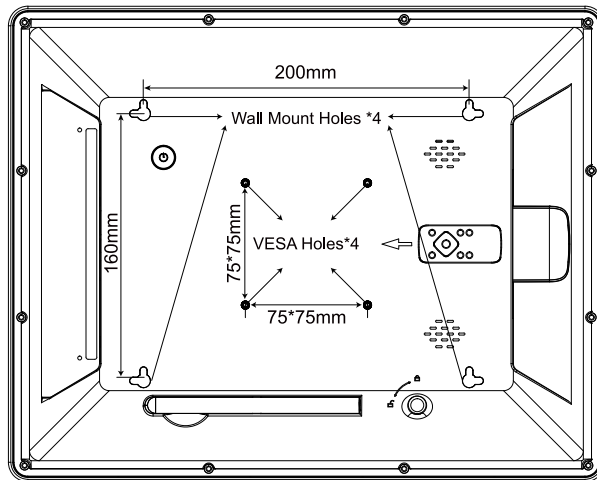

## 7 IMPORTANT SAFETY PRECAUTIONS

- High voltage product. Please do not open the casing of the digital photo frame. Servicing of the frame should be done by qualified personnel only.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- To avoid permanent loss of data, do not insert or remove memory cards or USB devices when the frame is powered on.

## 8 SAFETY INSTRUCTIONS

- Do not expose the product to liquids or objects filled with liquids, such as vases. Use in a dry location only.
- Keep product away from open flames, such as candles.
- Keep the digital photo frame clean and never store it near a heat source or in dirty, humid, or wet places. Keep it out of direct sunlight.
- Do not drop the product. It may result in damage to the product and loss of data.
- Do not attempt to repair or disassemble the unit by yourself. Only qualified service personnel should perform repairs.
- The digital photo frame is for indoor use only.
- Use only the DC 12V/1.5A power adaptor supplied with this product. Do not unplug the adaptor while viewing the pictures.
- Do not block the ventilation holes on the back of the digital photo frame.
- Children should be supervised to ensure safety.
- To prevent overheating and damage to the screen, unplug the product when you do not intend to use it for a long period of time.
- Please insert the plug into the DC IN jack on the unit completely before connecting the AC adaptor to an electrical outlet.
- This product can only display files with compatible formats.
- Do not use the product in extreme temperatures over 105° F (40° C).
- Do not allow metallic objects to touch the DC plug when the player is on.

## 9 CARE AND MAINTENANCE

- Always turn off the unit and remove the power adaptor from the electrical outlet before cleaning the unit.
- Use a soft dry cloth to clean this product.
- Never spray or pour liquids directly onto the screen or casing.
- Do not use abrasive materials or chemical cleaners such as alcohol, benzene, etc. Do not allow any water or other liquid to enter the device.
- Do not drop the device as the devices cannot withstand shock from falls.
- Do not hit or scratch the screen. Handle it with care. The LCD panel of the photo frame may be damaged due to excessive force or if it comes in contact with sharp objects.

# SETUP AND CONNECTION


## **IMPORTANT: Before you install your Wi-Fi frame**

- Peel back and remove plastic screen protector from the LCD panel using the tab in the upper right corner.
- Keep the frame as close to the Wi-Fi router as possible, preferably within 10 feet.
- If you are going to place your frame more than 20 feet from your router or on another floor you may require a Wi-Fi extender.
- Connect the frame using the included power adaptor, and the frame will automatically turn on. Follow the below on-screen instructions to set up your frame.

**NOTE:** When the frame powers on the JEEMAK logo be drawn three times will on the screen while the system initializes (around 45 seconds) .

## **1 Setup the language and time zone**


Please select your preferred language and time zone and click next.

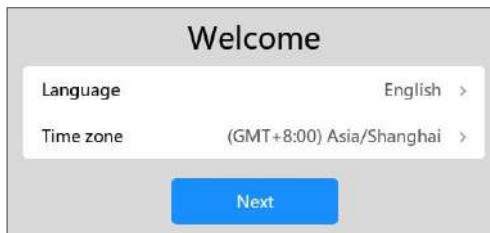

## 2 Wi-Fi setup

- All the nearby available Wi-Fi networks will be listed on the device.
- Select your Wi-Fi network from the list.




- Enter the Wi-Fi password by pressing the 4-way direction arrow button of the remote control. It is necessary for you to press "OK" to confirm each letter you enter. And click  for confirmation when you finish inputting all the letters of the password. After Wi-Fi is connected, a tick will appear.



### 3 Download the OK Frame App on your Android/iOS devices

There are two options for you to download the OK Frame APP.

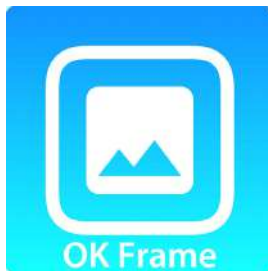

**Option 1:** Scan the related QR code on the frame to download it.




**Option 2:** Available on the App Store or Google Play for your Android/ iOS smartphones and iPad.

Search "OK Frame" in App Store or Google Play to download it.



## 4 Create an account on OK Frame APP

Create an account before the first-time use. It is mandatory to create an account before using the device. Follow the on-screen instructions to create your account.

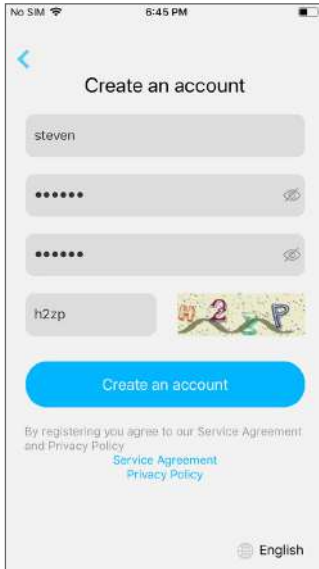

No SIM 8:45 PM

Create an account

steven

.....

.....


h2zp

4 2 P

Create an account

By registering you agree to our [Service Agreement](#) and [Privacy Policy](#).

English

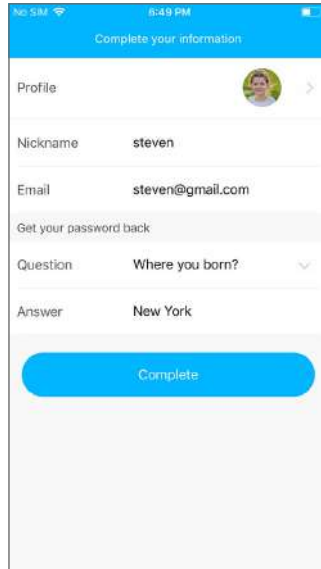

No SIM 8:49 PM

Complete your information

Profile

Nickname steven


Email steven@gmail.com

Get your password back

Question Where you born?

Answer New York

Complete

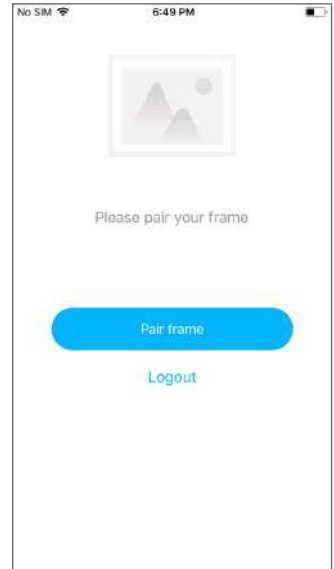

No SIM 8:49 PM

Please pair your frame

Pair frame

Logout

**NOTE:** Username and captcha are case insensitive. Password is case sensitive. So please note which letters you capitalize.

## 5 Pair the frame

Click "Pair frame" .


a-1) Scan the QR code to pair the frame.

Scan the QR code and follow the on-screen instructions and enter all the required information to pair the frame.




a-2) Input the SN number to pair the frame.

Input the SN number, Click "Sure" on OK Frame App. Then you can see the below window appearing on the home screen of your digital picture frame. Choose "Agree".

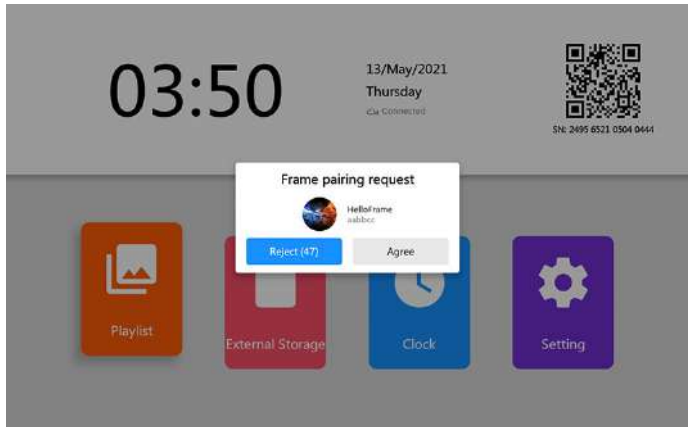





b) Input the frame name and upload the frame cover.

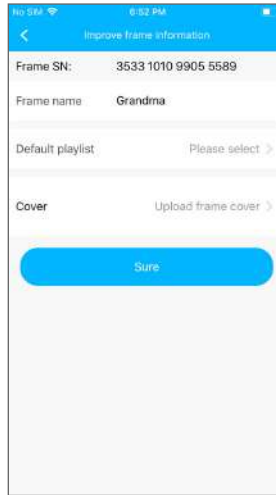



c) Create a default playlist by below steps.

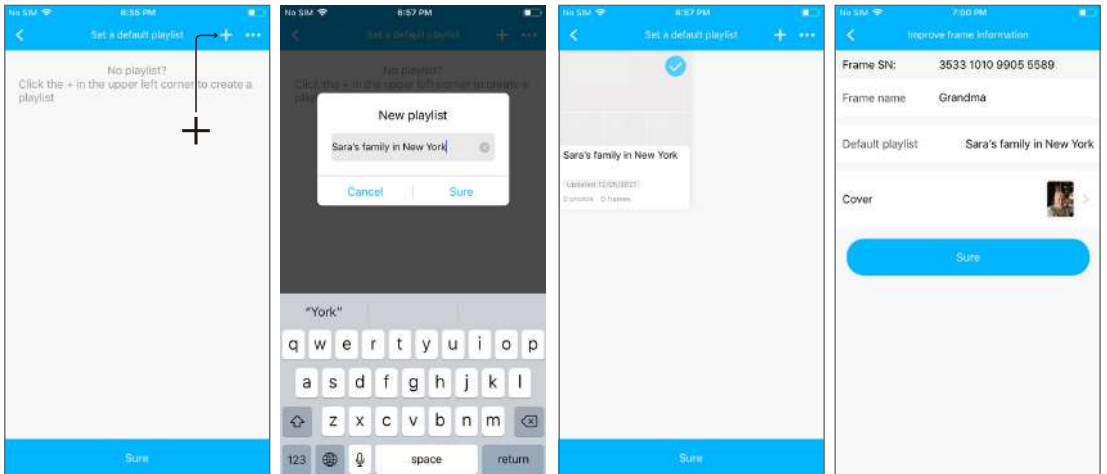

d) Click “Sure” to proceed and the frame is paired successfully when you see the below window screen.

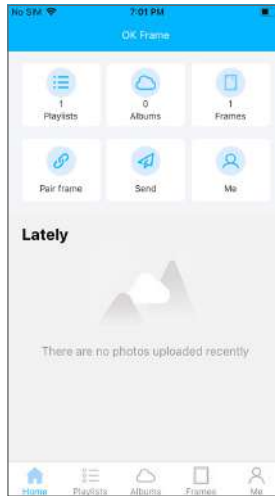

**Important Notice 1:** The SN number of the device shown on below two different windows for your easy use. They are same SN number and both workable.

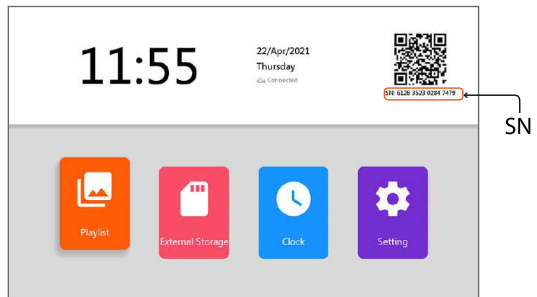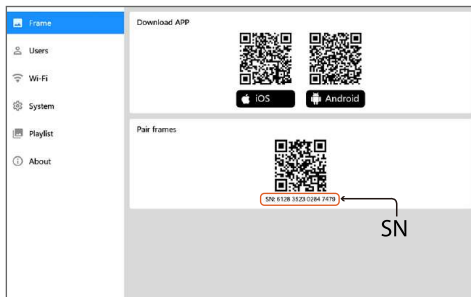


**Important Notice 2:** For first-time use, it is necessary for you to create at least one default playlist for your personal use. This default playlist is added to the paired frame automatically. All the photos/videos you send will be saved in this playlist as default. Of course, You can change the default playlist if you have one more playlist.

# SEND AND VIEW PHOTOS/VIDEOS FROM LOVCUBE APP

There are three options for the user to send photos/videos to the paired Wi-Fi digital picture frame to play.

## 1 Send photos/videos to the Wi-Fi photo frame by “Send”

Once Setup is complete you will be able to send photos/videos from your mobile devices to the frame. The following flowchart shows the detailed steps to send photos.

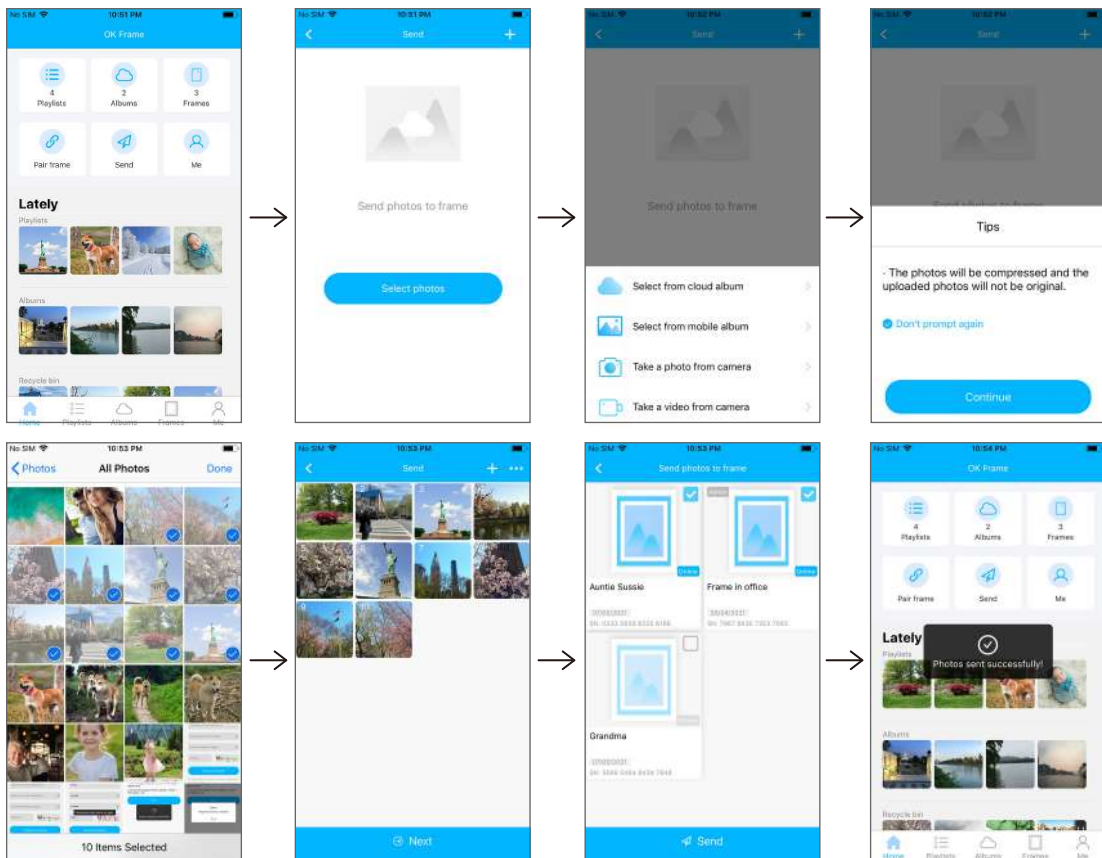


**NOTE:** We strongly recommend that you only play in those “Online” frames. Those “Offline” frames will not receive the photos/videos you send.

## 2 Send photos/videos to the Wi-Fi photo frame using “playlist” on OK Frame APP

a) The blue triangle quick share button is available on the playlist section. We call this triangle button as “Play Button”. You can click it to share the full photos/videos from the selected playlist to all paired frames.


**NOTE:** The Digital Photo Frame will display all the photos/videos added under the playlist. There are no options to display only some from the playlist.

Please make sure that the playlists are added to the correct Digital Photo Frame in case you have multiple frames.

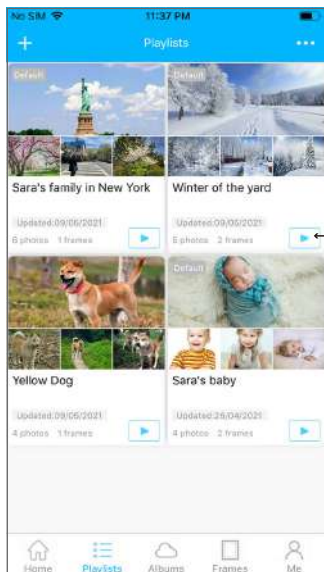


Play Button

b) You can also click a playlist icon to enter the editing interface. Then click “Frames”, you will see all frames paired with this playlist. Choose one frame and click “Play Button”, so you will play this playlist in selected frame only.

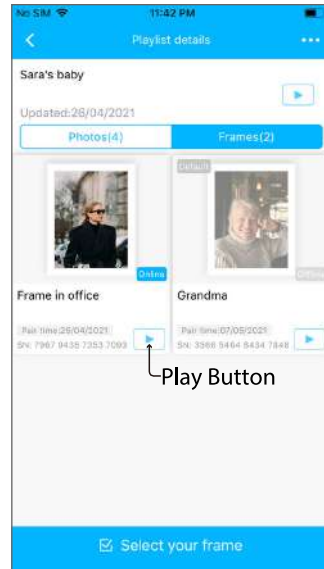

### 3 Send photos/videos to the Wi-Fi Photo Frame using “Frames” on OK Frame APP


Under the “Frames” menu, all the playlists will be listed here if they are added to the frame in advance. You can also share the full photos/videos easily by click the blue triangle “Play Button”.

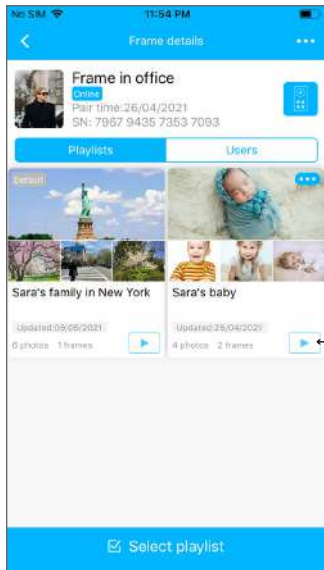

Play Button

# OK FRAME APP INSTRUCTIONS

## 1 Home screen of OK Frame App

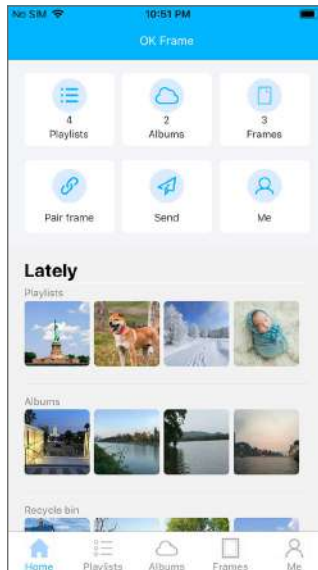


### Home



Home screen includes the icons of the Playlists, Albums, Frames, Pair frame, Send and Me. It will jump to the related page for your further action when you choose it.

## Playlists

A playlist is simply a collection of photos and videos you upload. You can create different playlists to manage your photos and videos, which makes you to find the intended photos or videos easily from the millions of photos and videos. With the playlist, you can

a) Share your photos/videos quickly by the quick “Play Button”.

b) Sort your playlists by pressing  at the right corner of the screen to make sure you can find the photos/videos easily.

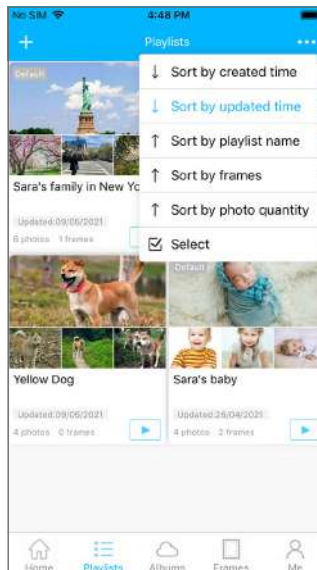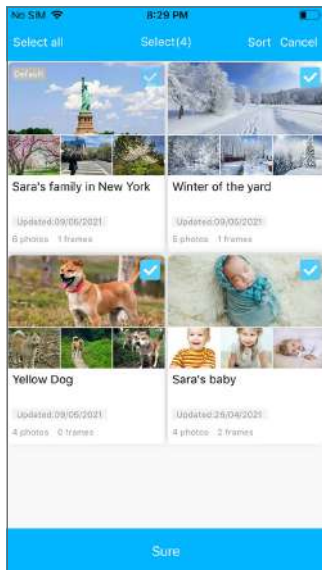




## Albums

All the Albums you created will be shown here. You can upload photos/videos to the Albums by OK Frame App or Web Portal.

All the photos/videos of the album are saved in the OK Frame cloud server. We provide free 10GB cloud storage for you.

When you log in your account in Web Portal, you can download all photos and videos from your Albums.



**NOTE:** We strongly recommend that you back up your photos/videos in computer or other storage devices.

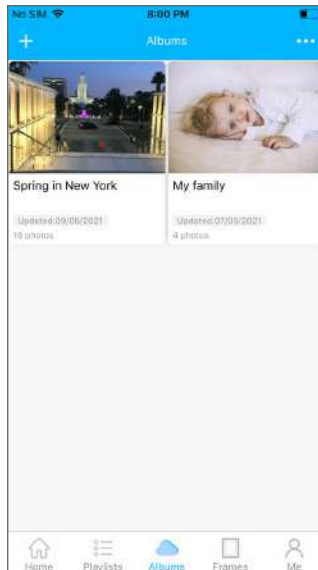

## Frames


You can manage your paired frames here.

- Show all the frames that OK Frame App paired. And you can see the online/offline status of the frames.
- Under each frame, all the playlists are shown and you can share them easily by click the blue triangle "Play Button".

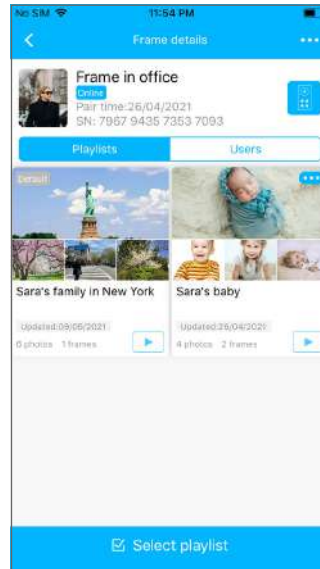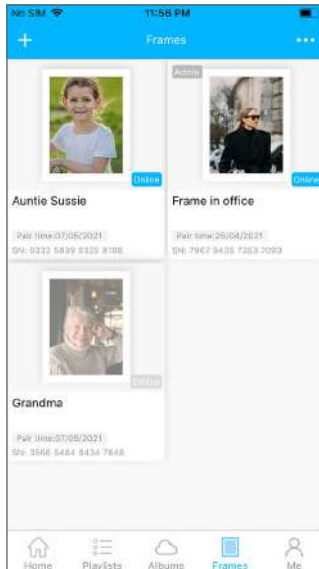

c) If you are set as an administrator of a frame, you can also have below rights,

- 1) You can see all users paired with a frame. In the meanwhile, you can set or cancel a user as an administrator.
- 2) You can control the frame by using below online remote control.

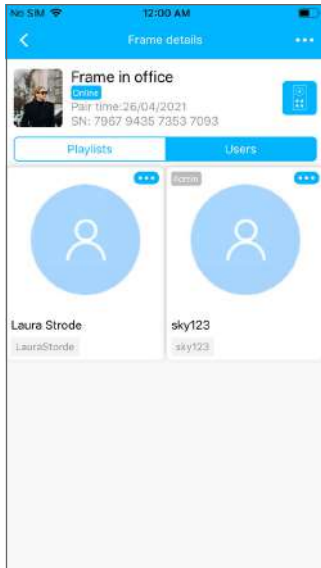

## Me

Show some information about your paired frame.

Cloud storage - The maximum memory capacitive is 10GB. All the photos/videos under Playlists or Albums are saved here. It shows the memory size for used and unused.


Change mail - Change your registered email address

Change password - Change your password if needed

Recycle bin - All the deleted photos/videos are saved here temporarily.

Clean up cache - Clean up useless cache files. Cleaning up does not affect normal use.

About Frame - Show "Service Agreement" and "Privacy Policy" of the frame.


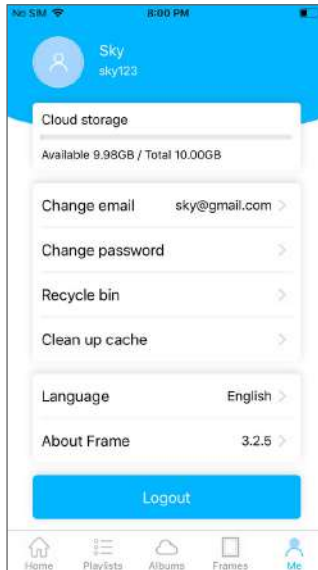


## 2 Important operations for OK Frame App

### a) Create a new playlist





Under "Playlists" menu of the OK Frame App, except for the default playlist you created when registered, it is allowed to create a multi-playlist for easy use. Steps as below.

Create a new playlist

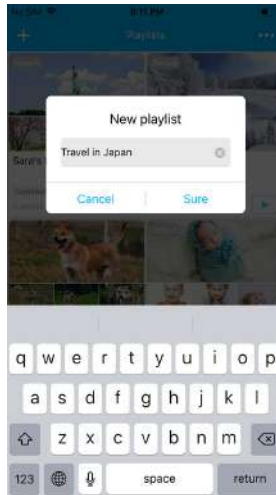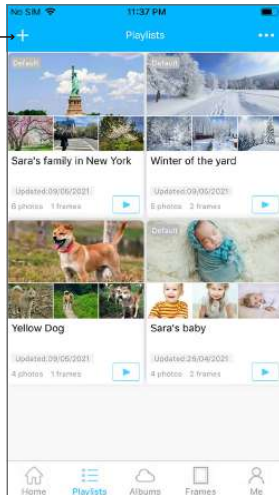

## b) Add playlist to your paired frame




Under “Frames” menu of the OK Frame App, it can show all the playlists that added to the frame only. Below are the steps to add new playlists to the frame.

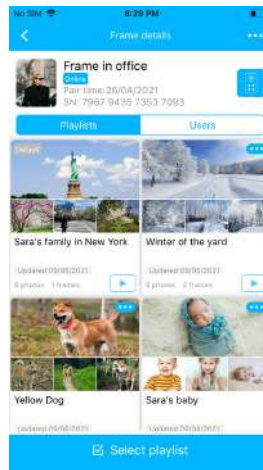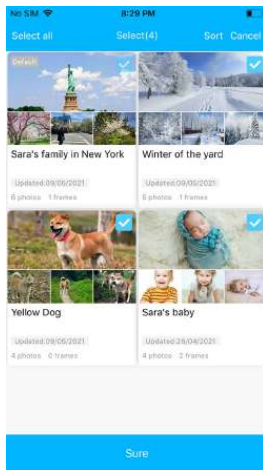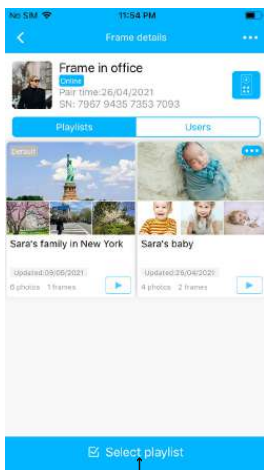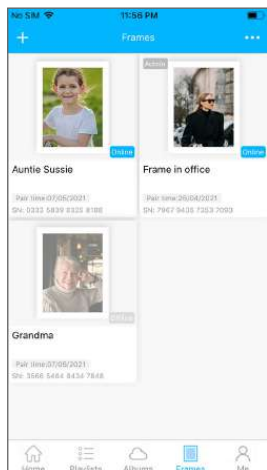

Select playlist


## c) Change default playlist or remove playlist

Besides the playlist you created when registered as the default playlist, you can change it when you have more than one playlist under “Frames” menu of the OK Frame App. Below are the steps.

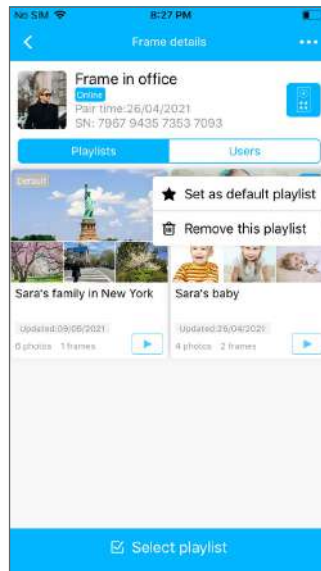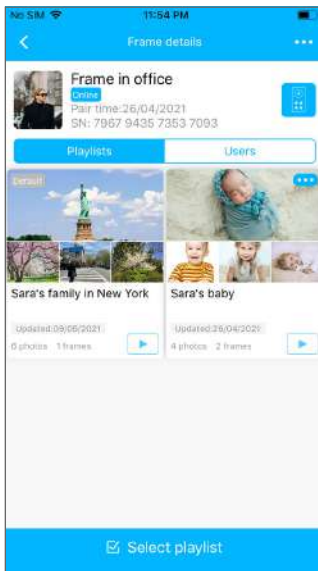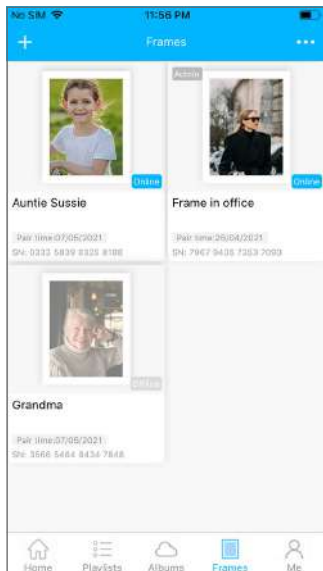

## d) Find password back


Forgot your password? Follow the on-screen instructions, you can find it back.

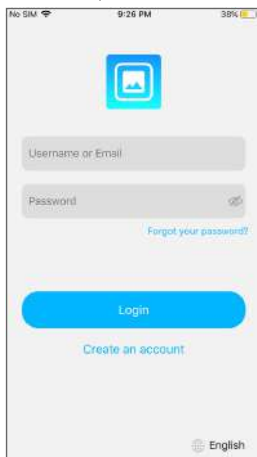

## WEB PORTAL

Besides the OK Frame APP, you can also visit [www.okayframe.com](http://www.okayframe.com) to upload your photos and videos to the OK Frame cloud and manage your playlists, albums, frames. The login name and password of the OK Frame APP can be used in common with [www.okayframe.com](http://www.okayframe.com).


You can download all photos and videos from your Albums here.

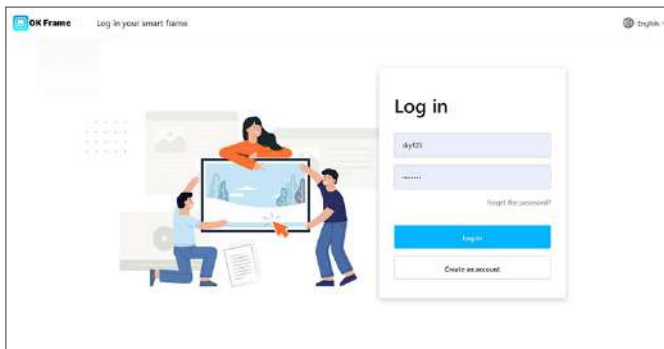



# INSTRUCTIONS OF THE WIFI FRAME

## Home screen of Digital Photo Frame

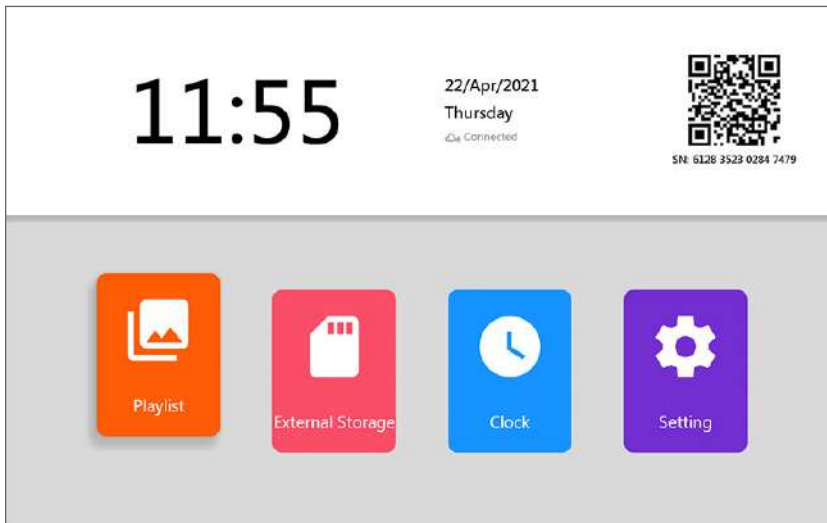

The frame will show the time and date on the top. There's also symbol showing the connecting status between the frame and OK Frame cloud server. When it shows "connecting...", it indicates connecting is on process; when it shows "connected", it indicates connecting is fulfilled.

**NOTE:** When you set up the frame for the first time, you need connect to Wi-Fi to regulate the time. Each time when you power on the frame after you cut off the power, you need ensure Wi-Fi is successfully connected so that the time can be regulated.


**Playlists:** Show all the playlists that added to the frame from OK Frame App. The playlists under the frame menu of the OK Frame App are sync to the playlists of Wi-Fi Frame automatically.

**External Storage:** The Digital Photo Frame supports an external SD/MMC Card or USB drive, Maximum 64GB.

You can view photos, musics, videos from your USB drive or SD card.

**Clock:** Display a clock.

**Setting:** Navigate the setting menu using the 4-way navigation pad on the remote control.

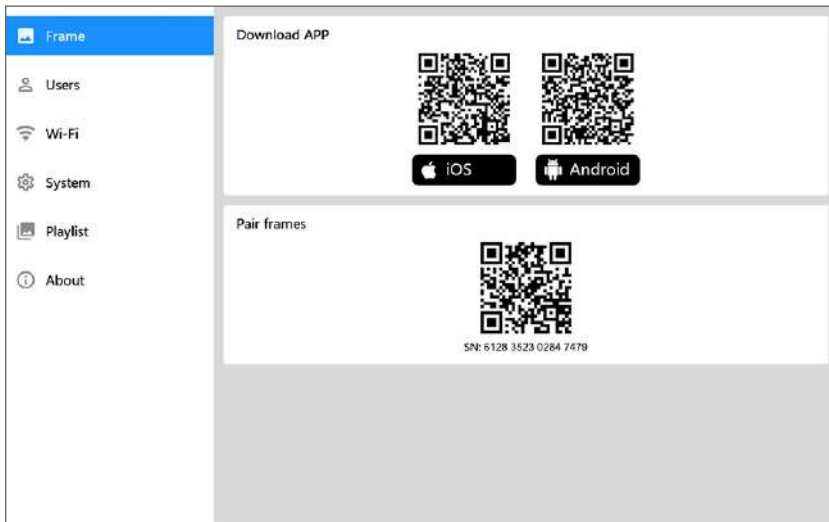

Item	Content for setting	Functions
Frame	Show APP Download QR Code	Download App
	Show SN number of the frame	Pair frames
Users	All the paired APP users are listed here, you can set up admin here	Set or cancel Admin
	Delete App user	Delete user of App
Wi-Fi	Wi-Fi Setup	Connect to Wi-Fi
System	Language	Set your language
	Time Zone	Set your time zone
	Brightness	Adjust the brightness
	Volume	Adjust the volume
	Sleep schedule	Set sleep mode start & end time
	Motion sensor	Set sleep time of motion sensor
	Auto slideshow	Set waiting time of auto slideshow if not any operation
Playlist	12-Hour time	Set 12-Hour time or 24-Hour time
	Transition type	Set transition effect of slideshow
	Transition time	Set transition time of slideshow
	Show caption	Set whether or not to display the captions that your friends have sent with the photo
	Show clock	Set whether or not to show clock and date when slideshow
	Show playlist owner's profile	Set whether or not to show the sender of playlist
	Show serial number	Set whether or not to show the sequence no of photo or video

Playlist	Auto play all playlists	Set whether or not to play all playlists
	Random play	Set whether or not to play in random turn
About	Model name	Show the model No of frame
	Frame serial number	Show SN of frame
	Display resolution	Show resolution of frame
	MAC address	Show MAC address of frame
	Check for update	Update the OS of frame
	Restore to factory settings	Restore to factory setting

## View photos on the Wi-Fi Digital Photo Frame

Once the frame receives the photos which you send by “Send”, you will see a notification on the display that new photos are received. Then the new photos will be play on the inserted at the beginning of the slide show and be displayed in sequence.

Once the frame receives the photos which you send by “Playlists”. You will see a notification on the display that the new playlist is received. All the photos/videos under the playlist will be played one by one.

Navigate the Digital Photo Frame using the 4-way navigation pad on the remote control.

## CONNECTING WITH A USB DRIVE OR SD CARD

To view photos from USB drive/SD card, insert it into the related port on the back side of the frame. Then choose the “External Storage” icon of the home menu by remote control, and press “OK” for confirmation. The Digital Frame will start to play the photos/videos included in the SD/MMC card or USB Drive

**NOTE:** SD/MMC card and USB storage support 64GB maximum.

Do not force the memory card into the slot. If you are not able to insert the memory card easily, you may have inserted it incorrectly; turn the card over and try again.

Do not remove a memory card immediately after inserting it or when the frame is processing files. Wait until the screen is stable.

## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.


**Japanese**

# 内容


ボックスの内容.....	39
デジタルフォトフレームを了解.....	40
製品機能.....	40
製品仕様.....	40
システム要件.....	41
前面と背面.....	41
リモコン.....	43
フレームを取り付けます.....	44
重要な安全上の注意.....	44
安全説明.....	45
機械の保護.....	45
設定と接続.....	46
OK FRAME アプリ写真/ビデオを送信、表示する.....	54
OK FRAME アプリの説明.....	58
アプリのホームページ.....	67
機能と設定.....	68
USBドライブまたはSDカードの接続方法.....	71

# ボックスの内容

フレームを受け取ったら、すぐにアクセサリをチェックして、すべてのアクセサリが完成していることを確認してください。

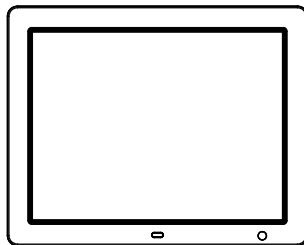


JEEMAKデジタルフォトフレーム\* 1

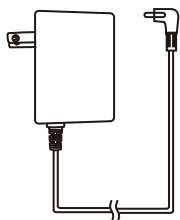


電源アダプター\* 1



リモコン\* 1

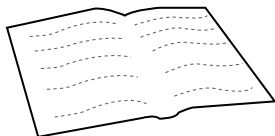

日本語説明書\* 1

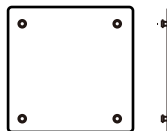

VESAブラケット\* 1



# デジタルフォトフレームを了解

## 1) 製品の特徴

- 1024x768の高解像度画面、写真により良い視覚効果をもたらすことができます
- お気に入りの写真を保存するための無料の10GBクラウドストレージスペース
- OKフレームアプリまたはWebポータルを使用して、Wi-Fiインターネットフォトフレームを有効にします
- Wi-Fi接続フレームを使用すると、Android/iOSスマートフォンおよびiPadからフレームに写真/ビデオを送信できます
- 複数の電話/デバイス（Android/iOS）を1つのフレームにペアリングするか、1つの電話/デバイスを複数のフレームにペアリングします
- パーソナライズされたプレイリストは、大切な写真をグループ化して共有を容易にします
- カスタマイズ可能なスライドトランジション効果
- ディスプレイを自動的にオン/オフするプログラム可能なスリープタイマー
- モーションセンサーを使用できます。誰かがフォトフレームに近づくとフォトフレームが開きます。周りに人がいないとフォトフレームが閉じます
- USBドライブまたはSDカードで写真、音楽、ビデオを表示します。

## 2) 製品仕様

- Wi-Fi：WLAN内蔵Wi-Fiモジュール。IEEE802.11b/g/nをサポート
- ファイル形式：JPG、BMP、PNG画像ファイルをサポートします。1920x1080の解像度のMP4ビデオファイルをサポートします。MP3、WMAオーディオファイルをサポートします。
- I/Oインターフェース：USB2.0ポート\*1、SD/MMCポート\*1、3.5mmヘッドホンジャック\*1
- 電源：アダプター入力（100-240v、50/60Hz）、アダプター出力（DC出力、12V/1.5A）
- 画面：非タッチスクリーン、高解像度1024\*768、アスペクト比4：3
- ストレージ：10GBのクラウドストレージ
- サポートされている外部ストレージデバイス：SD、SDHC、MMC、およびUSBフラッシュドライブ、最大64GB、標準パッケージには含まれていません
- 使用温度：0° Cから40° C、保管温度：-10° Cから60° C
- 使用湿度：10～90%（結露しないこと）。


### 3) システム要件

- 2.4GHz インターネット接続を備えたWi-Fiルーター
- OS6.0以降を搭載したAndroidモバイルデバイス、またはiOS10.0以降を搭載したAppleモバイルデバイス


注：これらの製品は、LinuxまたはWindowsPhoneと互換性がありません。

### 4) 前面と背面

前面

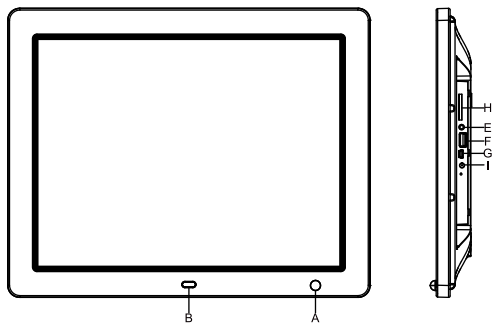

背面

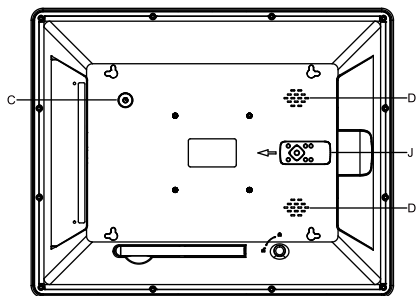

A：モーションセンサー

動きを感知し、デジタルフォトフレームのオンとオフを切り替えます。

B：赤外線センサー

リモコンから信号を受信します。

C：電源ボタン

デジタルフォトフレームの電源を入れるか、スタンバイ状態にします。

D：スピーカー

音楽やビデオを再生するための内蔵スピーカー。

E：ヘッドホン/スピーカーポート

ヘッドホンまたはスピーカーを接続します。

F：USBポート

USBドライブを挿入して、写真、音楽、ビデオを表示します。

G：ミニUSBポート

アフターサービスにのみ適用されます。

H：SD / SDHCカードスロット

接続して、メモリカード内の写真やビデオを表示します。

I：電源アダプターDC-IN（12V）

電源アダプタを接続して電源を供給します。


J：リモコンロック

使用しないときはリモコンを挿入してください。



- 1.赤外線センサーまたはモーションセンサーをブロックすると、これらの機能が失敗します。
- 2.USB読み取り専用のUSBポートドライブは充電可能ではなく、他の目的に使用することもできません。

## 5) リモコン

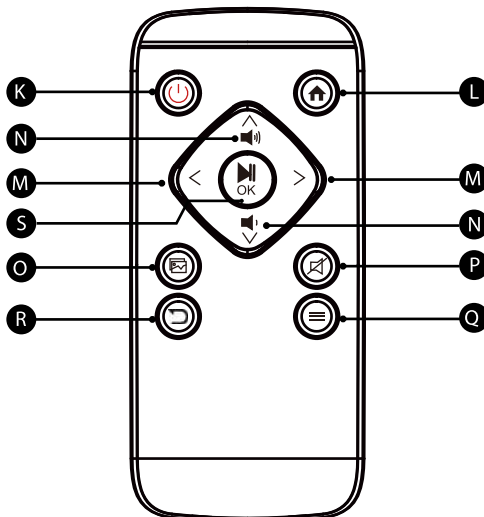

K: ON / OFFボタン-フォトフレームをオンにするか、スタンバイ状態にします

L: ホームページ-メインメニューに戻る

M: < or > カーソルを左右に移動します

N: or ルを上下に動かします。ビデオを再生し、音楽を再生するときに音量を上げたり下げたりします

O: スライドショー-スライドショーを開始します

P: ミュート

Q: サブメニュー-サブメニューに入る

R: 戻る-前のメニューに戻る

S: 再生-選択/再生/一時停止



注意


- 1.クリップをスロットに向かって押します。
- 2.バックルを押すと同時に、バッテリーボックスを引きます。
- 3.CR-2025リチウム電池を使用してください。
- 4.初めて使用する場合はバッテリーストッパーを取り外します。最大作動距離は6メートルです。

## 6) フレームを取り付けます

フレームは2つの方法で壁に取り付けることができます。

- 壁とネジ頭の間に10mmの隙間を残して、壁に2本のネジをドリルで開けます。フレームを壁掛け穴からネジに取り付け、下にスライドさせて所定の位置に固定します。
- VESA取り付けブラケットを準備します。VESA取り付けブラケットをフレーム背面のVESA穴にロックします。次に、フレームを壁に掛けることができます。

**注：**VESA取り付けブラケットは当社の製品に含まれています。

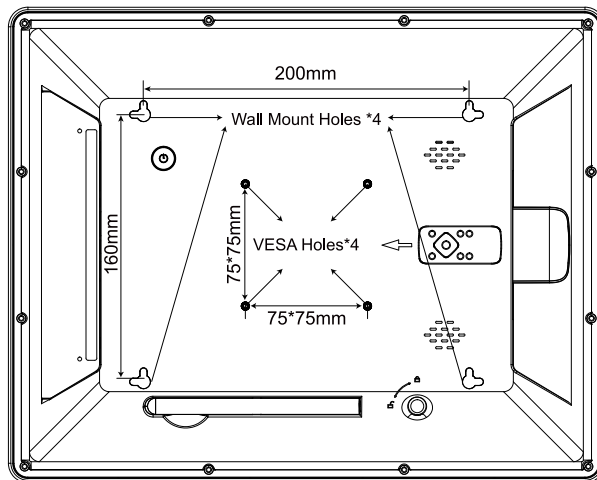

## 7) 重要な安全上の注意

- 高電圧製品。デジタルフォトフレームの筐体は開けないでください。フレームの修理は、資格のある担当者のみが行うことができます。
- 火災や感電の危険を減らすために、この製品を雨や湿気にさらさないでください。
- データが永久に失われるのを防ぐため、ラックの電源を入れたときにメモ리카ードやUSBデバイスを挿入したり取り外したりしないでください。

## 8)安全説明

- 製品を液体や花瓶、その他の液体で満たされた物体にさらさないでください。乾燥した場所でのみ使用してください。
- ろうそくなどの直火から製品を遠ざけてください。
- デジタルフォトフレームは清潔に保ち、熱源の近くや汚れた湿気のある場所に保管しないでください。直射日光を避けてください。
- 製品を落とさないでください。これにより、製品が損傷したり、データが失われたりする可能性があります。
- ユニットを自分で修理または分解しようとししないでください。資格のある保守担当者のみが保守を実行できます。
- デジタルフォトフレームは屋内専用です。
- この製品に付属のDC12V/1.5A電源アダプターのみを使用してください。写真を見ている間はアダプターを抜かないでください。
- デジタルフォトフレームの背面にある通気孔をふさがないようにください。
- 子供は安全を確保するために監督されるべきです。
- 長時間使用しないときは、過熱や画面の破損を防ぐため、電源プラグを抜いてください。
- ACアダプターを電源コンセントに接続する前に、本機のDCIN端子にプラグを完全に差し込んでください。
- この製品は、互換性のある形式のファイルのみを表示できます。
- 105° F (40° C) を超える極端な温度で製品を使用しないでください。
- プレーヤーの電源が入っているときは、金属製の物体がDCプラグに触れないようにしてください。

## 9)機械の保護

- 本機を掃除する前に、必ず本機の電源を切り、電源アダプタをコンセントから抜いてください。
- 柔らかい乾いた布を使用して製品を清掃してください。
- スクリーンやケーシングに直接液体をスプレーしたり注いだりしないでください。
- アルコール、ベンゼンなどの研磨材や化学洗浄剤は使用しないでください。水やその他の液体を装置に入れないでください。
- 落下による衝撃に耐えられないため、落下させないようにください。
- 画面を叩いたり引っかいたりしないでください。取り扱い注意。フォトフレームの液晶パネルは、無理な力や鋭利なものとの接触により破損する場合があります。

# 設定と接続

## 重要な注意：Wi-Fiフレームワークをインストールする前に

- 右上隅のラベルを使用して、LCD画面のプラスチックスクリーンプロテクターをはがし、取り外します。
- フレームをWi-Fiルーターにできるだけ近づけ、できれば10フィート以内に保ちます。
- ラックをルーターから20フィート、または別のフロアから20フィート以上離して配置する場合は、Wi-Fiエクステンダーが必要になる場合があります。
- 付属の電源アダプターでフレームを接続すると、フレームが自動的に開きます。以下の画面の指示に従って、フレームを設定します。

**注：**システムの初期化時（約45秒）、フレームの電源を入れると、JEEMAKのロゴが画面に3回描画されます。

## 1) 言語とタイムゾーンを設定する


ご希望の言語とタイムゾーンを選択し、[次へ]をクリックしてください。



## 2) Wi-Fi設定

- 近くの利用可能なすべてのWi-Fiネットワークがデバイスに一覧表示されます。
- リストからWi-Fiネットワークを選択します。




- リモコンの4方向矢印ボタンを押して、Wi-Fiパスワードを入力します。入力した各文字を確認するには、「OK」を押す必要があります。すべてのパスワードの入力が完了したら、[OK]を  クリックします。Wi-Fiに接続すると、チェックマークが表示されます。





### 3) Android / iOSデバイスにOKフレームアプリをダウンロードします

OKフレームアプリをダウンロードするための2つのオプションがあります。

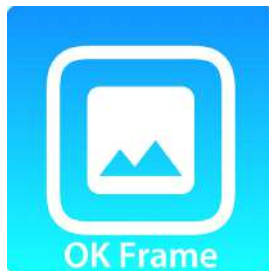

**オプション1:** ダウンロードするフレームの関連するQRコードをスキャンします。



**オプション2:** Android / iOSスマートフォンおよびiPad用のAppStoreまたはGooglePlayで利用できます。

AppStoreまたはGooglePlayで「OKFRAME」を検索してダウンロードします



#### 4) OKフレームAPPでアカウントを作成します

初めて使用する前にアカウントを作成してください。デバイスを使用する前に、まずアカウントを作成する必要があります。画面の指示に従ってアカウントを作成します。

No SIM 8:46 PM

アカウント作成

steven

.....

.....

h2zp

アカウント作成

登録すると、サービス契約とプライバシーポリシーに同意したことになります。

[サービス契約](#)  
[プライバシーポリシー](#)

日本語

No SIM 8:27 PM

あなたの情報を完成させましょう

アイコン

ニックネーム ココワサユキ

メールアドレス steven@gmail.com

パスワードを設定

質問 どこで生まれましたか?

答え 大阪

完了

No SIM 8:27 PM

フォトフレームとベアリングしてください

ベアリング

ログアウト

**注：**ユーザー名とキャブチャは大文字と小文字を区別しません。パスワードでは大文字と小文字が区別されます。したがって、大文字にする文字に注意してください。

## 5) マッチングフレーム

「マッチングフレーム」をクリックします

a-1) フレームに合わせてQRコードをスキャンします。

QRコードをスキャンし、画面の指示に従って、フレームをペアリングするために必要なすべての情報を入力します。



a-2) フレームに合わせてSN番号を入力します。

シリアル番号を入力し、OKフレームアプリで「OK」をクリックします。すると、デジタルフォトフレームのメイン画面に次のウィンドウが表示されます。「同意する」を選択します。



b) フレーム名を入力し、フレームカバーをアップロードします。



c) 次の手順でデフォルトのプレイリストを作成します。



- d) 「OK」をクリックして続行します。次のウィンドウ画面が表示されたら、フレームは正常にペアリングされています。



**重要な注意1:** デバイスのSNは、便宜上2つの異なるウィンドウの下部に表示されます。それらは同じSNであり、使用できます。




**重要なステートメント2:** 最初の使用。個人的に使用するために、少なくとも1つのデフォルトのプレイリストを作成する必要があります。デフォルトのプレイリストは、ペアリングされたフレームに自動的に追加されます。送信するすべての写真/ビデオは、デフォルトでこのプレイリストに保存されます。もちろん、まだプレイリストがある場合は、デフォルトのプレイリストを変更できます。

# OK FRAME アプリ写真/ビデオを送信、表示する

ユーザーは、ペアリングされたWi-Fiデジタルフォトフレームに写真/ビデオを送信して、3つのオプションで再生できます。

## 1) 「送信」を介して写真/ビデオをWi-Fiフォトフレームに送信します

インストールが完了すると、モバイルデバイスからフォトフレームに写真/ビデオを送信できるようになります。次のフローチャートは、画像を送信するための詳細な手順を示しています。

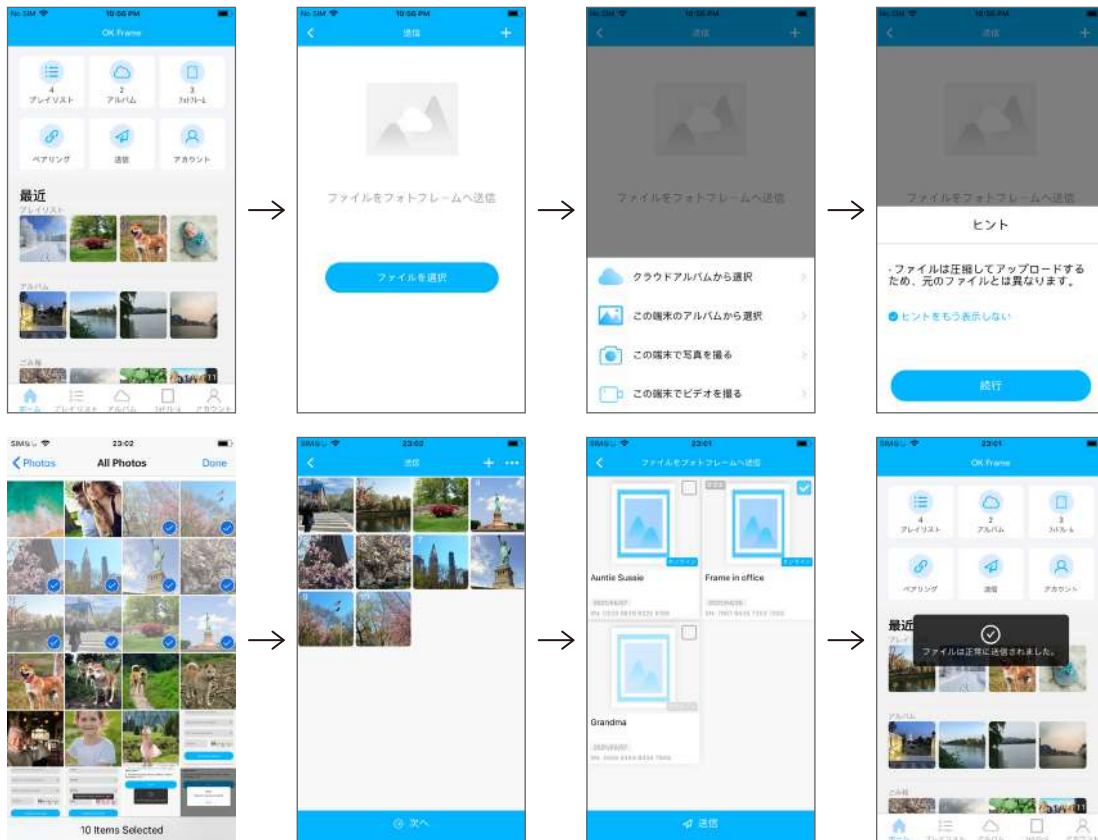


**注：**これらの「オンライン」フレームでのみ再生することを強くお勧めします。これらの「オフライン」フレームは、送信した写真/ビデオを受信しません。

## 2) OK Frame APPの「プレイリスト」を使用して写真/ビデオをWi-Fiフレームに送信します。

a) プレイリストセクションの青い三角形のクイック共有ボタンが使用可能です。この三角形のボタンを「再生ボタン」と呼びます。それをクリックすると、選択したプレイリストの写真/ビデオ全体をペアになっているすべてのフレームと共有できます。

**注：**デジタルフォトフレームには、プレイリストの下に追加されたすべての写真/ビデオが表示されます。プレイリストの一部のみを表示するオプションはありません。複数のフォトフレームがある場合は、プレイリストを正しいデジタルフォトフレームに追加してください。

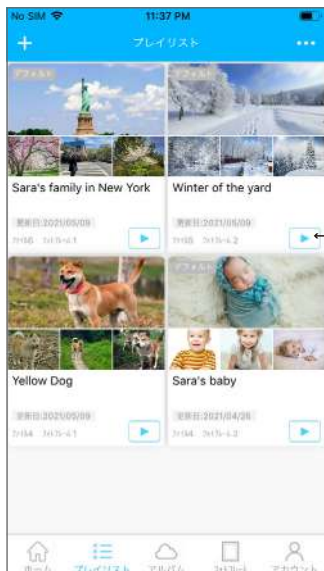

再生ボタン



- b) プレイリストアイコンをクリックして編集インターフェースに入ることができます。次に、[フレーム]をクリックすると、このプレイリストとペアになっているすべてのフレームが表示されます。フレームを選択して「再生ボタン」をクリックすると、選択したフレームでのみこのプレイリストを再生できます。



再生ボタン



### 3) OKフレームAPPの「フレーム」を使用して写真/ビデオをWi-Fiフレームに送信します

[フレーム]メニューで、すべてのプレイリストがフレームに事前に追加されている場合は、ここに一覧表示されます。赤い三角形の「再生ボタン」をクリックして、写真/ビデオ全体を簡単に共有することもできます。



再生ボタン

# OK FRAMEアプリの説明

## 1) OK FRAMEアプリのメイン画面





### ホーム

メイン画面には、「プレイリスト」、「アルバム」、「フレーム」、「ペアフレーム」、「送信」、「自分」のアイコンが含まれています。選択すると、関連するページにジャンプして、さらに操作を実行できます。

## プレイリスト

再生リストは、アップロードした写真とビデオの単なるコレクションです。さまざまなプレイリストを作成して写真やビデオを管理できます。これにより、何百万もの写真やビデオから必要な写真やビデオを簡単に見つけることができます。プレイリストを使用すると、次のことができます

- 「再生ボタン」を介して写真/ビデオをすばやく共有する
- 写真/ビデオが簡単に見つかるように、**...** 画面の右上隅にある順序でプレイリストを並べ替えます。

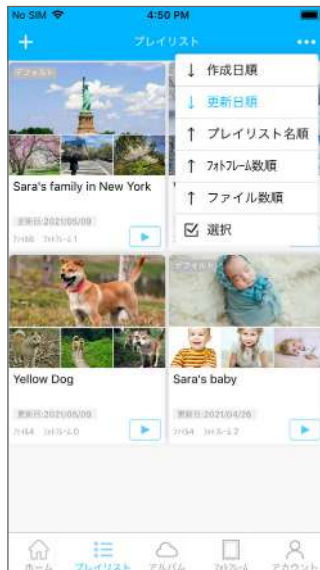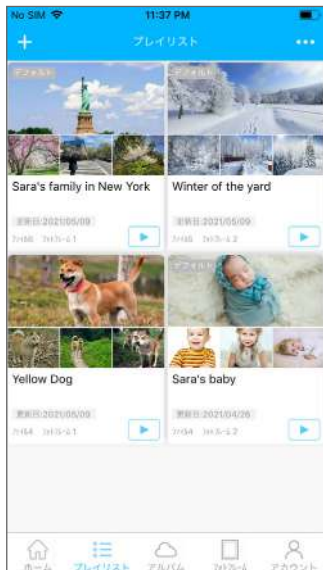


## アルバム

作成したすべてのアルバムがここに表示されます。APPまたはWebポータルを介して写真/ビデオをアルバムにアップロードできます。アルバムのすべての写真/ビデオは、OKフレームクラウドサーバーに保存されます。無料の10GBクラウドストレージを提供します。

Webポータルでアカウントにログインすると、「アルバム」からすべての写真とビデオをダウンロードできます。


**注：**コンピューターまたはその他のストレージデバイスに写真/ビデオをバックアップすることを強くお勧めします。

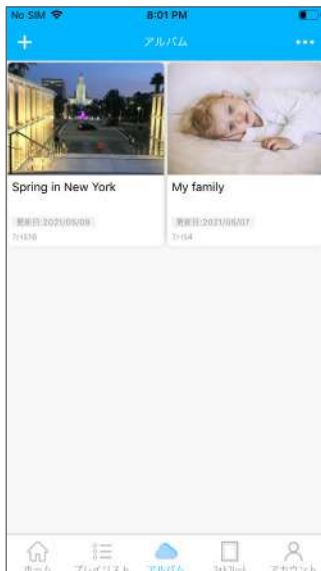

## フレーム

ここでペアリングされたフレームを管理できます。

- 「フレームの確認」アプリケーションとペアになっているすべてのフレームを表示します。また、フレームのオンライン/オフラインステータスを確認できます。
- 各フレームの下にすべてのプレイリストが表示され、青い三角形の「再生ボタン」をクリックすることで簡単に共有できます。

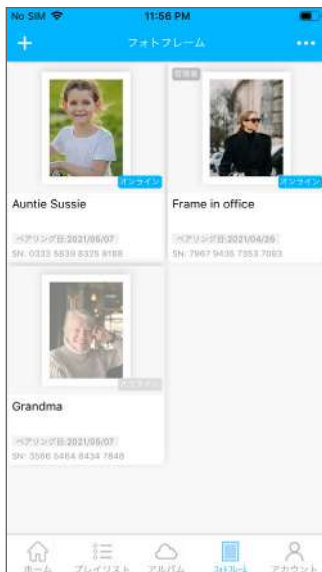

c) フレームワーク管理者として設定されている場合は、次の権限も持つことができます。

- 1) フレームとペアになっているすべてのユーザーを表示できます。同時に、ユーザーを管理者として設定またはキャンセルすることができます。
- 2) 以下のオンラインリモコンを使用してフレームを制御できます。



## 私

ペアリングされたフレームに関する情報を表示します。

クラウドストレージ-最大ストレージ容量は10GBです。プレイリストまたはアルバムの下にあるすべての写真/ビデオはここに保存されます。使用済みメモリと未使用メモリの量が表示されます。

メールアドレスの変更-登録済みのメールアドレスを変更します

パスワードの変更-必要に応じて、パスワードを変更します

ごみ箱-削除されたすべての写真/ビデオは一時的にここに保存されます。

キャッシュのクリーンアップ-不要なキャッシュファイルをクリーンアップします。クリーニングは通常の使用には影響しません。

フレームワークについて-フレームワークの「サービス契約」と「プライバシーポリシー」を表示します。





## 2) OKフレームアプリの重要な操作

### a) 新しいプレイリストを作成する


OK Frame Appの「プレイリスト」メニューでは、登録時に作成されるデフォルトのプレイリストに加えて、使いやすいマルチプレイリストを作成することもできます。次のように実行します。

新しいプレイリスト  
を作成する



## b) ペアリングされたフレームにプレイリストを追加します


OKフレームアプリの「フレーム」メニューでは、フレームに追加されたプレイリストのみを表示できます。フレームに新しいプレイリストを追加する手順は次のとおりです。

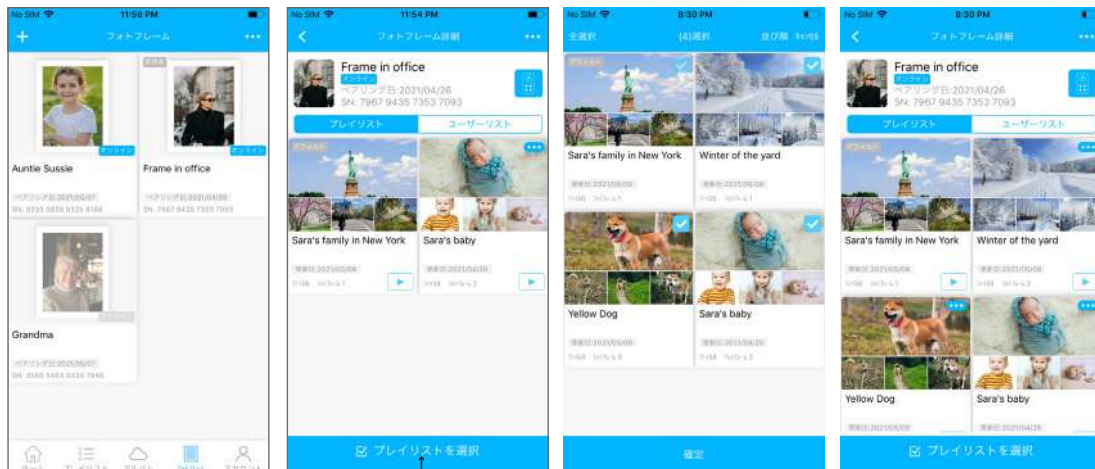

プレイリストを選択

### c) デフォルトのプレイリストを変更するか、プレイリストを削除します

デフォルトのプレイリストとして登録したときに作成されるプレイリストに加えて、OKフレームアプリの「フレーム」メニューに複数のプレイリストがある場合は、それらを変更することができます。手順は次のとおりです。

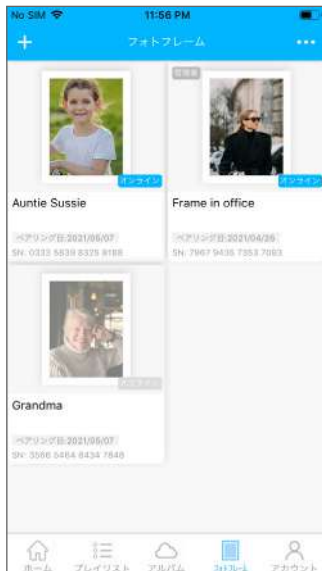

## d) パスワードを取得する

パスワードをお忘れですか？以下の画面の指示に従って見つけてください。



## アプリのホームページ

OK Frame APPに加えて、www.okayframe.comにアクセスして、写真やビデオをOK Frameクラウドにアップロードし、プレイリスト、アルバム、フォトフレームを管理することもできます。OK FrameAPPのログイン名とパスワードを併用できます。

こちらのアルバムからすべての写真とビデオをダウンロードできます。



# 機能と設定

## デジタルフォトフレームのメイン画面



フレームの上部に時刻と日付が表示されます。フレームとOKフレームクラウドサーバー間の接続状態を示す記号もあります。「接続中...」と表示されている場合は、接続中です。「接続済み」と表示されている場合は、接続が完了していることを意味します。

**注：**初めてフレームを設定するときは、Wi-Fiに接続して時間を調整する必要があります。電源を切った後、フレームの電源を入れるたびに、Wi-Fiが正常に接続されていることを確認して、時間を調整できるようにする必要があります。

**プレイリスト**：OKフレームアプリからフレームに追加されたすべてのプレイリストを表示します。OK Frame Appのフレームメニューの下にあるプレイリストは、Wi-Fiフレームのプレイリストに自動的に同期されます。

**外部ストレージ**：デジタルフォトフレームは、最大64GBの外部SD/MMCカードまたはUSBドライブをサポートします。USBドライブまたはSDカードから写真、音楽、ビデオを表示できます。

**時計**：時計を表示します。

**設定**：リモコンの4方向ナビゲーションキーを使用して、設定メニューを参照します。



項目	設定内容	効果
フレーム	APPダウンロードQRコードを表示	アプリをダウンロード
	フレームのシーケンス番号を表示	ペアフレーム
ユーザー	一致するすべてのAPPユーザーが一覧表示 されます。管理者を設定できます	管理者を設定またはキャンセル
	アプリユーザーを削除する	アプリケーションのユーザーを削除
Wi-Fi	Wi-Fiセットアップ	Wi-Fiに接続
システム	言語	言語を設定
	タイムゾーン	タイムゾーンを設定
	輝度	明るさを調整
	音量	音量を調整
	睡眠スケジュール	睡眠モードの開始時間と終了時間を設定
	モーションセンサー	モーションセンサーのスリープ時間を設定
	自動スライドショー	操作がない場合は、自動スライドショーの待ち時間を設定
	12時間	12時間または24時間に設定
プレイリスト	トランジション効果	スライドショーのトランジション効果を設定
	トランジション時間	トランジション時間を設定
	字幕を表示する	友達から送信されたタイトルを写真付きで表示するかどうかを設定
	時計を表示	スライドショー中に時計と日付を表示するかどうかを設定
	プレイリストの所有者のプロフィールを表示する	プレイリストの送信者を表示するかどうかを設定
	シリアル番号を表示する	写真またはビデオのシリアル番号を表示するかどうかを設定

プレイリスト	プレイリストを自動再生	すべてのプレイリストを再生するかどうかを設定
	シャッフル再生	ランダムにプレイするかどうかを設定
About	モデル名	ディスプレイモデル
	フレームのシリアル番号	フレーム番号を表示
	ディスプレイ解像度	ディスプレイフレームの解像度
	Macアドレス	フレームのMACアドレスを表示します
	更新を確認	フレームワークのオペレーティングシステムを更新
	工場設定	工場出荷時の設定に戻す

## Wifiデジタルフォトフレームで写真を表示

フォトフレームが「送信」で送信された写真を受信すると、ディスプレイに新しい写真を受信したことを通知する通知が表示され、スライドの最初の挿入位置で新しい写真が再生されます。表示し、順番に表示します。..  
 フォトフレームが「プレイリスト」から送信した写真を受信すると、新しいプレイリストが受信されたことを通知する通知がディスプレイに表示され、プレイリストの下にあるすべての写真/ビデオが1つずつ再生されます。  
 リモコンの4方向ナビゲーションキーを使用して、デジタルフォトフレームを参照します。

## USBドライブまたはSDカードの接続方法

USBドライブ/SDカードの写真を表示するには、フォトフレームの背面にある関連するポートに写真を挿入してください。次に、リモコンを使用してメインメニューの「外部ストレージ」アイコンを選択し、「OK」を押して確認します。デジタルは、SD/MMCカードまたはUSBドライブに含まれている写真/ビデオの再生を開始します  
 注：すべてのUSBストレージデバイスがこのデジタルフォトフレームと互換性があるわけではありません。

**注：**SD/MMCカードとUSBストレージデバイスは最大64GBをサポートします。

メモリーカードをスロットに無理に押し込まないでください。メモリーカードが入りにくい場合は、正しく挿入されていない可能性があります。カードを裏返して、もう一度やり直してください。

メモリーカードを挿入したときや、フォトフレームでファイルを処理しているときは、すぐにメモリーカードを取り出さないでください。画面が安定するまで待ちます。