


A1 Action Camera

USER MANUAL

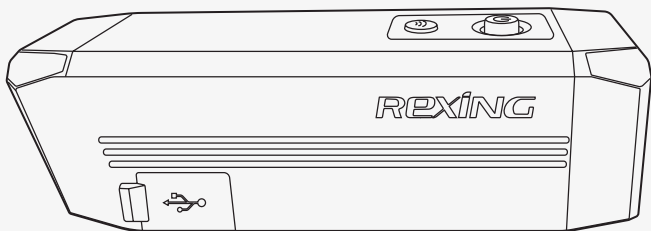

REXING

Overview

Overview

Thank you for choosing **REXING!** We hope you love your new product as much as we do.

If you need assistance, or have any suggestions to improve it, please contact us. You can reach us via care@rexingusa.com or call us at **(203) 800-4466**. Our support team will respond you as soon as possible.

日本語のお客様は、ご質問等がございましたら、jpcare@rexingusa.com までEメールでお問合せください。

Always a surprise in REXING. Check us out here.

<https://www.facebook.com/rexingusa/>
<https://www.instagram.com/rexingdashcam/>
<https://www.rexingusa.com/support/registration/>
<https://www.rexingusa.com/support/product-support/>

REXING

Facebook



Instagram



Site



Product Support





TABLE OF CONTENTS

ENGLISH	page
What's in the Box	6
Definition of Indicators	8
Specification	10
Installation	11
Operations	14

JAPANESE (日本語)

本製品の同梱物	16
指示灯と操作ボタン	18
製品仕様	20
取り付け	21
基本操作	24


SPANISH (ESPAÑOL)	page
Qué hay en la Caja	26
Definición de luz indicadora y botón	28
Especificaciones del producto	30
Empezar a usar	31
Operación Básica	34

GERMAN (DEUTSCH)

Verpackungsinhalt	36
Spezifikation	38
Grundbetrieb	40
Erste Schritte	41
Grundbedienungen	44

A1 Action Camera

What's in the Box

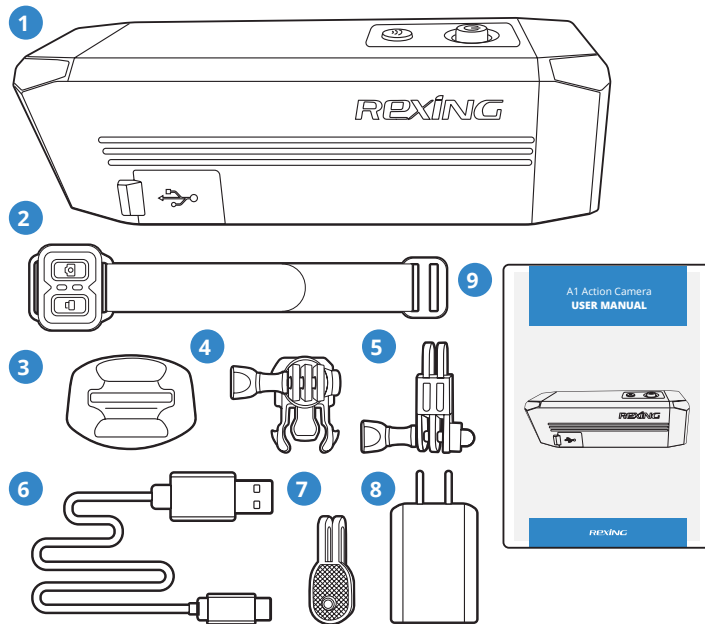

01 A1 Action Camera

02 Remote Control

03 Adhesive Mount

04 Mounting Buckle with Thumb Screw

05 Pivot Arm with Thumb Screw



06 USB to Micro USB Cable

07 Quick Release Plate

08 Charger

09 User Manual

Definition of Indicator Lights, Keys and Camera Vibration

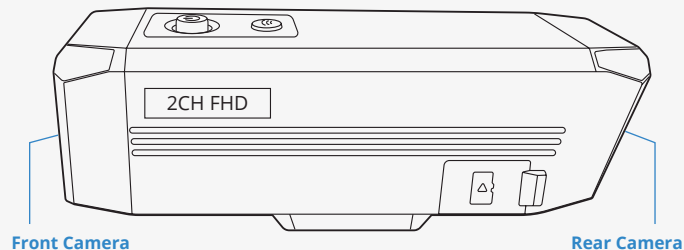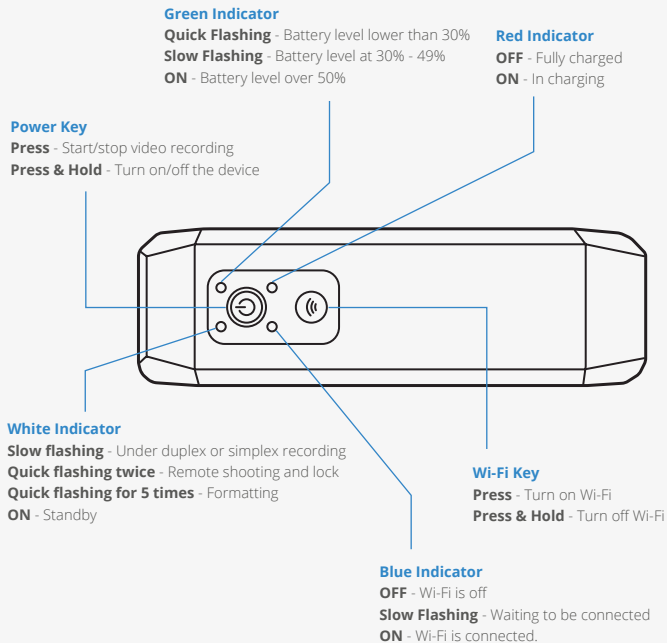

Camera Vibration

Vibrating once

1 The device turns on. To turn on the action camera, release the key once it vibrates.

2 The valid operation: *starting/stopping video recording, Wi-Fi, etc. (excluded shutdown and formatting)*

3 Remote operation

1 Memory card formatted.

2 Device error.

Power off (including manual, automatic, and low battery shutdown)

Vibrating for 5 times

Long vibration for 2 times

Specification

MODEL	A1
RESOLUTION	Simplex 2560*1440 30fps Duplex 1920*1080 30fps
BODY DIMENSION	4" x 1.2" x 1.2"
WEIGHT	3.5 oz
VIDEO FORMAT	.mp4
MEMORY	Micro SD, up to 256G, Class 10
AUDIO INPUT	Built-in microphone
IMAGE SENSOR	SONY IMX307 x 2

Installation












Get Started

- 1 Take out the device and Micro USB cable.
- 2 Connect the charger and computer with USB cable to charge the recorder.
- 3 The **Red Indicator** will be ON while charging and OFF after charging is complete.
- 4 If the battery runs out of power during use, the device turns off automatically.

Micro SD Card Instructions

- 1 Open the waterproof cover cap from the Micro SD card slot.
- 2 Insert a high speed Micro SD card (Class 10 or above) according to the direction indicated on the slot.
- 3 Close the card slot cover cap.
- 4 DO NOT insert or remove the Micro SD card when device is turned on.

Installation

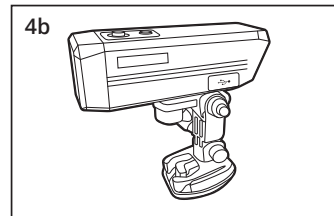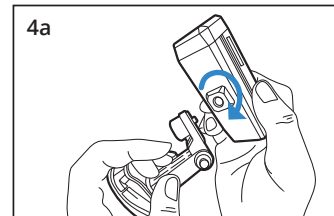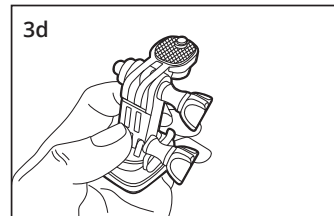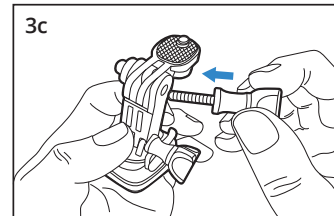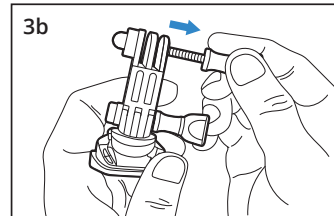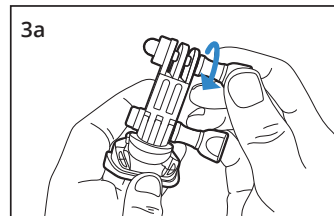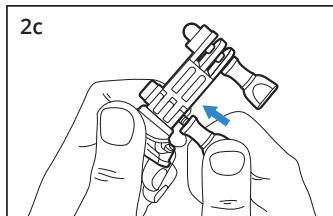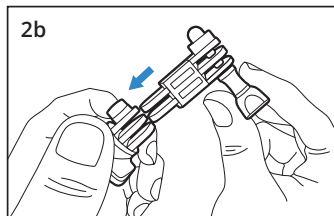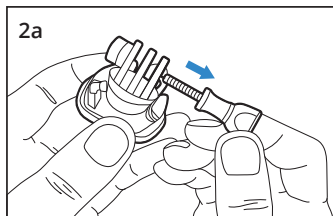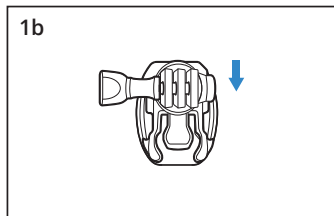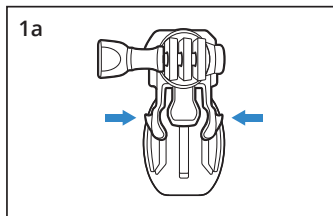

Basic Operations


Operation

- 1 Press the **Power Key** to turn on the device (the device vibrates once).
- 2 Once ON, the recorder automatically enters video mode and starts recording (white indicator flashed). Press the **Power Key** to stop recording (the camera vibrates once).
- 3 After the recorder is turned on, Wi-Fi will be activated automatically and the blue indicator flashes at the same time. If connection is not established with any cellphone within 1 minute, Wi-Fi will turn off. Upon successful connection with a cellphone, the blue Wi-Fi indicator light turns on (Note: After the **Wi-Fi Key** is held down for 5 seconds, Wi-Fi will not be turned on automatically at next booting.)
- 4 Press **Power Key** again the power key to turn the device off (the camera vibrates twice).
- 5 Press the **Power Key** continuously for 5 times, and the card will be formatted. The white indicator will flash 3 times and the camera vibrates 5 times.
- 6 **Power Saving Mode:** Even if the camera is ON/recording, it will turn itself off if there is no motion detected for 5 minutes.

Basic Operations

Using the Remote Control

- 1 The action camera automatically pairs with its remote control after starting.
- 2 Pressing the **Lock Button** of the remote control, its red indicator light will flash once and the device's white indicator will flash twice and the video file under recording will be locked and saved.

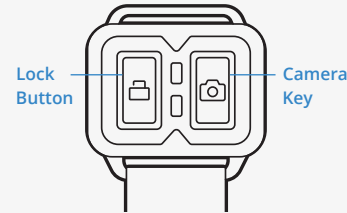


- 3 Pressing the **Camera Key** of the remote control, its green light flashes once and the white indicator of the device will flash twice and a picture will be taken.
- 4 The remote control uses ONE CR2032 battery.

APP Operation

- 1 Download the REXINGConnect APP via the Appstore/Playstore to your cell phone.
- 2 Search for REXING_XXXXXXXXXX with your phone. Wi-Fi password: 12345678
- 3 After successful connection, it returns to the APP homepage and you are allowed to preview the videos & images in real time.
- 4 The mode can be changed via the keys: Playback, Record, Camera, and Change View.
- 5 Click the lower right settings icon to set up the action camera: *Wi-Fi Password, Audio Recording, Date Stamp, Loop Recording, G-sensor sensitivity, Video Resolution, Formatting the Memory Card and Reset Default Settings.*

A1 アクションカメラ 取扱説明書

What's in the Box

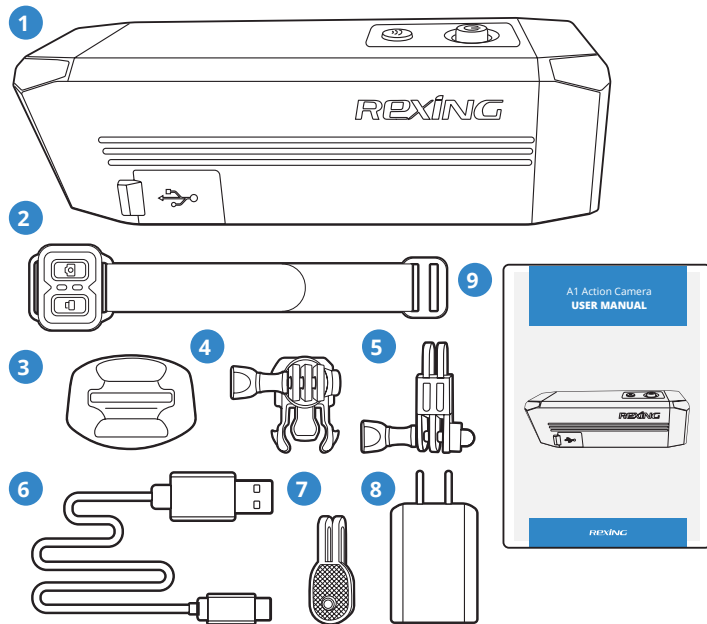

01 A1 アクションカメラ

02 リモコン

03 接着マウント

04 つまみねじ付きマウント

05 つまみねじ付きピボットアーム



06 USB-マイクロUSBケーブル

07 クイックリリースプレート

08 充電器

09 取扱説明書

指示灯と操作ボタン

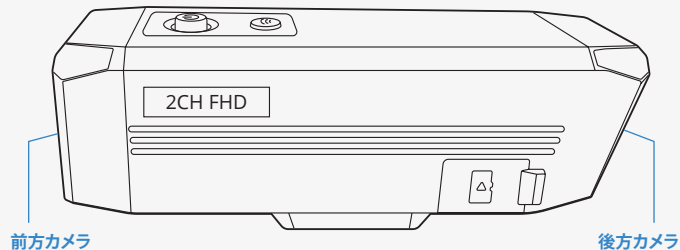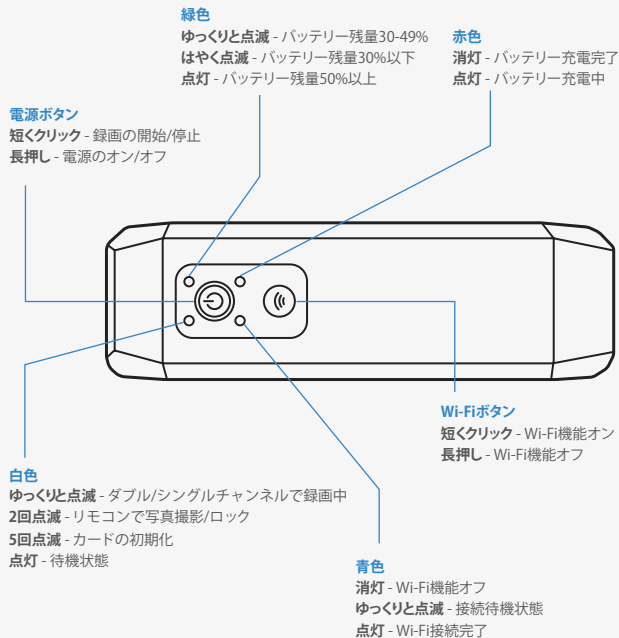

パイプ

短いパイプ1回

- 1 電源オン時：パイプ後、ボタンから指を離してください。
- 2 操作が有効になった時：録画の開始/停止、Wi-Fi機能のオン/オフなど。(本体の電源オフとカードの初期化を除く)

短いパイプ5回

- 1 エラー時とカードの初期化時
- 2 デバイス異常

長いパイプ2回

- 1 電源オフ時(手動、自動、バッテリー残量ロー時を含む)

製品仕様

名称	A1
解像度	シングルチャンネル2560x1440 30fps ダブルチャンネル1920x1080 30fps
本体サイズ	101 x 31 x 31mm
重量	101g
ビデオファイル形式	.mp4
ストレージ	最大容量256G、 Class 10のMicro SDカードをサポート
マイク入力	内蔵マイク
イメージセンサー	SONY IMX307 x 2

取り付け












使用開始

- 1 本体とMicro USBケーブルを取り出します。
- 2 本体をUSBケーブルで充電器またはPCと接続して、充電を行います。
- 3 充電中、指示灯が赤く点灯し、充電が完了すると消灯します。
- 4 使用中にバッテリー残量がなくなると、本体の電源を自動的にオフにします。

Micro SDカードの装着

- 1 Micro SDカードを挿入するカードスロットの防水カバーを開きます。
- 2 Class 10以上の高速Micro SDカードを、カードスロットの方向に合わせて挿入します。
- 3 カードスロットの防水カバーを閉じます。
- 4 電源がオンの状態の時はMicro SDカードを抜かないでください。

取り付け

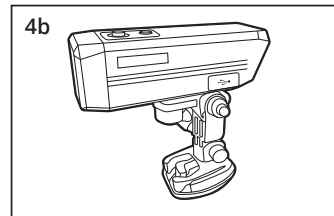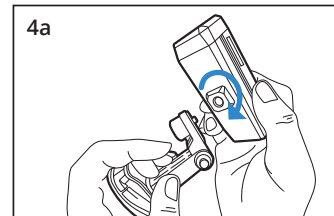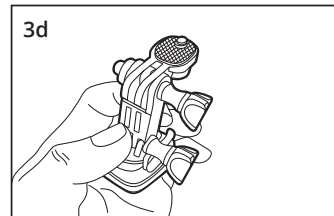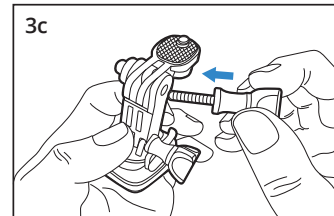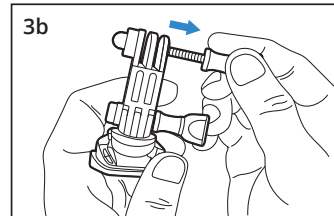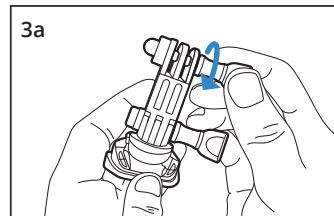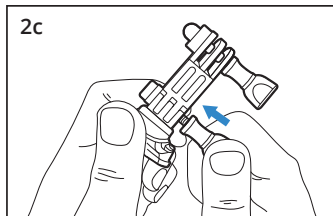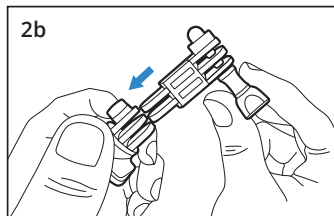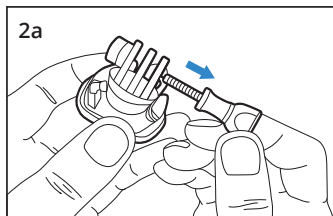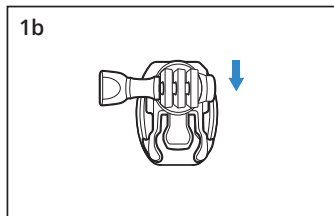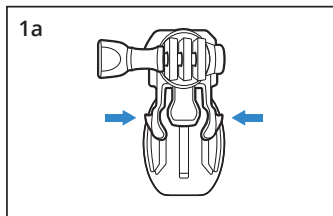

基本操作

使用方法


- 1 電源ボタンを長押しして、電源をオンにします。(パイプ1回)
- 2 電源がオンになると、ビデオモードで自動的に録画を開始します(指示灯が白く点滅)。電源ボタンを短くクリックすると、録画を停止します。(パイプ1回)
- 3 本体の電源をオンにすると、Wi-Fi機能が自動的にオンになり、同時に指示灯が青く点滅します。1分以内にスマートフォンとWi-Fi接続できない場合は、Wi-Fi機能が自動的にオフになります。スマートフォンとWi-Fi接続できた場合は、指示灯が青く点灯します。(注意:Wi-Fiボタンを5秒長押しすると、次回の電源オン時にはWi-Fi機能が自動的にオンになりません)

- 4 電源ボタンを再度長押しすると、本体の電源がオフになります。(パイプ2回)
- 5 電源ボタンを連続で5回クリックすると、カードの初期化を実行し、同時に指示灯が3回点滅します。(パイプが5回)
- 6 節電モード: 電源がオンであっても録画中に本体を5分間静止させると、電源を自動的にオフにします。

基本操作

リモコンの使用法

- 1 本体の電源をオンにすると、自動的にリモコンと接続します。
- 2 リモコンのロックボタンを押すと、リモコンの指示灯が赤く1回、本体の指示灯が白く2回点滅して、録画したビデオファイルがロックされます。

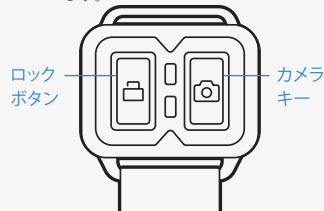


- 3 リモコンのカメラキーを押すと、リモコンの指示灯が緑に1回、本体の指示灯が白く2回点滅し、写真を撮影します。
- 4 リモコンは電池(CR2032)を1つ使用します。

アプリの操作

- 1 RexingConnectアプリをスマートフォンにダウンロードします。
- 2 スマートフォンのWi-Fi機能をオンにし、アクセスポイントREXING_XXXXXXXXXXXXと接続します。(パスワード:12345678)
- 3 接続に成功すると、アプリのメイン画面でリアルタイム・プレビューが可能になります。
- 4 アプリの各ボタンで本体の動作モードを切り替えることができます。(再生、ビデオ録画、写真撮影、視角の切替)
- 5 右下の設定ボタンを押すと、本体の設定を変更できます。(Wi-Fiパスワード、録音、日付スタンプ、常時録画、Gセンサー感応度、ビデオ解像度、カードの初期化、工場出荷時の設定にリセット)

Cámara de Acción A1

Qué hay en la caja

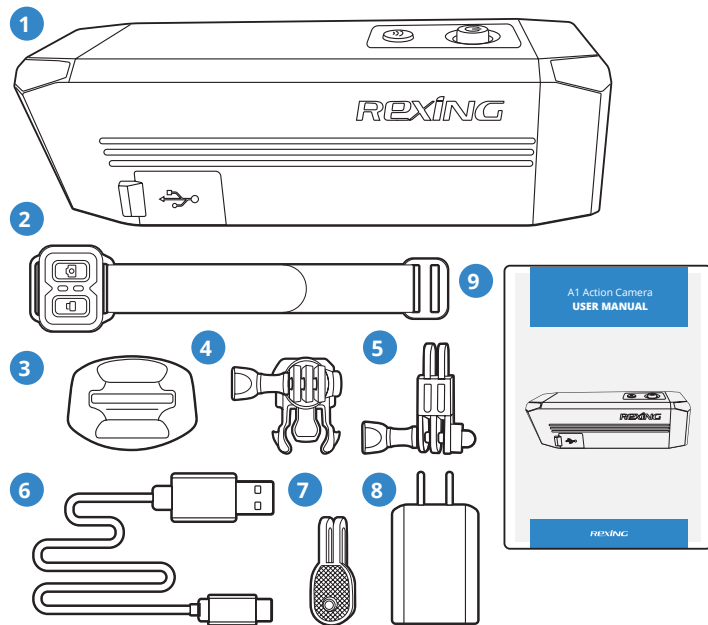

01 Cámara de acción A1

02 Control remoto

03 Soporte adhesivo

04 Hebilla de montaje con tornillo de mariposa

05 Brazo pivotante con tornillo de mariposa



06 Cable USB a Micro USB

07 Placa de liberación rápida

08 Cargador

09 Manual de usuario

Definición de luz indicadora y botón

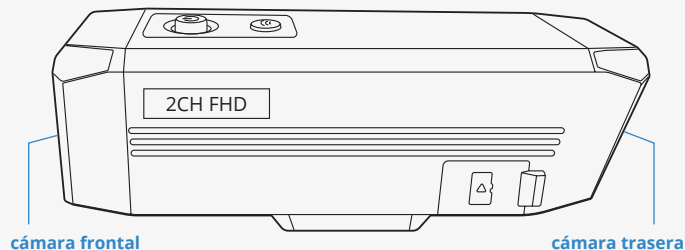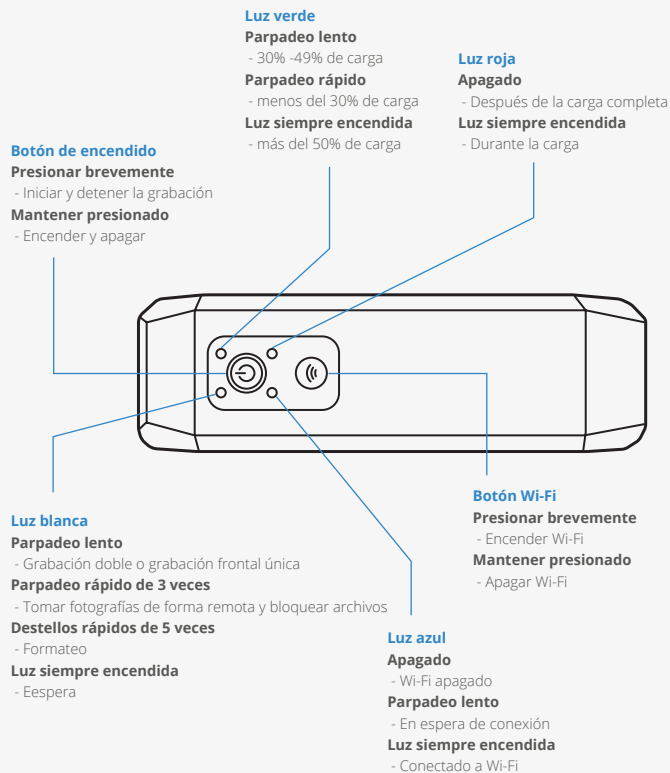

Vibración de la cámara

Vibrar 1 vez	1 Cuando está encendida y se vibra, se puede soltar el botón
	2 Operación efectiva de botones, grabación de interruptores, Wi-Fi, etc. (Excepto para apagar y formatear)
	3 Operación de control remoto
Vibrar 5 veces	1 Tarjeta de memoria formateada.
	2 Formato anormal
Vibración larga de 2 veces	Apagar (incluido apagado manual, automático y de baja carga)

Especificaciones del producto

NOMBRE	A1
RESOLUCIÓN	Grabación única 2560 x 1440 30 fps Grabación dual 1920 x 1080 30 fps
TAMAÑO DEL CUERPO	101*31*31mm
PESO	101g
FORMATO DE VIDEO	.mp4
ALMACENAMIENTO	Micro SD admite hasta 256G Clase 10
ENTRADA DE AUDIO	Micrófono incorporado
SENSOR DE IMAGEN	SONY IMX307 x 2

Empezar a usar












Empezar a usar

- 1 Sacar la grabadora y el cable Micro USB
- 2 Conectar el cargador o la computadora y la grabadora con un cable USB para cargar
- 3 Durante el proceso de carga, la luz indicadora roja de carga siempre está encendida y se apaga después de estar completamente cargada
- 4 Si la batería se agota durante el uso, la máquina se apagará automáticamente

Instalar la tarjeta Micro SD

- 1 Abrir el tapón impermeable de la ranura de la tarjeta Micro SD
- 2 Insertar una tarjeta de alta velocidad por encima de la Clase 10 e insertarla en la dirección de la ranura de la tarjeta
- 3 Cubrir el tapón de la ranura de la tarjeta
- 4 No sacar ni insertar la tarjeta Micro SD cuando esté encendida

Instalación

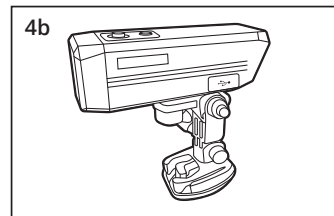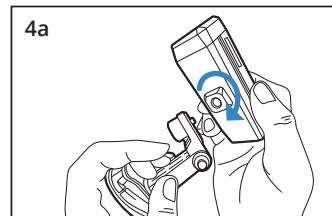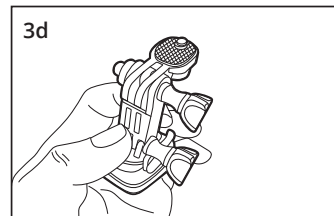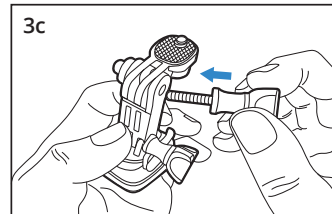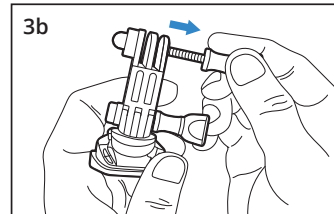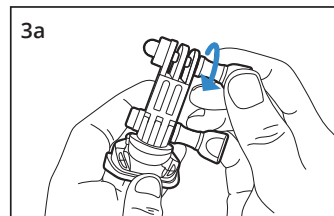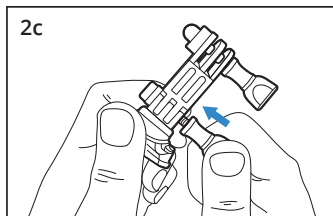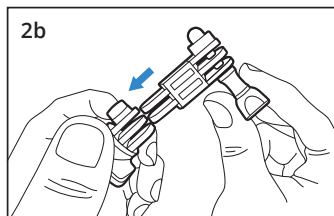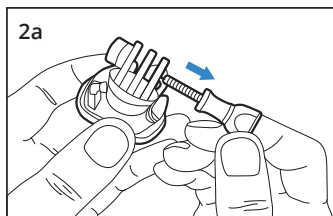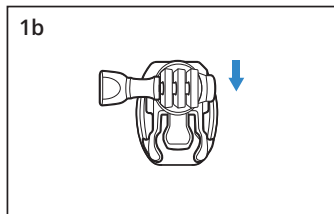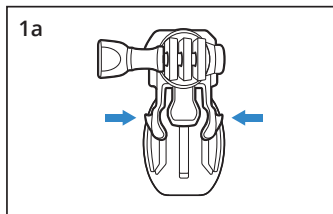

Operaciones básicas

Utilizar la cámara deportiva A1


- 1 Mantener presionado el botón de encendido para encender (el motor vibra una vez)
- 2 La luz indicadora de encendido está encendida, la grabadora ingresa al modo de video y graba automáticamente, la luz blanca parpadeará durante el proceso de grabación, presione brevemente el botón de encendido para detener la grabación (el motor vibra una vez)
- 3 Después de encender la grabadora, el Wi-Fi se encenderá automáticamente y la luz indicadora azul parpadeará, si no está conectada al teléfono móvil en 1 minuto, el Wi-Fi se apagará automáticamente y la luz indicadora de Wi-Fi azul está siempre encendida después de una conexión exitosa con el teléfono móvil (Nota: mantenga presionado el Botón de Wi-Fi durante 5 segundos, Wi-Fi no se encenderá automáticamente cuando lo encienda nuevamente)

- 4 Mantener presionado el botón de encendido nuevamente para apagar y el motor vibra 2 veces
- 5 Presionar el botón de encendido 5 veces continuamente, la tarjeta estará formateada, la luz blanca parpadeará 3 veces y el motor vibrará 5 veces
- 6 Cuando la grabadora está grabando, después de 5 minutos de inactividad, la máquina se apagará automáticamente

Operaciones básicas

Usar el control remoto

- 1 Una vez que se enciende el host, se coincide automáticamente con el control remoto
- 2 Presionar el botón de bloqueo del control remoto, la luz roja del control remoto parpadeará una vez y la luz blanca de host parpadeará 3 veces para bloquear el archivo de video grabado actualmente

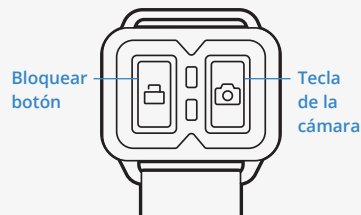


- 3 Presionar el botón de la cámara del control remoto, la luz verde del control remoto parpadeará una vez y la luz blanca de host parpadeará 2 veces para tomar foto.
- 4 El control remoto usa UNA batería CR2032

Operación de la aplicación

- 1 Descargar la aplicación REXING-Connect en el teléfono
- 2 Utilizar su teléfono móvil para buscar REXING_XXXXXXXXXX, contraseña Wi-Fi: 12345678
- 3 Después de que la conexión sea exitosa, regrese a la interfaz principal de la APLICACIÓN para obtener una vista previa de la pantalla en tiempo real
- 4 El modo se puede cambiar con cada botón: reproducción, grabación, toma de fotos, cambio de perspectivas
- 5 Hacer clic en el icono de configuración en la parte inferior derecha para configurar los parámetros de la cámara deportiva, conexión de contraseña Wi-Fi, grabación, marca de agua del tiempo de la cámara, tiempo de grabación en bucle, sensibilidad de colisión, resolución de grabación, compensación de exposición, formateo de la tarjeta de memoria, configuración de fábrica



A1 Action Kamera

Was ist in der Box

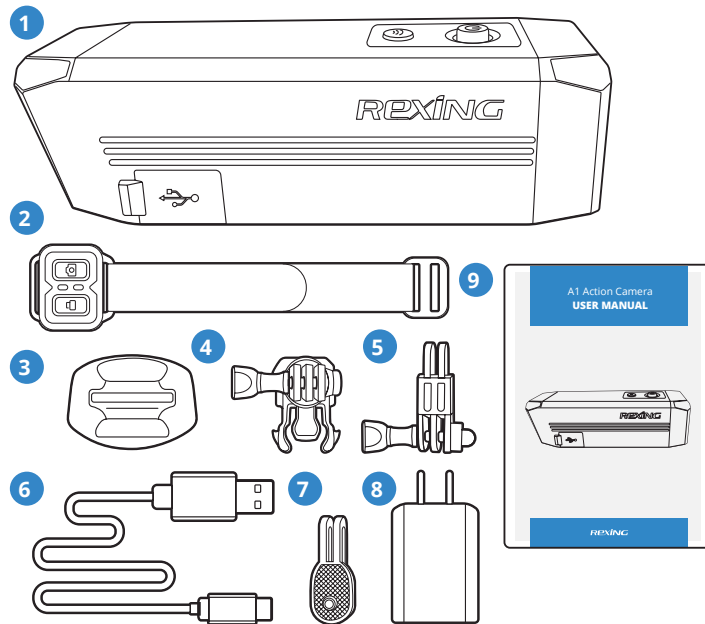

- | | | | |
|-----------|---|-----------|-------------------------------|
| 01 | A1 Action Kamera | 05 | Schwenkarm mit Rändelschraube |
| 02 | Fernbedienung | 06 | USB zu Micro USB Kabel |
| 03 | Klebefestigung | 07 | Schnellwechselplatte |
| 04 | Befestigungsschnalle mit Rändelschraube | 08 | Ladegerät |
| | | 09 | Benutzerhandbuch |

Definition der Anzeiger und Tasten

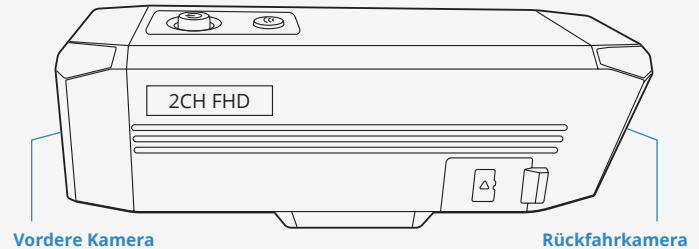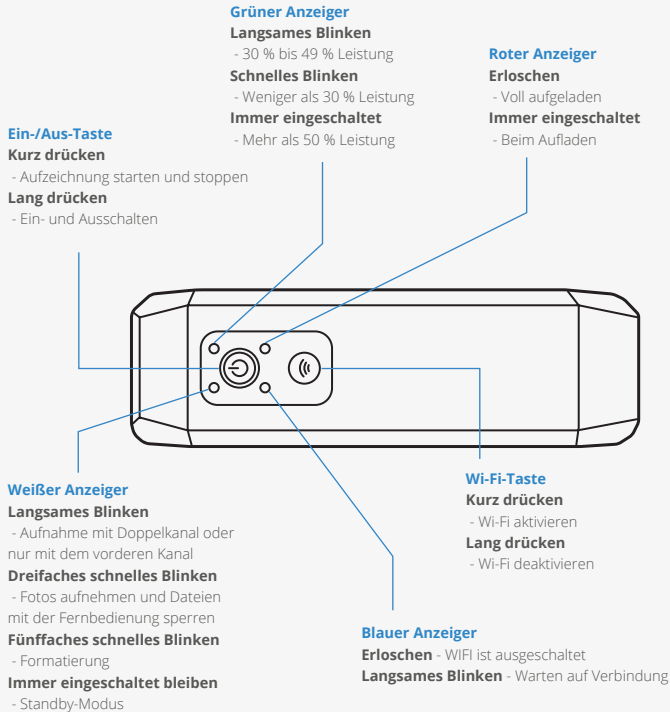

Motorvibrationen

Einmal vibrieren

1 Lassen Sie beim Einschalten des DV die Taste los, sobald der Motor vibriert.

2 Effektive Bedienung auf der Taste, Ein- und Ausschalten der Videoaufzeichnung, Ein- und Ausschalten von Wi-Fi usw. (Außer Ausschalten und Formatieren)
 3 Fernsteuerung

Fünffmal vibrieren

1 Speicherkarte formatiert.
 2 Gerät abnormal.

Lange zweimal vibrieren

Ausschalten (einschließlich manuelles, automatisches und stromsparendes Ausschalten)

A1 Action Kamera Benutzerhandbuch

NAME	A1
AUFLÖSUNG	Einkanalig 2.560 x 1.440 30 fps Doppelkanäle 1.920 x 1.080 30 fps
ABMESSUNGEN	101*31*31mm
GEWICHT	101g
VIDEOFORMAT	.mp4
SPEICHER	Micro SD maximale Unterstützung für 256 G Klasse 10
AUDIO-EINGANG	Eingebautes Mikrofon
BILDSENSOR	SONY IMX307 x 2

Erste Schritte












Erste Schritte

- 1 Nehmen Sie den Rekorder und das Micro-USB-Kabel heraus
- 2 Schließen Sie das Ladegerät oder den Computer mit dem USB-Kabel zum Aufladen an den Rekorder an
- 3 Während des Aufladens leuchtet die rote Ladeanzeige ständig und erlischt, wenn er vollständig aufgeladen ist
- 4 Die Maschine schaltet sich während der Arbeit automatisch ab, wenn der Akku leer ist

Einbau der Micro SD-Karte

- 1 Öffnen Sie den wasserdichten Verschluss des Micro SD-Kartensteckplatzes
- 2 Führen Sie eine Hochgeschwindigkeitskarte der Klasse 10 oder höher entsprechend der Richtung des Kartensteckplatzes ein.
- 3 Decken Sie den wasserdichten Verschluss gut zu
- 4 Wenn das DV-Gerät eingeschaltet ist, darf die Micro SD-Karte weder eingesteckt noch entfernt werden

Installation

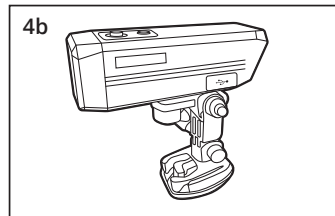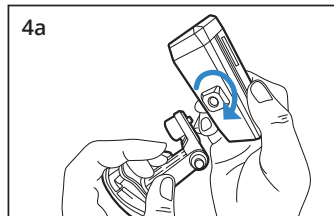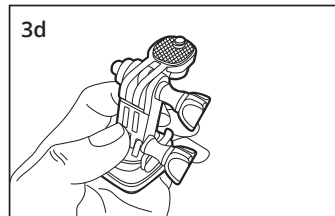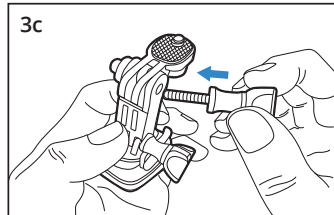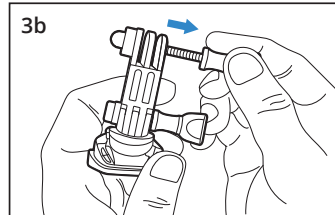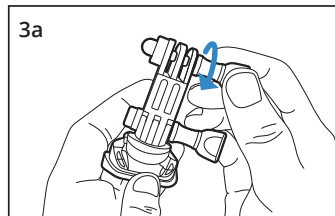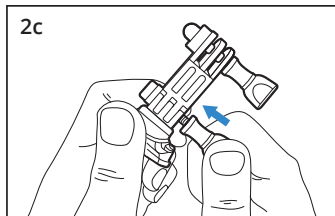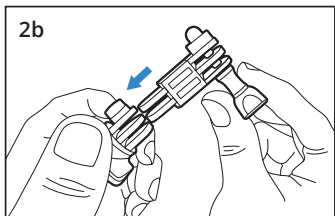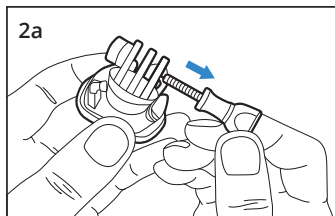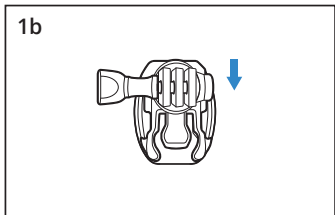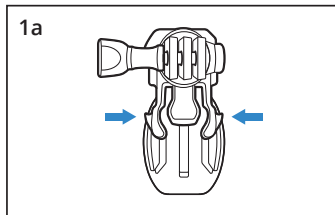

Grundoperationen


Verwendung des A1 Action Kamera

- 1 Halten Sie die Ein-/Aus-Taste lange gedrückt, um das DV einzuschalten (der Motor vibriert einmal)
- 2 Die Betriebsanzeige bleibt eingeschaltet und der Rekorder geht in den Videomodus und zeichnet automatisch auf. Während des Aufzeichnungsvorgangs blinkt das weiße Licht. Ein kurzer Druck auf die Ein-/Aus-Taste stoppt die Aufzeichnung (der Motor vibriert einmal).
- 3 Das Wi-Fi wird automatisch aktiviert, nachdem Sie den Rekorder eingeschaltet haben, und die blaue Anzeige blinkt gleichzeitig. Das Wi-Fi wird ausgeschaltet, wenn innerhalb einer Minute keine Verbindung zum Mobiltelefon besteht, und die blaue Wi-Fi-Anzeige leuchtet weiter, wenn eine erfolgreiche Verbindung zum Mobiltelefon besteht (Hinweis: Nach langem Drücken der Wi-Fi-Taste dreht sich 5 Sekunden lang, wird Wi-Fi beim nächsten Einschalten des Rekorders nicht automatisch aktiviert)
- 4 Drücken Sie die EIN-/AUS-Taste erneut lange, um das Gerät abzuschalten, und der Motor vibriert zweimal
- 5 Drücken Sie zum Formatieren der Karte fünfmal auf die Ein-/Aus-Taste, die weiße Anzeige blinkt dreimal, und der Motor vibriert fünfmal.
- 6 Während der Rekorder aufzeichnet, schaltet sich die DV nach fünf Minuten Stillstand automatisch ab

Grundoperationen

Verwendung der Fernbedienung

- 1 Das Host-Gerät stimmt die Fernbedienung automatisch nach dem Einschalten ab
- 2 Drücken Sie die Sperrtaste auf der Bedienung, die rote Anzeige auf der Bedienung blinkt einmal und die weiße Anzeige auf dem Host-Gerät blinkt dreimal, um die aktuell aufgezeichnete Videodatei zu sperren.

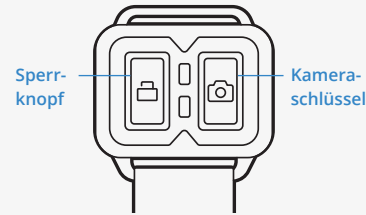

- 3 Drücken Sie die Fototaste auf dem Betrieb, die grüne Anzeige leuchtet die Bedienelemente und blinkt einmal die weiße Anzeige auf dem Host. Das Gerät blinkt zweimal, um Fotos aufzunehmen zu machen.
- 4 Die Fernbedienung verwendet eine CR2032-Batterie

APP-Betrieb

- 1 Laden Sie die REXINGConnect APP auf Ihr Mobiltelefon herunter
- 2 Suchen Sie REXING_XXXXXXXXXX mit Ihrem Mobiltelefon, und das Wi-Fi Passwort lautet 12345678
- 3 Kehren Sie nach erfolgreicher Verbindung zur Hauptschnittstelle der APP zurück, um eine Vorschau auf dem Echtzeit-Bildschirm anzusehen
- 4 Drücken Sie die entsprechenden Tasten, um den Modus zu wechseln: Wiedergabe, Videoaufnahme, Fotoaufnahme, Perspektivenwechsel
- 5 Klicken Sie auf das Symbol für Einstellungen unten rechts, um die Parameter des Sport-DV einzustellen, einschließlich Wi-Fi-Verbindung, Sprachaufzeichnung, Wasserzeichen der Kameraaufnahmezeit, zyklische Aufnahmezeit, Kollisionsempfindlichkeit, Auflösung, Belichtungs-korrektur, SD-Kartenformat und Werkzeugeinstellungen.

Customer Protection

Customer Service

FC CE

Warranty and Disclaimers

Warranty

Up to 18 MONTHS LIMITED WARRANTY

Your product is warranted to be free of defects in materials and workmanship for 1 year after the date of purchase. This warranty does not cover damages caused by misuse, improper handling and installation. Register your B1 at RexingUSA.com to extend the warranty. In the event warranty service is needed, please contact Rexing at care@rexingusa.com

Disclaimers

We have no representations or warranties, either expressed or implied, by or concerning any content of these written materials or software, or for damages resulting from the use of the information contained therein. We reserve the right to alter the features and contents of this publication, hardware or software without obligation or advance notice. Warranty does not extend to any accessories used with the camera. We are not responsible if you use the trail camera for illegal purposes. We shall not be obligated to perform preventative maintenance, installation, reinstallation, or maintenance. The illustrations in this manual are for instructional purposes only and may not represent actual product exactly.

REXING

www.rexingusa.com

New York office address:

131 West 33rd St 11C, New York, NY 10001

Connecticut office address:

264 Quarry Rd unit d, Milford, CT 06460

REXING®

Safety Guide 安全ガイド

www.rexingusa.com

Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE:

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Safety Information

To prevent injury to yourself or others and damage to your device, read all safety information before using.



Warning

Failure to comply with safety warnings and regulations can result in serious injury or death.

Rexing Dash Cam is not intended to be touched, modified, or calibrated while operating a vehicle. Rexing is not responsible for any damages resulting from the user's misuse of the camera.

Do not use damaged power cords or plugs or loose electrical sockets. Faulty connections can cause electric shock or fire.

Do not touch the car charger with wet hands or disconnect the charger by pulling the cord. Doing so may result in electrocution.

Do not use a bent or damaged car charger. Doing so may cause electric shock or fire.

Do not use your device while it is charging or touch your device with wet hands. Doing so may cause electric shock.

Do not short-circuit the charger or the device. Doing so may cause electric shock or fire.

Use only manufacturer-approved chargers, accessories, and supplies.

- Using generic chargers may shorten the life of your device or cause the device to malfunction. They may also cause fire.
- Use only the manufacturer-approved charger specifically designed for your device. Using an incompatible charger can cause serious personal injury or damage to your device.
- Rexing cannot be responsible for the user's safety when using accessories or supplies that are not approved by Rexing.

Do not drop the charger or device or subject them to impact. Handle and dispose of the charger and device with care.

- Never crush or puncture the device.
- Never dispose of the device in a fire.
- Never place the device in or on heating devices, such as microwave ovens, stoves, or radiators. The device may explode if overheated. Follow all local regulations when disposing of a used device.
- Avoid exposing the device to high external pressure which can lead to an internal short circuit and overheating.

Protect the device and charger from damage.

- Avoid exposing your device to excessive cold or heat. Extreme temperatures can damage the device and reduce the charging capacity and life of your device.
- Do not allow children or animals to bite or chew the device. Doing so can result in fire or explosion, and small parts can be a choking hazard. If children use the device, make sure they use the device properly.
- Never use a damaged charger.



Caution

Failure to comply with safety precautions and regulations can result in property damage, serious injury or death.

Do not use your device near other electronic devices. Most electronic devices use radio frequency signals. Your device may interfere with other nearby electronic devices.

Do not use your device near other devices that emit radio signals, such as sound systems or radio towers. Radio signals from these may cause your device to malfunction.

Do not expose the device to heavy smoke or fumes. Doing so may damage the outside of the device or cause it to malfunction.

If you notice strange smells or sounds coming from your device, or if you see smoke or liquid leaking from the device, stop using the device immediately and take it to a Rexing Service Center. Failure to do so may result in fire or explosion.

For your own safety, do not operate the controls of this product while driving. The window mount is needed when using the recorder in a car. Make sure you place the device in a location where it won't obstruct the driver's view.

Always keep the camera lens clean, and ensure that the lens is not blocked by any object or placed near any reflective material. If the car's windshield is tinted with a dark coating, recording quality may be affected.

Do not store your device in excessively hot, cold, damp, or dry locations. Doing so may cause the screen to malfunction or result in damage to the device.

If your device becomes overheated, allow it to cool down before use. Prolonged exposure of skin to an overheated device may cause low-temperature burn symptoms, such as red spots or areas of darker pigmentation.

Install mobile devices and equipment with caution.

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories in or near an airbag deployment area. Improperly installed wired equipment can cause serious injury in a situation where airbags inflate rapidly.

Do not drop your device or subject your device to impact. If the device is bent, deformed or damaged, malfunction may occur.

Your device may wear out over time. Some parts and repairs are covered by the warranty within the validity period, but damage or deterioration related to the use of unapproved accessories is not.

Do not attempt to disassemble, repair, or modify your device.

- Any changes or modifications to your device can void your manufacturer's warranty.

Clean your device and charger by wiping with a towel or eraser. Do not use chemicals or detergents. Doing so can discolor or corrode the outside of the device and may result in electric shock or fire.

Do not distribute copyright-protected material. Doing so without the permission of the content owners may violate copyright laws. The manufacturer is not responsible or liable for any legal issues that result from the user's illegal use of copyrighted material.

Correct Disposal of This Product

(Applicable in countries with separate waste collection systems)



Waste Electrical & Electronic Equipment

This symbol, found on the device, accessories or accompanying literature, indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, **please separate these items from other types of waste and recycle them responsibly** to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local government office for information on where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal non-commercial use.

You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

“THIRD PARTY CONTENT AND SERVICES ARE PROVIDED “AS IS.” REXING DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIED, FOR ANY PURPOSE. REXING EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. REXING DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL REXING BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.”

Third party services may be terminated or interrupted at any time, and Rexing makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Rexing has no control. Without limiting the generality of this disclaimer, Rexing expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Rexing is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

安全情報

自分自身や他の人の怪我やデバイスの損傷を防ぐために、使用前にすべての安全情報をお読みください。



警告

安全上の警告や規制を遵守しないと、重大な怪我や死亡につながる可能性があります。

Rexingドライブレコーダーは、車両の操作中に触れたり、操作したり、調整したりする機器ではありません。Rexingは、ユーザーによるカメラの正しくない使用方法に起因するいかなる損害についても責任を負いません。

破損した電源コードやプラグ、または差し込みの緩い電気コネクターを使用しないでください。接続不良は、感電や火災の原因となります。

濡れた手で車載充電器に触れたり、コードを引っ張って車載充電器との接続を外したりしないでください。感電死する可能性があります。

変形または破損している車載充電器を使用しないでください。感電や火災の原因となります。

充電中に機器を使用したり、濡れた手で機器に触れたりしないでください。感電の原因となります。

充電器や機器をショートさせないでください。感電や火災の原因となります。

製造元が承認した充電器、アクセサリ、および消耗品のみを使用してください。

- 市販の充電器を使用すると、機器の寿命が短くなり、機器が誤動作したりする可能性や、火災を引き起こす可能性があります。
- お使いの機器用に特別に設計されたメーカー承認の充電器のみを使用してください。互換性のない充電器を使用すると、身体の重大な怪我や機器の損傷を引き起こす可能性があります。
- Rexingが承認していないアクセサリや消耗品を使用する場合、Rexingはユーザーの安全に責任を負いません。

充電器や機器を落としたり、衝撃を与えたりしないでください。充電器と機器を注意して取り扱い、処分してください。

- 機器を圧迫したり、尖ったもので突き刺したりしないでください。
- 機器を焼却処分しないでください。
- 電子レンジ、ストーブ、エアコンなどの暖房装置の近くに機器を置かないでください。過熱すると機器が爆発する可能性があります。使用しなくなった機器を廃棄する場合は、必ず地元の規制に従ってください。
- 内部ショートや過熱につながる外部からの強い圧力に機器をさらさないでください。

機器と充電器を損傷から保護してください。

- 機器を極端な冷気や熱にさらすことは避けてください。極端な温度によって機器が損傷し、お使いの機器の充電容量と寿命が減少する可能性があります。
- 子供や動物に機器を食べさせたり、噛ませたりしないでください。火災や爆発の可能性があります、小さな部品は窒息の危険を引き起こす可能性があります。お子様がデバイスを使用する場合は、デバイスを正しく使用していることを確認してください。
- 破損した充電器は絶対に使用しないでください。



注意

安全上の注意や規制を遵守しない場合、物的な損害、身体への重傷、死亡につながる可能性があります。

他の電子機器の近くで機器を使用しないでください。ほとんどの電子機器は無線信号を使用します。お使いの機器が、他の近くの電子機器と干渉する可能性があります。

ラジオ放送設備や電波塔など、無線信号を出力する他の機器の近くで使用しないでください。これらの無線信号が原因で、機器が誤動作する可能性があります。

機器を大量の煙やガスにさらさないでください。機器の外側が破損したり、機器が誤動作したりする可能性があります。

機器から異臭や異音が発生したり、煙や液体が漏れたりする場合は、直ちに機器の使用を中止し、Rexingサービスセンターに連絡してください。火災や爆発の原因となる可能性があります。

ご自身の安全のために、運転中にこの製品の操作を行わないでください。車両の中でレコーダーを使用する場合は、機器を車両の窓に取り付ける必要があります。機器を設置する場合は、ドライバーの視界を妨げないようにしてください。

カメラのレンズは常に清潔に保ち、レンズがゴミによって汚れていたり、反射物の近くに置かれたりしないようにしてください。車のフロントガラスに色付きのコーティングが施されている場合、記録品質に影響を与える可能性があります。

機器を極端に高温、低温、湿気のある、または乾燥した場所に保管しないでください。画面が誤動作したり、機器が破損したりする可能性があります。

機器が過熱した場合は、使用前に冷却してください。過熱した機器に皮膚を長時間接触させると、肌に赤い斑点や色素の沈着が現れたり、低温熱傷症状を引き起こしたりする可能性があります。

機器と関連装置は慎重に取り付けてください。

- 車両に機器と関連機器がしっかりと取り付けられていることを確認してください。
- エアバッグの展開エリア内またはその近くには、機器と関連装置を取り付けしないでください。ケーブルと機器の取り付けが不適切な場合は、エアバッグが急速に膨張する状況下で、人体への重大な損傷を引き起こす可能性があります。

機器を地面に落としたり、機器に力を加えたりしないでください。機器が変形したり、破損したりすると、誤動作が発生する可能性があります。

お使いの機器は時間の経過と共に劣化する可能性があります。一部の部品および修理は、有効期間内の場合は保証の対象となりますが、未承認のアクセサリーの使用に関連する損傷または劣化は保証されません。

機器を分解、修理、または改造しようとししないでください。

- お使いの機器を修理したり、改造したりすると、製造元の保証が無効になります。

乾いたタオルやウエスで拭いて、機器と充電器を清掃してください。薬品や洗剤は使用しないでください。薬品や洗剤は使用すると、機器のカバーが変色したり、腐食したり、感電や火災を引き起こす可能性があります。

著作権で保護された資料を配布しないでください。コンテンツ所有者の許可なく行なった場合、著作権法に違反する可能性があります。製造業者は、ユーザーが著作権で保護された素材を違法に使用したことに起因する法的な問題について、一切の責任を負いません。

本製品の廃棄方法

(国毎の廃棄物の収集規則を守ってください)



電気・電子機器廃棄物

このマークは、機器とその付属品また付属の文書に用いられており、製品およびその電子アクセサリ(充電器、ヘッドセット、USB ケーブルなど)を他の家庭廃棄物と一緒に処分してはならないことを示しています。

環境や人の健康に対する被害を防ぐために、これらの廃棄物を他の廃棄物とは区別し、責任を持ってリサイクルして、物質資源の持続可能な再利用を促進してください。

家庭ユーザーは、この製品を購入した小売業者または地方自治体の官公庁に連絡して、環境に安全なリサイクルのためにこれらの機器をどこでどのように処分できるかについて問い合わせてください。

ビジネスユーザーは、サプライヤーに連絡し、購入契約の契約条件を確認してください。この製品とその電子アクセサリは、処分のために他の商業廃棄物と混合しないでください。

免責事項

このデバイスを通じてアクセス可能なコンテンツやサービスの一部は第三者に帰属し、著作権、特許、商標、その他の知的財産権に関する法律で保護されています。このようなコンテンツおよびサービスは、お客様の個人的また非営利的な使用のためにのみ提供されます。

お客様は、コンテンツ所有者またはサービスプロバイダーによって承認されていない方法でコンテンツまたはサービスを使用することはできません。事前に承認を得た場合、または該当するコンテンツ所有者またはサービスプロバイダーによって明示的に承認されていない限り、お客様は、いかなる方法によっても、この機器を通じて表示されるコンテンツまたはサービスを変更、複製、再発行、アップロード、送信、翻訳、販売、二次的著作物の作成、エクスプロイト、または配布してはなりません。

「第三者のコンテンツおよびサービスは現状のまま提供されません。REXINGは、いかなる目的においても、明示的または黙示的に提供されるコンテンツまたはサービスを保証するものではありません。これにはREXINGによる特定の目的に対する商品性または適合性の保証を含みますがこれらに限定されず、黙示的な保証を行いません。REXINGは、本デバイスを通じて利用可能なコンテンツまたはサービスの正確性、妥当性、適時性、合法性、完全性を保証するものではありません。REXINGは、お客様または第三者がコンテンツまたはサービスを使用した結果として、直接的、間接的、偶発的に生じた損害、またはその他の損害、弁護士費用、その他の費用についてその一切の責任を負いません。」

第三者のサービスはいつでも終了または中断することができ、Rexingは、いかなるコンテンツまたはサービスが一定期間利用可能であり続けることを表明または保証するものではありません。コンテンツおよびサービスは、Rexingのコントロール下にはないネットワークおよび伝送施設によって第三者によって送信されます。この免責事項の一般性を制限することなく、Rexingは、このデバイスを通じて利用可能なコンテンツまたはサービスの中断または中断に対する責任を負わないことを明示的に表明します。

Rexingは、コンテンツおよびサービスに関連するカスタマーサービスについて一切の責任を負いません。コンテンツまたはサービスに関連するサービスに関わる質問または要求は、それぞれのコンテンツおよびサービスプロバイダーに対して直接行う必要があります。