


**Bluetooth**


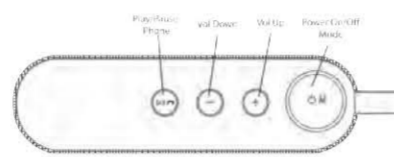
**TOMMY HILFINGER**  
WIRELESS SPEAKER

**WATER RESISTANT  
WIRELESS SPEAKER**

USER MANUAL FOR TOMMY SPEAKER 103



**PRODUCT OVERVIEW**

Play/Pause/Pipe, Vol Down, Vol Up, Power On/Off Mode

**Micro USB Cable**


**AUX Cable**

TF Card Slot, Speaker Charging Port, AUX Input, USB Powerbank


**CHARGING YOUR SPEAKER**

The battery must be fully charged prior to use. It takes approximately 4 hours to fully charge your speaker (from depleted unit); when the speaker is charged, the Red Led indicator keep flashing when it's fully, the light will keep it bright.

**A Via AC Adapter/Wall Charger:** Using the provided Micro USB cable, connect your Speaker (Micro USB port) to the AC Adapter (USB port).

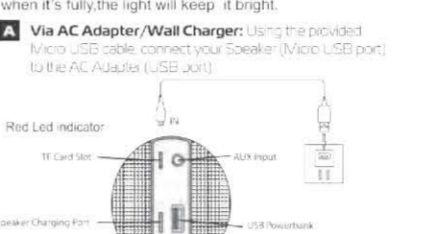


**B Via Computer:** Using the provided Micro USB cable, connect your Speaker (Micro USB port) to the USB port (Audio/USB port).

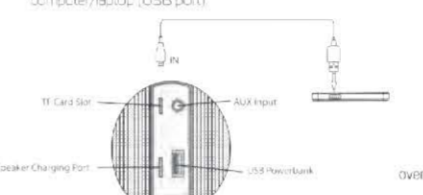

Red Led Indicator, TF Card Slot, Speaker Charging Port, AUX Input, USB Powerbank

**FM Radio**

**1st:** Using the provided Micro USB cable, connect your Speaker (Micro USB port) to the AC Adapter (USB port).

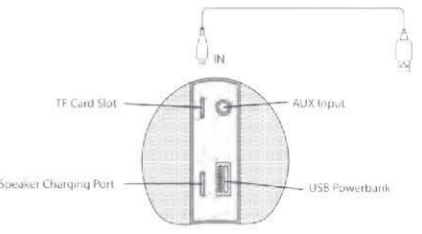

TF Card Slot, Speaker Charging Port, AUX Input, USB Powerbank

**CHANGING MODES**

Your speaker is equipped with a FM receiver. To switch between Bluetooth and FM modes, Press the [M] button. A tone will indicate which mode the speaker is currently in. Press the [M] button to auto search for radio channels. Press the [M] button again to stay on this channel. Note: leaving the provided Micro USB charging cable plugged into the usb output will enhance signals as the usb cable will act as an antenna.

**Go to next station**      **Go to previous station**

Press and hold [M] Button      Press and hold [M] Button

CE FC

**PAIRING THE SPEAKER TO BLUETOOTH DEVICE**

Make sure the Bluetooth function is available on your cell phone. Specific pairing procedures will be different depending on different cell phone. For detailed information, please refer to your cell phone's User Guide.

- If no device connection is made within 10 minutes of the Speaker being switched on, the Speaker will automatically be switched off to save power.
- After a successful pairing, devices will memorize each other. Therefore, no pairing will be needed next time.

- Keep the distance between the cell phone and the speaker within 3 feet ( for pairing only).
- Turn on the speaker by pressing the Power Button [M] for 3 seconds.
- The tone prompt will sound. The until will automatically enter into pairing mode.
- Activate the Bluetooth function of the cell phone to search for the Bluetooth devices. After finishing the search, select "Tommy Speaker 103" in the device list displayed.
- Your WS103 speaker is ready to use.

**SPEAKER CONTROLS**

**ON/OFF**  
Press and hold [M] button for 3 seconds to turn the unit ON. Press and hold the button again to turn it OFF. The unit will turn itself off if inactive for 10 minutes.

**VOLUME**  
During a call or when listening to music:  
**Volume +**  
Press [V+] Button  
**Volume -**  
Press [V-] Button


**MUSIC**  
**Go to next song**      **Go to previous song**  
Press and hold [M] Button      Press and hold [M] Button

**PLAY/PAUSE/ANSWER/REFUSE THE CALL**

Press [M] button to answer the call, press it again to hang up. Press and hold [M] button for 2 seconds to refuse the call. Double press [M] button to call back the last number.


**CHARGING A DEVICE FROM A SPEAKER**

Your speaker acts as a powerbank, so that you can charge your device. Connect your device to the USB powerbank port on the reverse of the speaker using your device's charging cord (not included). Your device will begin to charge automatically.



**AUX MODE**

Use the 3.5mm audio cable (included) to connect the Speaker to an audio source (MP3/MP4, mobile phone, computer). The speaker will play the music from the audio source.



**IMPORTANT SAFEGUARDS**

- Keep speaker away from any source of heat.
- Always adjust the speaker volume to a suitable level to avoid hearing damage or the damage to the unit.
- If not using the speaker for a long period of time, keep the internal battery charged (charge once every 3 months). This will extend the life of your lithium battery.

**SPECIFICATIONS**

Frequency: 20 Hz-20KHZ  
Battery: 1800 mAh Li-Ion  
Bluetooth version: 5.0  
Distance: 33 ft (10m)  
Charging time: 4 Hours  
Playing time: 6 Hours


**SUPPORT**

please do not attempt to fix the product by yourself. If you are experiencing any problems with the product, you can contact a Sves representative and they will assist you with any questions, problems or concerns you may have.

Visit our support page online at [www.sveselectronics.com](http://www.sveselectronics.com)


**Bluetooth**

**TOMMY HILFINGER**  
WIRELESS SPEAKER  
WATER RESISTANT  
WIRELESS SPEAKER  
HAUT-PARLEUR SANS FIL  
RÉSISTANT À L'EAU  
HAUT-PARLEUR SANS FIL  
MODE D'EMPLOI POUR TOMMY HAUT PARLEUR 103



**FM Radio**

1er: Utilisez le fourni Micro USB câble, connectez votre haut-parleur (Micro USB port) à l'adaptateur secteur (port USB) à l'adaptateur secteur (port USB) à l'aide du câble micro USB fourni.

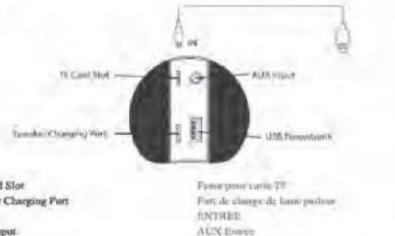

TF Card Slot, Speaker Charging Port, AUX Input, USB Powerbank

**MODIFICATION DES MODES**

Votre haut-parleur est muni d'un récepteur FM. Pour basculer entre les modes Bluetooth et FM, appuyez sur le bouton [M]. Une tonalité indiquera dans quel mode le haut-parleur est actuellement.

Appuyez sur le bouton [M] pour rechercher automatiquement des stations de radio.

Appuyez à nouveau sur le bouton [M] pour rester sur ce canal.

Remarque: veuillez laisser le câble de charge micro USB fourni branché sur le port USB reforcez les signaux, car le câble USB servira d'antenne.

Aller à la station suivante      Aller à la station précédente

Appuyez sur [M]      Appuyez sur [M]

**APERÇU DU PRODUIT**




Play/Pause/Pipe, Vol Down, Vol Up, Power On/Off Mode

**Micro USB Cable**

**AUX Cable**

TF Card Slot, Speaker Charging Port, AUX Input, USB Powerbank

Play/Pause/Pipe	Appuyer / Pause / Pipe
Vol Down	Vol -
Vol Up	Vol +
Power On/Off Mode	Mode Marche / Arrêt
Micro USB Cable	Câble Micro USB
AUX Cable	Câble AUX
TF Card Slot	Fente pour carte TF
Speaker Charging Port	Port de charge de haut-parleur
AUX Input	AUX Entrée
USB Powerbank	USB Powerbank renforcé

**ASSOCIANT LE HAUT-PARLEUR**

**BLUETOOTH APPAREIL**

Veuillez activer la fonction Bluetooth sur votre téléphone portable. Les procédures de couplage spécifiques sont différentes selon le téléphone portable. Pour plus d'informations, référez-vous au Guide de l'utilisateur de votre téléphone portable.

- Si il n'y a pas de connexion d'appareil stable dans les 10 minutes qui suivent l'activation du haut-parleur, le haut-parleur sera automatiquement désactivé pour économiser de l'énergie.
- Après le couplage, les appareils se mémorisent. Par conséquent, aucun jumelage ne sera nécessaire la prochaine fois.

- Veuillez garder une distance de 3 pieds entre le téléphone portable et le haut-parleur (pour l'appariement automatique).
- Veuillez activer le haut-parleur en appuyant sur le bouton d'alimentation [M] pendant 3 secondes.
- L'entonnoir de tonalité résonne, jusqu'à ce qu'il entre automatiquement en cycle de couplage.
- Veuillez activer la fonction Bluetooth du téléphone portable pour rechercher les appareils Bluetooth. Une fois la recherche terminée, sélectionnez "Tommy Speaker 103" dans la liste des appareils affichés.
- Votre haut-parleur WS103 est prêt à être utilisé.

**CHARGER VOTRE HAUT-PARLEUR**

Veuillez charger complètement la batterie avant utilisation. Il faut environ 4 heures pour recharger complètement votre haut-parleur (à partir d'une unité épuisée), une fois le haut-parleur chargé, la lumière LED rouge continue de clignoter. Une fois le haut-parleur entièrement chargé, il reste brillant.

**A Via un adaptateur secteur / chargeur mural:** connectez votre haut-parleur (Micro USB port) à l'adaptateur secteur (port USB) à l'aide du câble micro USB fourni.



**B Via un ordinateur:** connectez votre haut-parleur (Micro USB port) à l'ordinateur de bureau / ordinateur portable (port USB) à l'aide du câble micro USB fourni.



Red Led Indicator, TF Card Slot, Speaker Charging Port, AUX Input, USB Powerbank

**CONTRÔLE DE HAUT-PARLEUR**

**MARCHE/ARRÊT**  
Appuyez sur le bouton [M] pendant 3 secondes pour allumer l'appareil. Appuyez à nouveau sur le bouton pour le désactiver. L'appareil s'éteindra s'il est inactif pendant 10 minutes.

**MUSIQUE**  
Aller à la prochaine chanson      Appuyez sur le bouton [M]  
Aller à la chanson précédente      Appuyez sur le bouton [M]

**JOUER / PAUSE / RÉPONSE / REFUSER L'APPEL**

Appuyez sur le bouton [M] pour répondre à l'appel, appuyez à nouveau pour raccrocher.

Appuyez sur le bouton [M] pendant 2 secondes pour refuser l'appel.

Appuyez deux fois sur le bouton [M] pour répéter le dernier numéro.

**VOLUME**  
Pendant un appel ou en écoutant de la musique:  
Volume +      Appuyez sur le bouton [V+]  
Volume -      Appuyez sur le bouton [V-]

**Support technique / Enregistrement de garantie**

**SUPPORT TECHNIQUE:**  
En cas de problèmes, veuillez contacter nos représentants du support technique.

Visitez notre page de support en ligne sur [www.sveselectronics.com](http://www.sveselectronics.com)

**CHARGEANT UN APPAREIL À PARTIR D'UN HAUT-PARLEUR**

Votre haut-parleur se sert comme puissance mobile, ce qui vous permet de charger votre appareil. Connectez votre appareil au port USB du haut-parleur et à l'aide du câble de charge de votre appareil (non fourni). Votre appareil commencent à se charger automatiquement.



**AUX MODE**

Veuillez connecter le haut-parleur à une source audio (MP3 / MP4, téléphone portable, ordinateur) avec le câble audio de 3,5 mm (fourni). Le haut-parleur jouera la musique de la source audio.

**GARANTIES IMPORTANTES**

- Veuillez garder le haut-parleur à l'écart de toute source de chaleur.
- Veuillez toujours régler le volume du haut-parleur à un niveau approprié pour éviter tout dommage audiot ou de l'appareil.
- En cas de non-utilisation de haut-parleur pendant une longue période, maintenez la batterie interne chargée (chargez-la tous les 3 mois). Cela prolongera la vie de votre batterie au lithium.

**SPECIFICATIONS**

Fréquence: 20 Hz-20KHZ  
Batterie: 1800 mAh Li-Ion  
Version Bluetooth: 5.0  
Distance: 33 pi (10 m)  
Durée de charge: 4 heures  
Durée de jeu: 6 heures

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.