



Okapi10 Pro Max

User Manual

MANUEL D'UTILISATION

Please read this guide carefully before use and keep it for future use.

Veuillez lire ce manuel attentivement et le conserver pour toute future référence

1. For your safety

Please read this manual before using the cell phone to ensure your safety and proper use.



SWITCH OFF IN HOSPITALS

Please abide by relevant provisions or regulations. Please turn off your mobile phone near medical equipment.



SWITCH OFF WHEN REFUELING

Don't use the phone at a refueling point. Don't use near fuel or chemicals.



SIM CARDS AND TF CARD ARE PORTABLE

Keep your phone, phone parts and accessories out of children's reach.



BATTERY

Please do not destroy or damage the battery, it can be dangerous and cause fire. Please do not throw battery in fire to avoid hazard. When battery cannot be used, please dispose in safe environment. Do not try to dismantle the battery. If the battery or authorized charger is broken or old, please stop using them, and replace with certified genuine battery.

For first time using, please discharge completely and charge the battery in 100% full and continue charging one more hour with authorized charger.



USE QUALITY EQUIPMENT

Use authorized equipment to avoid danger.



ROAD SAFETY COMES FIRST

Give full attention while driving, Park before using your phone. Please follow traffic rules of local city town.



INTERFERENCE

All wireless devices may be susceptible to cause interference, which could affect performance.




SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft. It's not only dangerous but also illegal to use mobile phone in an aircraft.

2. Learn about the phone

Overview

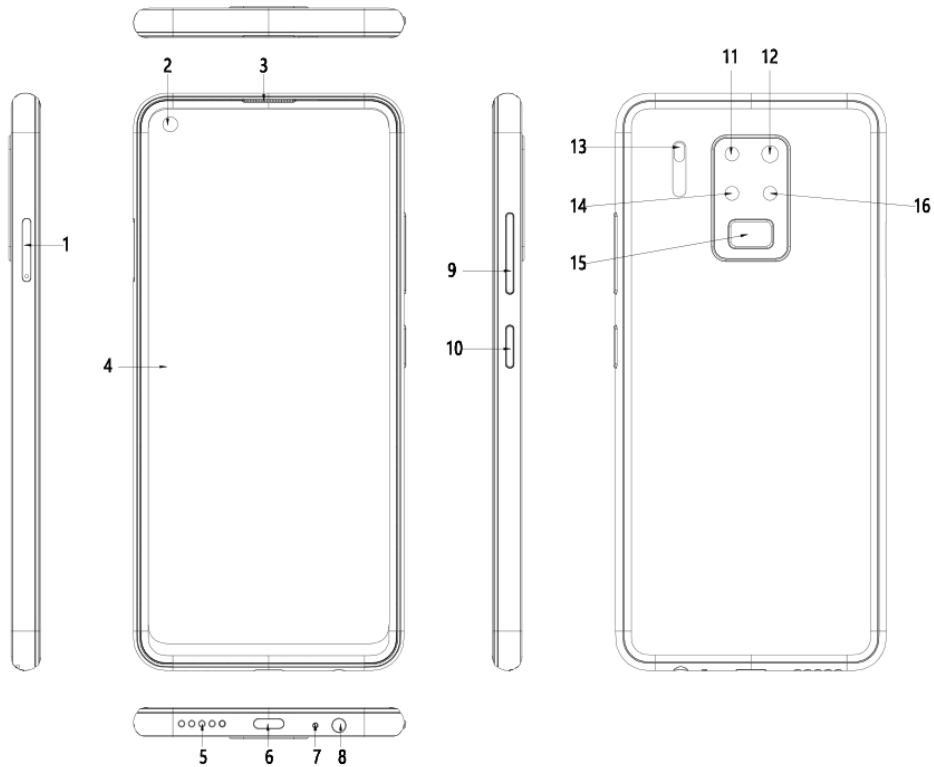

- | | |
|-----------------|------------------------|
| 1 Card Tray | 9 Volume Key |
| 2 Front Camera | 10 Power Key |
| 3 Receiver | 11 Rear camera (16M) |
| 4 Touch screen | 12 Rear Wide Angle(8M) |
| 5 Speaker | 13 Photo flash |
| 6 USB interface | 14 Depth Camera (2M) |
| 7 Microphone | 15 Fingerprint |
| 8 Headset | 16 Macro camera (5M) |


Function Keys

Keys	Functions
Power Key	<ul style="list-style-type: none"> Press to turn on/off the screen. Press and hold to reboot, power off the phone, and turn on airplane mode or do not disturb.
Volume Key	<ul style="list-style-type: none"> Press to adjust the volume of device.
Home Key (on the screen)	<ul style="list-style-type: none"> Tap to return to Home screen.
Back Key	<ul style="list-style-type: none"> Tap to return to the previous screen.

(on the screen)	
-----------------	--

✓ **Note**


Multi Task Key and **Back Key** can be exchanged the layout in **Settings --> Navigation bar**. You can customize the navigation bar such as Swipe up on the home button, Gesture navigation.

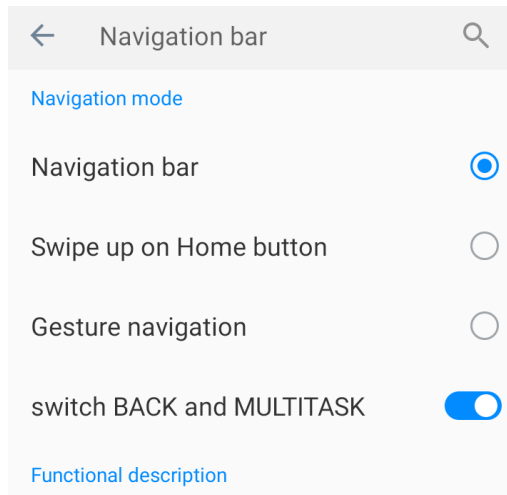


3. Before using

The phone is a Dual SIM mobile that allows you to use two mobile networks.

 **Insert SIM cards and TF card**


 Stick into the pin hole with eject tool, and then card tray will be out of phone.

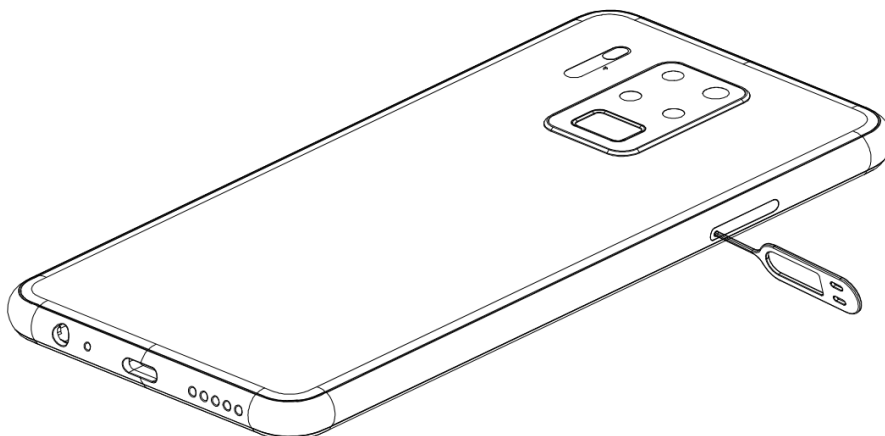

-
- 1) Insert the Micro SIM cards and TF card to the card slots correctly.

Card 1 supports Micro SIM1 card.

Card 2 supports Nano SIM2 card or TF card.

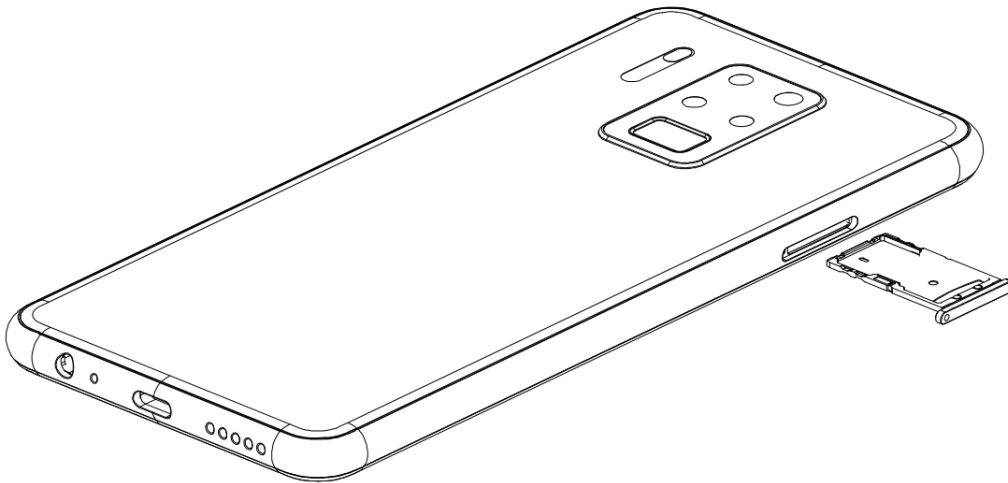

✓ **Note:**

- Do not remove the cards while the device is transferring data. Doing so may cause data to be lost or damage to the cards and device.
- The SIM cards and TF card are small parts. Please keep away from Children to avoid swallowing the card by accident.
- Please do not touch the metal surface of SIM and TF cards and keep them away from electromagnetic field to avoid damaged data.

🔌 **Charge the Battery**

Charge the battery before using it.

4. Getting started

🔌 **Basic Function**

- Turn on the phone

Press and hold the power key for a while to turn on the phone.

-
- Turn off the phone
Long press the power key until a menu shows. Choose “Power off” to turn off the phone.
 - Restart the phone
Option 1: Long press the power key until a menu shows. Choose “Reboot” to restart the phone.
Option 2: Long press the power key till 11 seconds to auto restart the phone automatically.
 - Lock the screen
Option 1: Press the power key to turn off the screen and lock it.
Option 2: The screen will auto lock if you don't use the phone for a while.
 - Unlock the screen
Press the power key for unlocking.

5. Warnings and notes

Operational Warnings

Important information on safe and efficient operation. Read this information before using your phone. For the safe and efficient operation of your phone, observe these guidelines:

Potentially explosive at atmospheres: Turn off your phone when you are in any areas with a potentially explosive atmosphere, such as fueling areas (gas or petrol stations, below deck on boats), storage facilities for fuel or chemicals, blasting areas and areas near electrical blasting caps, and areas where there are chemicals or particles (Such as metal powders, grains, and dust) in the air.

Interference to medical and personal Electronic Devices: Most but not all electronic equipment is shielded from RF signals and certain electronic equipment may not be shielded against the RF signals from your phone.

Audio Safety: This phone is capable of producing loud noises which may damage your hearing. When using the speaker phone feature, it is recommended that you place your phone at a safe distance from your ear.

Other Medical Devices, hospitals: If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Product statement on handling and use: You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment. Always treat your phone and its accessories with care and keep it in a clean and dust-free place.

Do not expose your phone or its accessories to open flames or lit tobacco products.

Do not expose your phone or its accessories to liquid, moisture, or high humidity.

Do not drop, throw, or try to bend your phone or its accessories.

Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.

Do not attempt to disassemble your phone or its accessories; only authorized personnel can do so.

Do not expose your phone or its accessories to extreme temperatures, minimum 32°F and maximum 104°F (0°C to 40°C).

Battery: Your phone includes an internal lithium-ion or lithium-ion polymer battery. Please note that use of certain data applications can result in heavy battery use and may require frequent battery charging. Any disposal of the phone or battery must comply with laws and regulations pertaining to lithium-ion or lithium-ion polymer batteries.

Faulty and damaged products: Do not attempt to disassemble the phone or its accessory. Only qualified personnel can service or repair the phone or its accessory. If your phone or its accessory has been submerged in water, Punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

1. Pour votre sécurité

Avant toute utilisation de l'appareil, veuillez lire attentivement ce mode d'emploi et toutes les précautions qui y sont indiquées afin de pouvoir l'utiliser correctement et en toute sécurité.



ÉTEINDRE DANS LES HÔPITAUX

Respectez toutes les règles ou les règlements des hôpitaux et des établissements de soins de santé.



ÉTEINDRE DANS LES STATIONS DE SERVICES

N'utilisez pas l'appareil dans les stations-services ou à proximité de combustibles ou de produits chimiques.



LES CARTES SIM ET SD SONT PORTABLES

Gardez votre appareil, ses parties et ses accessoires hors de la portée des enfants



BATTERIE

Veuillez ne pas détruire ou endommager la batterie, cela peut être dangereux ou causer un incendie.

Veuillez ne pas jeter la batterie dans le feu afin d'éviter le danger.

Lorsque la batterie ne peut plus être utilisée, veuillez-vous en débarrasser de façon à préserver l'environnement.

Ne tentez pas de démonter la batterie. Si la batterie ou le chargeur sont endommagés ou usés, veuillez les remplacer avec une batterie certifiée authentique.



UTILISER UN ÉQUIPEMENT DE QUALITÉ

Utilisez les équipements et les pièces de rechange d'origine afin d'éviter les risques.



LA SÉCURITÉ ROUTIÈRE AVANT TOUT

Prêtez une attention particulière lors de la conduite, gardez-vous sur l'accotement avant d'utiliser votre périphérique intelligent (téléphone/tablette). Veuillez suivre les règles de la circulation locales.



INTERFÉRENCE

Tous les appareils sans fil sont susceptibles de provoquer des interférences, ce qui pourrait affecter les performances.




ETEINDRE DANS L'AVION

Les appareils sans fil peuvent causer des interférences dans les avions. L'utilisation de l'appareil peut

être dangereuse et illégale à bord d'un avion.

2. A propos du téléphone

📌 Vue Générale

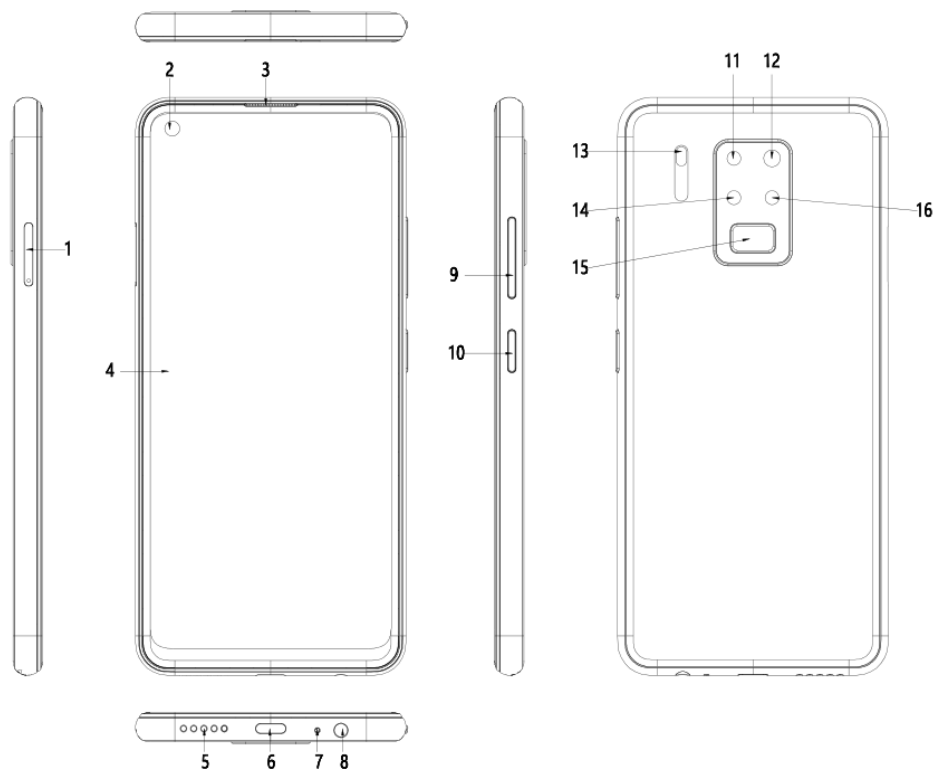

- | | | | |
|---|-----------------------|----|----------------------------------|
| 1 | Plateau SIM | 9 | Touche de volume |
| 2 | Camera Frontale | 10 | Touche Marche/Arrêt |
| 3 | Ecouteur | 11 | Caméra Arrière (16M) |
| 4 | Ecran tactile | 12 | Camera Grand Angle Arrière (8M)) |
| 5 | Écouteur/Haut-parleur | 13 | Flash |
| 6 | Interface USB | 14 | Caméra de profondeur (2M) |
| 7 | Microphone | 15 | Capteur d'empreinte digitale |
| 8 | Entrée casque | 16 | Caméra macro (5M) |


📌 Les fonctions des touches

Touche	Fonction
Touche d'alimentation	<ul style="list-style-type: none">• Appuyez pour allumer / éteindre l'écran.• Appuyez et maintenez pour redémarrer, éteindre le téléphone et activer le mode avion ou ne pas déranger.
Touche de volume	<ul style="list-style-type: none">• Appuyez pour ajuster le volume de l'appareil.
Touche d'accueil	<ul style="list-style-type: none">• Appuyez pour revenir à l'écran d'accueil.

(Sur écran)	
Touche retour (Sur écran)	<ul style="list-style-type: none"> Appuyez pour revenir à l'écran précédent.

Remarque :


Les touches **Multi-tâches** et **Retour** peuvent être permutées dans **Paramètres -> Barre de navigation**. Vous pouvez aussi personnaliser le mode de navigation tel que glisser vers le haut sur le bouton d'accueil ou utiliser la navigation gestuelle.

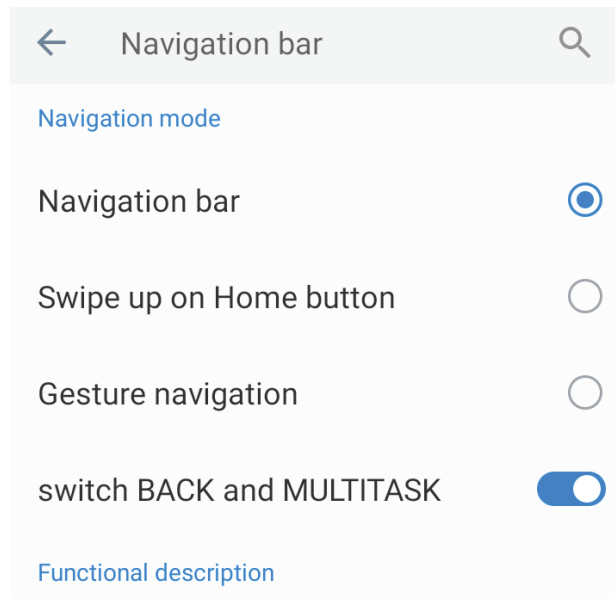

3. Avant l'utilisation

L'appareil est un smartphone double SIM qui vous permet d'utiliser deux réseaux mobiles.


- ✚ **Insérez les cartes SIM et la carte SD**
- ✚ Insérez la pointe de l'outil d'éjection du plateau livré avec votre appareil dans le trou d'éjection du plateau situé à côté du logement pour carte SIM.

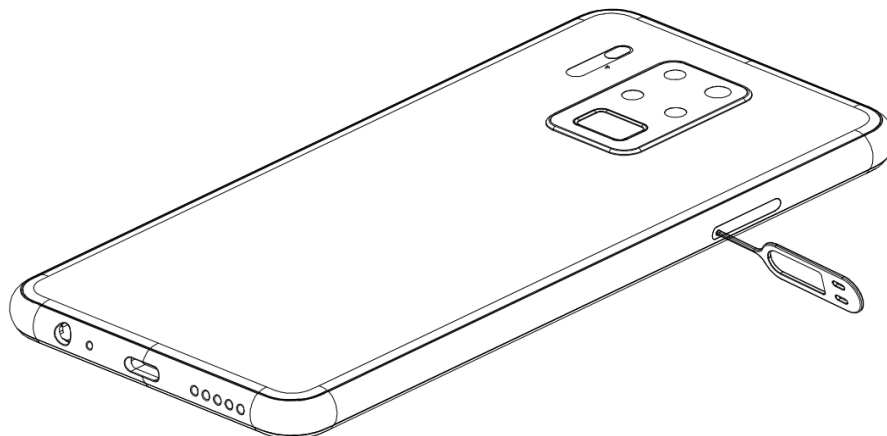

2) Placez correctement les cartes SIM

Carte 1 support de la carte SIM1.

Carte 2 support de la carte SIM2 ou la carte mémoire.

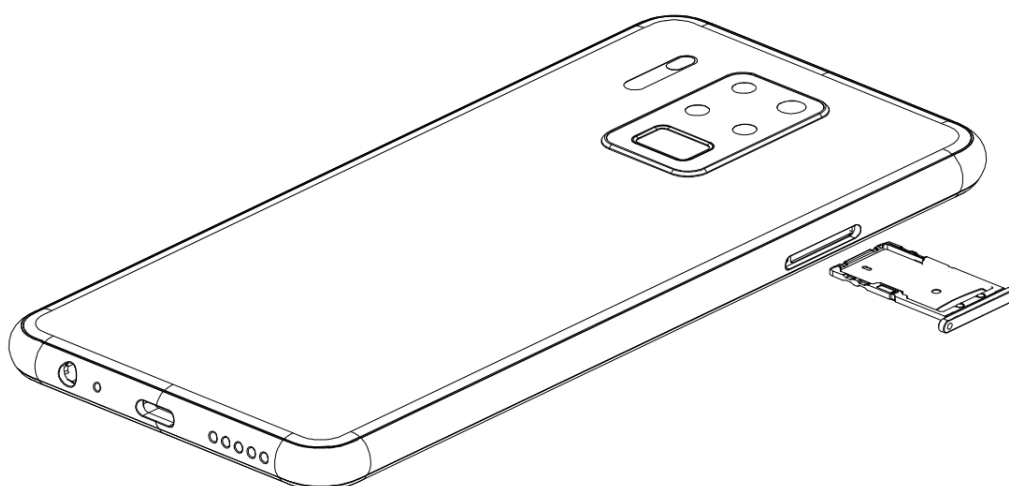

✓ **Remarques :**

- Ne retirez pas les cartes lorsque l'appareil transfère des données. Cela pourrait entraîner la perte de données ou endommager les cartes ou l'appareil.
- Les cartes SIM et la carte SD sont de petites pièces. Veuillez les garder loin des enfants afin d'éviter tout accident.
- Veuillez ne pas toucher la surface métallique de la carte SIM et SD et éloignez-les des champs électromagnétiques pour éviter la perte de données.

🔌 **Charger la batterie**

Chargez la batterie avant de l'utiliser

4. MISE EN ROUTE

🔌 **Fonctions de base**

• **Allumer le téléphone**

Maintenez la touche d'alimentation appuyée pour démarrer l'appareil.

-
- **Éteindre le téléphone**
Maintenez la touche d'alimentation appuyée jusqu'à ce qu'un menu s'affiche. Choisissez "Eteindre" pour éteindre le téléphone.
 - **Redémarrer le téléphone**
Option 1 : Maintenez la touche d'alimentation appuyée jusqu'à ce qu'un menu s'affiche. Choisissez "Redémarrer" pour redémarrer le téléphone.
Option 2 : Maintenez la touche d'alimentation appuyée pendant 11 secondes pour redémarrer l'appareil.
 - **Verrouiller l'écran**
Option 1 : Appuyez sur la touche d'alimentation pour éteindre l'écran et le verrouiller.
Option 2 : L'écran se verrouille automatiquement si vous n'utilisez pas le téléphone pendant un moment.
 - **Déverrouiller l'écran**
Appuyez sur la touche d'alimentation, et faites glisser vers le haut pour déverrouiller

5. NOTES ET AVERTISSEMENTS

Avertissements opérationnels

Informations importantes pour une exploitation sûre et efficace. Veuillez lire ces informations avant d'utiliser votre appareil.

Atmosphères potentiellement explosives : Eteignez votre appareil lorsque vous êtes dans des lieux où l'atmosphère est dangereuse, comme les stations de services, entrepôt de carburant ou de produits chimiques, les zones de dynamitage et les zones situées à proximité des détonateurs électriques, ou des zones où il y a des produits chimiques ou des particules fines (poudres métalliques) dans l'air.

Interférence aux appareils électroniques médicaux et personnels : La plupart des équipements électroniques sont protégés contre les signaux RF, cependant, certains équipements électroniques peuvent ne pas être protégés contre les signaux RF de votre appareil.

Sécurité Audio : Cet appareil est capable de produire un volume sonore élevé qui peut endommager votre ouïe. Lorsque vous utilisez la fonction haut-parleur de l'appareil, il est recommandé de placer votre appareil à une distance sûre de votre oreille.

Autres dispositifs médicaux et hôpitaux : Si vous utilisez un appareil médical personnel, consultez le fabricant de l'appareil pour déterminer s'il est protégé contre les ondes radio externes. Eteignez votre appareil dans les établissements de soins et de santé si nécessaire. Les hôpitaux et les établissements de soins peuvent utiliser des appareils pouvant être sensibles aux ondes radio externes.

Spécifications sur la manipulation et l'utilisation de produit : Vous êtes responsable de la façon dont vous utilisez votre appareil et des conséquences de son utilisation.

Vous devez toujours éteindre votre appareil lorsque l'utilisation de celui-ci est interdite. L'utilisation de votre appareil est soumise aux mesures de sécurité conçues pour protéger l'utilisateur et son environnement.

- N'exposez pas votre appareil ou ses accessoires aux flammes.

-
- N'exposez pas votre appareil ou ses accessoires aux liquides ou à une forte humidité.
 - Ne laissez pas tomber, jetez ou essayez de plier votre appareil ou ses accessoires.
 - N'utilisez pas de produits chimiques abrasifs, de dissolvants de nettoyage, ou d'aérosols pour nettoyer l'appareil ou ses accessoires.
 - N'essayez pas de démonter votre appareil ou ses accessoires.
 - N'exposez pas votre appareil ou ses accessoires à des températures inférieures à 0°C (32°F), ou supérieures à 40°C(104°F).

Batterie : Votre appareil contient une batterie en lithium-ion ou lithium-ion polymère. Veuillez noter que l'utilisation de certaines applications peut entraîner une utilisation intensive de la batterie et requière un rechargement fréquent. Toute mise au rebut de l'appareil ou de la batterie doit être conforme aux lois et règlements relatifs aux batteries en lithium-ion ou lithium-ion polymère.

Produits défectueux ou endommagés : N'essayez pas de démonter l'appareil ou ses accessoires. Seul un personnel qualifié est autorisé à réparer l'appareil ou ses accessoires. Si votre appareil ou ses accessoires ont été immergés dans l'eau, perforés ou soumis à une chute sévère, ne l'utilisez pas avant qu'il soit contrôlé dans un centre de service agréé.

SAR Statement:

This feature phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Okapi10 Pro Max (FCC ID: 2AXQP-OKAPI10MAX) has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.