User Manual

Multimedia Projector

Pls read this manual carefully before using this product, and properly keep for future reference.

Thanks for your choosing!

Warning
Please do not open the case in order to prevent electric shock.
Customers cannot repair parts of inside devices. Please contact
professional maintenance staff to repair it.

Environmental parameters:
Working height: no more than 2000 meters
Working temperature: 0-45 °C
Working humidity: 10%-90%, non-condensing
Storage temperature: -10-50 ° C

Standard accessories

Some of the accessories may vary by region.

Projector

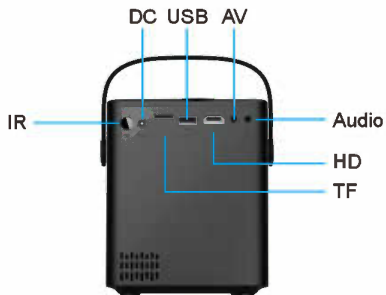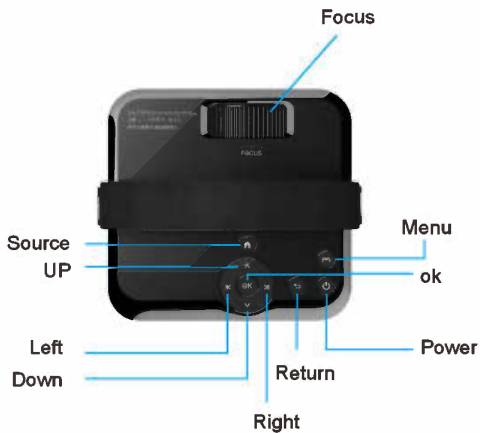Remote control

Adapter

AV Cable

HDMI

User Manual

Interface definition

DC USB AV

IR

Audio

HD

TF

Control Panel

Focus

Source

Menu

UP

ok

Left

Power

Down

Return

Right

Remote control

ON/OFF — Flip
Volume- — Volume +
OK — Direction
— Return
Home — Menu
1 2 3
4 5 6
7 8 9
Mouse — Backspace

Installation

Choosing a location

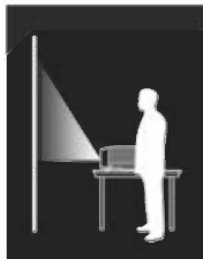Before choosing an installation location for your projector, take the following factors into consideration:
• Size and position of your screen
• Electrical outlet location
• Location and distance between the projector and the rest of your

1. Front:
Select this location with the projector placed near the floor in front of the screen. This is the most common way to position the projector for quick setup and portability.
Turn on the projector and make the following settings:
MENU > Picture>Flip> UP

Front Ceiling

Select this location with the projector suspended from the ceiling in front of the screen.
Turn on the projector and make the following settings:
MENU > Picture>Flip> UP, DOWN

Operation

Starting up the projector

1. Plug the power cable into the projector and a power outlet. Turn on the power outlet switch (where fitted). The POWER indicator light on the projector lights red after power has been applied.

Please use the supplied power cable to avoid possible dangers such as electric shock and fire.

2. Press the power button on the projector or remote control to start the projector. As soon as the lamp lights up. The POWER indicator remains red when the projector is turned on.The fans start operating, and a start-up image is displayed on the screen while it warms up. The projector does not respond to further commands while it is warming up.
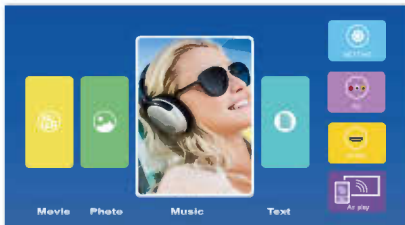
Adjust the image

Focus

ABCD → ABCD

Bad ✗   Good! ✓

Let's Begin

Media Play from USB and TF card.

1. When turn on, Main screem as below, choose Photo, Music, Movie, and Text file.

Fiel Type	Format
Movie	MP4/AVI/WMV/RMVB
Music	MP3/WMA/OGG/AAC/FLAC APE/WAV
Photo	JPEG/BMP/PNG
Screen Mirroring	share your phone screen with other devices (only for iphone)

Movie   Phote   Music   Text

Starting up the projector

1. Touch " 🏠 " from Touch panel, or from the Remote control, you can choose USB/TF/HDMI1/HDMI2 /PC-RGB(VGA)/AV different source in.
2. You can connect different devices with the projector , according to the connection part of this manual.
You can install your projector in the following ways.

Input Source

- HD
- AV
- USB
- TF

⊙ OK

Connection

When connecting a signal source to the projector, be sure to:
1. Turn all equipment off before making any connections.
2. Use the correct signal cables for each source.
3. Make sure the cables are firmly inserted.
In the connection illustrations shown below, some cables may not be included with the projector (see standard accesories). They are commercially available from electronics stores.
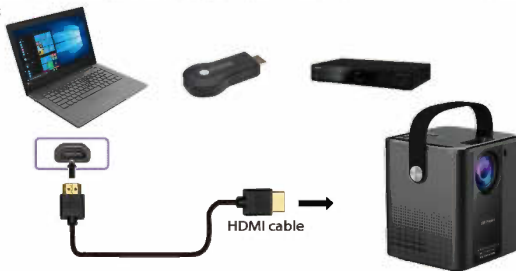
You can install your projector in the following ways.
Connecting with video equipment

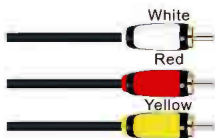| Terminal name	Terminal appearance	Function	Picture quality
HDMI		Connecting HDMI devices	● Best
AV	◎	Connecting a AV devices	● Good

Connecting HDMI devices

HDMI (High-Definition Multimedia Interface) supports uncompressed video data transmission between compatible devices like Laptop, DTV tuners, DVD players, Blu-ray players and displays over a single cable. You should use an HDMI cable when making a connection between the projector and HDMI devices.
HDMI device: Laptop, DVD player, digital tuner, Chromecast, Fire TV etc

HDMI cable

Connect the DVD, DTV Tuner, etc with AV output devices.
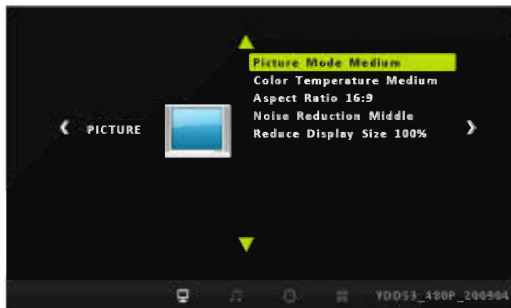DVD Player, DTV Tuner, etc.

White

Red

Yellow

TV Box

Game BOX

Camera

DVD/Blu-ray Player

You can get better video performance, from the machine setting. Touch menu key or on remote control,Please note that you can switch between pictures, sounds, time, options with the left and right buttons.
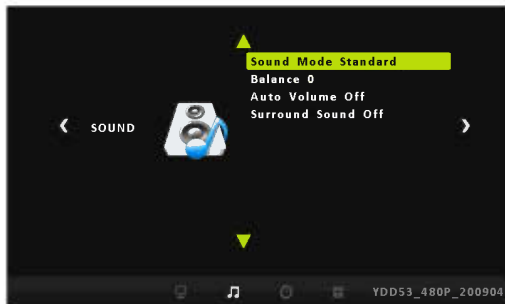
Picture

Picture Mode: You can adjust the color temperature, zoom ratio

Sound

Sound Mode User, Balance, Auto Volume, Surround Sound
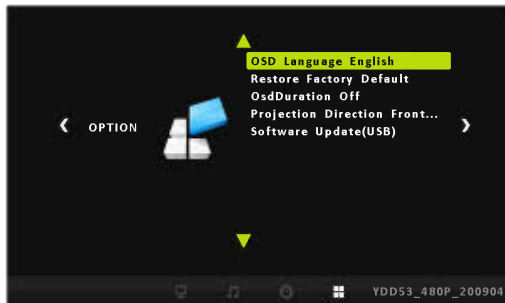
Time
Clock on/of, Sleep Timer, Auto Sleep.

Option
You can adjust the language, restore factory settings, menu display time, flip, software upgrade
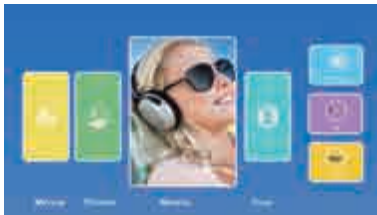
Android Smart Version

Wifi Miracast Version

Basic Version

WARNING

1. Use this product only for intended use as described in this manual.

2. No peeking into the lens while projectors is working.

3. No cloth, or any other material that could stock ventilation holes of the projector.

4. No water-proof function for this projector ,no such apparatus as vase or cup should be put around the projector.

5. Projector should be stocked and used at dry and clean condition.

6. Please turn off the projector and cut off the power supply, if it is not used for along time.

7. Please use factory original foam and other shockproof material while transporting.

8. If projector defected, do not attempt to repair it by yoursel f. Please contact with your distributor or factory directly.

9. To avoid risk of electronic shock, do not disassemble or repair the device. Incorrect repair may cause risk of electronic shock or injury to people during operating.
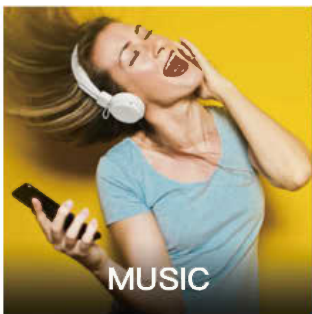
Thanks for reading!

PHOTO

TEXT

MUSIC

LED SOURCE

HD MULTIMEDIA
PROJECTOR

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any inte rference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interferenceto radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.
· Increase the separation between the equipment and receiver.
· Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
· Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.