1、附件文件名: C1 包材-产品说明书

2、成品尺寸: 128*128mm


- 128g铜版纸+骑马钉 材质: 5,
- 4、 工艺: 40印刷









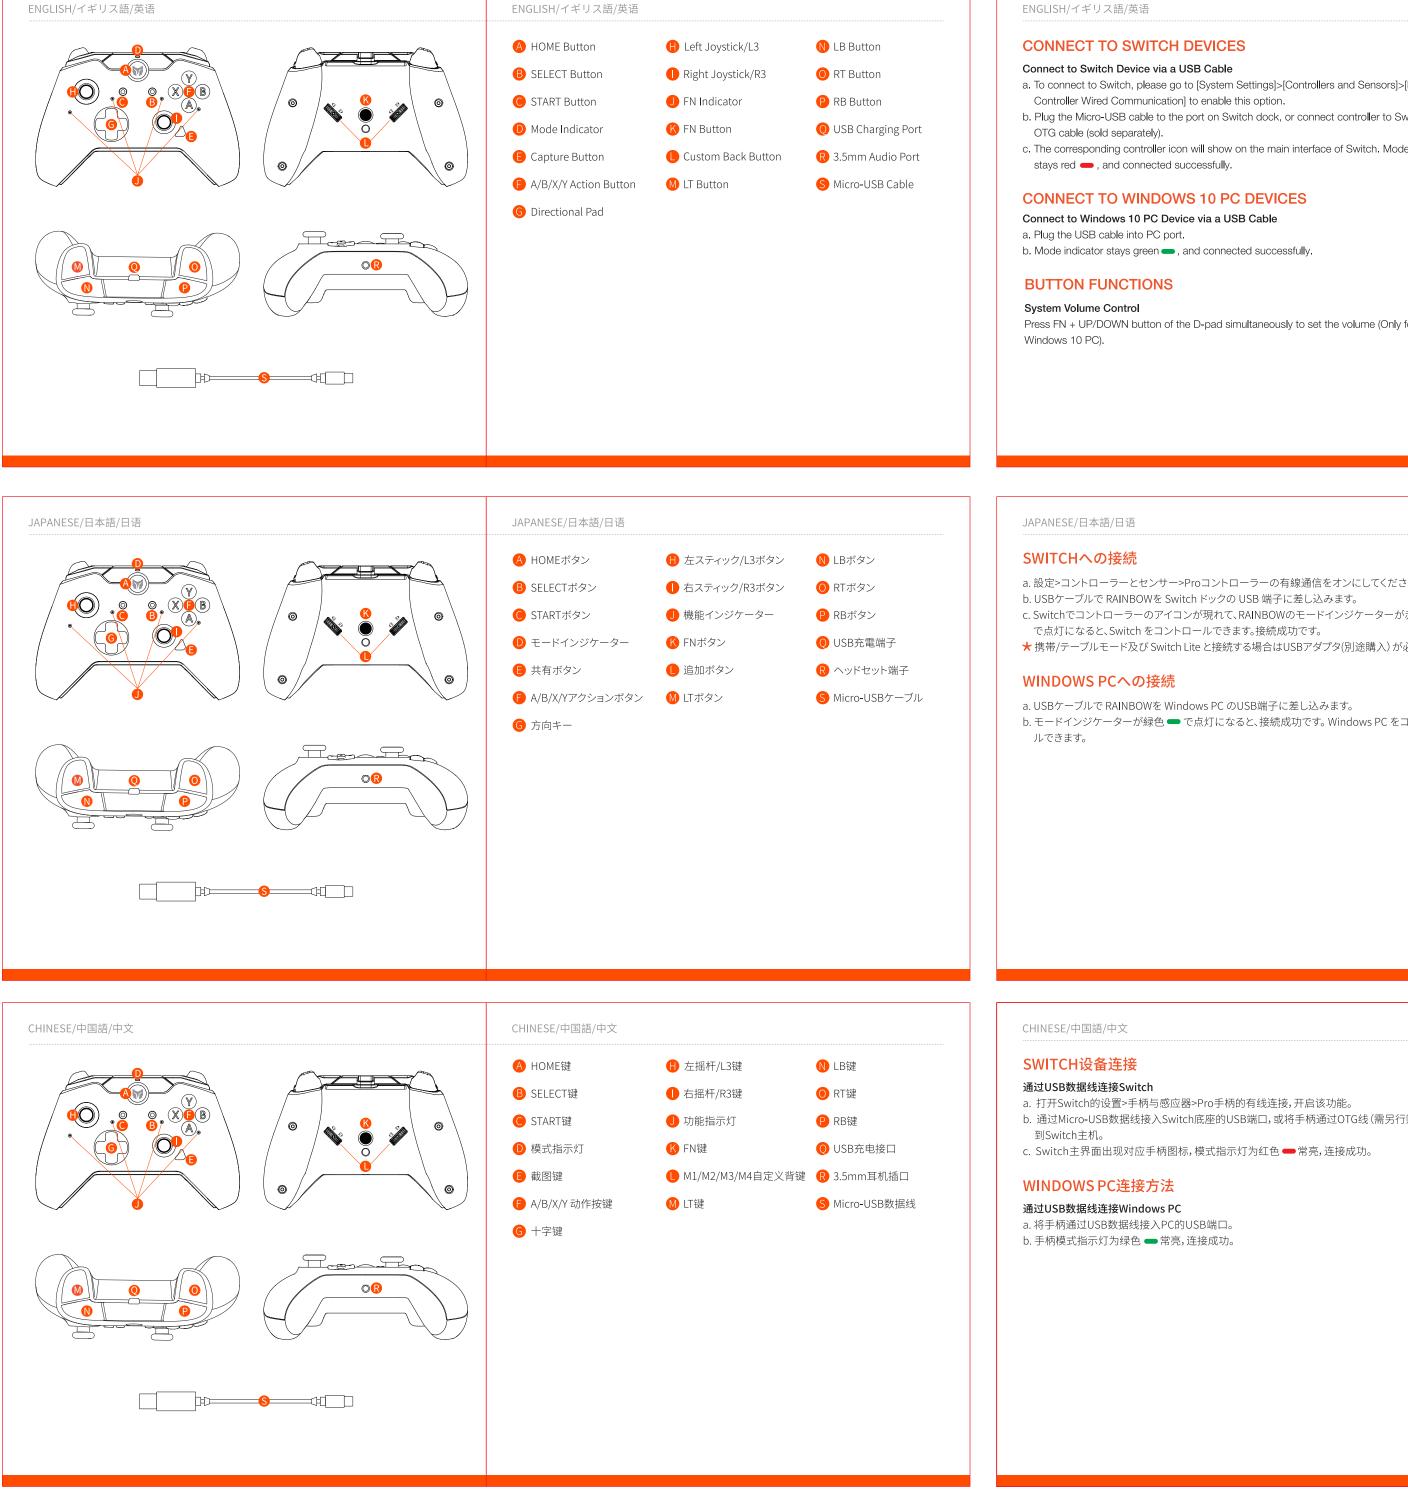

BIGBIG WON

	ENGLISH/イギリス語/英语	ENGLISH/イギリス語/英语	ENGLISH/イギリス語/	英语		ENGLISH/イギリス語/英语
	GYROCON+ Global Gyro Function a. Press and hold the FN button first and then press the left joystick down button L3 (To turn on the "left joystick gyro function), the mode indicator light is solid purple —, indicating	TURBO FUNCTION (TURBO ON: FN button+Target button) a. Press and hold the FN button first and then press TARGET button to set TURBO function successfully, and mode indicator flashes in orange [™] / _↓ twice .	 c. Press the target back button to respond to the recorded macro settings. d. To cancel the macro setting, press the target back button once after entering the macro recording mode again, and the mode indicator will flash blue ≥ en ≤ once to cancel the function. 		back button once after entering the macro	AURORA RGB LIGHTING EFFECT SWITCH a. Double-click the FN button to quickly switch the controller lighting effects (please download BIGBIG WON APP to enjoy rich lighting modes and custom light effects).
ensors]>[Pro ler to Switch via a	that the left joystick gyro function has been turned on. Follow the steps above and do it again to turn off this function.b. Press and hold the FN button first and then press the right joystick down button R3 (To turn	 b.Press the FN button + LEFT button of the D-pad simultaneously to switch combo frequency from fast, middle to slow. c. Press and hold the FN button first and then press TARGET button to cancel combo function 	★ The buttons that can set the macro function are: A/B/X/Y buttons, LT/LB/RT/RB/L3/R3 buttons and direction buttons.			b. If there is no connection within 30 minutes, the light effect will be automatically turned off and you can press any button to wake it up.
ch. Mode indicator	on the right joystick gyro function), the mode indicator light is solid purple $-$, indicating that the gyro function of the right joystick has been turned on. Follow the steps above and	of the button. \star The buttons that can be set with the TURBO function are: A/B/X/Y button, LB/RB button.	Button Function Volume Control	Mode Indicator	Button Operation Press FN + ▲ / ▼	CONNECT WITH BIGBIG WON OFFICIAL APP Customize the button functions of your Rainbow wired controller with BIGBIG WON Official APP,
	do it again to turn off this function. c. First Press and hold any button (LT/M1/M2/M3/M4), and then press the FN button + the	MACRO FUNCTION	Left Joystick Gyro	Stay on	Long Press FN + Left Joystick Down Button(L3)	and a series of custom button functions can be set such as Macro, Turbo, Firmware
	right joystick down button R3 to enter gyroscope function setting, the right joystick gyro	a. The back buttons M1-M4 can be used as custom macro buttons, long press FN button first and then press target back button, when the mode indicator breathe in blue () indicating it	Right Joystick Gyro	🛑 Stay on	Long Press FN + Right Joystick Down Button(R3)	upgrade,AURORA lighting effects and more. a. Ensure that the RAINBOW is connected with device successfully.
	function has been turned on, (the gyro function will be turned on only when this button is pressed and the mode indicator light is solid purple $-$). Follow the steps above and do it	has entered the macro recording mode. b. After recording the button sequence and interval, press the target back button once, and the	Right Joystick Button Global Gyro	Stay on	(LT/M1/M2/M3/M4)+ Right Joystick Down Button(R3)+FN	b. Turn on mobile device's bluetooth function, and search for the Bluetooth device (RAINBOW),
	again to turn off this function. ★ This function is turned off by default.	mode indicator will flash blue == twice to exit the recording mode.	Gyro Calibration Mode Vibration Intensity Adjustment	((🛖) Breathing	Long press SELECT + START Press FN + ►	and pair. c. Open BIGBIG WON Official APP to personalize your RAINBOW Controller.
	★ Calibration Mode: Press and hold the FN button and then press the screenshot button for 3 seconds to enter the global gyro function calibration mode, the indicator will be in breathing	c. Press the target back button to respond to the recorded macro settings.d. To cancel the macro setting, press the target back button once after entering the macro	TURBO Function Setting	🌞 Flash	Press FN + TARGET button	★ System Requirements for the APP iOS 13 or above
e (Only for	orange (\mathbf{n}) which will go out after the calibration is successful.	recording mode again, and the mode indicator will flash blue → once to cancel the function.	TURBO Frequency Setting		Press FN + ◀	Android 8.0 or above
	MOTOR VIBRATION INTENSITY ADJUSTMENT a. The intensity of the motor vibration is divided into 4 levels of strong/medium/weak/off,	CUSTOM MACRO FUNCTION SETTING	Macro Setting①	((CD)) Breathing	Long Press FN + TARGET button	
	which can be switched cycularly, and the vibration intensity defaults to the highest gear.	a. The back buttons M1-M4 can be used as custom macro buttons, long press FN button first and then press target back button, when the mode indicator breathes in blue () indicating	Macro Setting②	Flash Twice	Press TARGET button once	
	 Press and hold the FN button first and then press the right button of D-pad to adjust the vibration intensity. 	it has entered the macro recording mode. b. After recording the button sequence and interval, press the target back button once, and the	Custom Button Setting@	Flash Twice	Press TARGET button once	
		mode indicator will flash blue > twice to exit the recording mode.	Volume Control		Doule press FN button	BIGBIG WON APP Tutorials on Official Website
	JAPANESE/日本語/日语	JAPANESE/日本語/日语	JAPANESE/日本語/日词	죠		JAPANESE/日本語/日语
	ボタン機能説明	TURBO機能 a. FNボタンを押してから、TURBOさせたいボタンを押して、中心2枚の機能インジケーターがオ			の機能をコントロールできます。 タンを押して モードインバケーターがブルーム	AURORA RGBバックライト効果
-ターが赤色 ━	音量の調節 FNボタンを押しながら、方向キーの上/下ボタンを押すと音量を調節できます。 ★ 当機能は Windows 10のみ対応します。	レンジ色 🛊 で点滅になると、TURBO機能がオンになります。 b. FNボタンを押してから、方向キーの左ボタンを押すとTURBOのスピードを調節できます。	d.機能設定モードで再度機能を設定した追加ボタンを押して、モードインジケーターがブルー色 で一回点滅になると、設定した機能がオフになります。 ★ 追加ボタンの機能を設定可能のボタン:A/B/X/Yアクションボタン、LT/LB/RT/RBボタン、L3/R3 ボタン及び方向キー。			a. FNボタンをダブルクリックすると、AURORA RGBバックライト効果をすばやく切り替えることが できます。 b. 30分以上操作されないとバックライトは自動的にオフになり、いずれかのボタンを押してウェ
	グローバル加速度センサー (GYOCON+) 機能	TURBOのスピードは3レベルでサイクルします。 c.もう一度 FNボタンを押してから、TURBO機能を設定したボタンを押して、対応ボタンの	ボタン及び分向す 。 	モード/FNインジケーター	- 対応ステップ	イクアップできます。
購入) が必要です。	a. FNボタンを押してから、L3ボタンを押して、モードインジケーターがパープル色 — で点灯になると、左スティックのグローバル加速度センサー機能がオンになります。	TURBO機能をオフになります。 ★ TURBO機能を設定可能のボタン:A/B/X/Yアクションボタン、LB/RBボタン。			FN + ▲ / ▼	BIGBIG WON アプリへの接続 BIGBIG WON APP では、カスタマAURORA RGBバックライト効果を作成したり、スティックのデッドゾ
	b. FNボタンを押してから、R3ボタンを押して、モードインジケーターがパープル色 🕳 で点灯にな	追加ボタンのマクロ機能設定	左スティックグローバル 加速度センサー機能	点灯	FN長押し+L3	ーン調整したり、ファームウェアのアップデートしたり、加速度センサーの感度調整したりすることで
s PC をコントロー	ると、右スティックのグローバル加速度センサー機能がオンになります。 c. FNボタン+R3ボタンを押してから、いずれか設定したいボタン (LT/M1/M2/M3/M4)を同時に押	a. FNボタンを押してから、マクロ機能を設定させたい追加ボタンを押して、モードインジケーター がブルー色(●)でブリージングになると、マクロ機能レコードモードがに入ります。	右スティックグローバル 加速度センサー機能	点灯	FN長押し+R3	、お使いのBIGBIG WONデバイスのライティングをカスタマイズできます。 a. デバイスのBluetoothをオンにしてください。「設定> Bluetooth」
	して、右スティックのグローバル加速度センサー機能がオンになります。「当機能は設定したボ タンを押する時(モードインジケーターがパープル色 ━ で点灯)のみオンになります。当機能は	b. 追加ボタンのシーケンスと間隔をレコードして、マクロ機能を設定させたい追加ボタンを押し	右スティックグローバル加速度 センサー機能(押しモード) グローバル加速度センサ		(LT/M1/M2/M3/M4) + R3 + FN	b. BIGBIG WON-RAINBOWがオン状態に確認します。 c. 「RAINBOW」を検索してお使いのデバイスに接続します。「設定> Bluetooth >その他のデバイス」
	デフォルトオフします。」	て、モードインジケーターがブルー色┊━━<で二回点滅になると、レコード完成です。 c. 設定した追加ボタンを押して、レコードしたマクロ機能をコントロールできます。	- 一機能校正モード モーター振動の強さの調節	((<mark>ậ</mark>)) ブリージング	FN長押し+共有ボタン FN+▶	d. 接続成功すると、BIGBIG WON アプリを開き、豊かな機能/配置をカスタマイズします。
	d. ステップa / bを繰り返して、モードインジケーターが消灯になると、グローバル加速度センサー 機能がオフになります。	d. マクロ機能レコードモードで再度マクロ機能を設定した追加ボタンを押して、モードインジケ ーターがブルー色ミ━━ミで一回点滅になると、マクロ機能がオフになります。	TURBO機能		FN + TURBOさせたいボタン	★ 対応デバイス iOS 13+
	★加速度センサー校正モード:FNボタンを押してから、共有ボタンを押して、加速度センサー校正 モードになり、機能インジケーターがオレンジ色 ⁽ ♣ ⁾ でブリージングになるとスティック校正モード	★ 追加ボタンのマクロ機能を設定可能のボタン: A/B/X/Yアクションボタン、LT/LB/RT/RBボタン、 L3/R3ボタン及び方向キー。	 TURBOのスピードを調節		FN +	Android 8.0+
	がに入ります。機能インジケーターが消灯になると、校正完了です。	L3/K3小タン及び方向マー。 追加ボタンの機能設定	 マクロ機能設定①	(()) ブリージング	FN長押し+設定させたい追加ボタン	
	モーター振動の強さの調節 FNボタンを押してから、方向キーの右ボタンを押すとモーター振動の強さを調節できます。振動	a. FNボタンを押してから、機能を設定させたい追加ボタンを押して、モードインジケーターがブル 一色でブリージングになると、機能設定モードがに入ります。	マクロ機能設定① 	; 二回点滅	設定させたい追加ボタンをクリック	
	の強さは强(デフォルト)/中/弱/オフで、総計4レベルでサイクルします。	b. 追機能を設定させたい追加ボタンを一回押して、モードインジケーターがブルー色で二回点滅	追加ボタンの機能設定① 	(●) ブリージング →●● 二回点滅	FN長押し+設定させたい追加ボタン 設定させたい追加ボタンをクリック	
		になると、設定完了です。	AURORA RGBバックライト 効果切り替え		FNをダブルクリック	BIGBIG WON アプリ ビデオチュートリアル
	CHINESE/中国語/中文	CHINESE/中国語/中文	CHINESE/中国語/中文			CHINESE/中国語/中文
	按键功能说明	设置背键宏功能 a. 背键M1-M4可作为自定义宏按键,先长按FN键不放,然后同时按住目标背键,模式指示灯	按键功能	模式指示灯	对应按键操作	
	系统音量控制 同时按下FN键 + 十字键的上/下方向键,即可控制音量的加/减(仅支持Windows 10平台)。	蓝色(—)呼吸,此时进入宏录制模式。	音量控制 		FN + 🔺 / 🔻	a. 双击FN键即可快速切换手柄灯效(请下载BIGBIG WON APP解锁更丰富的灯光模式及自定义 背光灯效)。
(需另行购买)连接	全局陀螺仪 (Gyocon+)功能	b. 录制完成按键顺序与间隔后,再次按下目标背键,模式指示灯蓝色≥━━≤闪烁两次,即可退出 录制模式。	左摇杆全局陀螺仪 	 常亮 第亮 	长按FN + 左摇杆下压键L3 	b. 连接状态下30分钟内没有操作则背光灯效自动关闭,按下任意按键即可唤醒背光灯效。
2	a. 先按住FN键不放,然后同时按住左摇杆下压键L3,模式指示灯紫色 常亮,表示左摇杆 全局陀螺仪已开启,再次按下该组合键关闭全局陀螺仪。	c.按下目标背键,即可响应录制完成的宏设置。 d. 如需取消背键宏设置,再次进入宏录制模式后按下目标背键,模式指示灯蓝色≥━━<闪烁	右摇杆按键全局陀螺仪	● 常亮	(LT/M1/M2/M3/M4)+右摇杆下压键R3+FN	连接BIGBIG WON官方APP
	b. 先按住FN键不放,然后同时按住右摇杆下压键R3,模式指示灯紫色 常亮,表示右摇杆 全局陀螺仪已开启,再次按下该组合键关闭全局陀螺仪。	一次,即可关闭宏设置。 ★可设置宏功能的按键为:A/B/X/Y动作按键,LT/LB/RT/RB按键,L3/R3按键及方向键。	全局陀螺仪校正	⁽⁽ <mark>릒</mark>)) 呼吸	长按FN+截图键3秒	通过BIGBIG WON APP可以高度自定义您的 Rainbow,实现摇杆曲线调整、体感灵敏度调整、固件升级以及自定义您专属的AURORA RGB背光灯效等一系列丰富的功能。
	c. 先按住任意一按键(LT/M1/M2/M3/M4)不放,然后按住右摇杆下压键R3 + FN键开启按键	公置者の時にはないでは、1000000000000000000000000000000000000	调节马达震动强度		FN + ►	a. 确保 RAINBOW 与设备处于正常连接状态。 b. 开启移动设备的蓝牙功能, 搜索蓝牙设备(RAINBOW),进行配对。
	全局陀螺仪,表示右摇杆全局陀螺仪已开启(在该模式下只有按住设定按键时才能开启 全局陀螺仪,模式指示灯紫色 ━ 常亮),再次按下该对应组合键关闭全局陀螺仪。	a. 背键M1-M4可作为自定义宏按键,先长按FN键不放,然后同时按住目标背键,模式指示灯	· · · · · · · · · · · · · · · · · · ·	🕌 闪烁	目标按键 + FN	c. 打开BIGBIG WON APP, 对您的 RAINBOW 进行独特的个性化设置。
	★ 该功能默认为关闭状态。 ★ 校正模式:先按下FN键不放,然后同时按住截图键3秒进入全局陀螺仪校正模式,功能指示	蓝色(●)呼吸,此时进入键值设定模式。 b. 先按下希望设置的自定义键值的按键,再按下目标背键,模式指示灯蓝色≥●€ 闪烁两次,	连击频率更改 	(()) 呼吸	FN + ◀ 	★ 移动应用程序要求 iOS 13+
	灯橙色 (鼎)呼吸,校准成功后熄灭。	退出键值设定模式。 c. 按下目标背键,即可响应设置完成的按键设置。		→ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○		Android 8.0+
	马达震动强度调节 a. 马达振动的强度分为强/中/弱/关闭4档,可循环切换.震动强度默认为最高档位。	d. 如需取消背键自定义键值设置,再次进入键值设定模式后按下目标背键,模式指示灯 蓝色≥━≤闪烁一次,即可取消背键的按键设置。	自定义键值①	(()) 呼吸	长按FN键+目标背键	
	a. 与达派动的强度刀为强/甲/弱/天闭4档,可循环切换,展动强度款以为取高档位。 b. 先按下FN键不放,然后同时按住十字键的右方向键,可循环调整强/中/弱/关闭4档震动强度。	★可设置背键自定义键值功能的按键为:A/B/X/Y动作按键,LT/LB/RT/RB按键,L3/R3按键及	自定义键值②	>━━€ 闪烁2次	单击目标背键	
	 连击功能(开启连击:目标按键+FN) a. 先按住目标按键不放,然后同时按住FN键,中间两颗功能指示灯橙色 ѝ 闪烁,设置按键 连击成功。 b. 如需更改连击频率,同时按下FN键+十字键的左方向键,即可切换为快/中/慢3档连击速率。 c. 再次按住已设置连击的按键+FN键,即可取消按键连击功能。 	方向键。	灯效切换		双击FN	BIGBIG WON APP 官网使用教程
	★可设置连击功能的按键为:A/B/X/Y动作按键,LB/RB按键。					

FCC Caution. (1)§ 15.19 Labelling requirements. oller lighting effects (please download This device complies with part 15 of the FCC Rules. Operation is subject to the following two istom light effects). conditions: (1) This device may not cause harmful interference, and (2) this device must fect will be automatically turned off accept any interference received, including interference that may cause undesired operation. 15.21 Changes or modification warning ny Changes or modifications not expressly approved by the party responsible for compliance AL APP could void the user's authority to operate the equipment. 15.105 Information to the user. ontroller with BIGBIG WON Official APP, Note: This equipment has been tested and found to comply with the limits for a Class B digital as Macro, Turbo, Firmware device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with successfully. h for the Bluetooth device (RAINBOW), instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or RAINBOW Controller. the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. TRACE s on Official Website CHINESE/中国語/中文 包装内容 ライト効果をすばやく切り替えることが BIGBIG WON RAINBOW 有线游戏手柄 Micro-USB数据线(3M) なり、いずれかのボタンを押してウェ 说明书 合格证 系统要求 ト効果を作成したり、スティックのデッドゾ Windows 10+ 速度センサーの感度調整したりすることで Switch *配合R90转接器可支持PS4/PS5(R90转换器需另购) **'**イズできます。 *设备具有可用的USB插口 uetooth」 您的权益 す。「設定> Bluetooth >その他のデバイス」 *从购买产品之日起享受12个月有限质量保证。 幾能/配置をカスタマイズします。 *联系我们以获取免费的在线技术支持。 **** _____ CHINESE/中国語/中文 FCC CAUTION 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause s device must accept any interference received, including interference that may cause undesired operation. NAPP解锁更丰富的灯光模式及自定义 proved by the party responsible for compliance could void the user's authority to operate the 安下任意按键即可唤醒背光灯效。 These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipmen es uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. 实现摇杆曲线调整、体感灵敏度调整、固 It does cause harmful interference to radio or television reception, which can be determined ¹ or is encouraged to try to correct the interference by one or more of the following measures: 系列丰富的功能。 Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. 的个性化设置。 A NOTICE Please read this Precautions carefully. • CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediat dical attention if swallowed or inhaled. DO NOT use the product near fire. DO NOT expose to direct sunlight or high temperatu DO NOT leave the product in a humid or dusty envir DO NOT impact the product or cause it to fall du DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes. DO NOT look directly at the optical light. It might damage your eyes. If you have any quality concerns or suggestions, please contact BIGBIG WON or your local distributor. ■ If you have any quarty concerns or suggestions, please contact biolic work your local distributor. ★ PS5, PS4, PS3, DualSense and DualShock are registered trademarks of rademarks of Songuter Entertainment Inc. Windows, XI Elite and Elite Series 2 are registered trademarks of Mintendo Inc. reserved. All other trademarks are the property of their respective owners. Photos and illustrations are not binding. Contents, design specifications are subject to change without notice and may vary from one country to another. This product is not distributed under approved official license and is not sponsored or endorsed by Sony Computer Entertainment Inc. This product is not manufactured I Computer Entertainment Inc or Microsoft Inc or Nintendo Inc.

CHINESE/中国語/中文

⚠️ ご注意:保護者の方へ必ずお読みください。 ● 小さいな部品がありますので3歳未満のお子様には絶対に与えないでください 乳幼児の手の届くところに置かないでください。万一飲み込んだ場合は、すぐに医師に相談してください。
 火気のある場所では絶対に使用しないでください。
 長時間直射日光当てたり、高温となる場所に置かないでください。
 本品を湿気やホコリの多いところに置かないでください。 本品に物を当てたり、落下させるような強い衝撃を与えないでください。 ● 故障の原因になりますので、USB端子を直接手で触ないでください。 ケーブル部を強く曲げたり引っ張ったりしないでください。
 お手入れの際には、乾いた柔らかい布を使用してください。
 ベンジン、シンナーなどの薬品は使用しないでください。
 分解や修理、改造は絶対にしないでください。 本来の目的以外には使用しないでください。本来の目的以外に使用した場合の事故や損害に対し、弊社は一切その責任を負いません。 ● 光学式ライトの光を直接見ないでください。強い光より、目を痛める可能性があります。 ★ PS5、PS4、PS3、DualSense および DualShock はSony Computer Entertainment Inc.の登録商標または商標です。Windows、Xbox One、Elite および Elite Series 2 はMicrosoft Inc.の登録商標です。Switch、Switch ProはNintendo Inc.の登録商標です。その他、記載 されている会社名、製品名は、各社の登録 商標または商標です。写真やイラストは拘束力がありません。内容、デザイン、仕様は予告な しに変更されることがあり、国によって異なる場合があります。*この製品は、Sony Computer Entertainment Inc、Microsoft Incまたは Nintendo Incによって製造されたものではありません。

保修卡 (售后政策:非人为损坏,三个月包换、一年保修) □退 □换 □保修 售后原因 (注:非墨将官网途径购买的产品,售后问题请直接与购买商家联系。)