

## QUICK START GUIDE

# ROKR GO

RUGGED PORTABLE BLUETOOTH® SPEAKERS


ZIZO

BUILT FOR ADVENTURE

## PACKAGE CONTENTS

<b>IN THE BOX</b>	1 x ROKR GO Speakers	1 x Quick Start Guide
	1 x USB-C Cable Charger	1 x Warranty Card
	1 x 3.5mm Audio Cable	

## LAYOUT

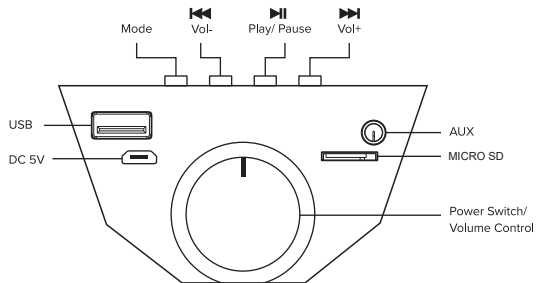

## GETTING STARTED

Before using your speakers the first time, fully charge the speaker.

### CHARGING

- 1 Plug the charging cable into the speakers DC 5V charging jack with the included USB charging cable.
- 2 Connect to any standard USB power adapter.

When the charging cable is inserted into the USB charger the LED Indicator Light will light up red. After charging is complete the red light turns off.

When charging the speakers, turn off the power switch, to avoid battery damage. Don't use the machine for too long to keep the battery in a good condition. It is recommended to charge and discharge the battery for every 30 days.

### POWER ON/ OFF

- 1 To turn on speakers, turn the power/ volume knob clockwise.
- 2 To turn it off, turn the power/ volume knob counterclockwise.

### BLUETOOTH® PAIRING

- 1 Once powered on, press **Mode** to select Bluetooth®.
- 2 Navigate to your device's Bluetooth® settings.
- 3 Select "ZIZO ROKR GO" from the available device list.

## USING YOUR DEVICE

### MODE

Press **Mode** to cycle through Bluetooth®, Micro SD Card, USB, AUX Line in, and FM function. Long press to turn off Bluetooth® function.

### MUSIC PLAY/ PAUSE

Press **▶||** to play music. Press **||** again to pause music.

Press **◀◀** to play the previous song, **▶▶** to play the next.

Turn the **VOL** knob clockwise to increase the volume, lower the volume by turning counterclockwise.

### FM RADIO

Press the **Mode** button to switch to FM mode.

Press and hold **▶||** button for 2 seconds to enter automatic FM channel searching. Press the **Mode** button again to select the current station.

Press the **◀◀** to play the previous radio station, **▶▶** to play the next. Automatically stores up latest radio station.

### TWS

Turn on Bluetooth® mode, then long press the **Mode** button to enter TWS function. Once confirmed, you can link two **ROKR GO** speakers together with the same bluetooth device.

Long press the **Mode** button again to cancel TWS function.

**FCC Caution:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**IMPORTANT NOTE:**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

# ZIZO

JOIN THE ADVENTURE

---

ZIZOWIRELESS.COM



@ZIZOWIRELESS

## ADDITIONAL FEATURES

### Drop Resistant Design

**TWS Technology:** Wirelessly connect two **ROKR GO** together, and play the left and right music channels with these two speakers to double your audio output.

**AUX Port:** Connect to audio from a smartphone, tablet, media player, laptop, PC, or other audio source with a 3.5 mm output. Plug one end of the auxiliary audio cable into the speaker and the other end into the audio device.

**USB Port:** Supports USB flash drives and plays MP3 and WAV formats (FAT32).

**Micro SD Card Slot:** Supports up to 32GB USB Micro SD card and plays MP3 and WAV formats (FAT32).

**Headphone Input:** 3.5mm interface

**Charge Protection:** Equipped with charge and discharge protection for a safe music experience.

**LED lights:** LED indicator light.

**Handle:** Designed for maximum portability.

# TECHNICAL SPECIFICATIONS

## SPECIFICATIONS

Bluetooth Wireless

Output Power: 16 W

Speaker Size: 4 inches

SNR:  $\geq 85$  dB

Frequency Response: 87.5 MHz - 108 MHz

Impedance: 2 ohm

Charging Time: 2 - 3 Hours

Playback Time: Up to 2 Hours

### Important Safeguards:

1. Do not allow water to spill onto the surface or into the product.
2. Children should be supervised while operating this device.
3. If the product surface is damaged or if there is a mechanical or electrical malfunction, do not use the unit. Contact ZIZO customer support.
4. Do not place the unit in water.
5. Do not place the product in direct heat. This unit is to be placed in a dry and ventilated place.
6. Do not place heavy objects on the unit.

# WARRANTY INFORMATION

At ZIZO, we are 100% committed to your satisfaction. We stand behind our products and offer a 1 year manufacturer warranty against defects in materials or workmanship of your new ZIZO speakers.

Should you find your item to be defective, simply visit [zizowireless.com/warranty](http://zizowireless.com/warranty) to submit a brief Warranty Service Request form. Warranty applies to products purchased from ZIZO Authorized resellers. International product registration is not available at this time. U.S. Customers Only.

## CONTACT US

### ZIZO CUSTOMER SERVICE

#### EMAIL

[info@zizowireless.com](mailto:info@zizowireless.com)

#### TELEPHONE

+1 (909) 444-7992 (English)

#### WEBSITE

[zizowireless.com/support](http://zizowireless.com/support)

@ZIZOWIRELESS



| ZIZOWIRELESS.COM



© 2021 ZIZO, All Rights Reserved. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Balaji Trading Inc. is under license. Other trademarks and trade names are those of their respective owners.

\*Images on packaging used for illustration purposes. Actual product may vary due to continuous refinements.

## QUICK START GUIDE

# ROKR GO

RUGGED PORTABLE BLUETOOTH® SPEAKERS


ZIZO

BUILT FOR ADVENTURE

## PACKAGE CONTENTS

<b>IN THE BOX</b>	1 x ROKR GO Speakers	1 x Quick Start Guide
	1 x USB-C Cable Charger	1 x Warranty Card
	1 x 3.5mm Audio Cable	

## LAYOUT

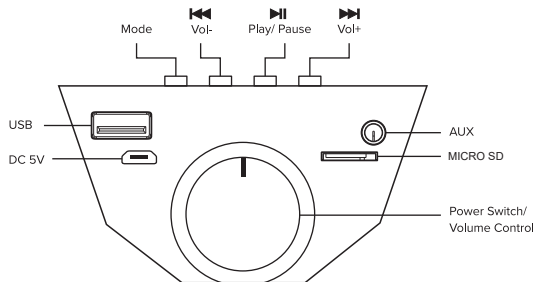

## COMMENCER

Avant d'utiliser vos enceintes pour la première fois, chargez complètement l'enceinte.

### CHARGE

**1** Branchez le câble de charge dans la prise de charge DC 5V des haut-parleurs avec le câble de charge USB inclus.

**2** Connectez-vous à n'importe quel adaptateur d'alimentation USB standard.

Lorsque le câble de charge est inséré dans le chargeur USB, le voyant LED s'allume en rouge. Une fois la charge terminée, le voyant rouge s'éteint.

Lors de la charge des haut-parleurs, éteignez l'interrupteur d'alimentation pour éviter d'endommager la batterie.

N'utilisez pas la machine trop longtemps pour garder la batterie en bon état.

Il est recommandé de charger et décharger la batterie tous les 30 jours.

### ALLUMER/ ÉTEINDRE

**1** Pour activer les haut-parleurs, tournez le bouton d'alimentation / volume dans le sens des aiguilles d'une montre.

**2** Pour le désactiver, tournez le bouton d'alimentation / volume dans le sens antihoraire.

### BLUETOOTH® APPARIEMENT

**1** Une fois allumé, appuyez sur Mode pour sélectionner Bluetooth®.

**2** Accédez aux paramètres Bluetooth® de votre appareil.

**3** Sélectionner "ZIZO ROKR GO" dans la liste des appareils disponibles.

## UTILISER VOTRE APPAREIL

### MODE

Appuyez sur **Mode** pour parcourir Bluetooth®, la carte Micro SD, l'USB, l'entrée de ligne AUX et la fonction FM. Appuyez longuement pour désactiver la fonction Bluetooth®.

### MUSIQUE JOUER / PAUSE

Appuyez sur **▶||** pour jouer de la musique. Appuyez à nouveau sur **▶||** pour mettre la musique en pause.

Appuyez sur **◀◀** pour lire la chanson précédente, **▶▶** pour lire la suivante.

Tournez le bouton **VOL** dans le sens des aiguilles d'une montre pour augmenter le volume; baissez le volume en tournant dans le sens contraire des aiguilles d'une montre.

### RADIO FM

Appuyez sur le bouton **Mode** pour passer en mode FM.

Appuyez et maintenez **▶||** pendant 2 secondes pour accéder à la recherche automatique des chaînes FM. Appuyez à nouveau sur le bouton Mode pour sélectionner la station actuelle.

Appuyez sur la **◀◀** pour écouter la station de radio précédente, **▶▶** pour jouer le suivant. Stocke automatiquement la dernière station de radio.

### TWS

Activez le mode Bluetooth®, puis appuyez longuement sur le bouton **Mode** pour accéder à la fonction TWS. Une fois confirmé, vous pouvez relier deux enceintes **ROKR GO** avec le même appareil Bluetooth.

Appuyez longuement sur le bouton **Mode** pour annuler la fonction TWS.

# ZIZO

REJOIGNEZ L'AVENTURE

ZIZOWIRELESS.COM



@ZIZOWIRELESS

## CARACTÉRISTIQUES SUPPLÉMENTAIRES

### Conception Résistante Aux Chutes

**TWS La Technologie:** Connectez sans fil deux **ROKR GO** ensemble et jouez les canaux musicaux gauche et droit avec ces deux haut-parleurs pour doubler votre sortie audio.

**Port AUX:** Connectez-vous à l'audio à partir d'un smartphone, d'une tablette, d'un lecteur multimédia, d'un ordinateur portable, d'un ordinateur ou de toute autre source audio avec une sortie de 3,5 mm. Branchez une extrémité du câble audio auxiliaire sur le haut-parleur et l'autre extrémité sur le périphérique audio.

**Port USB:** Prend en charge clés USB et lit les formats MP3 et WAV (FAT32).

**Port De Carte Micro SD:** Prend en charge la carte Micro SD et lit les formats MP3 et WAV (FAT32).

**Entrée Casque:** Interface 3.5mm

**Protection De Charge:** Equipé d'une protection de charge et de décharge pour une expérience musicale sûre.

**Lumières LED:** Voyant lumineux LED.

**Sangle Et Poignée:** Conçu pour une portabilité maximale.



# SPÉCIFICATIONS TECHNIQUES

## CARACTÉRISTIQUES

Bluetooth sans fil

Puissance de Sortie: 16 W

Taille du haut-parleur: 4 pouces

SNR:  $\geq 85$  dB

Réponse en Fréquence: 87.5 MHz - 108 MHz

Impédance: 2 ohms

Temps de Charge: 2 - 3 Heures

Durée de Lecture: Jusqu'à 2 Heures

## GARANTIES IMPORTANTES:

1. Ne laissez pas l'eau se répandre sur la surface ou dans le produit.
2. Les enfants doivent être surveillés lors de l'utilisation de cet appareil.
3. Si la surface du produit est endommagée ou s'il existe un problème mécanique ou électrique, dysfonctionnement, n'utilisez pas l'appareil. Contactez le support client ZIZO.
4. Ne placez pas l'appareil dans l'eau.
5. Ne placez pas le produit à la chaleur directe. Cette unité doit être placée dans un endroit sec et endroit ventilé.
6. Ne placez pas d'objets lourds sur l'appareil.

# INFORMATIONS DE GARANTIE

Chez ZIZO, nous nous engageons à 100% pour votre satisfaction. Nous soutenons nos produits et offrons une garantie du fabricant d'un an contre les défauts de matériaux ou de fabrication de votre nouvelle enceinte ZIZO.

Si vous trouvez que votre article est défectueux, visitez simplement [zizowireless.com/warranty](https://zizowireless.com/warranty) pour envoyer un bref formulaire de demande de service de garantie. La garantie s'applique aux produits achetés auprès de revendeurs ZIZO agréés. L'enregistrement international du produit n'est pas disponible pour le moment. Clients américains uniquement.

## CONTACTEZ NOUS

### SERVICE CLIENT ZIZO

### ADRESSE ÉLECTRONIQUE

[info@zizowireless.com](mailto:info@zizowireless.com)

### SITE INTERNET

[zizowireless.com/support](https://zizowireless.com/support)

@ZIZOWIRELESS



| ZIZOWIRELESS.COM



© 2021 ZIZO. Tous les droits sont réservés. La marque et les logos Bluetooth® sont des marques déposées appartenant à Bluetooth SIG, Inc. et toute utilisation de ces marques par Balaji Trading Inc. est sous licence. Les autres marques et noms commerciaux appartiennent à leurs propriétaires respectifs.

\* Images sur l'emballage utilisées à des fins d'illustration. Le produit réel peut varier en raison des améliorations continues.