



Quick Start Guide

V1.0

SLIM

Thermal Imaging
Scope

SLIM L35 / SLIM H35

EN/DE/IT/FR/ES

EN

Please read this guide before using the product, and keep it for future reference.

For details, please download the full version of the user manual from our official website.

DE

Bitte lesen Sie diese Anleitung, bevor Sie das Produkt verwenden, und bewahren Sie sie für zukünftige Referenzen auf.

Für weitere Informationen laden Sie bitte die vollständige Version des Benutzerhandbuchs von unserer offiziellen Website.

IT

Si prega di leggere questa guida prima di utilizzare il prodotto e conservare per riferimento futuro.

Per i dettagli, si prega di scaricare la versione completa del manuale utente dal nostro sito ufficiale.

FR

Veillez lire ce guide avant d'utiliser ce produit et le conserver pour référence future.

Pour les détails, veuillez télécharger la version complète du manuel d'utilisation sur notre site officiel.

ES

Lea esta guía antes de usar este producto y guardela para futuras referencias.

Para obtener más información, descargue la versión completa del manual de usuario en nuestra página web oficial.

SLIM

Quick Start Guide



EN

Thermal Imaging Scope

1-18

DE

Wärmebild-Zielfernrohr

19-38

IT

Monocolare per imaging termico

39-56

FR

Lunette d'imagerie thermique

57-75

ES

Visor de Imágenes Térmicas

77-94



RoHS

| Package Contents

- SLIM series thermal imaging scope
- Portable bag
- Picatinny rail
- 3mm Hex Key
- 18650 battery x2
- 18650 battery charger with USB-C cable
- Magnetic Charging cable
- Heated target for zeroing
- Lens cloth
- Quick Start Guide


| Nocpix APP

Search Nocpix in App store to download the Nocpix App to transmit the image via Wi-Fi from your SLIM to a smart phone.



Nocpix

Components and Controls

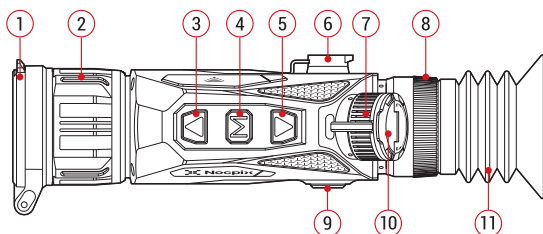

1. Lens cap
2. Objective lens
3. Up button / Zoom button
4. Menu button / M button
5. Down button / Capture button
6. Magnetic charge port / Type C port
7. Battery cover
8. Diopter adjustment handwheel
9. Power button
10. Ring-pull
11. Eyeshade

| Getting Started

- Open the objective lens cap **(1)**.
- Long press the Power Button for 3 seconds to power on the SLIM.
- Rotate the eyepiece diopter adjustment ring **(8)** until the interface icons are clear.
- Rotate the lens focus ring **(2)** of the objective lens to focus on the object to be observed.
- On the home screen, short or long press the **M button (4)** to enter the shortcut menu or main menu for more functional operations.
- After using, press the **Power button (9)** for 1s to enter the power-off interface. When the countdown icon turns from 3 to 0, release the button to power off the device.

Button Operation

Button	Current Status	Press	Long Press
	Powered off	--	Power on the device
	Home screen	Enter the standby mode	Power off the device
	Standby mode	Wake up the device	--
	Main menu	Return to the upper menu without saving	--
	Home screen	Adjust the digital zoom level	Turn PIP on/off
	Menu interface	Navigation upwards	--
	Defect pixel correction / Reticle zeroing interface	Move the cursor 1 pixel in the positive direction	Move the cursor 10 pixels in the positive direction
	Home screen	Enter the quick menu	Enter the main menu
	Main menu	Confirm selection	Save and return to the home screen
	Quick menu	Change parameters	Exit the quick menu
	Defect pixel correction interface	Select / deselect the axis of movement (X or Y)	Correct saved list of pixel(s) and return to previous
	Reticle zeroing interface	Select / deselect the axis of movement (X or Y)	Save the new reticle position


Button	Current Status	Press	Long Press
	Home screen	Take a photo	Start / Stop recording video
	Menu interface	Navigation downwards	--
	Defect pixel correction / Reticle zeroing interface	Move the cursor 1 pixel in the negative direction	Move the cursor 10 pixels in the negative direction
 + 	Home screen	Shutter correction	Background correction

Charging the batteries

The SLIM rifle scope comes with two long-lasting rechargeable, low-temperature-resistant lithium-ion 18650 batteries. Fully charge the batteries before using the SLIM for the first time.

Charging With the Battery Charger

- Insert a 18650 battery (13) into the battery charger (14) following the polarity markings (A) inside the battery slot.
- Connect the USB-C cable (12) to the USB-C port (B) on the battery charger.
- Connect the standard USB end of the data cable to:
 - a. The 5V–2A USB power adapter; **OR**
 - b. Any standard USB 3.0 port on a laptop or computer.
- During charging, the LED indicator (C) on the battery charger will be solid red.
- When the battery is fully charged, the LED indicator (C) will turn solid green. Remove the battery from the battery charger. Do not overcharge

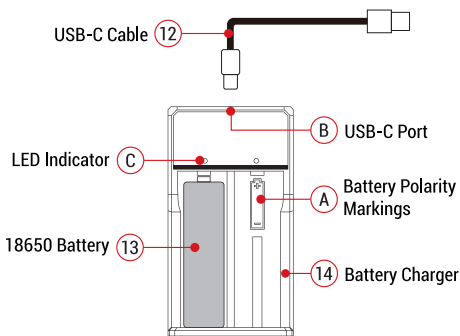

NOTE: When the LED indicator **(C)** flashes red, the battery charger **(14)** is connected to a power source but no battery is installed.

WARNING: Never use the battery charger with a USB power adapter that is greater than 5V–2A.

Charging Via the Magnetic Charging Port

- Place the magnetic charging cable on the magnetic port **(9)** on the side of the rifle scope.
- Connect the USB end of the magnetic charging cable to:
 - a. The 5V–2A USB power adapter; **OR**
 - b. Any standard USB 3.0 port on a laptop or computer; **OR**
 - c. An external power supply, such as a USB power bank.

Charging Via the USB-C Port

- Remove the magnetic charging port **(9)** and connect the USB-C cable **(12)** to the USB-C port behind it.
- Connect the standard USB end of the data cable to:
 - a. The 5V–2A USB power adapter; **OR**
 - b. Any standard USB 3.0 port on a laptop or computer; **OR**
 - c. An external power supply, such as a USB power bank.
- During charging, the battery status icon in the status bar changes to the battery charging icon (.
- When fully charged, disconnect the charging cable.

Safety Precautions

WARNING: Only use the factory-supplied battery charger. The use of any other charger may irreparably damage the battery or the charger and may cause a fire. Any damage from using an improper battery charger will not be covered by warranty.

WARNING:

- Do not use a battery charger, power adapter, or USB cable that has been modified or damaged.
- Do not expose the batteries to high temperatures or open flame, and do not immerse it in water.
- Do not leave the batteries unattended while charging.
- Do not leave the batteries charging for long periods after full charge is reached. Charging time should not exceed 24 hours.
- Keep batteries out of the reach of children and pets.
- The batteries are equipped with short-circuit protection. However, any situation that may cause short-circuiting should be avoided.
- Do not disassemble, modify, hit, or drop the batteries.
- Do not connect the batteries to any external device with an electrical current that exceeds permitted levels.
- Do not connect an external device with a current supply that exceeds the 3.0 USB port.


To maintain optimal battery capacity and service life:

- Avoid storing a fully charged or discharged battery for long periods. Partial charging of the battery is necessary if the battery will be stored for an extended period.
- Do not charge an extremely cold battery. Allow the battery to warm up for about 45 minutes before charging.
- Charge the batteries at a temperature range from 0 °C to 45 °C; otherwise, the service life of the battery may be reduced.
- The recommended operating temperature range is -20°C to 50°C. Avoid using the batteries above the maximum or below the minimum recommended temperature range as this may decrease the battery capacity or service life.

| Mounting the SLIM

Installing the Dual Throw Mount

Before using the SLIM, install the dual throw mount **(15)** to the two mounting holes in the base of the rifle scope.

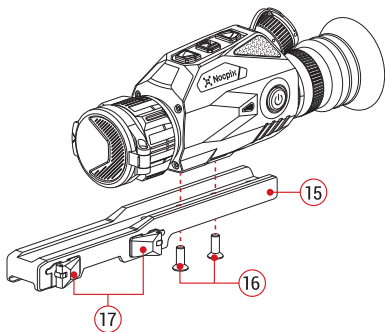


- Install the dual throw mount **(15)** to the base of the SLIM using a 3mm hex key and the M5 screws **(16)** supplied in the package.
- Install the SLIM to the rifle and adjust its position so that it produces a clear image and is comfortable for the shooter.
- When the location is suitable, remove the M5 screws one at a time and apply a small amount of blue Loctite 242 to the threads.
- Reinsert each screw and tighten to 20 in/lbs with a torque wrench. Allow the threadlocker to dry.

NOTE: Please note, torque is inch-pounds, NOT foot-pounds. If you do not have a torque wrench, apply until snug. Do not overtighten.

When the threadlocker is dry, install the mount and rifle scope to the Picatinny rail of your rifle.

- Press the locking button **(18)** and pull the locking lever **(17)** to open each throw lever.
- Install the mount to the Picatinny rail.
- Press the levers closed to lock the mount in place. You will hear the lever and locking button click.
- The SLIM is now ready to be zeroed. See Zeroing for instructions.

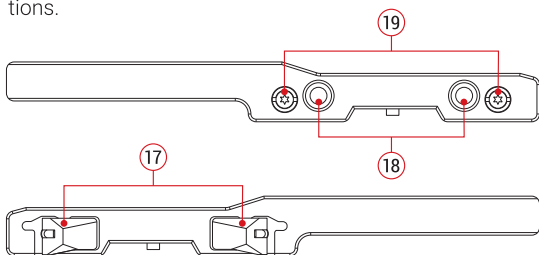

Adjusting the Throw Lever Tension

If you cannot slide the mount onto the Picatinny rail because the throw levers are in the open position but the locking plate is not, or if the mount is not tight to the rail after the throw levers are closed, you may loosen or tighten the tension of the throw levers by adjusting the nuts **(19)**.

- Open both throw levers. This will cause the adjustment nuts **(19)** to protrude on the opposite side of the mount.
- Use the prong-side of the included spanner tool to turn the adjustment nut clockwise to tighten, or counterclockwise to loosen, to achieve the correct amount of tension. You should not feel any tension on the locking lever when

closing until it reaches a 45-degree angle. Do not overtighten.

| Zeroing

SLIM features a “freeze” zeroing method. To zero the SLIM:

- Set a suitable target at the desired zero distance.
- Adjust the image and device settings following the steps in the **Getting Started**, if you have not done so already.
- Set the zeroing profile to A, B, C, D, E, or F.
- Based on the distance to the target you wish to zero, select or customize a zero distance to match.
- Ensure a stable platform and natural shooting position is achieved behind the rifle.
- Load ammunition, aim, and take one good shot at the target.
- Make your rifle safe and observe the location of impact on the target.
- If the point of impact does not match the point of aim (the center of the reticle), adjust the X/Y position of the reticle.
- In the submenu for the selected zero distance, center the reticle on the aiming point and freeze the image view.
 - a. Short press the **Down Button (5)** to move to the image freeze icon.
 - b. Short press the **Menu Button (4)** to freeze the image.
- Select the axis (X or Y) along which to move the reticle.
 - a. Short press the **Up (3) or Down (5) Button** to move between X and Y.

- b. Short press the **Menu Button (4)** to select the desired axis. The selected axis will change from white to blue.
- Adjust the X/Y position of the reticle until the reticle matches the point of impact.
 - a. Use the **Up Button (3)** to move in the positive direction: X= Right and Y= Up.
 - b. Use the **Down Button (5)** to move in the negative direction: X= Left and Y= Down.
 - c. Upon moving the reticle, a red dot appears on the screen, representing the original position of the reticle.
- Long press the **Menu Button (4)** to save the reticle position.
- Take a confirmation shot - the point of impact should now match the point of aim. If not, adjust the X/Y position of the reticle again.

Technical Specifications

Model	SLIM H35	SLIM L35
Detector Specifications		
Resolution, pixel	640 × 512	384 × 288
Pixel Size, μm	12	
NETD, mK	≤ 18	
Frame Rate, Hz	50	
Optical Specifications		
Objective Lens, mm	F35 /1.0	F35 /1.0
Field of View, °	12.5 × 9.4	7.5 × 5.7
Linear Field of View (H×V), m at 100m	21.9 × 16.5	13.2 × 9.9
Visual Magnificaiton, ×	2 ~ 8	3.5 ~ 14
Eye Relief, mm	48	
Diopter Adjustment, D	-5 ~ +5	
Exit pupil Diameter, mm	10	
Detection Range, m (Target size:1.7m×0.5m), P(n)=99%)	1800	
Display Specifications		
Type	AMOLED	
Resolution	1024 × 768	
Size, inch	0.39	
Power Supply		
Battery Type	Li-ion 18650	
Max Operating Time (t=22 °C), h*	4	5

Model	SLIM H35	SLIM L35
Sevice Voltage, V	3 ~ 4.2	
External Power Supply, V	5 (Type C)	
Physical Specifications		
Wi-Fi / APP	Support (Nocpix)	
Photo / Video Recorder	Support	
Recoil activated video	Support	
MIC	Support	
IP Rating	IP67	
Memory Capacity, GB	32	
Operating Temperature, °C	-20 ~ +50	
Weight, g	≤ 530	
Dimension, mm	216 × 76 × 46	
Body Material	Magnesium Alloy	
Connections and Compatibilities		
Max. recoil power on rifled weapon (Eo), Joules	6000	
Mount	Picatinny mount	

* Actual operation time depends on the density of Wi-Fi use and the built-in video recorder.

- Improvements may be made to the design and software of this product to enhance its features without prior notice to the customer.

Regulatory Compliance and Safety Information

Environmental influence

Never point the lens of the device directly at intense heat sources such as the sun or laser equipment. The objective lens and eyepiece can function as a burning glass and damage the interior components.

Risk of swallowing

Do not place this device in the hands of small children. Incorrect handling can cause small parts to come loose which may be swallowed.

Safety instructions for use

- Handle the device with care: rough handling may damage the battery.
- Do not expose the device to fire or high temperatures.
- Install the batteries correctly according to the instruction on the device. Reverse connection is prohibited.
- The battery capacity decreases when operated in a cold ambient temperature. This is not a fault and occurs for technical reasons.
- Always store the device in a dry, well-ventilated space. For prolonged storage, remove the batteries.
- The recommended temperature for using this product is -20° to +50°. Otherwise, it will affect the service life of the product.
- Do not store the device for long periods at temperatures below 20°C or above 50°C, or this will permanently reduce the capacity of the battery.
- If the device has been damaged or the battery is defective, send

the device to our after-sales service for repair.

EU Compliance Statement

Wireless transmitter module frequency range:

WLAN: 2.412-2.472GHz (For EU)

Wireless transmitter module power < 20dBm (only for EU)



We, Inlumen Technologies Co., Ltd. hereby declares that the radio equipment types SLIM are in compliance with the Directives 2014/53/EU and 2011/65/EU

Disposal of batteries



2023/1542 (Battery Regulation): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. For battery details, refer to the documentation of the specific product. The battery is marked with this symbol, which may include Cd (indicating cadmium), Pb (indicating lead), or Hg (indicating mercury). For proper recycling, please return the battery to your supplier or send it to a designated collection point. For more information, visit www.recyclethis.info.

User information on the disposal of electrical and electronic devices (private households)



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.

This device is intended for use by business customers within the European Union

Please contact your dealer or supplier regarding the disposal of electrical and electronic devices. He will provide you with further information.

Information on disposal in other countries outside of the European Union

This symbol is only applicable in the European Union. Please contact your local authority or dealer if you wish to dispose of this product and ask for a disposal option.

Intended use

The device is intended for displaying heat signatures during nature observation, remote hunting observations and for civil use. This device is not a toy for children.

Use the device only as described in this operating manual. The manufacturer and the dealer accept no liability for damages which arise due to non-intended or incorrect use.

Function test

- Before use, please ensure that your device has no visible damage.
- Test to see if the device displays a clear, undisturbed image.
- Check that the settings for the thermal imaging monocular are correct.

Installing/Removing the battery

The SLIM series thermal imaging scope need to install one 18650 battery for use. Refer to the section **Battery Installation** for details.

Get More Information



Website:
www.nocpix.com



User manual



Facebook



Instagram



YouTube

FCC ID: 2BHFB-SLIM-00

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with RF exposure requirements for general population exposure conditions.

| Lieferumfang

- Wärmebildfernrohr der SLIM-Serie
- Tragetasche
- Picatinny-Schiene
- 3-mm-Sechskantschlüssel
- 18650 Batterie x2
- Ladegerät für 18650 Batterie mit USB-C-Kabel
- Magnetisches Ladekabel
- Beheizte Zielscheibe für die Nullstellung
- Objektivtuch
- Schnellstartanleitung


| Nocpix APP

Suchen Sie im App-Store nach Nocpix, um die Nocpix App herunterzuladen und das Bild über Wi-Fi von Ihrem SLIM auf ein Smartphone zu übertragen.



Nocpix

| Komponenten und Steuerungstasten

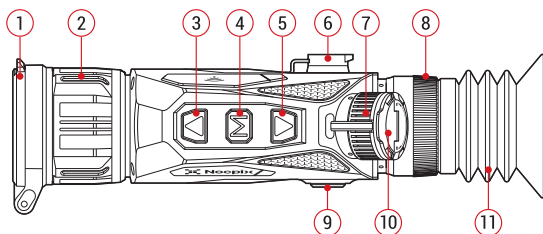

1. Objektivdeckel
2. Objektivlinse
3. Aufwärts-Taste / Zoom-Taste
4. Menütaste M-Taste
5. Abwärts-Taste Aufnahmetaste
6. Magnetischer Ladeanschluss / Typ-C-Anschluss
7. Batteriefachdeckel
8. Handrad zur Dioptrieneinstellung
9. Ein/Aus-Taste
10. Ziehring
11. Augenmuschel

Einführung in die Bedienung

- Öffnen Sie den Objektivdeckel **(1)**.
- Halten Sie die Ein/Aus-Taste 3 Sekunden lang gedrückt, um das Gerät SLIM einzuschalten.
- Drehen Sie den Okular-Dioptrieneinstellung **(8)**, bis die Schnittstellensymbole deutlich erscheinen.
- Drehen Sie den Objektiv-Fokusring **(2)**, um das zu beobachtende Objekt zu fokussieren.
- Drücken Sie auf dem Startbildschirm kurz auf die **M-Taste (4)** oder halten Sie diese gedrückt, um das Kontextmenü oder das Hauptmenü für weitere Funktionen aufzurufen.
- Nach dem Gebrauch halten Sie die **Ein/Aus-Taste (9)** 1 s lang gedrückt, um die Schnittstelle zum Ausschalten aufzurufen. Wenn der Countdown von 3 auf 0 abgelaufen ist, lassen Sie die Taste los und das Gerät schaltet sich aus.

| Tastenbedienung

Taste	Aktueller Status	Drücken	Lang drücken
	Ausgeschaltet	--	Gerät einschalten
	Startbildschirm	In den Standby-Modus wechseln	Gerät ausschalten
	Standby-Modus	Gerät aufwecken	--
	Hauptmenü	Ohne Speichern der Änderungen zum vorherigen Menü zurückkehren	--
	Startbildschirm	Stufe des Digitalzooms einstellen	PIP ein-/ausschalten
	Menübildschirm	Navigation nach oben	--
	Schnittstelle für Pixelfehlerkorrektur und Nullstellung des Absehens	Cursor um 1 Pixel in positive Richtung bewegen	Cursor um 10 Pixel in positive Richtung bewegen
	Startbildschirm	Schnellmenü aufrufen	Hauptmenü aufrufen
	Hauptmenü	Die Bestätigung der Auswahl	Speichern und zum Startbildschirm zurückkehren
	Schnellmenü	Änderung der Parameter	Schnellmenü verlassen


Button	Current Status	Press	Long Press
	Schnittstelle für Pixelfehlerkorrektur	Bewegungsachse auswählen / abwählen (X oder Y)	Die gespeicherte(n) Liste(n) von Pixeln korrigieren und zum vorherigen Menü zurückkehren
	Schnittstelle für Nullstellung des Absehens	Bewegungsachse auswählen / abwählen (X oder Y)	Neue Absehenposition speichern
	Startbildschirm	Ein Foto aufnehmen	Videoaufnahme starten / beenden
	Menübildschirm	Navigation nach unten	--
	Schnittstelle für Pixelfehlerkorrektur und Nullstellung des Absehens	Cursor um 1 Pixel in negative Richtung bewegen	Cursor um 10 Pixel in negative Richtung bewegen
 + 	Startbildschirm	Verschluss-Kalibrierung	Hintergrundkorrektur

Batterien aufladen

Das SLIM-Zielfernrohr ist mit zwei langlebigen, wiederaufladbaren und kälteresistenten Lithium-Ionen-Batterien (18650) ausgestattet. Vor der ersten Verwendung des Geräts müssen die Batterien vollständig aufgeladen werden.

Aufladen mit Batterieladegerät

- Legen Sie eine 18650-Batterie (13) in das Batterieladegerät (14) ein und achten Sie dabei auf die Polaritätsmarkierungen (A) im Batteriefach.
- Schließen Sie das USB-C-Kabel (12) an den USB-C-Anschluss (B) des Batterieladegeräts an.
- Schließen Sie das Ende des Standard-USB-Datenkabels an:
 - a. das 5 V-2 A USB-Netzteil; **ODER**
 - b. Einen beliebigen Standard-USB-3.0-Anschluss eines Laptops oder Computers.
- Während des Ladevorgangs leuchtet die LED-Kontrollleuchte (C) am Batterieladegerät durchgehend rot.

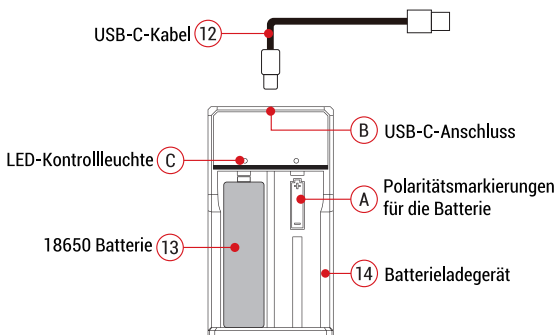

- Wenn die Batterie vollständig geladen ist, leuchtet die LED-Kontrollleuchte **(C)** durchgehend grün. Nehmen Sie die Batterie aus dem Batterieladegerät. Überladen Sie die Batterie nicht.

Hinweis: Wenn die LED-Kontrollleuchte **(C)** rot blinkt, zeigt dies an, dass das Batterieladegerät **(14)** an eine Stromversorgung geschlossen ist, aber die Batterie nicht eingesetzt ist.

Warnung: Verwenden Sie das Batterieladegerät auf keinen Fall mit einem USB-Netzteil, das eine höhere Spannung als 5 V-2 A aufweist.

Über den magnetischen Ladeanschluss aufladen

- Stecken Sie das magnetische Ladekabel in den magnetischen Ladeanschluss **(9)** an der Seite des Zielfernrohrs.
- Schließen Sie das Ende des magnetischen USB-Ladekabels an:
 - a. Das 5 V-2 A USB-Netzteil **(16)**; **ODER**
 - b. Einen beliebigen Standard-USB-3.0-Anschluss eines Laptops oder Computers; **ODER**
 - c. Eine externe Stromversorgung, wie z. B. eine USB-Powerbank.

Über den USB-C-Anschluss aufladen

- Entfernen Sie den magnetischen Ladeanschluss **(9)** und schließen Sie das USB-C-Kabel **(12)** an den USB-C-Anschluss dahinter an.
- Schließen Sie das Ende des Standard-USB-Datenkabels an:
 - a. Das 5 V-2 A USB-Netzteil; **ODER**
 - b. Einen beliebigen Standard-USB-3.0-Anschluss eines

Laptops oder Computers; **ODER**

c. Eine externe Stromversorgung, wie z. B. eine USB-Powerbank.

- Während des Ladevorgangs ändert sich das Batteriestatussymbol in der Statusleiste in das Batterieladesymbol. (🔋)
- Trennen Sie das Ladekabel, wenn die Batterie vollständig geladen ist.

Sicherheitsmaßnahmen

Warnung: Verwenden Sie nur das mitgelieferte Batterieladegerät. Die Verwendung eines anderen Ladegeräts kann zu irreparablen Schäden an der Batterie oder dem Ladegerät führen und sogar einen Brand verursachen. Schäden, die durch die Verwendung eines unzulässigen Ladegeräts entstehen, sind nicht von der Garantie abgedeckt.

Warnungen:

- Verwenden Sie keine modifizierten oder beschädigten Batterieladegeräte, Netzteile oder USB-Kabel.
- Setzen Sie die Batterien nicht hohen Temperaturen oder offenem Feuer aus, und tauchen Sie sie nicht in Wasser ein.
- Lassen Sie die Batterien während des Ladevorgangs nicht unbeaufsichtigt.
- Lassen Sie die Batterien nicht über einen längeren Zeitraum aufladen, nachdem sie voll aufgeladen ist. Die Ladedauer sollte 24 Stunden nicht überschreiten.
- Bewahren Sie die Batterien außerhalb der Reichweite von Kindern und Haustieren auf.
- Die Batterien sind mit einem Kurzschlussschutz ausgestattet. Jede Situation, die einen Kurzschluss verursachen könnte,

sollte jedoch vermieden werden.

- Zerlegen, modifizieren, schlagen Sie die Batterien nicht und lassen Sie sie nicht fallen.
- Schließen Sie die Batterien nicht an ein externes Gerät an, dessen Stromstärke den maximal zulässigen Wert überschreitet.
- Schließen Sie kein externes Gerät mit einer Stromstärke an, die die Stromstärke am USB 3.0-Anschluss überschreitet.


Um die optimale Kapazität und Lebensdauer der Batterien zu gewährleisten:

- Vermeiden Sie es, eine vollständig geladene oder entladene Batterie über einen längeren Zeitraum zu lagern. Falls die Batterie über einen längeren Zeitraum gelagert werden soll, ist eine Teilaufladung der Batterie erforderlich.
- Laden Sie keine Batterien, die sich in extrem kaltem Zustand befinden. Lassen Sie die Batterie vor dem Aufladen etwa 45 Minuten lang aufwärmen.
- Laden Sie die Batterien in einem Temperaturbereich von 0°C bis 45°C auf; andernfalls kann sich die Lebensdauer der Batterie verkürzen.
- Der empfohlene Betriebstemperaturbereich liegt zwischen -20°C und 50°C. Vermeiden Sie es, die Batterien außerhalb des empfohlenen Temperaturbereichs zu verwenden, da dies die Kapazität oder Lebensdauer der Batterien verringern kann.

| Montage des SLIM-Zielfernrohrs

Montage der Dual Throw-Halterung

Bevor Sie das SLIM-Zielfernrohr verwenden, montieren Sie die Dual Throw-Halterung (18) an den beiden Befestigungslöchern an der Basis des Zielfernrohrs.

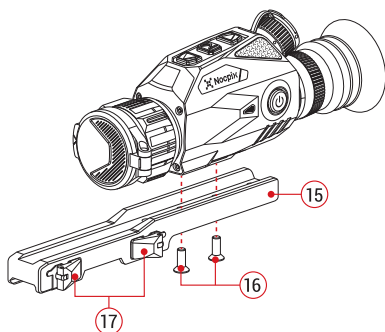


- Montieren Sie die Dual-Throw-Halterung (15) mit einem 3-mm-Sechskantschlüssel und den mitgelieferten M5-Schrauben (16) an der Basis des SLIM-Zielfernrohrs.
- Bringen Sie das SLIM-Zielfernrohr am Gewehr an und passen Sie seine Position so an, dass es ein klares Bild liefert und für den Schützen bequem ist.
- Wenn die Position geeignet ist, entfernen Sie jeweils eine der M5-Schrauben und tragen Sie eine kleine Menge blaues Locktite 242 auf die Gewinde auf.
- Setzen Sie die einzelnen Schrauben wieder ein und ziehen Sie sie mit einem Drehmomentschlüssel mit 20 in/lbs an. Lassen Sie das Schraubensicherungsmittel trocknen.

Hinweis: Bitte beachten Sie, dass das Drehmoment in Zoll-Pfund und nicht in Fuß-Pfund angegeben ist. Sie keinen Drehmomentschlüssel haben, ziehen Sie die Schrauben an, bis sie fest sitzen. Ziehen Sie ihn nicht zu fest an.

Wenn das Schraubensicherungsmittel getrocknet ist, montieren Sie die Halterung und das Zielfernrohr an der Picatinny-Schiene Ihres Gewehrs.

- Drücken Sie den Verriegelungsknopf **(18)** und ziehen Sie den Verriegelungshebel **(17)**, um die einzelnen Schwenkhebel zu öffnen.
- Montieren Sie die Halterung an der Picatinny-Schiene.
- Drücken Sie die Hebel runter, um die Halterung zu verriegeln. Sie hören das Einrasten des Hebels und des Verriegelungsknopfes.
- Das SLIM-Zielfernrohr ist nun bereit für die Nulleinstellung. Anweisungen dazu finden Sie unter **Nullstellung**.

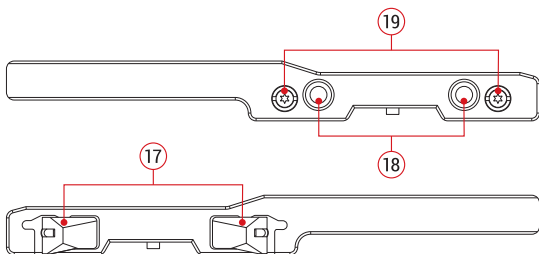

Spannung des Schwenkhebels einstellen

Wenn die Halterung nicht auf die Picatinny-Schiene geschoben werden kann, weil sich die Schwenkhebel in der offenen Position befinden, die Verriegelungsplatte aber nicht, oder wenn die Halterung nach dem Verriegeln der Schwenkhebel nicht fest auf

der Schiene sitzt, kann die Spannung der Schwenkhebel durch Anpassen der Schraubenmutter (19) gelockert oder angezogen werden.

- Öffnen Sie beide Schwenkhebel. Dadurch ragen die Schraubenmutter (19) auf der gegenüberliegenden Seite der Halterung heraus.
- Drehen Sie die Schraubenmutter mit der Zinken-Seite des mitgelieferten Schraubenschlüssels im Uhrzeigersinn, um sie festzuziehen, oder gegen den Uhrzeigersinn, um sie zu lösen, damit die richtige Spannung erreicht wird. Sie sollten beim Verriegeln keine Spannung am Verriegelungshebel spüren, bis er einen Winkel von 45 Grad erreicht hat. Ziehen Sie ihn nicht zu fest an.

| Nullstellung

Für das SLIM-Zielfernrohr ist eine "Einfrieren"-Nullstellungsmethode vorgesehen. So setzen Sie das SLIM-Zielfernrohr auf Null:

- Stellen Sie ein geeignetes Ziel in dem gewünschten Nullabstand ein.
- Nehmen Sie die Einstellungen für das Bild und das Gerät vor, indem Sie die Schritte im Abschnitt **"Einführung in die Bedienung"** befolgen, falls Sie dies noch nicht vorgenommen haben.
- Stellen Sie das Nullstellungsprofil auf A, B, C, D, E oder F ein.
- Wählen Sie auf der Grundlage des Abstands zu dem Ziel, das Sie auf Null stellen möchten, einen passenden Nullabstand aus oder passen Sie diesen an.
- Stellen Sie sicher, dass Sie eine stabile Plattform und eine