

M 1

Product User Guide
ユーザーマニュアル

给有故事的你

2008年秋，深圳一年中最舒适的季节。星期天午后，浪琴屿11号楼901室厨房，五人，迅达光电的第一款纯手工光机诞生，我们上路了。

十多年的发展，迅达光电服务了几乎所有投影机品牌客户，有幸成为全球顶尖光机厂之一。

也许诞生之地带来的烟熏火气，让我们对家、对家人、对亲情、对友情在投影产品中的表达，有了自己的思考。

2021年春，迅达光电创建自有投影品牌——慧示，把我们的思考让你知道。“慧示”投影之家，不是堆砌生活用品的空间，而是家人自由活动的空间；“慧示”投影之家，不是封闭内心的空间，而是内心辽阔的原野。“慧示”投影之家，让“家·无界”。

此刻，你已经拥有了第一台“慧示”投影机。

此后，围绕“慧示”投影，你会有关于家、家人、亲情、友情的故事，请分享给我好吗！你不经意的分享，会带给更多人美好和感动。

清华



Welcome to WITSEER Home projection!


Please read this user manual carefully before embarking on a new home experience with WITSEER, for your safety and benefit. WITSEER shall not be liable for any personal injury, property or other damage caused by your failure to follow the instructions or precautions.

Due to the update and upgrade of the product, the actual product and the schematic diagram may be slightly different, please refer to the actual product. Please keep it safe for later use.


If you have any objection to any of the contents or terms of the manual, please submit a written objection to WITSEER within seven days after purchasing the machine, otherwise you will be deemed to have agreed, understood and accepted all the contents of this manual. WITSEER reserves the right to interpret and amend the specification finally.



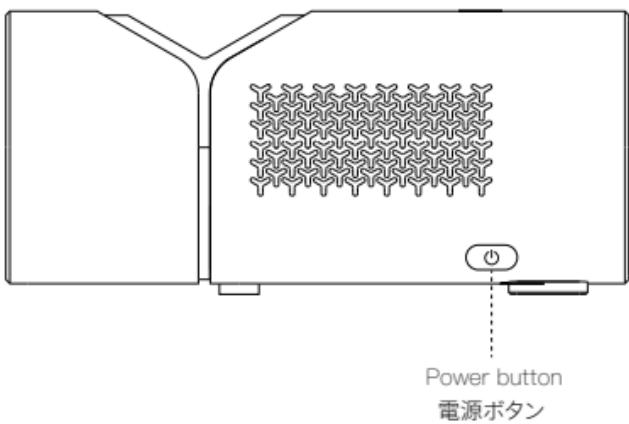
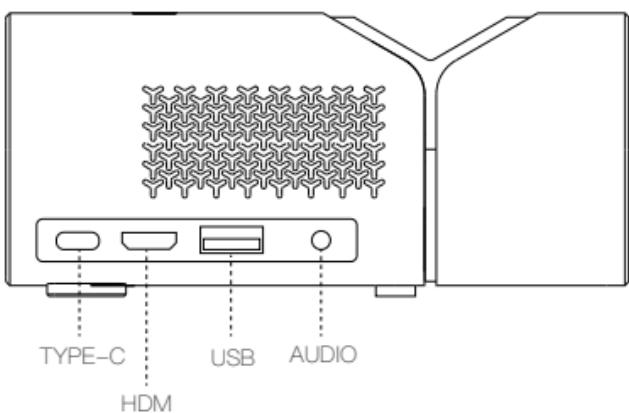


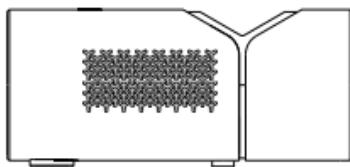

Projection host
プロジェクションメインフレーム



Remote control
リモートコントロール

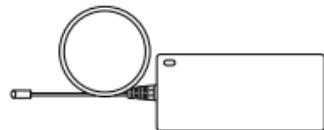

Power Adapter
電源アダプター

Power cord
電源コード




Instruction manual
warranty card
取扱説明書/保証書

AAA battery
単4電池

Thank you for purchasing a Witeer Home Projector!
Please check whether the included
items are consistent with the list after you receive the product,
In case of discrepancies, please contact WITSEER
customer service in a timely manner.

このたび、慧示家居プロジェクターをご利用いただきありがとうございます!
製品が届きましたら、同梱物がリストと一致しているかどうかをご確認ください。
万が一、相違がある場合は、慧示客歓待マーサービスにご連絡ください。

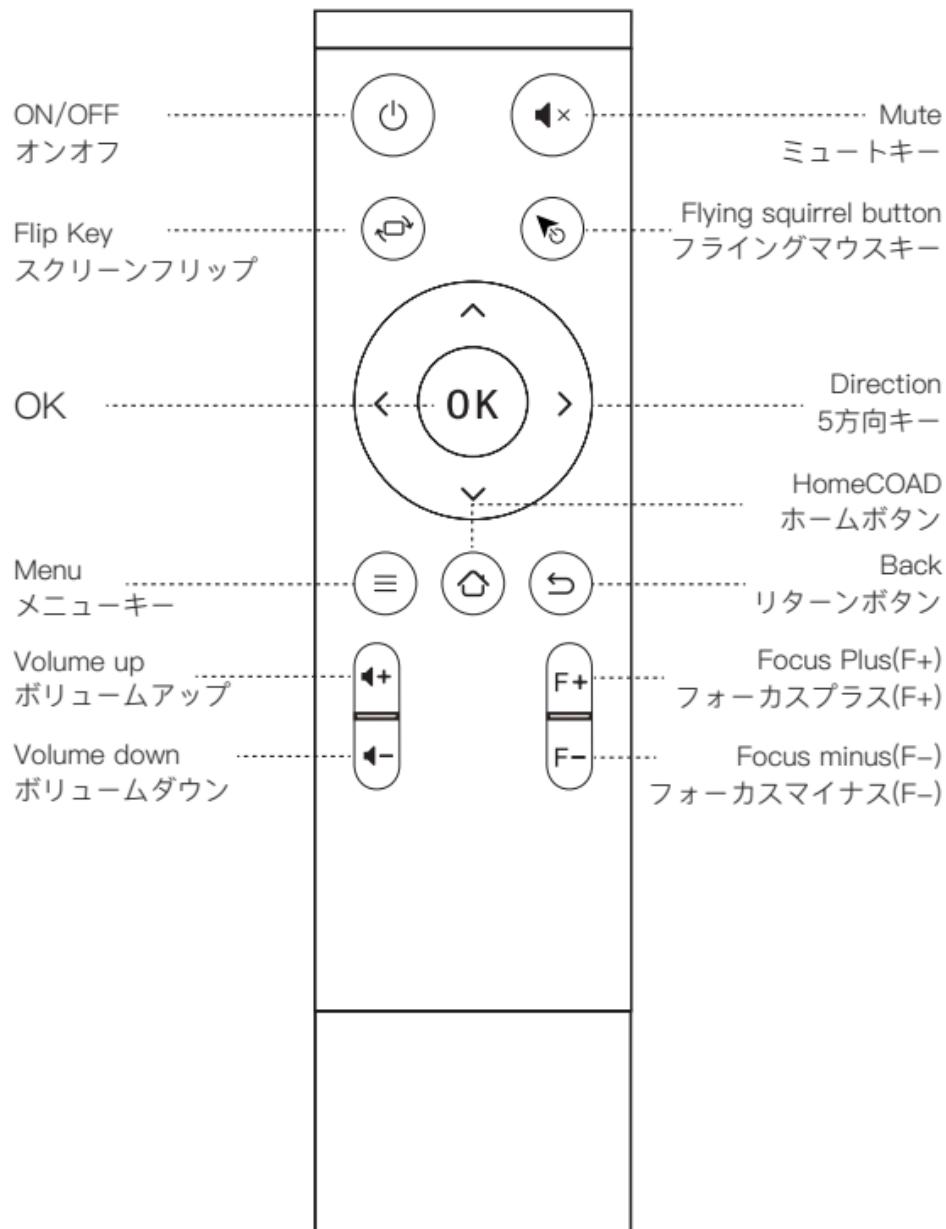


Important considerations

- Do not point the lens directly at the human eye to avoid damage to the eyes caused by the strong light of the lens after turning on;
- Do not block the inlet/outlet of the machine, ensure that there is no obstruction within 25cm next to the inlet/outlet of the machine, to avoid damage to the internal electronic devices caused by the normal hostile heat of the machine, or affect the normal service life of the machine;
- Do not clean the machine with chemicals, detergent water, and avoid rain, moisture and liquids containing minerals to corrode the circuit board;
- Do not touch this machine or the remote control when the human body is wet; Please ensure that the machine is used in a dry and ventilated environment, such as the machine is not allowed to be used after flooding;
- Replacing with the wrong model battery is a risk of explosion, be sure to dispose of used batteries according to the instructions;
- Do not store the machine in a place that is too hot or cold, high (low) temperature will shorten the life of the electronics. The ambient temperature allowed for machine storage is -20°C-60°C, and the use of the thermobase is -10°C-35°C;
- Do not use a non-standard power adapter to power the machine;
- Please use the battery model described in this manual for the remote control, if the wrong model of battery is used, it may cause damage to the remote control or the machine;
- Do not place the working machine on flammable substances such as beds or blankets;
- Please hurriedly put the machine into any heating machine (such as dryer, corrugated oven, etc. for drying); Do not squeeze the machine too hard to place heavy objects on top of it;
- Do not throw, knock or shake the machine strongly to avoid damage to the internal circuit board;
- Do not attempt to disassemble and repair the machine without permission. If you have any questions, please contact the channel where you purchased the machine or the official customer service;
- If the machine is not used for a long time, please shut down and cut off the power;
- Please do not use third-party ROOT flashing or unofficial source system packages to update this machine, which may cause irreversible problems.


Projection method

Two projection methods

- When changing the projection mode, please turn off the projector first, and then turn on the projector after the installation is complete. Select the projection mode in system Settings–Image Settings–installation mode.

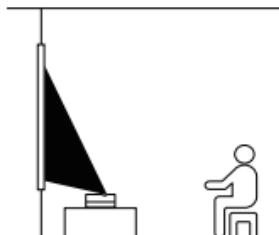



Normal installation front projection

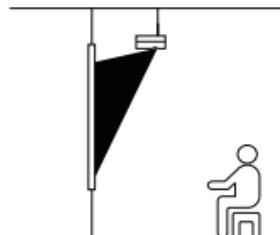

hoisting front projection

Frontal projection

- Taking the default front projection mode as an example, we recommend that you place the machine horizontally in front of a flat white wall or curtain 10cm–30cm, and the center of the screen should be flat at the height of your eyes, which will provide you with the best viewing experience.

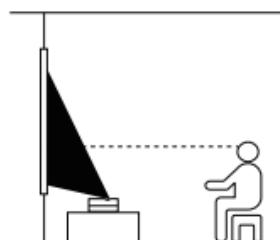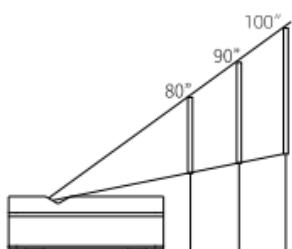

Guidance

Keystone correction

- Enter the System Settings – Image Settings – Keystone Correction page to make manual adjustments.

Projection size

- The optimal projection screen size of this series is 60 inches, the compatible size is 30–100 inches, and the corresponding distance from the wall/screen is 0cm–50cm. Choose the appropriate screen size and corresponding placement according to the actual use conditions.

| | | | | | |
|-----------------------|----|----|----|----|-----|
| Distance (cm) | 0 | 25 | 38 | 45 | 50 |
| Dimension (inches) | 30 | 60 | 80 | 90 | 100 |

Screen projection/ on-screen settings

- Screen projection: Make sure that the projector and the device to be projected (mobile phone, tablet, laptop, etc.) are connected under the same WiFi, click the screen projection function on the software of the device to be cast, and select "M1-XXXX" to cast the content to the projector.
- Same screen: Make sure that the projector and the device (mobile phone, tablet, laptop, etc.) are connected to the same WiFi.
- iOS system: Open "Application>EShare APP" on the projector, click screen mirroring in the toolbar of the device to be projected (mobile phone, tablet, laptop, etc.), and select "M1-XXXX" to start the same screen; Android system: The projector opens the "Application >EShare APP", scans the QR code on the projection screen with the device to be on the same screen (mobile phone, tablet, laptop, etc.) and downloads and installs the EShare APP, selects "M1-XXXX" in the successfully installed EShare APP and connects, and

clicks the wireless screen transmission to start the same screen.

The machine is on/off

- After the power is turned on, press the switch button of the fuselage or remote control to turn on;
- If the battery module is used and the power is not turned on, press and hold the body power on and off button for 5 seconds to turn on and off. At this time, the remote control is not supported to boot.

the system

- In the power on state, briefly press the switch button of the fuselage or remote control, and do not click “cancel” within 15 seconds, you can turn off the machine;
- In the power-on state, press and hold the fuselage power on and off button for about 10 seconds to force the shutdown.

Remote control pairing

- In the power on state, the remote control is close to the machine for 3~5CM, and press and hold the confirmation button and return button of the remote control for 5 seconds at the same time to complete the pairing;
- Depending on the version, new machines and new remote controls may need to be paired, and the pairing process is about 3~5 seconds.

System upgrade

- View the current version status of the system in System Settings – System Upgrade. If the current version is the latest version, you will be prompted; If a newer version is available, you will be prompted to upgrade. Do not lose power during the upgrade.

Network settings

- Select "Settings – Wireless Network" on the home page to enter the interface;
Select "Wi-Fi" and enter the wireless network password to connect.

Audio Bluetooth output

- Use the remote control to enter Settings – Bluetooth Settings. After turning on the Bluetooth of this machine, scan and search for nearby Bluetooth devices that have been turned on Support Bluetooth Speakers, Headphones, etc.. Once connected, audio can be output via an external Bluetooth device.

Play the media resource

- Insert a USB flash drive through the USB interface, or connect to a computer TV and other devices through the HDMI interface, play video recordings, etc. During playback, you can pause/play audio and video through the remote control, or adjust playback speed, screen and other settings.



Official WeChat
公式 WeChat

Consumer hotline: 400-6161880

Official website: www.witseer.com

Manufacturer: ONGINE TECHNOLOGY LIMITED

Address: No. 2, Hangtian South Road, Longquanyi District, Chengdu, Sichuan

お問い合わせ: 400-6161880

公式サイト: www.witseer.com

メーカー: 成都迅達光電有限公司

住所: 四川省成都市龍泉駅区航天南路2号

重要な注意事項

- ・電源を入れた後にレンズのグレアによる目の損傷を避けるために、レンズを人間の目に向けないようにしてください。
- ・内部電子機器への損傷を避けると使用寿命を影響しないために、本機の空気の入口/出口から25cm以内に障害物がないことを確認してください。
- ・レンズの損傷を避けるために、紙、布、または他のクリーニングツールを使用してレンズを直接拭かないでください; レンズ表面のほこりを除去するためにきれいな空気の吹き付けを使用してください。
- ・化学薬品、洗浄剤、水を使用して機械を掃除しないでください。また、雨、湿気、ミネラル液による回路基板の腐食を避けてください。
- ・濡れた状態で本機やリモコンに触わらないでください。本機を乾燥した風通しの良い環境で使用し、濡れた後は使用しないでください。
- ・電池の種類を間違えると爆発する恐れがあるので、使用済みの電池は必ず説明書に従って処分してください。
- ・高温または低温になると電子機器の寿命が短くなります。本機は、以下の場所で保管するようにしてください。
周囲温度は-20°C~60 °C、動作温度は-10 °C~35 °Cです。
- ・本機の電源には、標準装備の電源アダプター以外を使用しないでください。
- ・リモコンには、本書で指定された電池を使用してください。間違った電池を使用すると、リモコンや本機の破損の原因となります。
- ・本機の動作中は、ベッドや毛布などの可燃物の上に置かないでください。
- ・加熱機械（乾燥機、オーブンなど）で乾燥させないでください：機械を圧迫したり、重いものを上に乗せないでください。
- ・内部回路基板への損傷を避けるために、機械を投げたり、叩いたり、強く揺らしたりしないでください。
- ・自分で分解や修理しないでください。機械に問題がある場合は、機械を購入したチャネルまたは公式の慧示カスタマーサービスに連絡してください。
本機を長期間使用しない場合は、本機の電源を切ってください。
- ・不可逆的な問題を引き起こす可能性があるため、サードパーティのROOTまたは非公式システムパッケージを使用して本機を更新しないでください。

慧示家居プロジェクターをご購入 いただきありがとうございます!

お客様の安全と利益のために、慧示と一緒に新しい家庭体験を始める前に必ず本書をお読みください。本マニュアルや注意事項に従わなかったために生じた人身事故、物的損害、その他の損害について、慧示は一切の責任を負いかねます。

製品の更新やアップグレードにより、実物とイメージ図が若干異なる場合があります。将来の使用に備えて、安全に保管してください。

本マニュアルの内容や条件に同意できない場合は、購入後7日以内に慧示に提出してください。そうでない場合は、本マニュアルの内容すべてに同意、理解、承諾したものとみなします。慧示は、マニュアルの最終的な解釈と修正の権利を有します。




投影方法

2つの投影方法

- ・投影方法を変更する場合は、一度プロジェクターの電源を切り、設置完了後に電源を入れ、投影方法を選択してください。





壁掛け正面投影

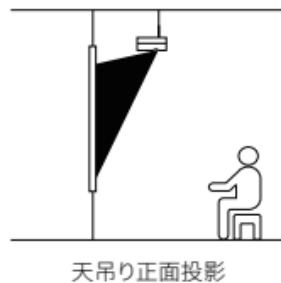

天吊り正面投影

壁掛け正面投影

- ・最高の視聴体験のために、初期値の壁掛け正面投影モードを例として、本機を平らな白い壁やカーテンの前に10cm~30cm水平に置き、投影画像の中心が目の高さになるように設置することをおすすめします。

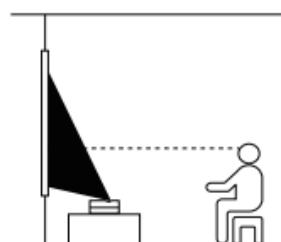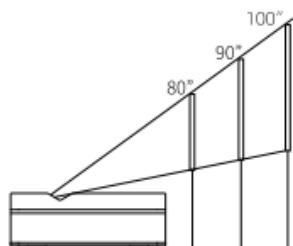

使用方法

キーストーン補正

- ・ [システム設定] – [画像設定] – [台形補正] のページで手動で調整することができます。

投影サイズ

- ・ この範囲の最適な投影サイズは60インチ、対応サイズは30~100インチ、壁・スクリーンからの対応距離は0cm~50cmで、実際の使用状況に応じて適切なサイズと位置を選択することができます。

| | | | | | |
|-----------|----|----|----|----|-----|
| 距離(cm) | 0 | 25 | 38 | 45 | 50 |
| サイズ (インチ) | 30 | 60 | 80 | 90 | 100 |

画面共有/投影の設定

- ・ 投影: プロジェクターと投影する機器（携帯電話、タブレット、ノートパソコンなど）が同じWiFi接続下にあることを確認し、投影する機器のソフトウェアの投影機能をクリックし、「M1-XXXX」を選択すると、プロジェクターに投影されます。
- ・ 画面共有: プロジェクターと画面を映す機器（携帯電話、タブレット、ノートパソコンなど）が同じWiFiで接続されていることを確認します。
- ・ iOSの場合: プロジェクターで「Apps>EShare APP」を開き、上映するデバイス（携帯電話、タブレット、ラップトップなど）のスクリーンミラーリングツールバーをクリックし、「M1-XXXX」を選択して画面共有を開始する。Androidの場合: プロジェクターで「Apps>EShare APP」を開き「M1-XXXX」を選択して画面共有を開始する。「Applications>EShare APP」を開き、上映する機器（携帯電話、タブレット、ノートパソコンなど）でプロジェクタースクリーンのQRコードを読み取り、EShare APPをダウンロード・インストールし、正常にインストールされたEShare APPで“M1-XXXX”を選択してください。インストールされたEShare APPで「M1-XXXX」を選択して接続し、無線画面転送をクリックして画面共有を開始します。

電源の入れる / 切る

- ・電源が入っているときは、本機またはリモコンのオン / オフボタンを短く押し、本機の電源を入れます。
- ・電源が入った状態で、「キャンセル」をクリックせずにオン/オフボタンを15秒間長押しすると、電源を切れます。
- ・オン/オフボタンを約10秒間長押しすると、強制的に電源を切れます。

リモコンペアリング

電源を入れた状態で、リモコンを本機に3~5cm近づけて、確認キーとリターンキーを同時に5秒間長押しすると、ペアリングが完了します。

新しい機械と新しいリモコンの場合、バージョンにより、ペアリングに約3~5秒かかります。

システムのアップグレード

現在のバージョンの状況は、「システム設定」 - 「システムアップグレード」で確認できます。現在のバージョンが最新版である場合、システムは提示します。新しいバージョンがある場合、システムはアップグレードを促します。アップグレード中は、電源を切らないでください。

ネットワーク設定

- ・ホームページから「設定-ワイヤレスネットワーク」を選択し、インターフェイスに入ります。
「WLAN」を選択し、ワイヤレスネットワークのパスワードを入力して接続します。
- 「WLAN」を選択し、ワイヤレスネットワークのパスワードを入力して接続します。

オーディオBluetooth出力

- ・リモコンを使用して設定- Bluetoothの設定を入力し、本機のBluetoothをオンにすると、近くのBluetoothデバイス（サポートBluetoothスピーカー、ヘッドフォンなど）をスキャンすることができ、外部のBluetoothデバイスに接続すると、オーディオを出力することができます。

メディアソース再生

- ・USBポートからUSBメモリを挿入したり、HDMIポートからパソコンやテレビに接続して、動画やビデオを再生することができます。再生中は、リモコンで音声・映像の一時停止・再生や、再生速度・画面などの設定ができます。

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



Official WeChat

公式 WeChat

Official website: www.witseer.com

Manufacturer: ONGINE TECHNOLOGY LIMITED

Address: No. 2, Hangtian South Road, Longquanyi District, Chengdu, Sichuan

公式サイト: www.witseer.com

メーカー: 成都迅達光電有限公司

住所: 四川省成都市龍泉驿区航天南路2号