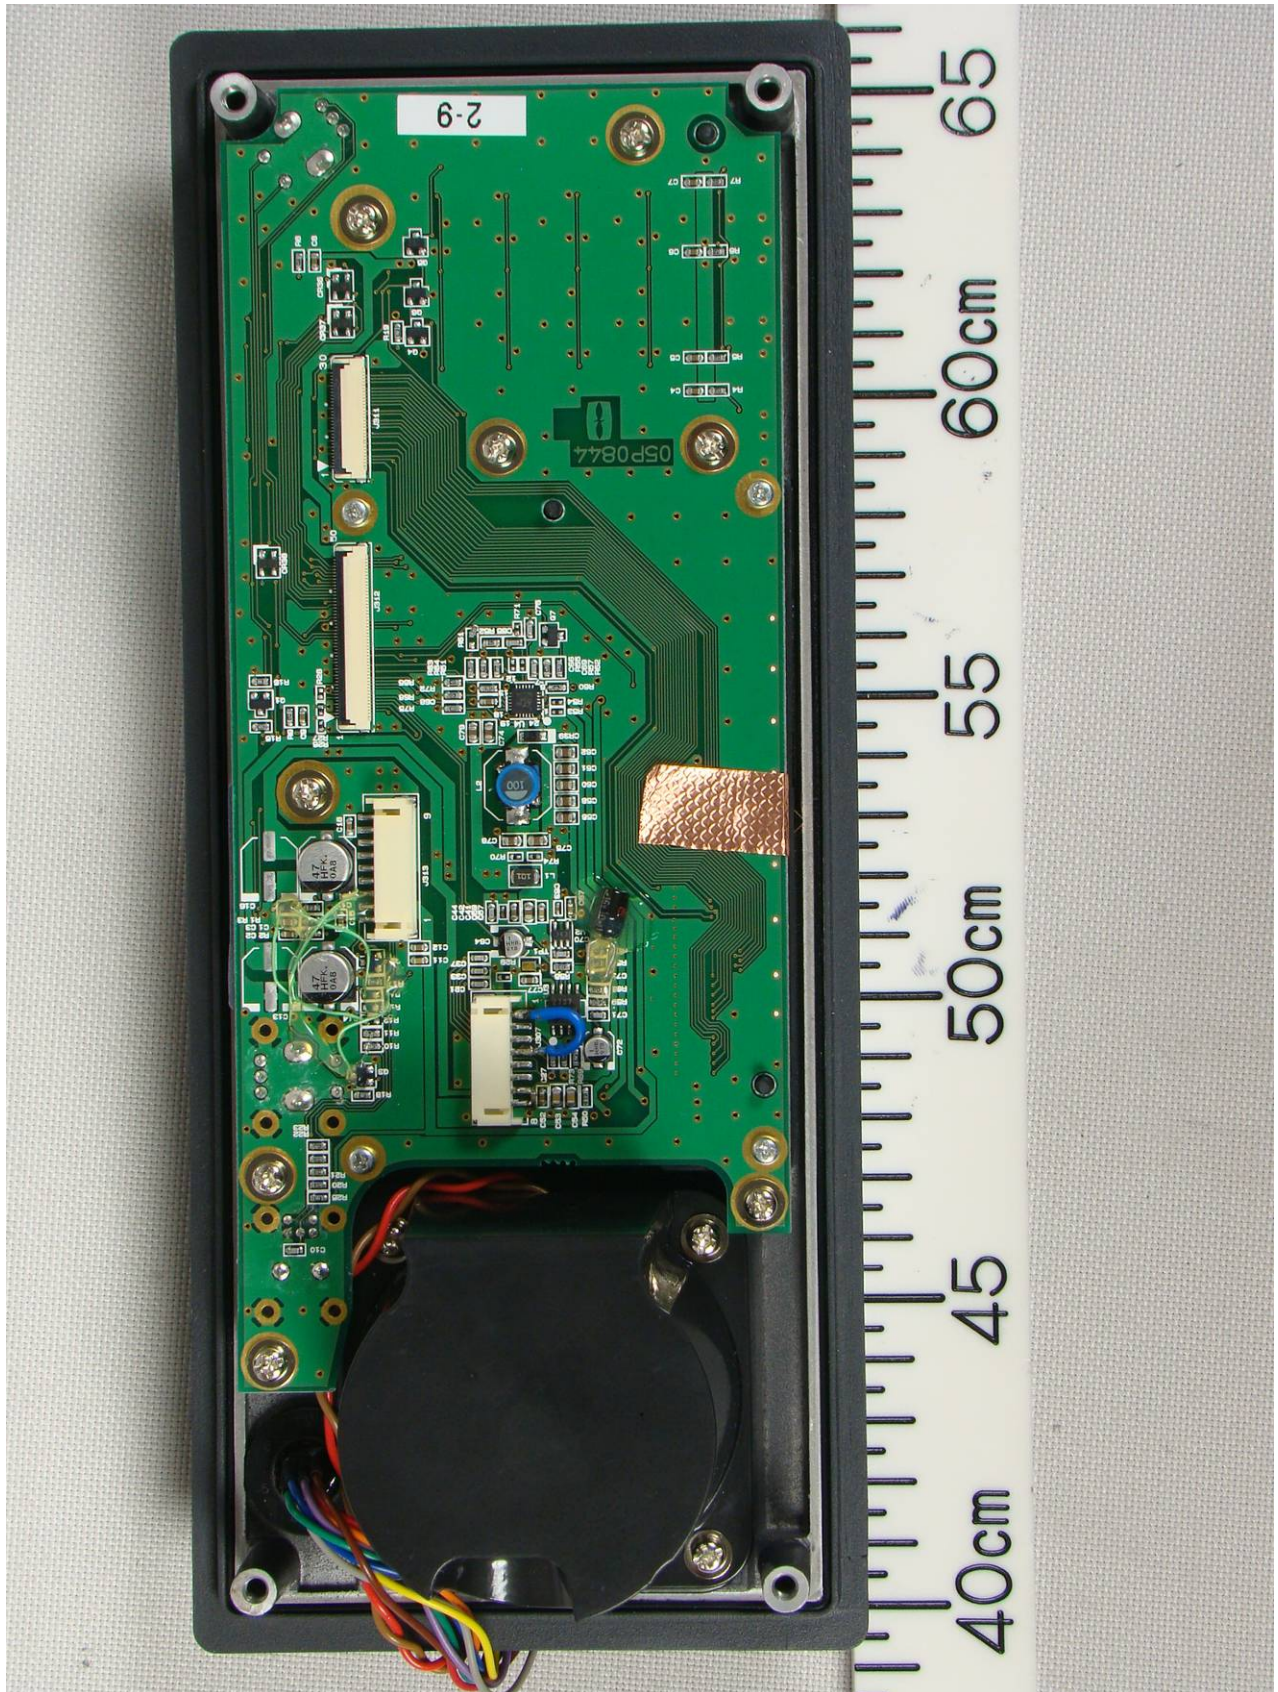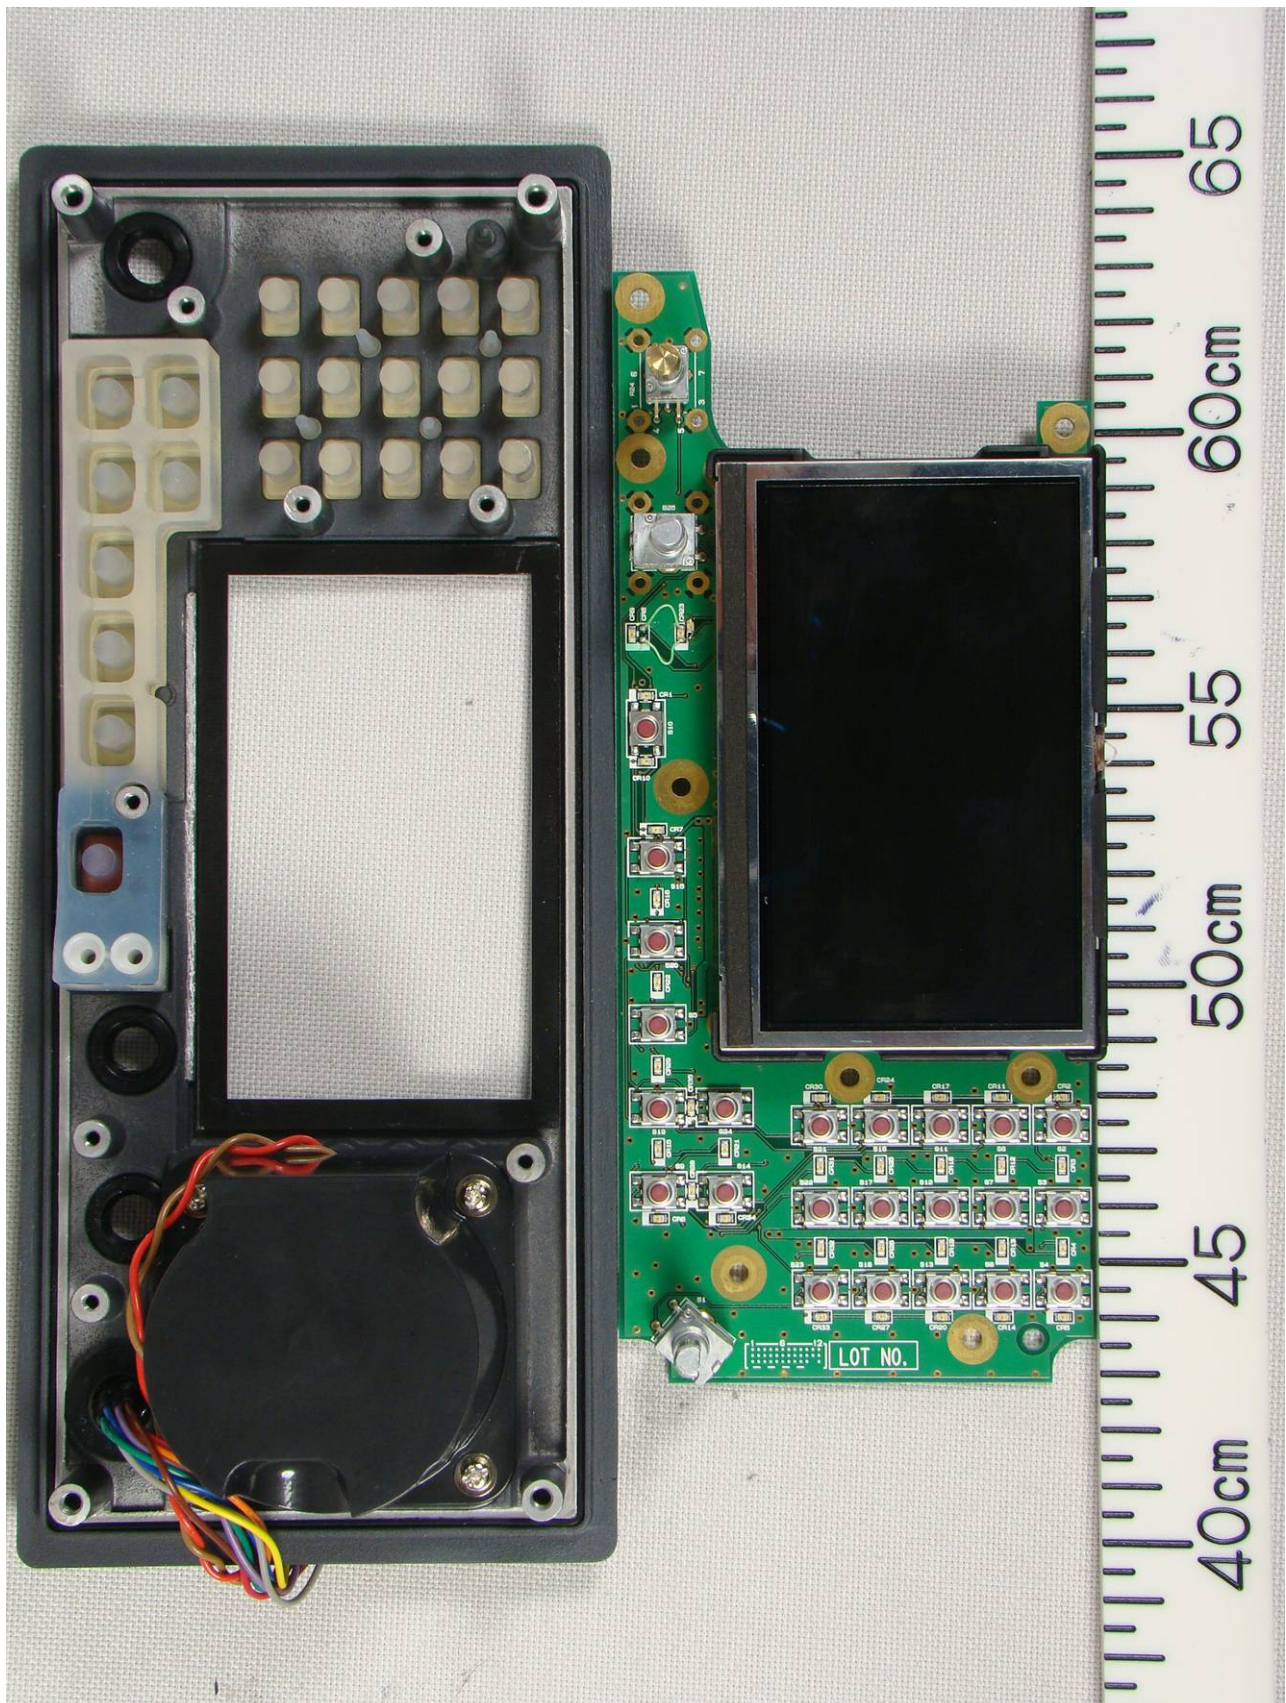## 3.2 Inside View
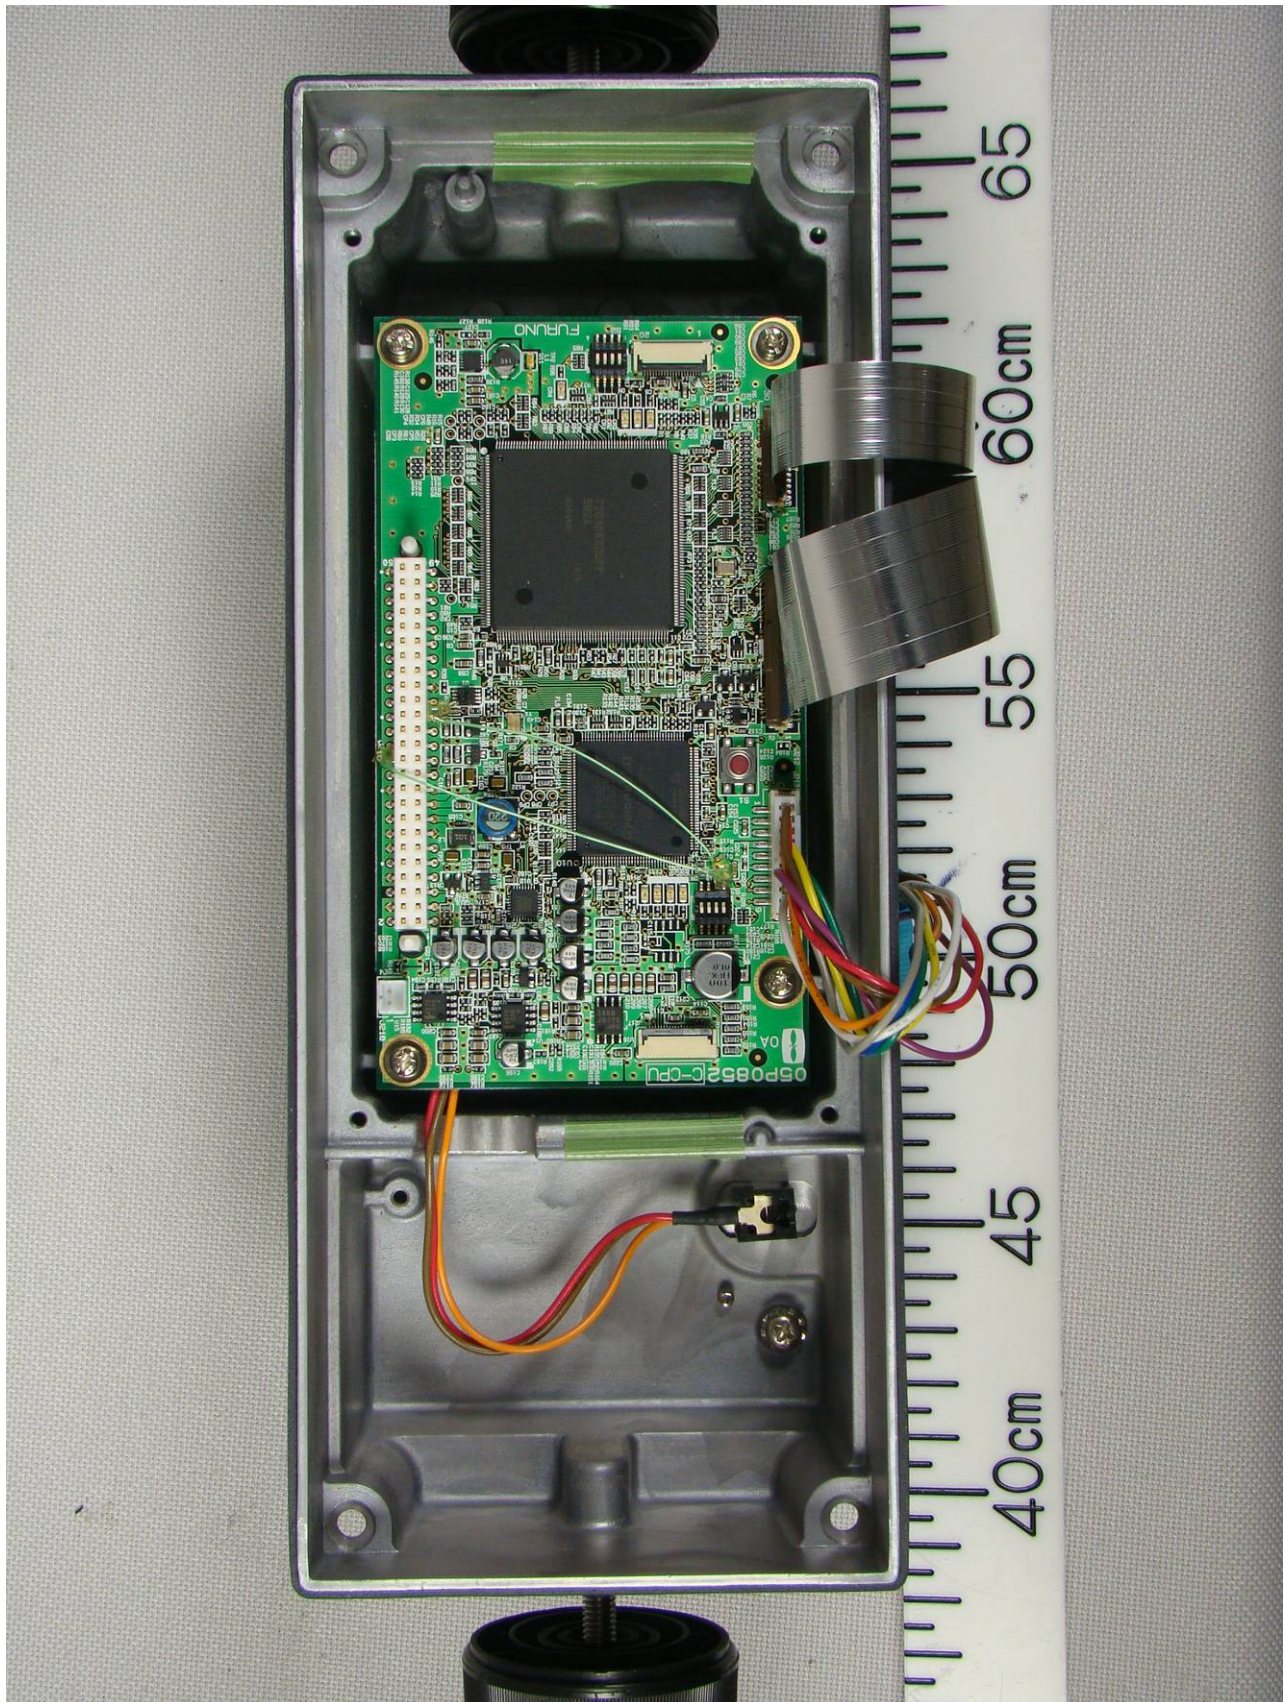3.2.1   Inside View   (with Front panel opened, showing PANEL Board 05P0844 Rear side)

## 3.2.2 Inside Front View (showing PANEL Board 05P0844 Rear side)
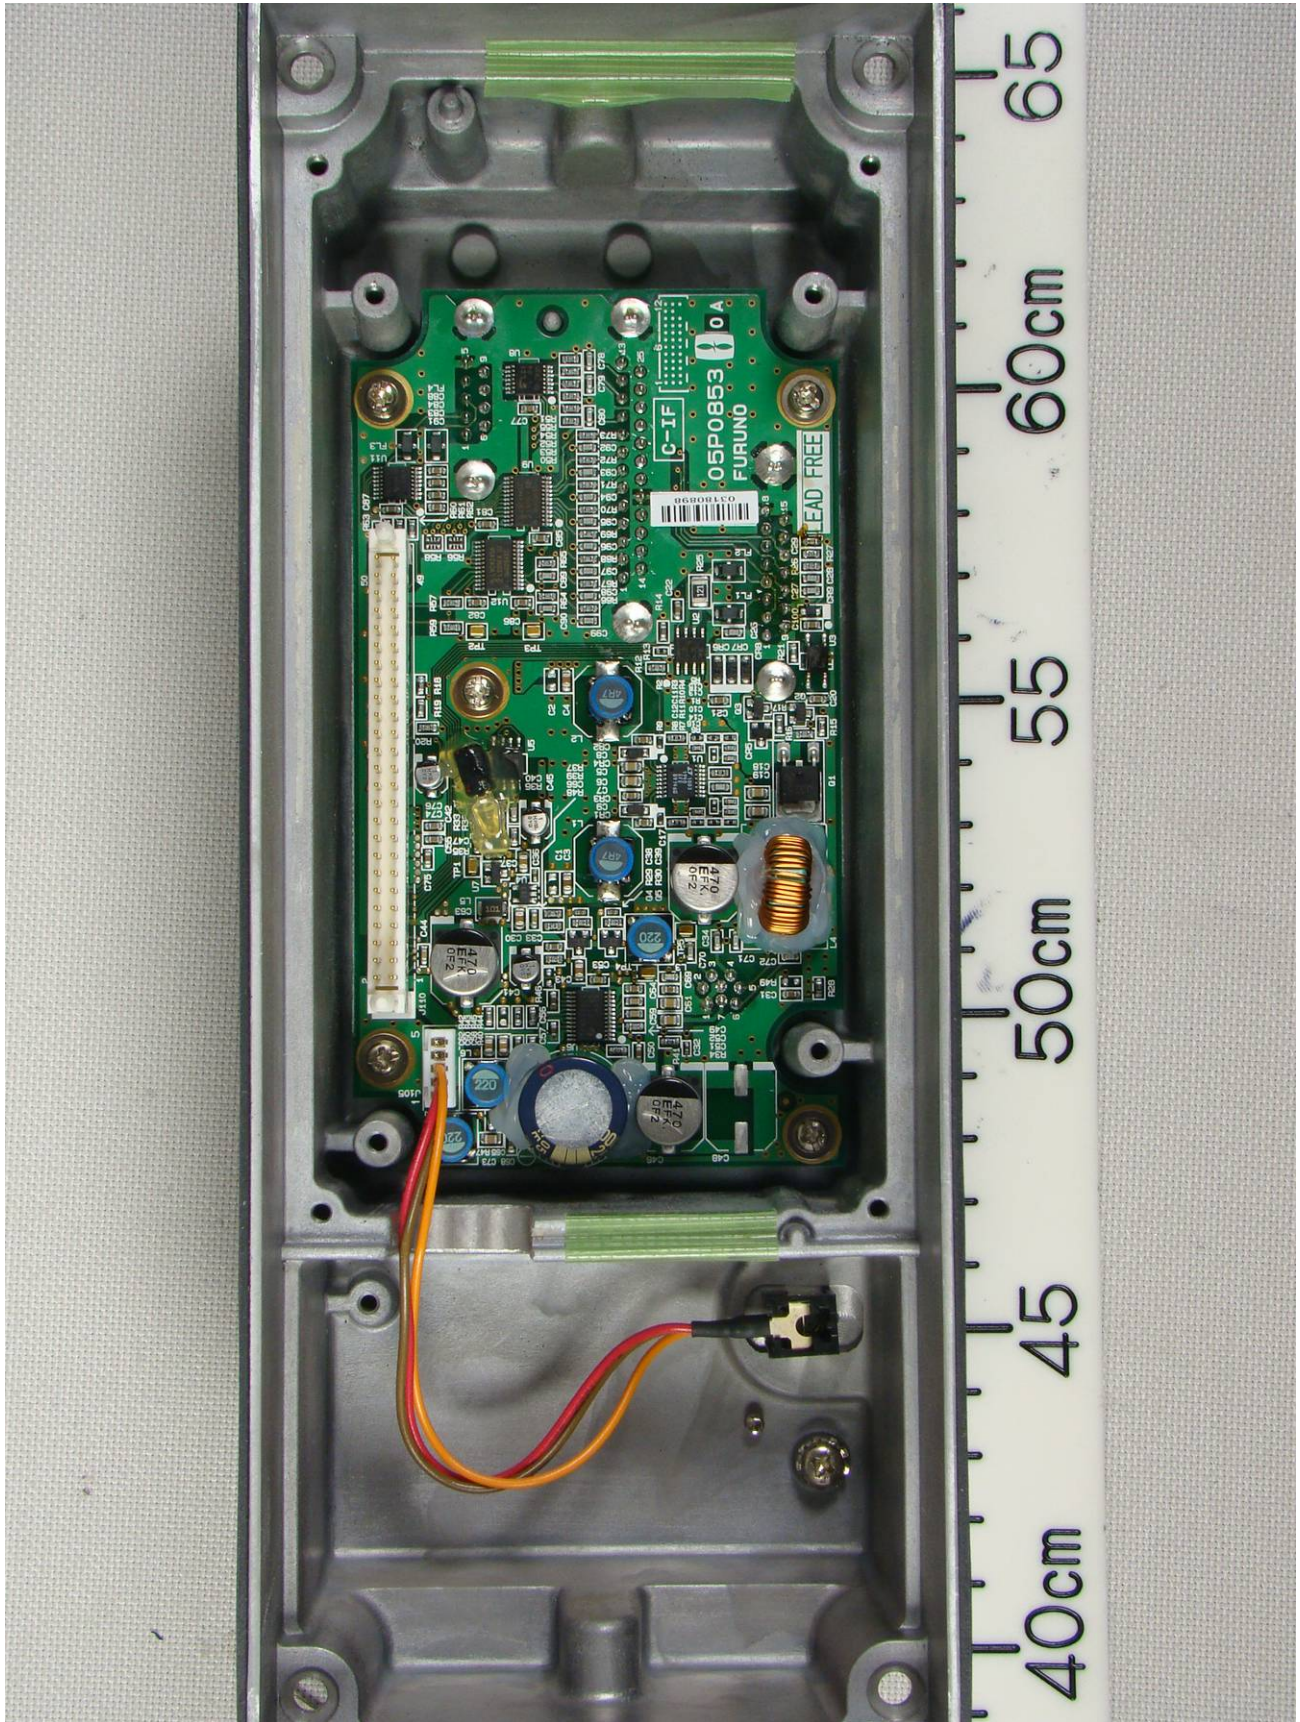
3.2.3　Inside Front View (with PANEL Board removed, showing Back of Front Panel and PANEL Board 05P0844 Front side)
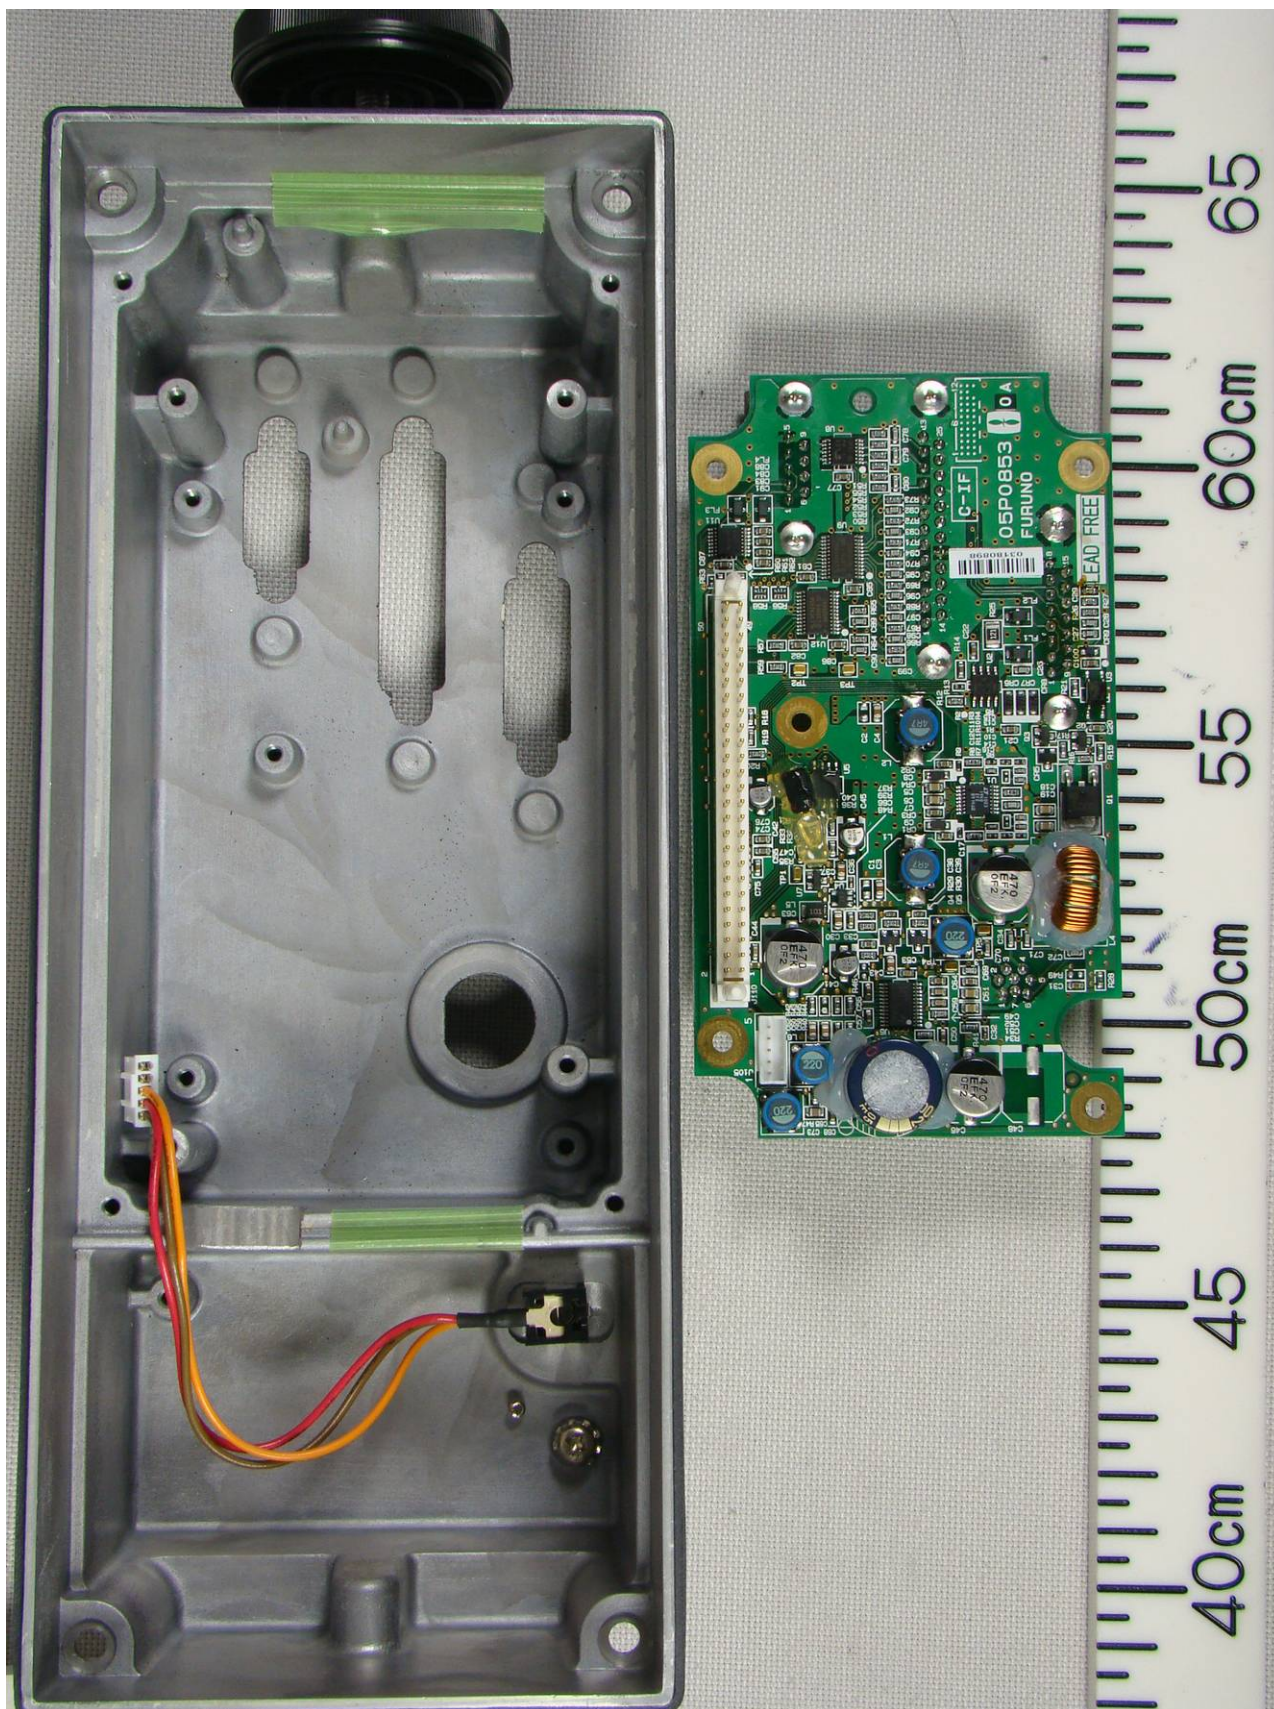
3.2.4    Inside Rear View    (with shield cover removed, showing C-CPU Board 05P0852)

3.2.5 Inside Rear View (with C-CPU Board removed, showing C-IF Board 05P0853)
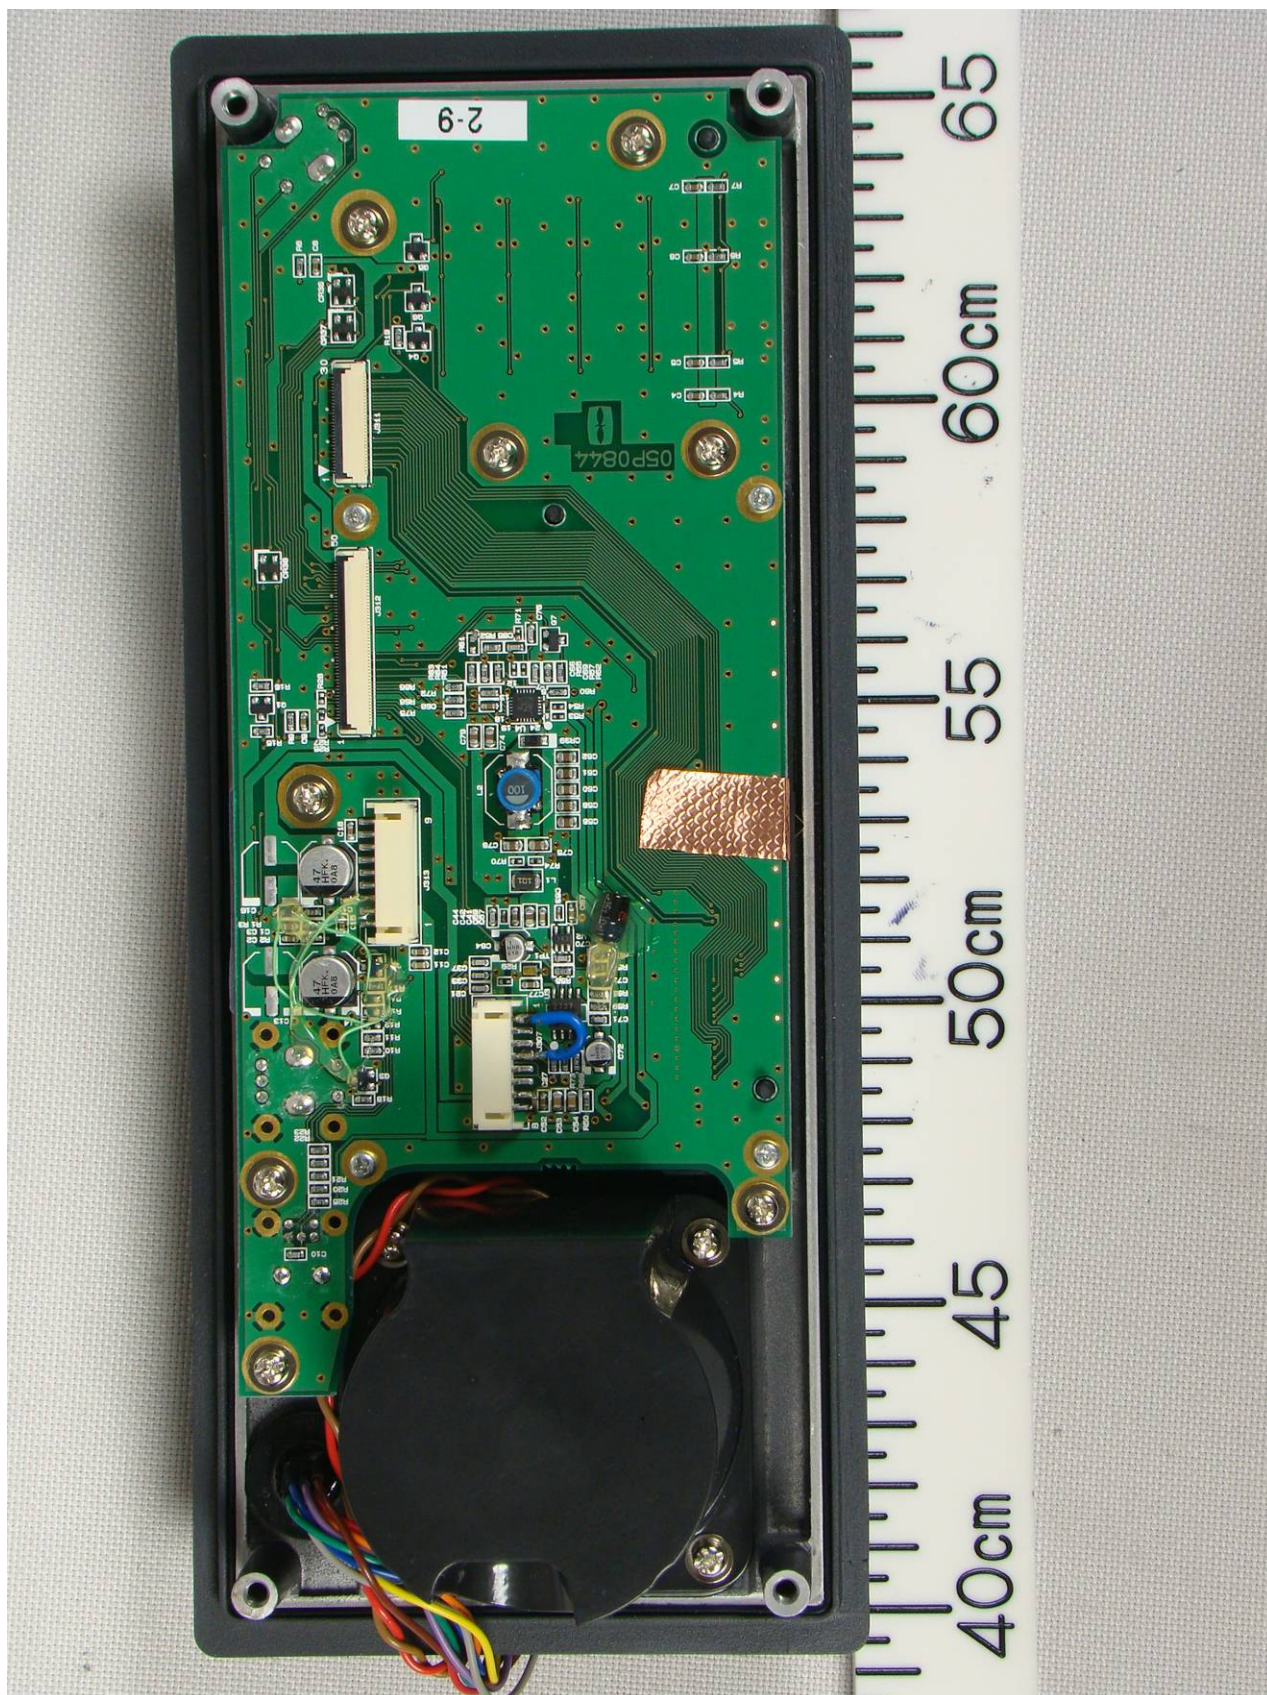
3.2.6    Inside Rear View (with C-IF Board removed, showing Back of Rear Cover)
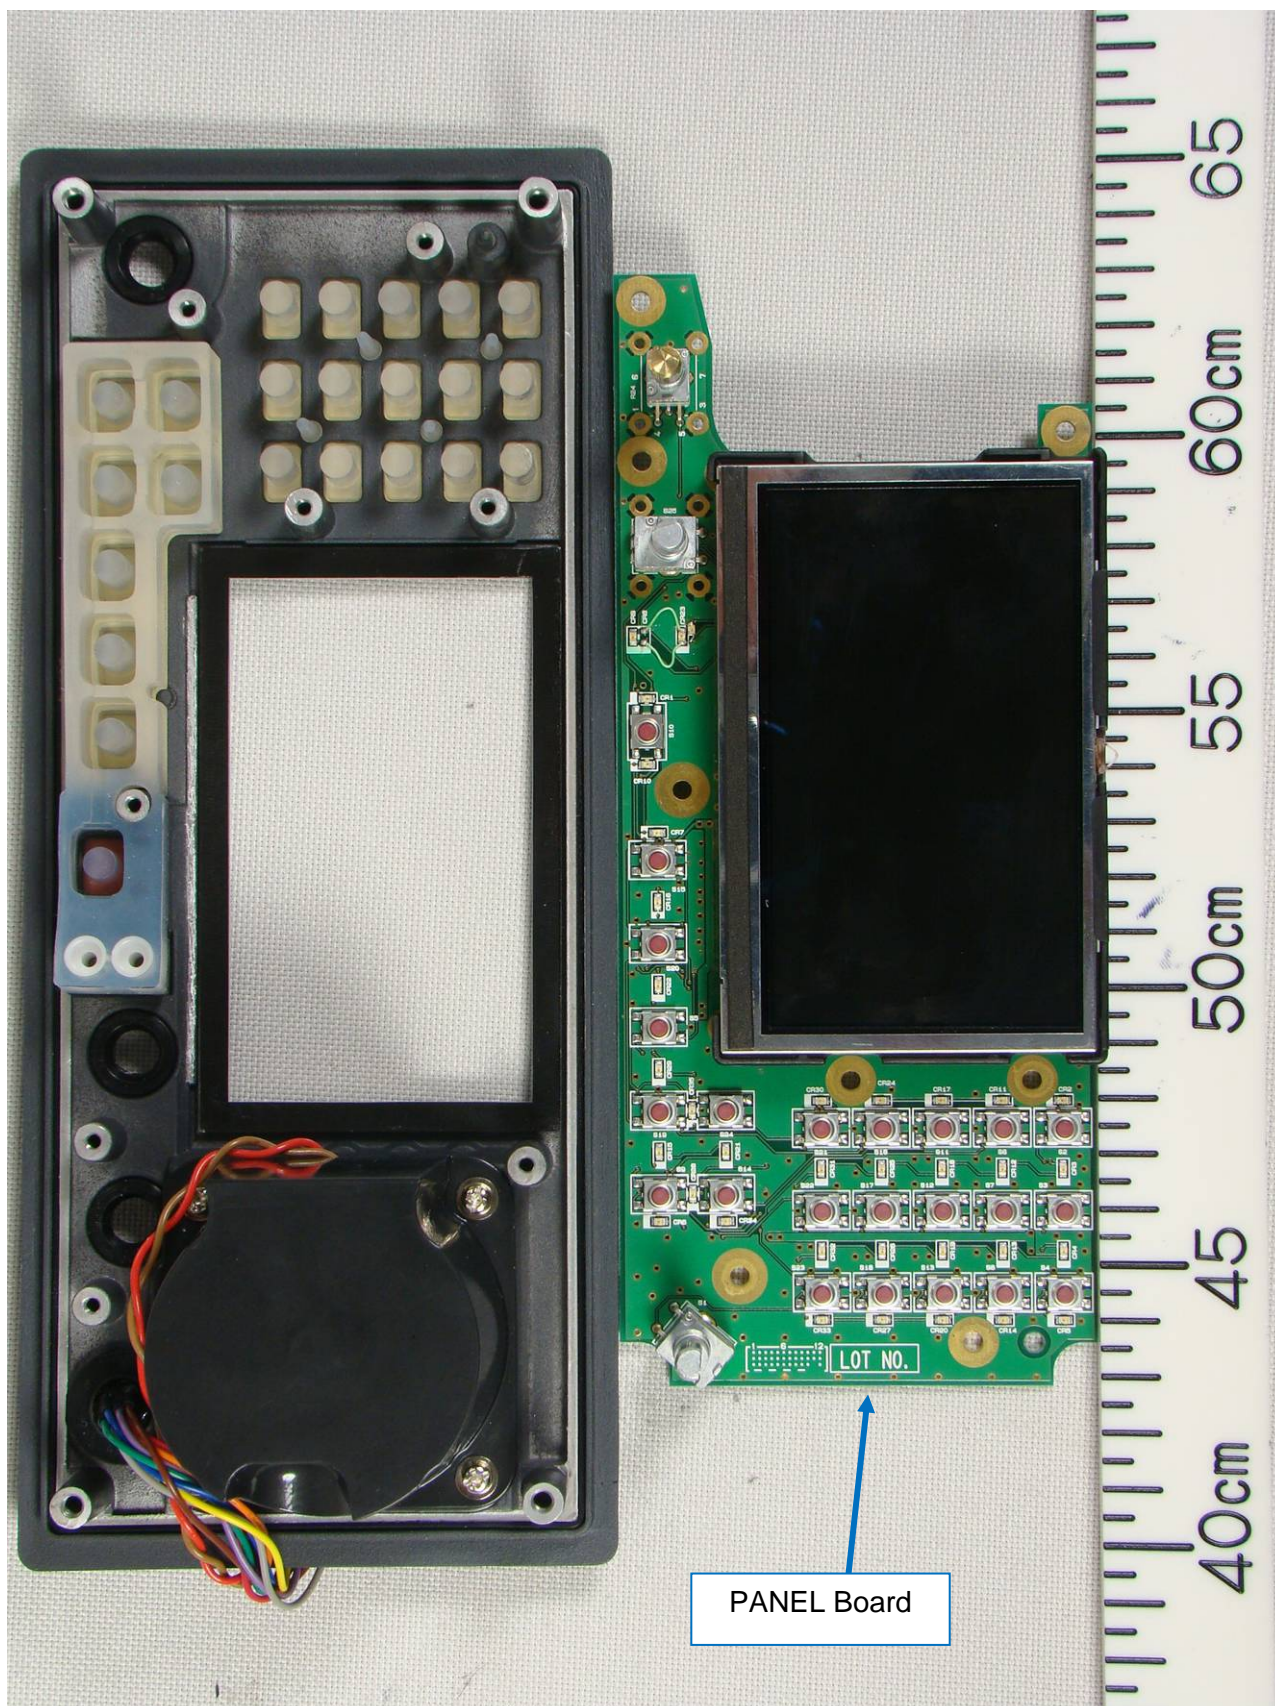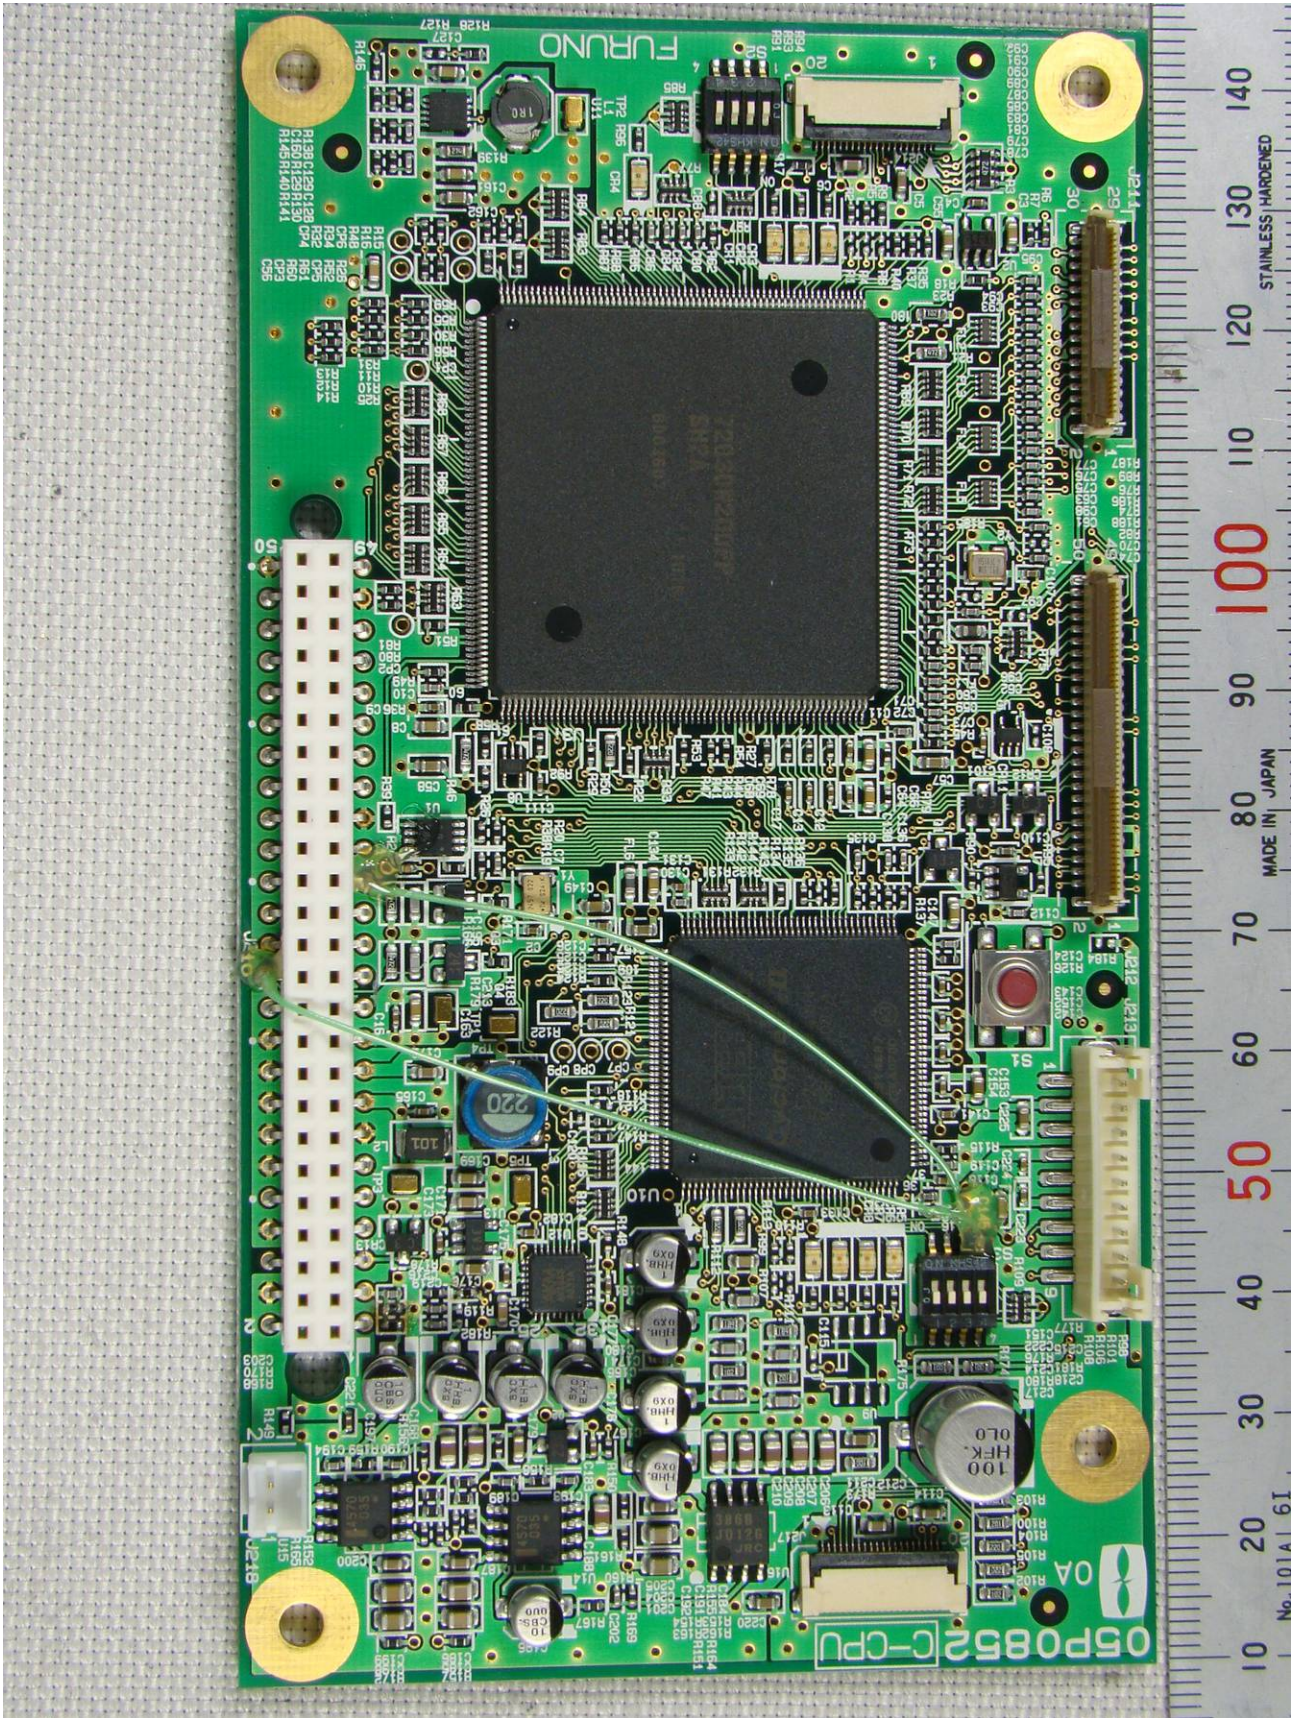
## 3.3 PCBs

3.3.1　PANEL Board 05P0844 Rear side

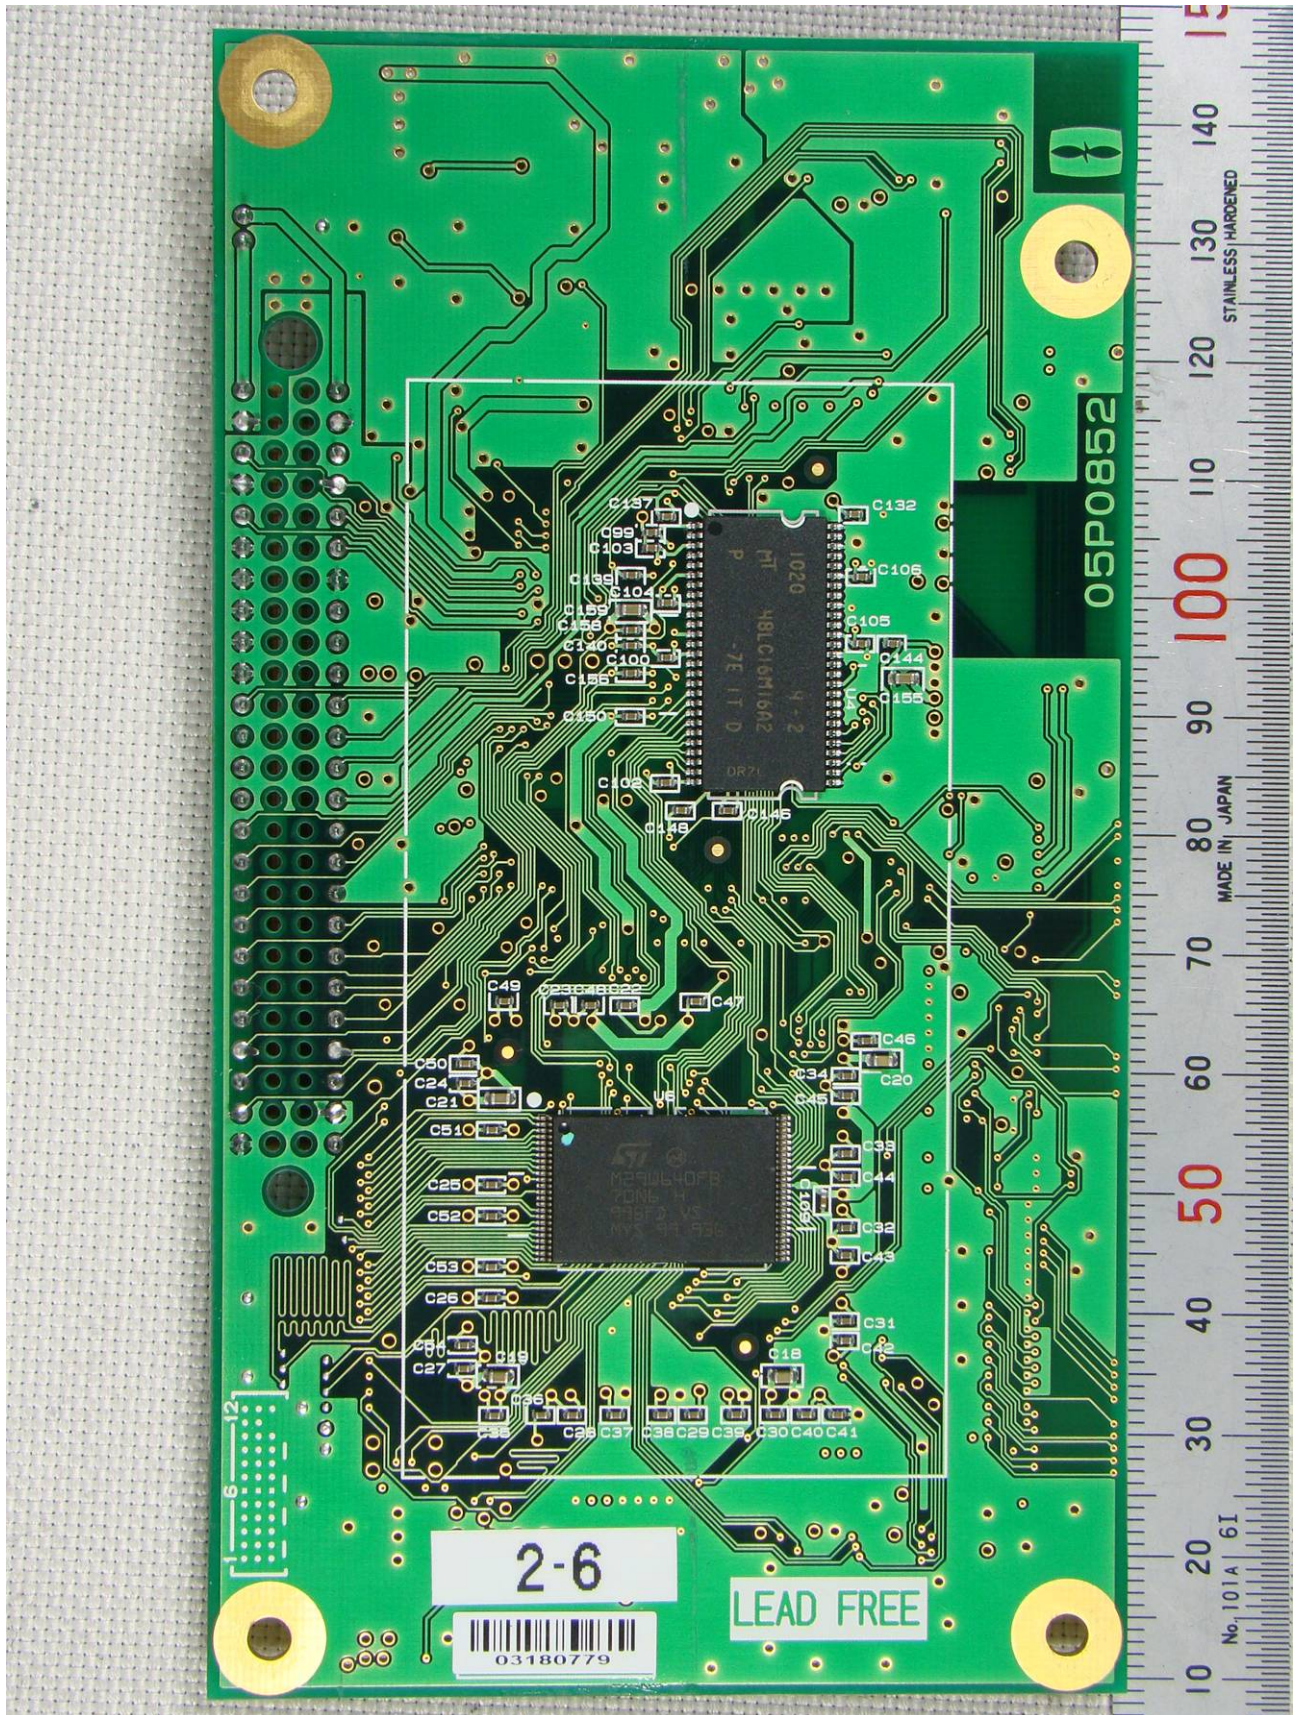3.3.2 PANEL Board 05P0844 Front side
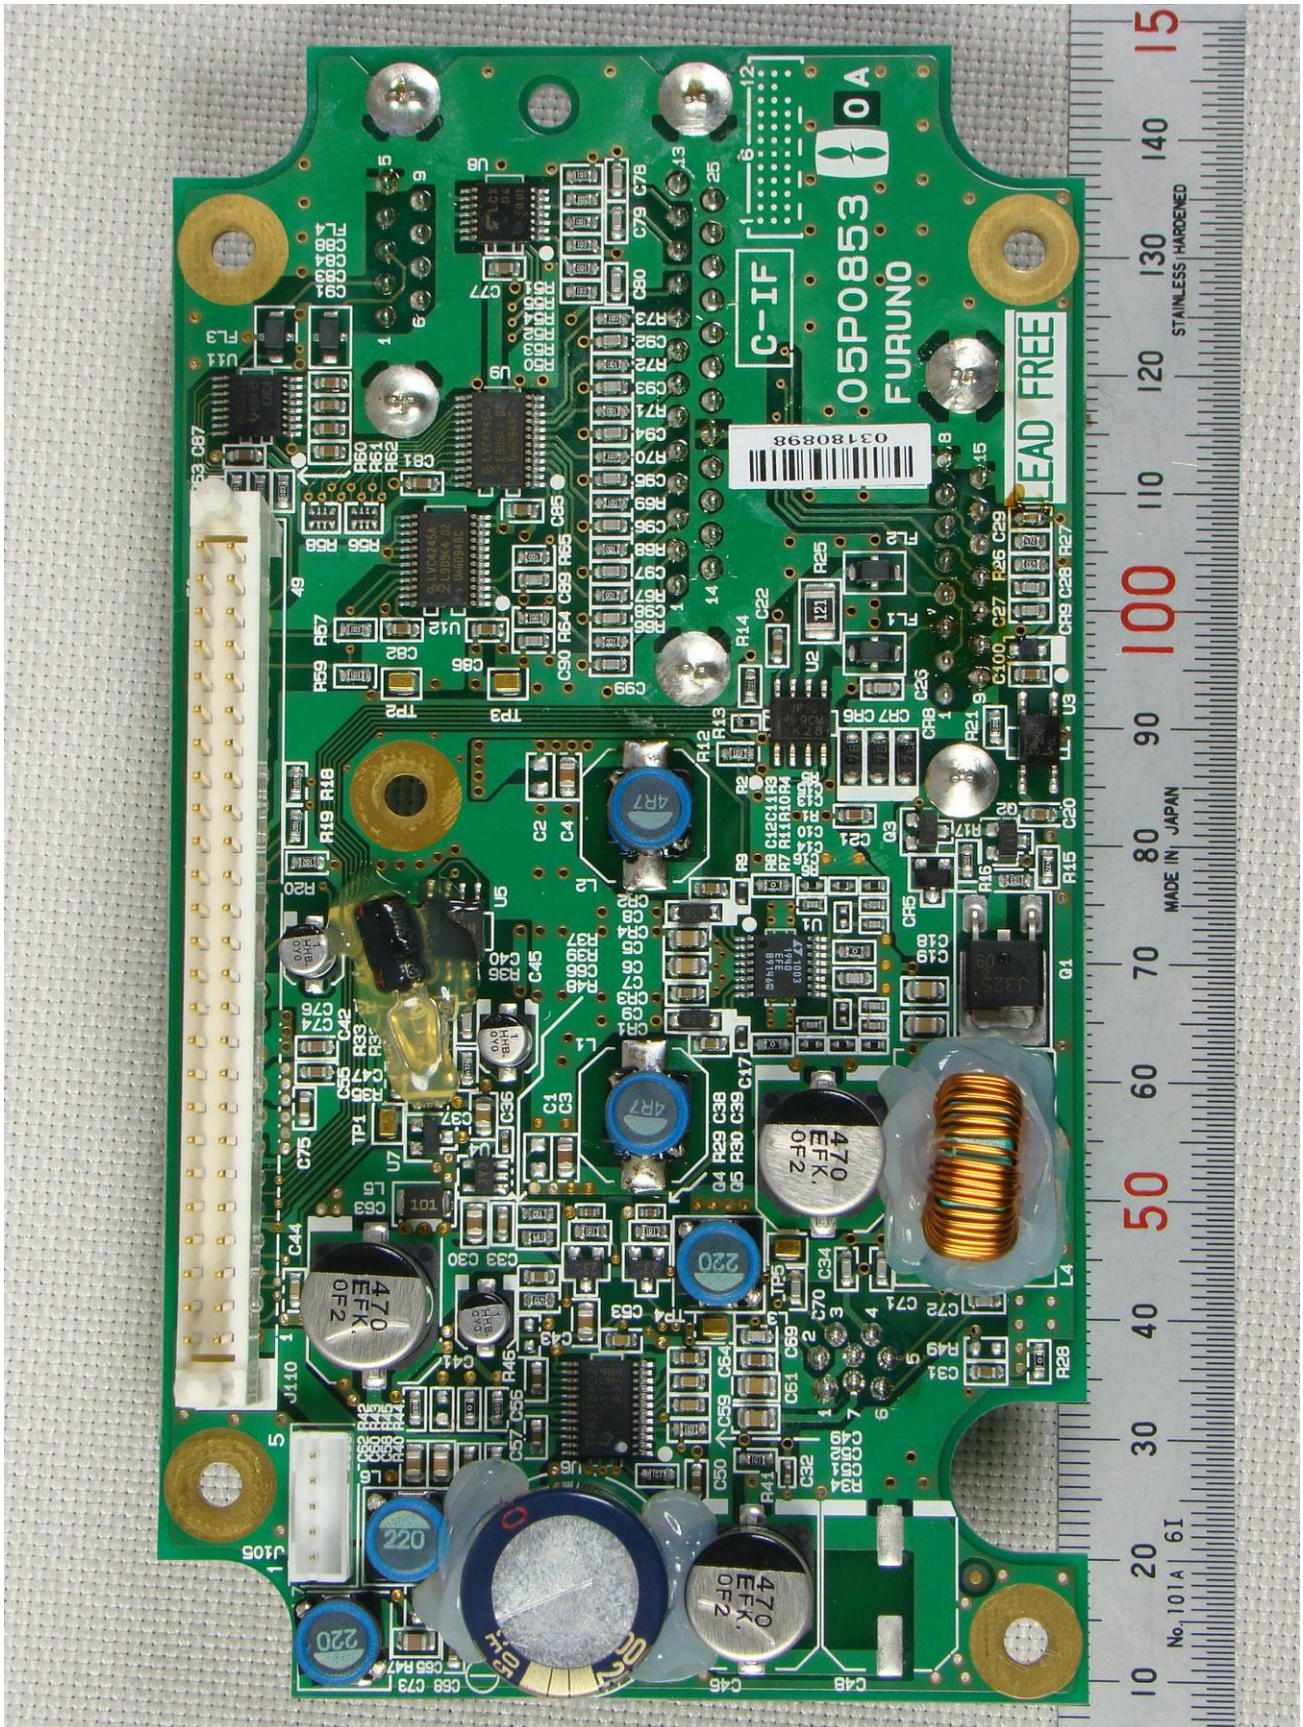


PANEL Board

### 3.3.3　C-CPU Board 05P0852 Front side

### 3.3.4 C-CPU Board 05P0852 Rear side

### 3.3.5    C-IF Board 05P0853 Front side

### 3.3.6    C-IF Board 05P0853 Rear side