

## INSTRUCTION MANUAL

### ATTENTION PARENTS

It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

### BATTERY INSTALLATION

#### HOW TO INSTALL BATTERY IN VEHICLE

1. Make sure the "ON/OFF" switch is on the outside of the vehicle (See Diagram #1).
2. Unscrew to open battery cover (See Diagram #1).
3. Insert 2 "AA" batteries by matching the (+) and (-) signs as shown in the battery cover and tighten the screw to secure the battery cover.
4. Replace the battery cover and tighten the screw to secure the battery cover.

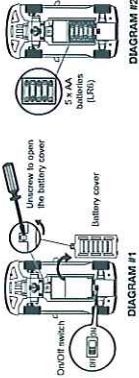


DIAGRAM #1

#### HOW TO INSTALL BATTERY IN TRANSMITTER

1. Unscrew to open battery cover (See Diagram #2).
  2. Insert 2 "AA" batteries by matching the (+) and (-) signs as shown in the battery compartment (See Diagram #2).
  3. Replace the battery cover and tighten the screw to secure the battery cover.
- Note: Remove all batteries after you have finished using your vehicle.



DIAGRAM #2

#### HOW TO PLAY

1. Build up antenna by passing the cable through the antenna tube provided and plug into the vehicle (step). Otherwise, (See Diagram #3).
2. Push the ON/OFF switch to the "ON" position of the vehicle. (See Diagram #5).

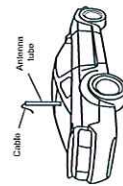


DIAGRAM #3

3. Operate the vehicle with the transmitter. Functions include: Forward, Reverse, Left and Right. Step (See Diagram #6).
4. Turn OFF the vehicle after playing and remove all batteries from the transmitter and the car.

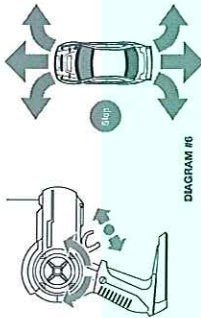


DIAGRAM #4

### FRONT WHEELS STEERING ADJUSTMENT

5. If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram #7).
6. If the vehicle runs towards left, turn "Steering Alignment Lever" towards right.
7. If the vehicle runs towards right, turn "Steering Alignment Lever" towards "L".




DIAGRAM #7

### BATTERY CAUTIONS

1. For maximum performance, use alkaline batteries.
  2. Do not mix old and new batteries.
  3. Do not use alkaline, standard (carbon-zinc), or rechargeable batteries.
  4. Do not recharge non-rechargeable battery.
  5. Ensure batteries are inserted with the correct polarity.
  6. Remove batteries if they are not used for a long period of time.
  7. Remove exhausted batteries from toy and dispose of in accordance with the makers recommendation.
  8. Rechargeable batteries should only be charged under adult supervision.
  9. Remove rechargeable batteries from toy before charging.
  10. The supply terminals are not to be short-circuited.
  11. The antenna wires are not to be inserted into socket outlet.
- NOT SUITABLE FOR CHILDREN UNDER 3 YEARS OF AGE, DUE TO SMALL PARTS.**

### FCR NOTE:

THE ANTENNA PROVIDED IS A UNIQUE ANTENNA. BY INSTALLATION OF UNAUTHORIZED ANTENNA TO THIS EQUIPMENT, SUCH UNAUTHORIZED MODIFICATIONS TO THE EQUIPMENT MAY CAUSE THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY DAMAGE TO THE EQUIPMENT CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ATTENTION PARENTS: IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.



ENGLISH  
PRINTED IN CHINA  
O.I. NO.4548

### ATENCIÓN PARA LOS PADRES

Se recomienda que este juguete y sus accesorios sean examinados periódicamente para detectar posibles peligros y que cualquier parte potencialmente peligrosa sea reparada o reemplazada.

### COLOCACIÓN DE LAS PILAS

#### COMO COLOCAR LAS PILAS EN EL VEHICULO

1. Asegúrese que el interruptor "ON/OFF" está en la posición "OFF". (Ver Diagrama #1)
2. Desatornille y quite la tapa del compartimento de las pilas. (Ver Diagrama #1)
3. Inserte 2 pilas tipo "AA" de acuerdo con las marcas de las polaridades (+) y (-) según se indica sobre del compartimiento. (Ver Diagrama #2)
4. Reemplace la tapa del compartimento de pilas y apriete el tornillo firmemente para cerrar.

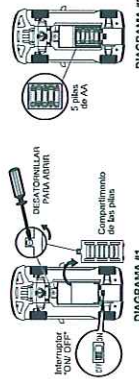


DIAGRAMA #1

#### COMO COLOCAR LAS PILAS EN EL MANDO DE CONTROL

1. Desatornille y quite la tapa del compartimento de las pilas. (Ver Diagrama #2)
2. Introduzca 2 pilas tipo "AA" de acuerdo con las marcas de las polaridades (+) y (-) según se indica dentro del compartimiento. (Ver Diagrama #2)
3. Reemplace la tapa del compartimento de pilas y apriete el tornillo firmemente para cerrar. Nota: Retire las pilas después de usar el vehículo.



DIAGRAMA #2

#### COMO JUGAR

1. Construya la antena pasando el cable a través del tubo incluido y conecte en el cable firmemente. (Ver Diagrama #3)
2. Coloque el interruptor "ON/OFF" del vehículo en la posición "ON". (Ver Diagrama #5)

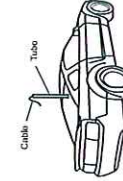


DIAGRAMA #3

3. Dirija el vehículo con el mando de control. (Ver Diagrama #6)
4. Asegure el interruptor del vehículo después de jugar y retire todas las pilas del mando de control y del coche.

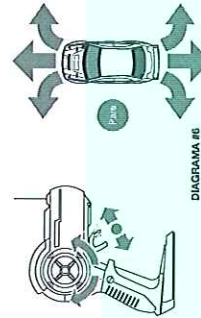


DIAGRAMA #4

### AJUSTE DE LA DIRECCIÓN DE LAS RUEDAS DELANTERAS

5. Si el vehículo no corre en dirección recta hacia delante, ajuste la palanca para un alineamiento satisfactorio en la parte inferior del vehículo. (Ver Diagrama #7)
6. Si el vehículo tiende a ir hacia la izquierda, gire la palanca de alineamiento de dirección "hacia la posición "R".
7. Si el vehículo tiende a ir hacia la derecha, gire la palanca de alineamiento de dirección "hacia la posición "L".




DIAGRAMA #7

### PILAS PRECAUCIONES

1. Para un funcionamiento óptimo, use pilas alcalinas.
  2. No deben mezclarse diferentes tipos de pilas, ni pilas nuevas con usadas.
  3. No recargar pilas alcalinas con pilas oxidantes (carbón-zinc) o recargables.
  4. No se deben recargar pilas no recargables.
  5. Se deben recargar las pilas respetando la polaridad correcta.
  6. Extraiga las pilas del juguete cuando no se usen durante un tiempo prolongado.
  7. Se deben quitar las pilas agotadas del juguete y guardarlas en un contenedor de recogida selectiva.
  8. Las pilas recargables deberán ser cargadas solamente por un adulto.
  9. Retire las pilas recargables del juguete antes de cargarlas.
  10. Los terminales de suministro no deben insertarse en los enchufes.
  11. Los cables de antena no deben insertarse en la salida del enchufe.
- NO RECOMENDADO PARA NIÑOS MENORES DE 3 AÑOS. CONTIENE PIEZAS PEQUEÑAS QUE PUEDEN SER INGERIDAS.**



ESPAÑOL  
IMPRESO EN CHINA  
O.I. NO.4548

SIZE: 210 X 297MM PN#65-4548-000-0100