

Features – operated by the controller:

1. Forward/Reverse – push/pull left side lever forward/backward.
2. Left/Right – use right side lever.

The Controller:

Insert 2 "AA" batteries (not included) in the battery compartment on the back of the transmitter. Be sure the (+) and (-) are properly matched.

The Vehicle:

- Insert 2 "AA" Alkaline Batteries (not included) in the battery compartment on bottom of vehicle. Be sure the (+) and (-) are properly matched.
- The vehicle is now ready for use.
- Trim adjustment is located under vehicle between front wheels. Adjust trim to align wheels for straight line driving.

Batteries (not included):

Transmitter – 2 "AA" batteries

Vehicle – 2 "AA" batteries

Notes:



1. Operate the vehicle within 100 feet (30 meters) range.
2. Switch off the toy when not in use.
3. Remove all batteries when not in use for long periods.
4. If the vehicle is not functioning properly, replace batteries.
5. Adult supervision recommended.
6. Please remove all packaging attachments before giving this toy to your child.
7. Do not insert the antenna wire into electrical socket outlets.

The reception performance may be affected under a strong interference disturbance environment.

This product would not perform normally under a strong electrostatic environment.

We wish you many happy hours of pleasure with your New Bright toy.

ENGLISH

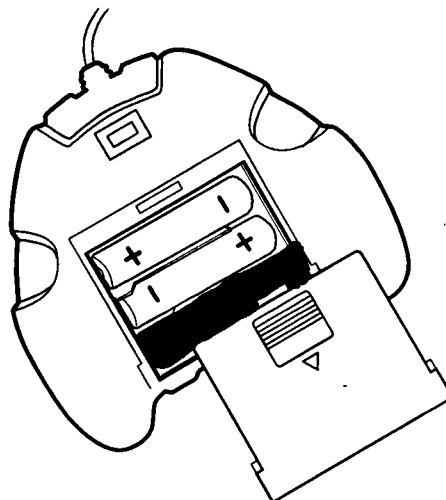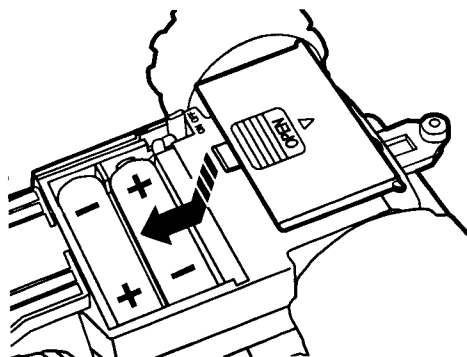

Функции – управление на дистанционното управление:

1. Напред/Назад – Движение на ръчката от лявата страна напред/назад.
2. Ляво/Дясно – Използвайте ръчката от дясната страна.

Дистанционното управление:

Поставете 2 батерии "AA" (не са включени в комплекта) в отделението за батерии на гърба на управлението. Убедете се, че (+) и (-) стойностите са правилно насочени.

Превозното средство играчка:

- Поставете 2 алкални батерии "AA" (не са включени в комплекта) в отделението за батерии в долната част на играчката. Убедете се, че (+) и (-) стойности са правилно насочени.
- Играчката е вече готова да бъде използвана.
- Ръчката за управление на движението се намира под играчката между предните колела. Чрез нея нагласете и подравнете колелата за движение в права посока.

Батерии (не са включени в комплекта):

Дистанционно управление – 2 батерии "AA".
Превозно средство играчка – 2 батерии "AA".

Бележки:

1. Играчката действа в 30 метров радиус от дистанционното управление.
2. Изключете играчката, когато не се използва.
3. Премахнете всички батерии, когато играчката няма да бъде използвана дълго време.
4. Ако играчката не функционира правилно, сменете батериите.
5. Препоръчва се наблюдение от възрастен.
6. Премахнете всички опаковки преди да дадете играчката на вашите деца.
7. Не включвайте антената на играчката в електрически контакти.

Сигналят може да бъде засегнат от силно смущение от околната среда.

Този продукт не би работил нормално под влияние на силно електростатична среда.

Желаем ви много щастливи часове с вашата "New Bright" играчка.

Български



NEW BRIGHT

JN410-07

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

F.C.C. CAUTION:

The manufacturer is not responsible for radio interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

