Model: Radio GP – AM/FM, DAB   (DEA751)

Automotive Infotainment Unit with Bluetooth

Radio GP – AM/FM, DAB Quick User Guide

April 5th, 2019
FCC ID: L2C0081TR
IC ID: 3432A-0081TR

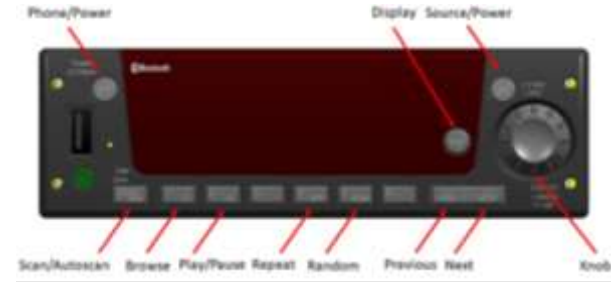Aptiv Services US, LLC.

2151 East Lincoln Road

Kokomo, Indiana 46902

U.S.A

DEA7XX Radio Quick guide

Introduction

For a detailed User's Manual refer to the following page:
http://www.panapacific.com/support
The DEA7XX System consist of a radio. It manages the Phone interface, Audio, Bluetooth, module the audio output of the system to the speakers, containing the tuner (AM, FM, WX, LW), SiriusXM, DAB, Front Aux, Rear Aux, Front USB or Rear USB.

Radio Button Operation

SRC/Power/ESC – Short press = Switch to FM → AM → WX → LW → SXM → DAB → USB/iPod → AUX → Bluetooth Audio and turn Radio ON, ESC/Back.
Long press = Turn radio OFF.

Volume Knob/OK – While on any source; short press = Mute. While on Menu; short press = OK
Long press = Display audio Control Menu.
Rotate on any source to increase/decrease Volume, or during a Menu for Navigation.

One-Hour Timer - With the ignition off, pressing the SRC/PWR button will activate one-hour timer.

Phone – Long press = Show the Bluetooth Menu.

Scan/Ascan - Short press = seeks up in frequency and stops on the next strong frequency temporally.
Long press = Scans stations and stores strongest stations to presets.

Browse – Short press = Navigate on the device and select a specific song or play context (Applicable to USB sticks and iPods).

Play/Pause – Short press = pause/un-pause current Media.

RPT (Repeat) – Short press = repeat current track.

RDM (Random) – Short press = play the tracks randomly.

Prev (Previous) – Short press = select previous track or station.

Next – Short press to select next track or station.

DISP (Display) - If Vehicle Ignition is ON: Short press = Change Source Display Views.
If vehicle Ignition is OFF: Short press = Turn on the Radio and show the clock for a few seconds.

Radio Features

AM-FM-WX-LW Radio

Tuning.

Set to Auto in Audio Control Menu:
NEXT/PREV short press = Seek Auto.
NEXT/PREV long press = Seek Manual.
Set to Manual:
NEXT/PREV short pressed = Seek Manual.
NEXT/PREV long press = Seek Auto.

Presets.

Storing Radio Station Presets - Long press any of the Preset (1-6) buttons until the radio produces a beep.

SXM (If Equipped)

Vehicles with a valid SiriusXM® satellite radio subscription can receive SiriusXM programming.

SXM Channel – Short press NEXT/PREV.

SXM Categories – Long press NEXT/PREV = To change the current category.

DAB (If Equipped)

Digital Radio can be received across Europe and Asia Pacific.

Service selection – Short press NEXT/PREV.

Fast Seek – Long press NEXT/PREV = To advance through the station list.

iPod

This Radio supports iAP2 devices.
Other iPods may be played, but, functionality is not guarantee.

Playing from an iPod

Connect the iPod to the Radio USB port.
If the iPod is an unsupported model, it can still be connected to the vehicle using an auxiliary standard jack.

Front and Rear USB (If Equipped)

Playing from an USB - A USB mass storage device can be connected to the USB port.

USB MP3 Player and USB

Music Navigation USB - Press the magnifying glass (preset 1) button while USB source is active to access the USB Music Menu. Use the Knob or Next/Prev button to navigate through the different options.

Front and Rear Auxiliary

In auxiliary mode, you can play an external device such as an iPod® or MP3 player via the auxiliary input jack on the radio.

Bluetooth (If Equipped)

Short press Phone button = Bluetooth Menu

Enable/Disable Bluetooth - Press the Volume Knob to Enable or Disable the Bluetooth.

Pairing a Bluetooth Device –

BT Menu → BT Enable → ADD PHONE → The radio will display ADDING PH for 3 seconds. Set your cell phone to add a Bluetooth device and look for the name "DEA700 Radio". When necessary, use 4 PIN numbers 0000 to connect to the radio. When the cell phone has been successfully added, the radio will display PH CONNECTED.

Hands Free / Bluetooth Features – Once your device is properly paired, the radio may support the following Hands Free features if the connected device has that capability.

Bluetooth Player – If your cell phone supports it, it can be used as an audio source input to the radio.

Audio Controls Menu – Short Press Volume Knob = In this menu the user can adjust Audio Settings and modify the Clock and Alarm Settings.

CLOCK – Once in the Clock Menu you can select 12 H or 24 H format by rotating the knob and pressing to confirm.

ALARM - Once in the Alarm Menu, change the ALARM ON/OFF by rotating the knob.

Tuning the Alarm Off – When the alarm is triggered, rotate the Knob to select DISMISS.

Activating Snooze – When the alarm is triggered, rotate the Knob to select SNOOZE, and the alarm will be postponed for 9 minutes.

Note: The Regulatory notices are listed in the owner's manual located in the following web site.