

# LOGIC LIFE 10 SMART Watch USER GUIDE

## 1. Safety Warning

The information in this document won't be modified or extended in accordance without any notice.

The watch should be charged 2 hours at least before use.

### Security Code


The original code is 1122, this code can prevent your watch being used by others without permission.

Please change the original code to insure your personal information is safe.

\*The functions can be changed without warning

## 2. Product Details

### 2.1. Product Details

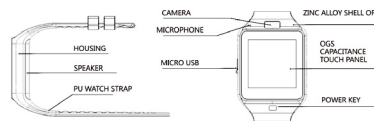

**Power Button:** Power On/Off; Turn On/Turn Off Screen; Back to main menu.

**USB Port:** Charging/Date

**Touch Screen:** Each function (main menu) will be shown and displayed on capacitive touch screen.

### 2.2. Product Quick Info

You can go to the next page by sliding the screen to the left, and return to the last page by sliding the screen to the right; go to the notice board after

### 3.3.2. From watch to phone

Bluetooth dialer on LOGIC LIFE 10 - search new device - found your smartwatch (such as LOGIC LIFE 10) - connect, the next steps are the same as 3.3.1.

### 3.4.9. Pedometer

It can be adopted as a tool to measure insufficient or excessive exercise by measuring calories or calories consumption based on collected data, such as number or steps, distance, speed, time, etc., to control exercise. If you want to return to the main menu but keep pedometer during the exercise please press the power button.

### 3.4.10. Sleep monitor

Show your sleep quality based on your sleep times.

### 3.4.11. Sedimentary remind

You can set a time to remind you up to do exercise, we suggest you this time could be one hour.

### 3.4.12. QR code

It can download sync software when scan the QR code, if there is a new version to be updated please contact with our service contact to provide you and new link for the download.

### 3.4.13. Smartsearch

Search information about watch

### 3.4.14. Alarm

### 3.4.15. Calendar

### 3.4.16. Calculator

### 3.4.17. Profiles

### 3.4.18. File manager

### 3.4.19. Audio player

You can play music from the watch or smartphone after connected with Bluetooth.

### 3.4.20. Theme setting

### 3.4.21. Camera

### 3.4.22. Video recorder

### 3.4.23. Image viewer

### 3.4.24. Video player

### 3.4.25. Sound recorder


## 2.3. Clock Display



### Settings Method

**Method:** Power On, when the phone is in clock mode, please click the middle screen and set different clock interfaces if you like.

## Pairing your Device

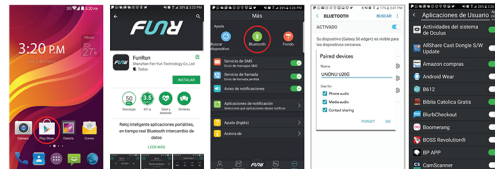

1. Open up your play store app.
2. Search the Fun Run app and download it and open it on your device.
3. As your app is opened activate the Bluetooth on your device through the app connect with the LOGIC LIFE 10
4. Once connected Select the settings icon on the right side select all available use For and select okay.
5. Go to notifications inside the app and select the notifications desired.

### 3.4.26. SIM tool

## 4. Notice

Setting method. Main menu: Theme setting, choose the theme if you like.

- 4.1. Full charge before use, the charge time needs 1-2 hours.
- 4.2. Use the accessories like the cables and charger or your android phone accessories.
- 4.3. Bluetooth will disconnect when the distance limit is exceeded, after switch on the anti-lost, the smart search function can't be used before reconnect with Bluetooth.
- 4.4. Please reconnect with Bluetooth if it's disconnected occasionally (please connect manually if the Bluetooth is disconnected over 5 minutes). Please agree the phone book sync otherwise this won't appear.
- 4.5. While playing music, some songs names will appear and some won't, this is normal because android phones are different.

## 5. Common trouble shooting

Please refer below key functions for any problems with the watch. If the problem is still unsolved please contact with your dealer or serviceman appointed.

### 5.1. Unable to switch on

The time of press the power button may be too short, please keep it more than 3 seconds.

## 3. Product Display

### 3.1. Download the Sync Software

Scan QR code, download the app to match your android phone.

This APP is only for the Sync between watch and phone and will not take your phone GPRS.

If you already downloaded the related softwares, please check the version and use the newest related softwares in order to ensure all function normal use. Please update the software when it's available.

### 3.2. Install and use the Sync Software

### Android Application Installation:

Please install the Android Application in your smartphone.

You can storage it into the memory of your phone or install it by Sync Assistant.

### Android Application Usage (Already installed):

(Smartphone) Settings - Accessibility - Enter into Bluetooth Notice (Service),

Enable this service, (please choose "sure" when shown a warning notices)

the application runs on the background automatically and sync function will be switched on as below.

### 5.2. Shut down automatically

Low power, please charge the watch.

### 5.3. Using time to short

Battery is not full, please make sure it is at full power (full charge needs at least 2 hours).

During the use of SIM card, the power will be run off soon if the signal is too poor.

### 5.4. Unable to charge

The batteries life will be reduce after a few years, please check if the battery is working. Change the charger if it doesn't work.

Please check that the USB slot connection is good, if it's not please try again.



### 5.5. No caller's name when incoming calls.

Forgot to sync the phone book when reconnected, please pair the device and connect the Bluetooth again.

### 5.6. Bad phone call voice

Watch and phone are being separated too far, please keep them closer. This also may be due to bad signal or Bluetooth.

Bad signal on your own phone call place, please go to a better place for phone calls.



Click the Bluetooth notices and choose the Notifications Service, select your personal or system application in Notify Application. Telephone service including SMS, incoming calls and seek watch.

### Notice:

Please don't shut the Bluetooth Notify Service when you are clearing the software by background or close background application software, it will affect the sync function between watch and phone if you shut it.

### 3.3.3. Bluetooth connection and Sync Function

#### 3.3.1. From phone to watch

Phone settings - turn on the Bluetooth - Search for devices, please click "pair devices" when the LQ-S1 is found, and also choose "yes" in your mobile phone.

Please choose "sure" when there is a phone book request, meanwhile you'd better choose "no remind again", this is convenience when you connect the next time (without remind again).

### Notice:

The Sync Software can be opened if the sync APP is already installed and accessible, the mobile will show Bluetooth connected after 2-5 min; the watch will inform you the time of sync with the phone, than the sync switched on.

A message will be shown in your watch when it's sync to the mobile.

Warranty Card			
Customer Data			
Model Number		Unit of sold cell phone	(Signature and seal)
Customer name		Contact telephone	
Sales telephone		Date of purchase	
Product IMEI code			
Customer address			
Sales address			
Abstract			
Date	Fault phenomenon	Overhaul	Remarks


# SMART WATCH GUÍA RÁPIDA

## 1. Aviso de seguridad

La información en este documento no será modificada o extendida sin ninguna notificación. El smartwatch debe ser cargado al menos 2 horas antes de usarlo. **Código de seguridad.** El código original es 0000, este código previene de que tu reloj sea usado por otros sin autorización. Por favor cambiar el código original para asegurarse de que su información personal esté a salvo. \*Las funciones estan sujetas a cambiar SIN AVISO.

## 2. Detalles de producto

### 2.1. Detalles de producto



**Botón de encendido:** Encender/Apagar; Activar/Suspender Pantalla; Volver al menú principal.  
**Puerto USB:** Cargar/Fecha  
**Pantalla táctil:** Cada función (menú principal) será mostrada en la pantalla con capacidad táctil.

### 2.2. Información de Producto

Puedes ir a la siguiente pantalla deslizando hacia la izquierda y volver a la anterior deslizándola hacia la derecha; El deslizado será confundido por un click si la distancia al arrastrar es muy corta.

### 3.4.9. Podómetro

Puede ser adaptado como herramienta para evitar un nivel de ejercicio insuficiente o excesivo midiendo las calorías que quemas y llevando un control de la información, tal y como el número de pasos, distancia, velocidad, tiempo, etc, para controlar el ejercicio. Si quieres volver al menú principal manteniendo el podómetro presiona el botón de inicio.

### 3.4.10. Monitor de sueño

Muestra tu calidad de sueño basado en las horas que duermes.

### 3.4.11. Alerta de sedentarismo

Puedes configurar una hora para recordarte que debes ejercitarte, te sugerimos que sea por una hora.

### 3.4.12. Respuesta rápida

### 3.4.13. Información

Busca información acerca del reloj.

### 3.4.14. Alarma

### 3.4.15. Calendario

### 3.4.16. Calculadora

### 3.4.17. Perfiles

### 3.4.18. Administrador de archivos

### 3.4.19. Reproductor de audio

Puedes reproducir música de tu reloj o smartphone después de conectarlo a través de Bluetooth.

### 3.4.20. Configuración de temas

### 3.4.21. Cámara

### 3.4.22. Grabador de vídeo

### 3.4.23. Visor de imágenes

### 3.4.24. Reproductor de video

### 3.4.25. Grabador de sonido

## 2.3. Pantalla de reloj



### Métodos de configuración

**Método:** Encender, cuando el teléfono esté en función reloj, por favor hacer click en la pantalla para cambiar a la interfaz que desees.

### Enlazando tu reloj al teléfono móvil



**PASO 1.** Abra su aplicación play store.  
**PASO 2.** Busca la aplicación Fun Run, descárgala y ábrala en su dispositivo.  
**PASO 3.** A medida que se abra la aplicación, active la función Bluetooth en su dispositivo a través de la aplicación ("Unonu U20G").  
**PASO 4.** Una vez conectado Seleccione el icono de configuración en el lado derecho seleccione todo los usos disponible.  
**PASO 5.** Vaya a las notificaciones dentro de la aplicación y seleccione las notificaciones deseadas.

### 3.4.26. Herramienta SIM

## 4. Importante

Método de configuración. Menú principal: configuración de temas y elige el tema que quieras.

- Cargarlo completamente antes de usarlo, la carga toma 1-2 horas.
- Usar accesorios como un cable y cargador de su celular Android.
- El Bluetooth se desconectará cuando la distancia límite se haya excedido, después de activar el Anti-pérdida, el buscador de reloj no podrá ser usada hasta reconectarlo a Bluetooth.
- Por favor reconectar con Bluetooth si la desconexión ocurre ocasionalmente (por favor conectar manualmente si la desconexión excede los 5 minutos)  
Por favor aceptar la sincronización de guía telefónica de lo contrario no aparecerá.
- Al reproducir música, algunos nombres de canciones aparecerán y otros no, esto es normal ya que los teléfonos Android son diferentes.

## 5. Solución a problemas comunes

Por favor revisar los puntos mencionados a continuación ante cualquier problema con el reloj. Si el problema sigue sin resolver por favor contactar con distribuidor o contacto de servicio mencionado.

### 5.1. No puede encenderse

El tiempo presionando el botón para encender puede ser muy corto, recuerda que debe ser por más de 3 segundos.

## 3. Uso rápido de producto

### 3.1. Descarga del software de sincronización

Escanear el código QR, descargar la aplicación para sincronizar tu teléfono Android. Esta aplicación es solo para la sincronización entre reloj y teléfono y no usará el GPRS de tu teléfono. Si ya descargaste el software, por favor revisar la versión y usar la más nueva para asegurarse de que todas las funciones trabajen con normalidad. Por favor actualizar el software cuando esté disponible.

### 3.2. Instalación y uso del software de sincronización

#### Instalación de aplicación Android

Por favor instalar la aplicación en su dispositivo Android. Puedes guardarlo en la memoria del teléfono o instalarlo a través del asistente de sincronización.

#### Uso de aplicación Android (ya instalado)

(Smartphone) Ajustes - Accesibilidad - Entrar a notificación Bluetooth (Servicio), activar este servicio, (por favor escoger "Seguro" cuando muestren una notificación de advertencia) la aplicación correrá en segundo plano automáticamente y la función de sincronización será activada como se muestra a continuación.

### 5.2. Se apaga automáticamente

Puede deberse a baja energía, por favor cargar el reloj.

### 5.3. Tiempo de duración muy corto



Quizá se deba que la batería no está totalmente cargada, asegúrese de que esté a máximo poder (el tiempo de carga requiere mínimo 2 horas) Durante el uso de una tarjeta SIM, la batería se agotará rápido si la señal es mala.  
**5.4. No puede cargarse**  
El tiempo de batería se reducirá tras unos años, por favor revisar si la batería está funcionando. Cambiar el cargador si no funciona. Por favor revisar que la conexión del puerto USB sea buena, sino por favor intentar nuevamente.

### 5.5. No aparece el nombre al recibir una llamada

Olvídid sincronizar la guía telefónica cuando fue recomendado, por favor emparejar el dispositivo y conectarlo a Bluetooth otra vez.

### 5.6. Mala calidad de llamadas

El reloj y teléfono están muy separados, por favor mantenerlos cerca, esto también puede deberse a una mala señal o Bluetooth. Mala señal por parte de tu teléfono debido al lugar en el que te encuentras, por favor busca un lugar con mayor recepción de señal.

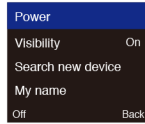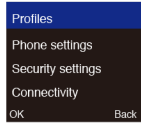

Clickear en la opción Bluetooth y elegir Servicio de notificaciones, selecciona tu aplicación personal o de sistema en la aplicación de notificaciones. Teléfono incluye servicio de SMS, recibimiento de llamadas y búsqueda de reloj.

#### Importante:

Por favor no desactivar el Servicio de Notificación Bluetooth cuando estés activando el software en segundo plano o cancelar dicha activación, esto afectará la función de sincronización entre el reloj y teléfono.

### 3.3. Conexión Bluetooth y función sincronización

#### 3.3.1. Del teléfono al reloj

Ajustes de teléfono - activar Bluetooth - buscar dispositivos, por favor clickear "aparear dispositivos" cuando el Unonu U20G sea encontrado, y también elegir "SI" en teléfono mobil. Por favor elegir "SI" cuando la guía telefónica sea requerida, además es recomendable elegir "no recordarme nuevamente", esto es conveniente para la próxima sincronización (y no aparezca de nuevo la solicitud).

#### Notice: Importante:

El software de sincronización puede ser abierto si la aplicación de sincronización ya está instalada y accesible, el teléfono te mostrará que fue conectado por Bluetooth tras 2-5min; el reloj te informará el tiempo de sincronización con el teléfono, que la sincronización fue activada. Un mensaje se mostrará en tu reloj cuando esté sincronizado.

Tarjeta de Garantía			
Información del cliente			
Número de modelo		Unidad de teléfono vendido	Firma y Sello
Nombre del cliente		Contact telephone	
Número de ventas		Fecha de compra	
Código IMEI			
Dirección del cliente			
Dirección de venta			
Resumen			
Fecha	Tipo de falla	Revisión	Comentarios

## **FCC Caution:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Specific Absorption Rate (SAR) information**

SAR tests are conducted using standard operating positions accepted by the FCC with the watch transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the watch while operating can be well below the maximum value.

Before a new model watch is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each watch are performed in positions and locations (e.g. at the limb) as required by the FCC.

For Limb-worn operation, this model watch has been tested and meets the FCC RF exposure guidelines. When used this product, please position the device a minimum of 10 cm from the face. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

When you start to use this watch, please pay attention to the following information: for safety concerns, you should only wear the wrist watch on your wrist and the device should Not be worn on the inside of the wrist (Such as palm side) or in any other configurations during transmission.

If damaged, please do not attempt repair for yourself.