


W 15.6 in 398mm
H 5.5 140mm

Front



2x12" PORTABLE PARTY SPEAKER


Bluetooth
BB2739
USER MANUAL

BC

Charging the Speaker
Insert the three plugs jack to the charging port at the back-control back, and the other end of cable to three plugs socket. The LED indicator will light up solid red when the speaker is charging and turn blue the speaker is fully charged.

REAR PANEL
1. Mode Button :Toggle between AUX, USB, Micro-SD, FM, BT by Short Press;
Previous Track Button: Select previous track;
Play/Pause Button by Short Press; TWS function by Long Press .
Next Track Button: Select next track;
Record
Mic priority
2. USB Slot
3. Micro-SD Slot
4. Aux Input
5. RCA AUX L&R

Buttons & Functions

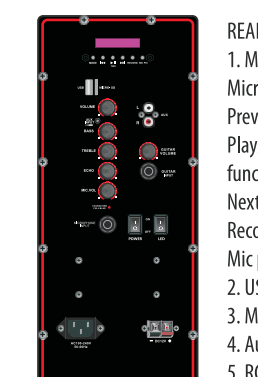

1. STANDBY: Make the unit to be standby mode.
2. Input Mode Button: Toggle between USB, Micro-SD, FM, AUX, BT
3. Mute: Mute the track
4. PLAY/PAUSE
5. Previous Track: Select previous channel
6. Next Track: Select next channel.
7. EQ: Select EQ mode.
8. VOL-: Reduce the master volume
9. VOL+: Increase the master volume
10. REP: Repeat the playing track.
11. Press to Scan Channel in FM Mode
12-21. KEY Number for selecting the certain track for USB flash drive or Micro-SD card.

It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.

FCC Information
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement
This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard, FOR HOME OR OFFICE USE.
Warning: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter. Bluetooth is a registered trademark of Bluetooth SIG. All other trademarks are property of their respective companies.

FCC ID OGGK3MF1215


LIMITED WARRANTY
ESI Cases & Accessories, Inc., warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described. This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor at any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to any applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases & Accessories, Inc. The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases & Accessories, Inc. and shall be the sole and exclusive remedy available to the purchaser. Corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases & Accessories, Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of ESI Cases & Accessories, Inc. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Return Instructions
If your speaker malfunctions during the warranty period of one calendar year (90 days for battery), contact our customer service department at (212) 883-8838 to obtain troubleshooting information. If troubleshooting assistance fails to remedy the problem, you will receive a return authorization # and instructions for sending your unit to our Service Center. Your return authorization number must be clearly visible and placed on the outside of box when the unit is returned. Enclose a copy of your original proof of purchase showing the original purchase date along with detailed information describing the exact nature of your problem. Be sure to include your complete name, address, email address, daytime and evening contact numbers. In addition, please send a check or money order made payable to "ESI Cases & Accessories." for return freight amount (given to you by our service agents). All of the above must be included with your return, or your package will not be eligible for service under our warranty. The customer is responsible for packing the speaker in its original carton or equivalent, and for insuring, and shipping the unit to our service center. Please make sure to pack all accessories included with your speaker so that we can properly identify any issues. All freight cost to return the unit to ESI Cases & Accessories, are the responsibility of the customer. If your speaker is under warranty, then ESI Cases & Accessories, will at its sole discretion, exchange or repair the speaker without charge for parts and labor. The customer is responsible for return freight and should include a check or money order payable to "ESI Cases & Accessories," with your return for the return freight amount. Any shipments received without a Return Authorization number will be refused. For more details please contact our customer service department.
Send product:
ESI Cases & Accessories
44 East 32nd Street New York, NY 10016
Tech Support: (212) 883-8838
TechSupport@ESICall.com

Bluetooth™ Connect with a new device
1. Press the MODE button to bluetooth mode.
2. Activate Bluetooth of mobile phone and search for device name "BB-BT-SP" then connect it. The unit will beep three times once connected successfully.
3. Play the music from your mobile phone and enjoy.
4. Short press PREVIOUS or NEXT button on the device or on Mobile phones to select songs you like.
5. Rotate the volume knob to adjust volume down and up. Or adjust the mobile phones' volume.
6. Press PLAY/PAUSE button on the device or on Mobile phones to play or pause the music.
7. Short press EQ button on remote control to switch between SITE and BASS.
8. Please turn off the unit while without use. Songs will play automatically after starting up.
BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.
WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD
US National Button Battery Ingestion Hotline- (800) 498-8666

WIRELESS SPEAKERS
Thank you for purchasing a Billboard Wireless Powered Speaker. For best use of this device, we recommend carefully reading this user manual and keeping it for your records.

Package contains
a. Big wireless speaker
b. UL cable
c. Remote
d. User manual

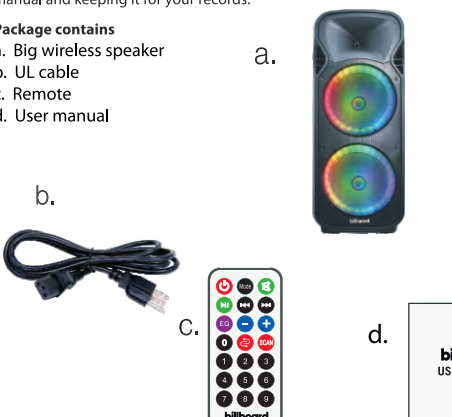

6. Volume Knob: Adjust from Min to Max
7. Bass Volume Knob: Adjust from Min to Max
8. Treble Volume Knob: Adjust from Min to Max
9. Echo of Microphone Knob : Adjust from Min to Max
10. Mic Volume Knob: Adjust from Min to Max
11. Guitar Volume Knob : Adjust from Min to Max
12. Microphone Input*1
13. Guitar Input*1
14. Power Switch
15. Led Switch
16. Power Supply: AC 100-240V
17. DC 12V

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR PARTY SPEAKER. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. Your Speaker has an internal rechargeable battery. Improper usage may result in the Speaker becoming hot, ignite or burst and cause injury if exposed to conditions of abuse. Be sure to follow the safety warnings listed below:
1. Do not assemble, throw away or damage the Party Speaker.
2. Store the Party Speaker in a dry place, keeping it away from damp corrosive materials and environments such as salt air.
3. Keep the Speaker away from direct sunlight, fire, and high voltage equipment. Do not store the Speaker inside a car during hot weather. Remember a closed car acts as a greenhouse allowing the inside temperature to possibly reach over 200F.
4. The Party Speaker is not a toy. Please keep it out of the reach of young children. Please do not discard this rechargeable device as trash. Consult your local waste collection agency for proper disposal recycling methods. You may also contact "Call2Recycle" at 877-273-2925 or online at "call2Recycle.org" for a battery recycling drop off location near you.
WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

Bluetooth™ Connect with a new device
1. Press the MODE button to bluetooth mode.
2. Activate Bluetooth of mobile phone and search for device name "BB-BT-SP" then connect it. The unit will beep three times once connected successfully.
3. Play the music from your mobile phone and enjoy.
4. Short press PREVIOUS or NEXT button on the device or on Mobile phones to select songs you like.
5. Rotate the volume knob to adjust volume down and up. Or adjust the mobile phones' volume.
6. Press PLAY/PAUSE button on the device or on Mobile phones to play or pause the music.
7. Short press EQ button on remote control to switch between SITE and BASS.
8. Please turn off the unit while without use. Songs will play automatically after starting up.
BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.
WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD
US National Button Battery Ingestion Hotline- (800) 498-8666

Back



2x12" PORTÁTIL ALTAVOZ DE FIESTA

Bluetooth
BB2739
MANUAL DE USUARIO

BC

Carga del altavoz
Inserte el conector de tres enchufes en el puerto de carga en la parte posterior del control posterior y el otro extremo del cable en los tres enchufes. El indicador LED se iluminará en rojo fijo cuando el altavoz se esté cargando y se pondrá azul cuando el altavoz esté completamente cargado.

PANEL TRASERO
1. Botón de modo: alterna entre AUX, USB, Micro-SD, FM, BT presionando brevemente;
Botón de pista anterior: selecciona la pista anterior;
Botón Reproducir / Pausa presionando brevemente; Función TWS por Long Press.
Botón de siguiente pista: seleccione la siguiente pista;
Grabar
Prioridad de micrófono
2. Ranura USB

BOTONES & FUNCIONES



1. STANDBY: hace que la unidad esté en modo de espera.
2. Botón de modo de entrada: alterna entre USB, Micro-SD, FM, AUX, BT
3. Mute: silenciar la pista
4. JUGAR / PAUSA
5. Pista anterior: selección el canal anterior.
6. Siguiente pista: selección el siguiente canal.
7. EQ: selecciona el modo EQ.
8. VOL-: reduce el volumen maestro
9. VOL +: aumenta el volumen maestro
10. REP: repite la pista de reproducción.
11. Presione para buscar canales en modo FM
12-21. Número CLAVE para seleccionar la pista determinada para la unidad flash USB o la tarjeta Micro-SD.

Puede dañar su audición si escucha con un volumen alto durante mucho tiempo. Se recomienda utilizar el volumen más bajo posible para escuchar música.

FCC Information
Este dispositivo cumple con la Parte 15 de las reglas de la FCC. El funcionamiento está sujeto a las dos condiciones siguientes: (1) este dispositivo no puede causar interferencias dañinas, y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluyendo interferencias que puedan causar un funcionamiento no deseado. Declaración de la Comisión Federal de Comunicaciones (FCC)
Este Equipo ha sido probado y se ha comprobado que cumple con los límites para un dispositivo digital de Clase B, de conformidad con la Parte 15 de las reglas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencias dañinas a las comunicaciones radioeléctricas. Sin embargo, no hay garantía de que no se produzcan interferencias en una instalación en particular. Si este equipo causa interferencias perjudiciales en la recepción de radio o televisión, puede determinarse apagando y encendiendo el equipo, se anima al usuario a tratar de corregir la interferencia mediante una o más de las siguientes medidas:
- Reorientar o reubicar la antena receptora.
- Aumentar la separación entre el equipo y el receptor.
- Conectar el equipo a una toma de corriente en un circuito diferente al que receptor conectado.
- Consulte al distribuidor o a un técnico de radio/TV con experiencia para obtener ayuda.
Advertencia: Este equipo cumple con los límites de exposición a la radiación RF de la FCC establecidos para un ambiente incontrolado. Este dispositivo y sus antenas no deben estar colocados o junto con cualquier otra antena o transmisor. Bluetooth es una marca registrada de Bluetooth SIG. Todas las demás marcas comerciales son propiedad de sus respectivas compañías.

FCC ID OGGK3MF1215

Bluetooth™ Connect with a new device
1. Presione el botón **MODE** para pasar al modo bluetooth.
2. Active el Bluetooth del teléfono móvil y busque el nombre del dispositivo "BB-BT-SP" y luego conéctelo. La unidad emitirá tres pitidos una vez que se haya conectado correctamente.
3. Reproduzca la música desde su teléfono móvil y disfrute.
4. Presione brevemente el botón ANTERIOR o SIGUIENTE en el dispositivo o en los teléfonos móviles para seleccionar las canciones que desee.
5. Gire la perilla de volumen para ajustar el volumen hacia arriba y hacia abajo. O ajuste el volumen de los teléfonos móviles.
6. Presione el botón PLAY / PAUSE en el dispositivo o en los teléfonos móviles para reproducir o pausar la música.
7. Presione brevemente el botón EQ en el control remoto para cambiar entre **SITE** y **BASS**.
8. Apague la unidad sin usarla. Las canciones se reproducirán automáticamente después de iniciarse.
PRECAUCIÓN DE LA BATERÍA: No desarme, cortocircuite ni exponga al fuego o a altas temperaturas. Conecte correctamente los dispositivos especificados. Recicle la batería de acuerdo con las regulaciones locales, estatales y nacionales.
ADVERTENCIA: NO INGIERA LA BATERÍA, PELIGRO DE QUEMADURAS QUÍMICAS
Línea directa de ingestión de baterías del botón nacional de EE.(800) 498-8666

ALTAVOCES INALÁMBRICOS
Gracias por comprar un altavoz inalámbrico Billboard. Para un mejor uso de este dispositivo, le recomendamos leer detenidamente este manual del usuario y guardarlo en sus registros.

Paquete contiene
a. Altavoz inalámbrico grande
b. Cable UL
c. Remoto
d. Manual de usuario



3. Ranura Micro-SD
4. Entrada auxiliar
5. RCA AUX L&R6. Perilla de volumen: ajuste de mínimo a máximo
7. Perilla de volumen de graves: ajuste de mínimo a máximo
8. Perilla de volumen de agudos: ajuste de mínimo a máximo
9. Eco de la perilla del micrófono: ajuste de mínimo a máximo
10. Perilla de volumen del micrófono: ajuste de mínimo a máximo
11. Perilla de volumen de guitarra: ajuste de mínimo a máximo
12. Entrada de micrófono * 1
13. Entrada de guitarra * 1
14. Interruptor de encendido
15. interruptor llavado
16. Fuente de alimentación: CA 100-240V
17. DC 12V

POR FAVOR LEA ESTAS INSTRUCCIONES CUIDADOSAMENTE ANTES DE USAR EL ALTAVOZ DE SU FIESTA. CONSERVE ESTAS INSTRUCCIONES PARA FUTURAS REFERENCIAS. Su altavoz tiene una batería interna recargable. El uso incorrecto puede resultar en el altavoz calentarse, encenderse o explotar y causar lesiones si se expone a condiciones de abuso. Asegúrese de seguir las advertencias de seguridad que se enumeran a continuación:
1. No monte, deseché ni dañe el altavoz del partido.
2. Guarde el altavoz para fiestas en un lugar seco, manteniéndolo alejado de materiales corrosivos húmedos y entornos como el aire salado.
3. Mantenga el altavoz alejado de la luz solar directa, fuego y equipos de alto voltaje. No guarde el altavoz dentro de un automóvil cuando haga calor. Recuerde que un automóvil cerrado actúa como un invernadero permitiendo que la temperatura interior alcance posiblemente más de 200F.
4. El orador del partido no es un juguete. Manténgalo fuera del alcance de los niños pequeños. No deseché este dispositivo recargable como basura. Consulte a su agencia local de recolección de desechos para conocer los métodos adecuados de eliminación o reciclaje. También puede contactar "Call2Recycle" en 877-273-2925 o en línea en "call2Recycle.org" para una ubicación de reciclaje de baterías cerca de usted.
WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

Instrucciones de devolución
Si su altavoz no funciona correctamente durante el período de garantía de un año calendario (90 días para la batería), comuníquese con nuestro departamento de servicio al cliente al (212) 883-8838 para obtener información sobre resolución de problemas. Si la asistencia para la resolución de problemas no soluciona el problema, recibirá un número de autorización de devolución e instrucciones para enviar su unidad a nuestro Centro de servicio. Su número de autorización de devolución debe estar claramente visible y colocado en el exterior de la caja cuando devuelva la unidad. Adjunte una copia de su comprobante de compra original que muestre la fecha de compra original, junto con información detallada que describa la naturaleza exacta de su problema. Asegure de incluir su nombre completo, dirección, dirección de correo electrónico, números de contacto diurnos y nocturnos. Además, envíe un cheque o giro postal pagadero a "ESI Cases & Accessories", para el monto del envío de devolución (entregado por nuestros agentes de servicio). Todo lo anterior debe incluirse con su devolución, o su paquete no será elegible para el servicio bajo nuestra garantía. El cliente es responsable de empacar el altavoz en su caja original o equivalente, y de asegurar y enviar la unidad a nuestro servicio central. Asegúrese de empacar todos los accesorios incluidos con su altavoz para que podamos identificar adecuadamente cualquier problema. Todos los gastos de envío para devolver la unidad a ESI Cases & Accessories, Son responsabilidad del cliente. Si su altavoz está en garantía, ESI Cases & Accessories, a su exclusivo criterio, intercambiará o reparará el altavoz sin cargo por piezas y mano de obra. El cliente es responsable del envío de la devolución y debe incluir un cheque o giro postal pagadero a "ESI Cases & Accessories" con su devolución por el importe del flete de devolución. Cualquier envío recibido sin un número de autorización de devolución será rechazado. Para más detalles, póngase en contacto con nuestro departamento de atención al cliente.
Enviar producto:
ESI Cases & Accessories
44 East 32nd Street New York, NY 10016
Tech Support: (212) 883-8838
TechSupport@ESICall.com