100mm

400mm

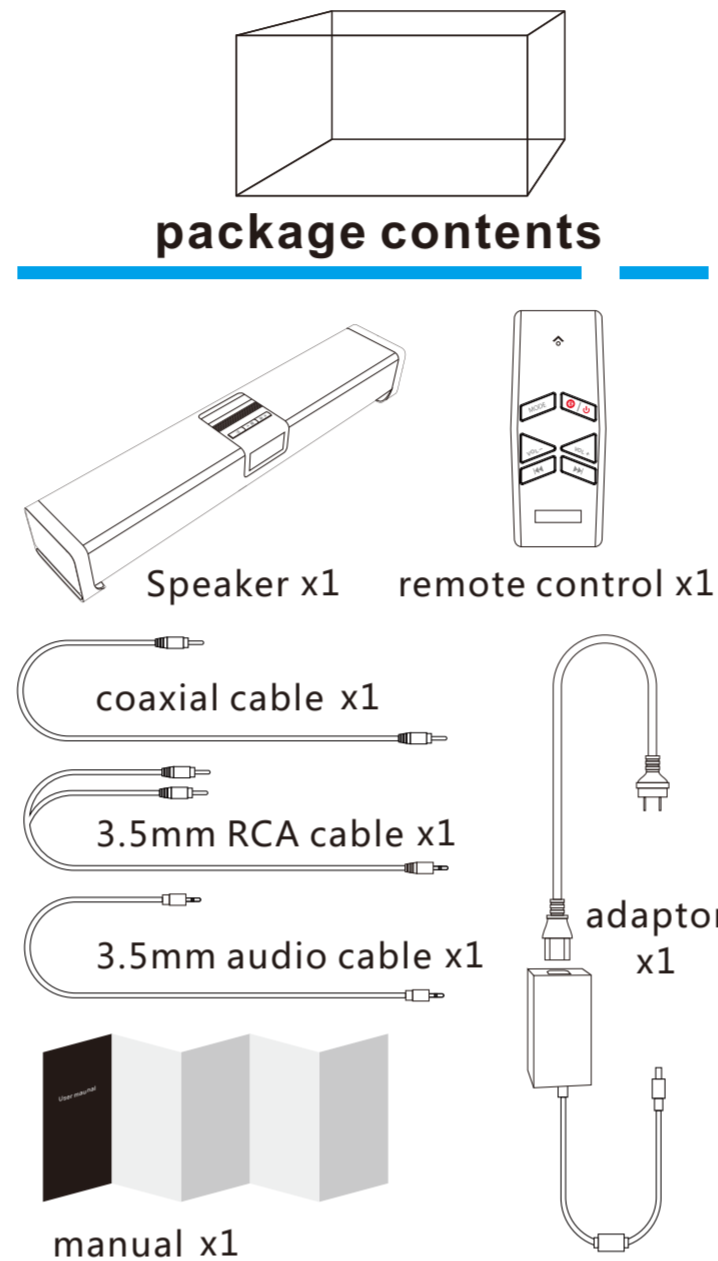**175.8mm**

Product：Power plug(US)
Model No.：G-809

Thunder
maunal

351.6mm

package contents

Speaker x1   remote control x1

coaxial cable x1

3.5mm RCA cable x1

3.5mm audio cable x1

adaptor x1

manual x1

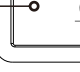## Keys

Power on/off, Pause
① **Long press:** power on/off
② **short press:** change different mode

mode sequence:
Bluetooth(screen display ▢▢▢)→Aux in(screen display ▢▢▢)→coaxial(screen display ▢▢▢)→USB(screen display ▢▢▢),if have not insert USB,then speaker will not voice this mode.
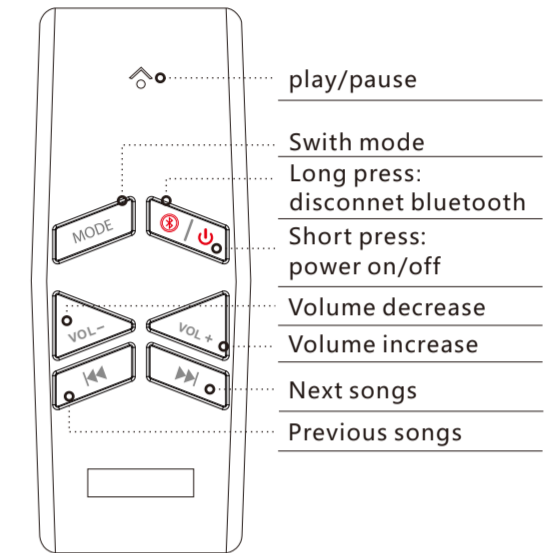
Volume decrease/previous
① **Long press:** vloume decrease
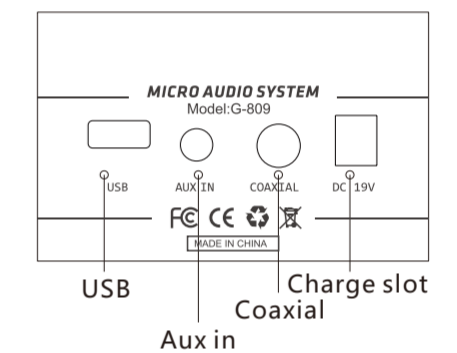② **Short:** previous songs

Next/Volume increase
① **Long press:** vloume increase
② **Short:** next songs

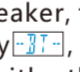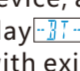remote control can come ture

Remote control keys

play/pause

Swith mode
Long press:
disconnet bluetooth
Short press:
power on/off
Volume decrease
Volume increase
Next songs
Previous songs

Slots

MICRO AUDIO SYSTEM
Model G-809

USB   AUX IN   COAXIAL   DC 19V

USB   Charge slot
         Coaxial
    Aux in

Remote controller Operate

① Power on/off & Disconnect Bluetooth
Short press: power on the speaker, then you can hear the voice guide(screen display ▢▢▢, and twinkle), means the speaker waiting connect with other device, if not twinkel, means connected success. if press again, then power off this speaker.
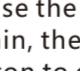**Long press:** disconnect the device, and searhing other bluetooth device(screen display ▢▢▢,and twinkle), if you want disconnect this device with exist device, just long press this button, then disconnect.

② Mode Switch
MODE
Mode sequence: **Bluetooth→Aux in→Coaxial→USB**
If have not insert USB,
then speaker will not voice this mode.

③ Play/Pause/Mute
Short press this button to pause the music(screen dispaly ▢▢▢, and twinkle),if press again, then playing music continue. Short press the button to come ture mute under Aux in mode or coaxial mode.
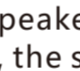
④ Volume adjust
Short press this button to adjust the volume(screen will display the volume number1-31),when max volume, the speaker will voice "du du".

⑤ Previous/Next
Short press to change the previous and next sound (under Bluetooth, USB, Micro SD mode)

Operation instruction

Bluetooth: Power on this speaker, speaker will enter into Bluetooth mode, the speaker will voice guide(screen display ▢▢▢, and twinkle)
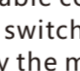① **Connect:** please turn on the Bluetooth function of you mobile/other devices. the "**Thunder**" will be found, please connect it, The mobile may remind you to input the pairing code, The speaker's default pairing code is "**0000**".
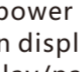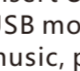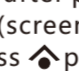②Press ▮◀◀/▶▶▮ choose the songs, press ⌂ play/pause

Aux in mode:
Use the 3.5mm audio cable included to speaker to an audio source(PC, MP3/MP4, mobile phone), Short press the **MODE**button to enter "**AUX IN**" mode(screen display ▢▢▢), The speaker will play the music from the aduio source.

Coaxial mode:
Use the coaxial cable connect with device, short press the **MODE** button to switch to Coaxial (secreen dispaly ▢▢▢), then you can play the music or watch TV.

USB mode:
Insert USB after power on, press MODE button enter into USB mode(screen display ▢▢▢), press ▮◀◀/▶▶▮ to choose the music, press ⌂ play/pause.

Technical Data

Impedance	6Ω(2pcs bass frequency speaker) 8Ω(4pcs full frequency speaker)
Output power	30W*2
Voltage	DC 19V
THD	H+R<0.8%
Buletooth Version	Support Bluetooth V4.0
N.W	4.2Kg
Size	620*110*90mm

Features

1.Bluetooth connect
Support 4.0 bluetooth version connect.
2.Aux in connect
Work as the external speaker by connecting to the audio source of computer, mobile, PSP/MP3/MP4 etc.
3.LCD digital display
Display the work mode, easy operate
4.USB flash music play
Support MP3/WMA/APE music formate, max 32G
5.Remote control
Support remote control to come ture different funciton.
6.Coaxial decode function
Support high quality Coaxial decode function.

Service