




# Tele Radio T60

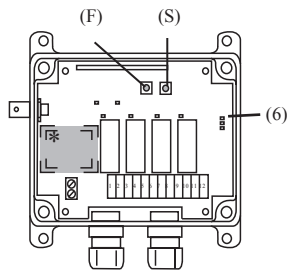


Standard: T60RX-04#SL

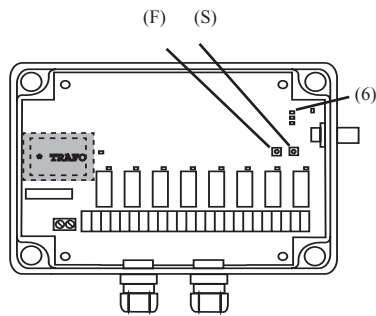

Robust: T60RX-08#SL

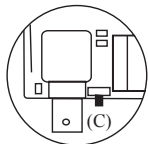

T60RX-03ADL, T60RX-01APL, T60RX-01ARL



## T60 SÄNDARE

T60TX-01SHL - T60TX-06SHL  
T60TX-01SOL - T60TX-06SOL

### PROGRAMMERA SAMMAN SÄNDARE OCH MOTTAGARE

Sändarens systemomkopplare (A) ska stå i läge "ON" om den ska användas ihop med en T60-mottagare och i läge "OFF" (1) om den ska användas ihop med en 460-mottagare. På sändarens kodomkopplare (B) ställs en valfri kod in som används för att koda ihop sändare och mottagare.

#### Inläring av kod Standard/Robust mottagare:

- Tryck in funktionsknappen (F)
  - Röd lysdiod nr 6 lysar.
- Tryck på selectknappen (S).
  - Samtliga röda lysdioder ovanför reläerna lysar.
- Använd funktionsknappen (F) för att stega fram till vilket/vilka reläer som ska kodas. Väljs ett enskilt relä kommer det att styras av den sändarknapp som används vid inläringen. Väljs samtliga reläer kommer sändarknapp 1 att aktivera relä 1, sändarknapp 2 att aktivera relä 2 osv.
- Tryck på selectknappen (S) för att bekräfta att kod ska läras in.
- Lär in sändarkod genom att trycka på önskad sändarknapp tills röd lysdiod nr 6 blinkar 3 ggr.

Röd diod nr 6 blinkar som en indikation på att kod är inlärd

#### Inläring av kod T60RX-03ADL/T60RX-01APL/T60RX-01ARL:

- Tryck in knappen för självinläring (C) på mottagaren.
  - Röd lysdiod lysar.
- Tryck på sändarknapp tills röd lysdiod på mottagaren blinkar 3 ggr.

#### Inställning av kod T60/460:

Vid komplettering till system 460 ställs identisk kod in på brytare 1-8 på sändarens kodomkopplare (B) som på den befintliga 460-mottagarens kodomkopplare

För utförligare information se manual för system T60

## T60 TRANSMITTER

T60TX-01SHL - T60TX-06SHL  
T60TX-01SOL - T60TX-06SOL

### CO-PROGRAMMING OF TRANSMITTER AND RECEIVER

The system selector switch (A) on the transmitter shall be in position "ON" for T60 mode and in position "OFF" (1) for 460 mode. On the transmitter code switch (B) an own code shall be set. The code will be used to co-program the transmitter and receiver.

#### Registration of code Standard/Robust receiver:

- Press function button (F)
  - Red diode no: 6 is emitting.
- Press select button (S).
  - Red diodes above relays are emitting.
- Use function button to step forward to relay/relays that shall be coded. If one specific relay is chosen, that relay will be activated by the transmitter push button that is used when code is registered. If all relays are chosen, push button 1 will activate relay 1, push button 2 will activate relay 2 etc.
- Press select button (S) to confirm that transmitter code shall be registered.
- To register code, press transmitter button until red diode no: 6 flashes 3 times.

Red diode no: 6 flashes as an indication that code is registered.

#### Registration of code T60RX-03ADL/T60RX-01APL/T60RX-01ARL:

- Press the self-teach button (C) on the receiver.
  - Red diode on receiver is emitting
- To register code, press transmitter push button until red diode flashes 3 times.

#### Code setting T60/460:

When using the transmitter with 460 receivers, an identical code shall be set on switch 1-8 on the transmitter code switch (B) as on the existing 460 receiver code switch

For additional information see manual T60

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment

CE 0682 !

EC Declaration of Conformity for Tele Radio  
radio remote control systems can be found at  
<http://www.tele-radio.com>