封底

GIGASTONE

FC PS G MAKE CO D MAD NOT SHOW TO SHOW THE SHOW California Residents
RATRIG Camer and Reproductive Harm
Robs
Robs

製品特徴-

1. 内蔵バッテリー5000mAh、連続使用時間7-8時間 2. 10W A C 一 ガー 3. 原曲キー調整対応 4. 様々なカラオケアプリに対応、いつでもBluetoothでカラオケ可能 5. デュエットモード対応 (24のカラオケマイク同時接続が可能) 6. 合格認証: NCC、BSMI、UL2056、CE、ROHS、FCC、PSE

1. 充電時、液晶内のLEDランプが赤く点灯します 2. Bluetooth未接続時、電源ボタンのLEDランプは点滅します 3. Bluetooth接続成功時(デュエットモード含む)、電源ボタンのLEDランプは点灯します 4. 満充電の際、液晶内のLEDランプが縁に点灯します

1. 電源オンオフ:電源ボタンを3秒長押しすることで電源がオンになります。電源ボタンのLED

ガイドライト

ライトが点滅します。 2. Bluetooth接続:スマホのBluetooth接続からKMH-9550を選び接続します。接続に成功すると 音声による案内があります。一度Bluetooth接続すると次回から自動接続可能です。 接続を解除したい場合は、スマホからBluetooth接続を解除してください。 3. 各ボタンの操作方法に関して、裏面の「各部名称」ページにで参照ください。 4. 充電時、液晶の電池マークが赤く点灯し、満充電になると緑色に点灯します。 . 八地中水、水師の単地、ノハか、ぶんじ、湖八地に水るとは下にボルとより。 木電残量が不足している場合は、浓晶の電池マークが赤く点滅し、カラオケマイクから 『電池残量が不足しています。充電してください"と音声が流れ自動的に電源オフになります。 . 録音ケーブルと充電ケーブルに関しまして 5. 録音ケーブルと充電ケーブルに関しまして USB A to USB Type Cの充電ケーブルにつきましては、内部のリチウムイオン電池の損傷を 避ける為、30W以下のPSE認証を得ているACアダプターを使用し、充電してください。 USB Type C to USB Type C 録音用のケーブルにつきましては、録音用のケーブルのケーブルで ございますので、充電に使用しないでください。

スマホの録音、音楽アプリに関して

1. 録音コードをマイクに対応したソケットに差し込みます:3.5mmイヤホンジャックにスマホのイヤホンジャック(又はType-Cポート)に接続し、スマホで表示されれば接続は成功です (スマホのメーカーによりイヤホン接続成功の表示が異なります)。 2.カラオケアプリ:例、Youtube、ボケカラ、カラオケのアが、Karaparty、JOYSOUNDなどで、 自分のお好きな曲を歌い、録音することも可能です。(アプリの機能やバージョンにより、

1. 本体のMicroSDカード差込口にMicroSDカードを挿入すると、MicroSDカード内の音楽ファイルを 自動で再生します。(Bluetooth 接続中の場合は、MicroSDカードが優先して再生されます。) 2. MicroSDカードから音楽を流れている際、音量、エコー、キーなどを調整することも可能です。 特殊効果設定

1. テュエットモートに関して 達ず、Bluetooth接続済みの機器とは接続しないようにしてください。 デュエットモードに使用するカラオケマイクを2台とも電源をオンにし、お好きな方の カラオケマイク電源ボタンを2回押してください。 デュエットモードが成功した場合は、電源ボタンのLEDが点灯します。 (デュエットモードに失敗した場合は、電源ボタンのLEDが点灯します) (テュエットモードに矢敗した場合は、電源ホタンのほむか点滅します) ※デュエットできる端末に関して、同じ9550シリーズのカラオケマイクのみになります。 2. キー調整: カラオケ中に伴奏のキーを調節できます。 3. ボイスチェンジ: 「男性声」、「女性声」、「オリジナル音声」の3種類があります、 通常はオリジナル音声です。 4. ボーカルカット: メインボーカルの音声をカットできます。

型番 KMH-9550 Bluetooth Bluetooth5.0 スピーカ出力 10W 充電入力 5.0V 1.5A

製品寸法 237.1 x 77.7x 86.2mm 製品重量 499g±10g

使用上のお願い -・極端な高温・低湿・高湿はお避けください。 周囲温度5℃~35℃、周囲湿度45%~85%の 範囲内で保管、で使用ください。

1) や振動の多い場所では使用しないでください。 れた場合は柔らかい布で乾拭きしてください。ベンジン・シンナー・アルコール・洗剤などは 使用しないでください。 ・磁気を帯びたものは近づけないでください。 ・周囲に迷惑にならないよう音量を調整してで使用ください。

故障かな?と思ったら-

現象	原因	対処方法
電源が光らない	充電残量が少ないまたは接触が悪い	充電ケーブルと接続先を確認 正しく充電してください
マイクから音が出ない	・電源が入ってない ・マイクの音量が調節されていない	電源をオンにしてボリューム 調節してください
録音できない	ご利用のスマホの機種が対応 していない	スマホの機種を変更してご 利用ください
歌っている時に ノイズが入る	・周囲のノイズを拾っている ・スマホからの信号にノイズが 含まれている	静かな場所に移動し、スマホ 十分な距離を取ってください
Bluetooth接続中に 演奏が途切れる	マイクとスマホの距離が遠すぎる間に障害物がある	・マイクとスマホを近づけ、 障害物をなくしてください・別のスマホとの接続を解除 してください
Bluetoothが接続できない	マイクとスマホの距離が遠く、 その間に障害物がある別のスマホとBluetoothが 接続されている	別のスマホとの接続を解除し再度接続したい端末と接続す
	スマホの音量が低いか、 音楽ファイルの音量が低い	・スマホやメディアツールの 音量を調整する・音質の良い音楽ファイルを ダウンロードする・ダウンロードした音楽ファー 適切なフォルダに移動する
	音量が大きすぎるまたは充電残量 が少ない	・スマホやアプリの音量を調 ・マイク本体を充電する
Bluetooth接続中に 録音できない	スマホがBluetooth接続に 対応していない	録音ケーブルを使うか、 アプリを使用する

音源ファイルの音質が悪い 音質の良い音源をダウンロードする

マイクから出る声 ボーカルカットしたまま ボーカルカットをオフにする Bluetooth接続中に 伴奏音源の音が小さい、 または音が単ない。 または音が低い。 スマホの音量を調整する、 またはスピーカー機能を調整する または音が出ない

安全上のご注意 (必ずお守りください)-

人への危害、財産の損害を防止するため、必ずお守りいただくことを説明しています。 ■ 誤った使い方をしたときに生じる危害や損害の程度を区分して、説明しています。 **△危険** 「死亡や重症を負うおそれが大きい内容」です

△警告「死亡や重症を負うおそれがある内容」です。 ▲注意 「軽症を負うことや財産の損害が発生するおそれがある内容」です。

■ お守りいただく内容を次の図記号で説明しています。 してはいけない内容です。 ● 実行しなければならない内容です。

			△危険	
1	分解、	改造しない。		

○ 発熱や異常を感じましたら、すぐさま使用をやめてください。 メーカーまで連絡してください。

水やその他の液体にいれたり、ぬらしたりしない。 ぬれた手で扱わない 毛布などをかぶせた状態で充電しない。 コンセントや配線器具の定格を超える使い方はしない。 6子さまやペットに危険が無いよう十分注意する。 ● ACアダプタのほこりなどは定期的にとる。ACアダプタは根本まで確実に差し込む。

5~35℃以外の場所では充電しない。直射日光のあたる場所や高温の場所で充電しない。 ■ 湿気やほこりの少ない場所で使用・保管する。 使用時以外はACアダプタをコンセントから抜く

保証規定 -

1. 本書の保証書にお買上げ日、販売店名が記載されているかお確かめください。記入漏れ、改ざんが ある場合、保証書および保証規定は無効となります。 保証期間内に、本書の注意書きに従った正しい使用状態で製品が故障した場合には、正常品と - 交換対応させていただきます。 3.保証期間内でも以下の場合には交換対応出来ない場合があります。

① 本書に従った正しい使用がなされなかった場合 ② 修理や改造による故障や損傷の場合

②修定半で以直による政障や損傷の場合 ③ 使用および取扱い上の過失、事故による故障や損傷の場合 ④ 落下、水没、水濡れ、湿気などの痕跡がある場合 ⑤ 地震、風水害などの天災および火災、塩害、異常電圧などによる故障や損傷の場合 ⑥ 本書の提示がない場合 © 本書の飛示かない場合 4. 本書記歌の機器が故障したことにより発生した損害・損失については責任を負いかねます。 5. 本製品を指定外の機器と接続して使用した場合、万一発生した事故については責任を

負いかねます。 6. 出張による対応はお受け出来ません。 7. 本保証は日本国内においてのみ有効です

保証書 Guarantee KMH-9550

Warranty period One year from the date of purchase 店名 Shop name Purchase shop 電話番号 Telephone number

お名前 Name ご住所 Address お客様(**2) Customer information

電話番号 Phone number

※2お客様欄のすべての項目に楷書で明確にご記入下さい。

カラオケマイク KMH-9550シリーズ

Product name

購入日

販売店

Purchase date

保証期間 お買い上げ日より1年

※1お買い上げ日欄、販売店欄はお買い上げの販売店様でご記入いただくか、ご購入が確認できる証明書(レシート、納品書など)を一緒(ご提示ください。ご購入が確認できない場合や、記入漏れ、改ざんがある場合、保証書および保証規定は無効となりま


GIGASTONE

封面

Bluetooth Karaoke Microphone Bluetoothカラオケマイク 藍牙無線麥克風

User Guide 説明書 使用手冊

保証書付

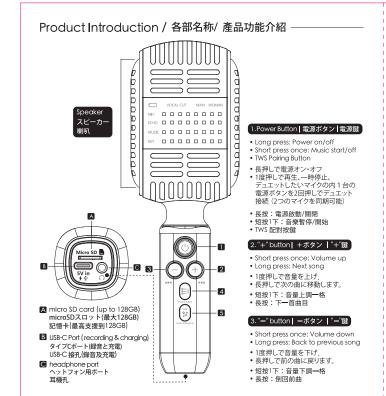

• 短按後,可依序切換「麥克風音量」、「伴奏音量」、「Key的高低」,再用十一鍵來調整。

Karaoke Microphone | カラオケマイク | 麥克風 x1 Charging Cable | USB-C充電用ケーブル | USB-C充電線 x

Audio Cable | 録音用ケーブル | 錄音線 x1 User Manual | 保証書付きユーザーマニュアル(本書) | 説明書 x1

- Independently developed 8-stage music key adjustment function (original key, raise key +1~+4, lower key -1~-3) connection and low-latency with Bluetooth 5.0 TWS function, two microphones can be connected at the same time, support duet singing

Facility to the sum of the sum of

Product Function Instruction ————

hold the power button for three seconds. When powering on, the power sound, and the power button indicator will change from flashing to solid. After the Bluetooth microphone is successfully paired with the phone, it will automatically connect in future use. To

Voice change/cut | Voice change/cutボタン | 變音及去人聲鍵

Voice Change Adjustment: Use the voice change button to change the voice between male female & original voice. The product defaults to the original sound when powered on.
Vocal Cut: The vocal cut function reduces the original vocal in the original video/audio file. Package Contents/ パッケージ内容/包裝內容物 -

(8) Vocal Cut: The vocal cut function reduces the original vocal in the original viaeu/audio lile.
(9) Mobile Phone Recarding:
Step 1: Use a "Type-C to Type-C" or "Type-C to Lightning" recording cable with data transfer capability. Connect one end of the cable to the Type-C interface of the microphone and the other end (Type-C or Lightning) to the corresponding port on your phone. When the headphone icon appears on your phone, the connection is successful.
Step 2: Open a recording app on your phone, such as "Sing! Karaoke" or any other recording app.
Chance your frourities sone and start recording. Choose your favorite song and start recording.

Step 3: After recording, press the save button. You can then replay the recording to listen to what

you recorded.

(10) Playing Music Using the Connection Cable:
Use a "Type-C to Type-C" or "Type-C to Lightning" cable with data transfer capability.

Connect one end of the cable to the Type-C interface of the microphone and the other end

(Type-C or Lightning) to the corresponding port on your phone. When the headphone icon

appears on your phone, the connection is successful. You can then choose your favorities song to rough the microphone. You can only control them through the connected phone or othe

your phone, or you can use the buttons on the microphone to execute these functions.

5) Key Adjustment: During singing, you can adjust the key of the song with the up/down button

cho Adjustment: During singing, you can adjust the echo of the voice with the up/down butto

4) TMS Pairing

Step 1: Power on both microphones that will be used for TWS pairing.

Step 2: Double-click the power button of one microphone to initiate TWS pairing. At the beginning of the pairing process, the power button light of the microphone will keep flashing.

Step 3: After the two microphones are successfully paired in TWS mode, you will hear a prompt sound, and the power button indicator will change from flashing to solid.

Step 4: After TWS pairing is successful, open the Bluetooth menu on your phone and search for the device name "KMH-9550" to complete the Bluetooth connection with the phone.

In Bluetooth connection mode: Insert a memory card into the Micro SD slot. The microphone will

Please note, When a memory card is inserted, Bluetooth search and connection are not available.

(12) Charging using the Type-C Port: When charging, please use a USB-A to USB-C charging cable and a charger that complies with safety regulations (please use a charger below 20 watts) to avoid damaging the Bluetooth microphone.

(13) When using the Bluetooth microphone.

(13) When using the Bluetooth microphone as a speaker to listen to music, you can first adjust the

Trouble Shooting — Issues

No echo effect	Echo effect is small	Please raise up the echo effect.
Failure with wired recording	Microphone didn't receive the sounds. The cable used is without OTG function. (Please be noted that the apple original Lighthing to Type C-cable is without OTG function.)	Please keep the microphone at correct site when singing. Change a cable with OTG function.
Noise when singing	The Bluetooth signal is too weak.	Keep the microphone and mobile phone near within 5 meter so that the Bluetooth signal stronger.
Music interruption under the Bluetooth connection	The microphone is too far from the mobile phone.	Move the microphone closer to the mobile phone and avoid the obstacle.
Failure of Bluetooth connection	Bluetooth distance is too far between the microphone and a mobile phone. Microphone is Bluetooth connected with other mobile phone. Micro SD card is in the microphone already.	Move the microphone closer to the mobile phone and avoid the obstacle. Disconnect the Bluetooth between microphone and other mobile phone. Take off the SD card from microphone.
Music volume is too smal l	The volume of mobile phone is low Music file has low sound volume Microphone music is low.	Raise volume of mobile phone. Dow nload music file with clear sound. Raise volume of the microphone music.
High pitched squeals occur	The microphone is too close with magnetic material, such as microphone speaker.	Since the microphone itself or the mobile phone contain magnetic substances, when setting up TWS function, please keep the two microphones standing upright and the microphone should not be too close to the speaker.
Vocal in the music is	Vocal cut function is on.	Turn off the vocal cut function.

Specification —

Product Name Bluetooth Microphone KMH-9550 V5.0 5000mAh
 Battery
 5000mAh

 Microphone Using Time
 3-4 hours

 Music Play Time
 4-5 hours

 Charging Time
 4.5 hours

 Micro SD card support
 up to 128GB

 Size
 236x76x86mm

 Weight
 499±10g

 Warranty
 1 Year

 Read user manual carefully before using KMH-9550.
 Please do not dispose the product in fire or liquid. And do not disassemble or modify KMH-9550.
 Do not knock or crash the product. Keep KMH-9550 dry and away from damp and erosive goods. ———— Warranty Information ————

warranty service.

3. During warranty period, this warranty shall not apply to the product if (a) it has explicitly modified or repaired in any way by any person other than technicians of our company, or (b) it has been damaged through misuse, malicious acts, negligence, and flow in any liquid, accident or natural calculations.

calamities.

A. All conditions refer to the English version.

5. If any damage causes to your product due to wrong usage, our company will not take any responsibilities.

_____Limited Warranty _____

to moissule, autriphiess, extreme interinal, industriolized, industriolized opening of repair, forces of nature, or other actions beyond the reasonable control of Gigastone. In case of when the warranty does not apply, a repair of replacement charge will be incurred. The customer shall be responsible for sending the defective product to the service center and get back the repaired or replaced product from the service center.

Note: Gigastone reserves the right to interpret the terms and conditions contained herein, and the right for any charges without prior notice.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the

receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept

any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

產品特色 -

1.獨立開發八階段音樂Key調整功能 (原音、升Key四階、降Key三階) 2.藍牙5.0連接穩定低延遲 2.監牙5.0連接穩定低延遲 3.TWS功能,兩台麥克風可同時連接進行二重唱 4.變音功能,您可以變音成男人或是女人

5.人聲消除功能, 您可以消除原唱的聲音 6.搭載一個耳機插孔、以及一個Type-C接孔用於充電及錄音7.支持micro SD記憶卡(最高支援到128GB) 8.回音、麥克風音量以及音樂音量有八段可進行調整

充電時,LED屏幕上的電池符號亮紅色,充滿電後改亮綠色 2.未連接藍牙時,手柄上電源鍵LED燈為閃爍狀態,藍牙連接成功以及TWS配對成功,LED燈會變為

連接3.5mm的耳機,麥克風的音樂可即時回傳到耳機。

各功能操作方法介紹 ——

(一)開關機:長按電源鍵三秒。開機時,電源鍵指示燈閃爍。 二)連接藍牙:開啟手機藍牙選單並搜尋KMH-9550進行藍牙配對,連接成功後會聽到提示音,此時 三)開始唱歌:唱歌過程中可以從手機控制開始/暫停、上下首,也可以使用麥克風上的按鍵做調整。

步驟一:將要進行TWS配對的兩支麥克風開機。 步驟二:點擊其中一支麥克風的電源鍵兩下以進行TWS配對。剛開始配對時,麥克風電源鍵的燈

光會持續閃爍。 步驟三:兩支麥克風TWS配對成功後,配對成功後會聽到提示音,同時電源鍵的燈光會變為恆亮 步驟四:TWS配對成功後,打開手機的藍牙選單,並尋找裝置名稱KMH-9550來完成與手機的藍牙

(五)KEY調整:唱歌過程中可以調整伴奏歌曲的Key 六川自首調整:唱歌通程中可以調整唱歌者的四首独弱。 七)變音調整:透過變音鍵可以將聲音變成男生聲音或是女生聲音。產品開機是默認原聲。 八)去除人聲:透過去人聲功能可以降低伴奏裡唱歌的人的聲音。

「人」手機袋歌 歩駅一:使用帶有OTG功能的手機錄音線 Type C to Type C, 一端Type C連接至麥克風的Type C 接口,連接線另一端Type C則接入手機Type C接口內,如手機端不是Type C,則需要使用

具有OTG功能的Type C轉換器.如蘋果手機.需有lightning轉Type C的OTG轉換器.手機音樂可通 過麥克風播放即表示連接成功。

步驟二:開啟手機APP應用程式,例如:全民K歌或其他的錄音APP、選擇自己喜歡的歌曲,按上述唱歌方式, 步驟三:錄製完請按保存。重新播放錄音,即可聆聽您所錄下的歌曲。

步驟二:開啟手機APP應用程式。例如:全民K歌或其他的錄音APP、選擇自己喜歡的歌曲,按上述唱歌方式, 步驟三:錄製完請按保存。重新播放錄音,即可聆聽您所錄下的歌曲。

)使用連接線播放音樂: 使用帶有OTG功能的手機錄音線 Type C to Type C,一端Type C連接至麥克風的Type C接口,連接線另一 端Type C則接入手機Type C接口內,如手機端不是Type C,則需要使用具有OTG功能的Type C轉換器,如

爾門的公司政人子或自己公司在城市上上的公司, 蘇與手機。蔣伯貝htinin轉,以中区合於「CO轉換器,美術等可通過麥克風播放射表产達接成功) 可選擇自己喜歡的歌曲進行播放。使用過程中,無法透過麥克風控制音量、上下曲及播放暫停功能僅能透過 連接的手機或其它設備來控制 。 上京はリナが成功をLaximの上市的。 一使用記憶・拮抗合等: 藍牙連接狀態下:將記憶卡插入Micro SD插槽 麥克風會優先直接讀取記憶卡內MP3音樂自動播放.並可 透過麥克風按鍵切換播放暫停,上下首歌曲。退出記憶卡後,麥克風直接恢復藍牙連接模式。

20回安元周以陳明以東明以自时、上「自動の画。公山のは下区を大元周は変似の主のと弦域以入 非監牙連接状態下:解記憶手插入Micro SD插槽 麥克風會優先直接鎖取卡內MPO音樂自動播放並可透過 麥克風按鍵切換播放暫停、上下首歌曲。在記憶卡插入Micro SD插槽時、無法進行藍牙搜索連接。 十二)使用Type C接孔充電:充電時請使用USB-A to USB-C充電線.並搭配具有安規認證的充電器(請使用20瓦 (十三)做為喇叭聽音樂時,可先將麥克風音量調到最小,再依需求調大音量。

情考3. "一" 保省核項限用物質為排除項目。 Note 3: The " indicates that the estatistical substance corresponds to the exception.

故障排除					
問題	原因	解決方案			
麥克風沒有聲音	麥克風沒有調節音量	請檢查麥克風的音量是否調大			
無回音效果	回音效果沒有調大	請調大回音效果			
有線錄音失敗	1.沒有收錄到聲音	1.唱歌請對準麥克風的收音位置再進行			

1.沒有收錄到聲音 2.線本身無OTG功能(原裝的Lightning 5。 2.請使用帶OTG功能的錄音線 唱歌時有雜音 藍牙信號過弱 請保持手機與麥克風的距離在直線5米內 麥克風距離藍牙連接的裝置太遠 將麥克風靠近手機並避開障礙物 藍牙連接失敗 麥克風與手機距離太遠
 麥克風與其它手機連線了 請將麥克風移至手機附近,避開障礙 断開麥克風與其它手機的藍牙連接 請拔出SD卡 調高手機或音樂播放軟體音量 1. 手機音量太小 音樂檔案音量小
 麥克風的伴奏音量小 下載音質清晰的音樂檔案 調大麥克風的伴奏音量 麥克風出現高音頻雜音 麥克風附近有金屬物品(例如麥克風・ 由於麥克風本身或是手機也都含有磁性物質,因此要連接TWS時,請保持2支麥克風豎

產品規格 -

伴奏歌曲的人聲較弱 消除人聲功能被打開

保 固 1年

取得審驗證明之低功率射頻器材,非經核准,公司 使用不得影響飛航安全及干擾合法通信:經發班 有干擾現象時,應立即停用,並改善至無干擾時 得繼續使用。前述合法通信,指依電信管理法規定 作業之無線電通信。低功率射頻器材須忍受合法

關閉消除人聲功能

品 名 藍牙無線麥克風 低功率射頻器材 藍牙版本 V5.0 電池容量 5000mAh 使用時間 使用麥克風時約3~4小時 僅播放音樂時約6~7小時 micro SD 記憶卡支援最大128GB 尺 寸 236x76x86mm 重 量 499±10g

— 警語 -