


Appearance and Features

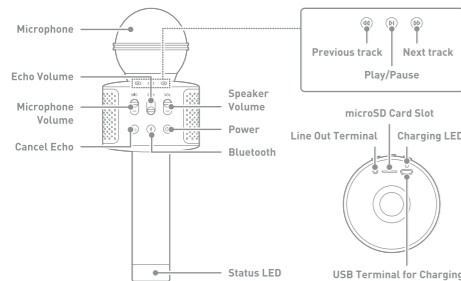

Microphone	Sound input.
Echo Volume	Adjust the echo volume.
Microphone Volume	Adjust the microphone volume.
Cancel Echo	Long press to cancel Echo mode.
Speaker Volume	Adjust the speaker volume.
Power	Turn power ON/OFF.
Bluetooth	Select Bluetooth or microSD Card mode.
Status LED	Display device status. LED colors change according to song being played.
Line Out Terminal	Output a sound via 3 pole earphones and external devices.
microSD Card Slot	Insert a microSD card in the product to run its saved files.
Charging LED	The Red LED indicates the product is charging, and it turns off when fully charged.
USB Terminal for Charging	Connect the provided charging cable to the product to charge.
Previous track	Play the previous song or restart the current song.
Play/Pause	Play or pause the current song.
Next track	Play the next song.

Components


Device / Micro USB Charging Cable / User Manual & Product Warranty

- Components may be changed without prior notice to improve the performance or quality of the product.

Connecting the Power Supply

- Connect a 5V 2A adapter to the power terminal under the product with the supplied Micro USB charging cable.
- Supply power or charge product by plugging the adapter into a power outlet.
* The red LED indicates the product is charging, and it turns off when fully charged.

- Use only the included charging cable and a commercially available standard 5V / 2A adapter to avoid electrical fire.
The adapter is sold separately.
If you use a fast charger that supports various voltages such as 9V and 12V, charging may not proceed normally and the product may malfunction

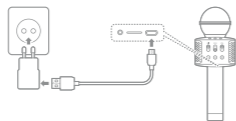

How To Use Product

- Long-press [Power] to turn ON power and connect Bluetooth Pairing mode.
- Activate smartphone's Bluetooth and select [everysing MIC] in the list of connectable devices.
- Download and install everysing from the smartphone app store and let the fun begin.
- Adjust the sound level with Microphone/Echo/Speaker Volume.
- Press [⏮] to play/pause a song.


- Once paired, the device will automatically connect to the previously connected smartphone when turned ON.

Record Audio/Video While Singing

- Use Line Out cable to connect product's [Line Out] terminal to a device for recording.
- Record Audio/Video performance with everysing app's Record Audio/Video features.

Use as MP3 Player

- Refer to the diagram and carefully insert a microSD card with music files into product's [microSD Card Slot].
- Saved music files will automatically play when the microSD card is inserted.
- Use product's [⏮] / [⏪] / [⏩] / [⏭] button for best experience.



How To Use everysing Karaoke Mobile Application

List of Supported Devices

Android devices (with OS 5.0 or above), iPhones, iPads (with OS 9.0 or above)

Supported Languages

Korean, Japanese, English

Developers

S.M. Entertainment Group, everysing Co., Ltd.

Key Features

- Latest songs updated each day
- High quality Karaoke tracks are near-original quality
- Sectional Re-singing feature allows re-singing part of same song (available September 2018)
- Record Audio/Video and Live Sticker features with facial detection.
- Share Contents feature
- Connect with Google Chromecast
- Sing with Star content - Duet with Artist feature
- Regularly held events
- S.M. Online Audition

How To Register Free Coupons

- Download the everysing mobile application.
- Create account.
- Register the coupon number.

- Android model
 - Log in to the mobile application
 - My > VIP Benefits Information > Coupon Registration
 - Register 16 digit coupon number
- iPhone, iPad
 - * According to the App Store policy, coupon registration is not available within the app for iOS models.
 - Log in to www.everysing.com
 - Profile image at the top right of Home > My Ticket
 - Register 16 digit coupon number

FAQ (Frequently Asked Questions)

The device won't turn on.

Battery may be low. Charge the device for at least one hour and try again.

The battery won't charge normally.

Check if you're using an authentic 5V 2A adapter. Using a non-standard adapter may cause the product to malfunction or not charge.
Smartphone charging adapter may be used if it is a 5V 2A adapter with KC certification.
Check if the charger is operating normally. Use the charger on your smartphone for 30 minutes or longer to verify normal charging.

Status LED blinks RED.

Battery is low when Status LED blinks RED. Please charge the device.

Cannot hear any sound.

Check if product is On or Off.
Check microphone volume.

Cannot hear any echo effect.

Check echo volume.

I connected the earphone to the LINE OUT jack, but I can not hear it.

Please check if the earphone you connected is a three-pole earphone.
If you connect a four-pole earphone, There is no sound output.

Cannot connect to Bluetooth.

Reduce distance between product to smartphone.

How can I control the volume of the device notification?

Adjust the microphone volume when the device notification are outputted.
[Be aware that the device notification volume may initially be high.]

I want to check the device notification.

Power ON: Bluetooth mode

Power OFF: Power OFF

When microSD card is inserted: Music

When Bluetooth mode is selected: Bluetooth mode

Specifications

Type	Details	Descriptions	
Bluetooth	Bluetooth Spec.	Bluetooth 4.1	
	Profiles	A2DP, AVRCP, HFP	
	Codec	SBC	
	Distance	10 Meter_ Class 2	
Product Form	Product Form	Karaoke Mic.	
	Audio Format	MP3, WAV	
	microSD Card	up to 128GB	
	Buttons	Power Key	
		Play / Next / Prev. key	
		Mic vol. Slide key	
Main vol. Slide key			
I/O Port	Echo control Slide key		
	Bluetooth pairing Key		
	Echo cancel key		
	micro USB		
SPK Unit	3.5 pi Jack		
	microSD card socket		
	Max. 5W * 2		
Mic Unit	F/R 90Hz-20KHz		
	Type-C		
Battery	Li-ion 2500mAh 18&50		
Charging	5V/2A adapter is recommended.		
LED Indicate	3.5 Hr		
Life Time	R/G/B		
	MP3 play time: Max. 9 Hr [Mid-range volume]		
	Microphone/Karaoke Track: Max. 5 Hr [Mid-range volume and Bluetooth mode]		
	* Time of use varies according to volume and use of LED lighting.		

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

everysing Karaoke Microphone

QUICK START GUIDE

외관 및 기능

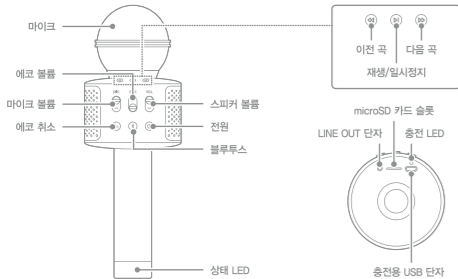

마이크	소리를 입력합니다.
예코 볼륨	예코 볼륨의 크기를 조절합니다.
마이크 볼륨	마이크 볼륨의 크기를 조절합니다.
예코 취소	버튼을 누르고 있는 동안 예코 모드가 취소됩니다.
스피커 볼륨	스피커 볼륨의 크기를 조절합니다.
전원	전원을 켜거나 끕니다.
블루투스	블루투스 모드 / microSD 카드 모드를 선택합니다.
상태 LED	제품의 상태를 표시합니다. 음악 재생 중에는 음악에 따라 LED 색상이 변화합니다.
LINE OUT 단자	3극 이어폰 및 외부 기기를 통해 소리를 출력합니다.
microSD 카드 슬롯	microSD 카드를 제품에 장착하여 microSD 카드의 파일을 재생할 수 있습니다.
충전 LED	충전 중에는 빨간색 LED가 점등되고, 충전이 완료되면 LED가 꺼집니다.
충전용 USB 단자	제공된 케이블을 연결하여 제품을 충전합니다.
이전 곡	이전 곡 또는 곡의 처음으로 이동합니다.
재생/일시정지	재생/일시정지합니다.
다음 곡	다음 곡을 재생합니다.


구성품

본체 / micro USB 충전 케이블 / 간단 사용 설명서 & 품질보증서

- 1. 제품의 성능이나 품질 향상을 위해 구성품이 예고 없이 변경될 수 있습니다.

전원 연결하기

1. 제공되는 micro USB 충전 케이블을 이용하여 제품 아래의 전원 단자와 5V 2A 어댑터를 연결합니다.
2. 제품과 연결된 어댑터를 콘센트에 꽂아 전원을 공급하거나 충전할 수 있습니다.
※ 제품 충전 중에는 충전 LED가 빨간색으로 점등되고, 충전이 완료되면 LED가 꺼집니다.
3. 회재의 위험이 있으나 반드시 제공된 충전 케이블과 표준 5V 2A 어댑터를 사용하시기 바랍니다. 어댑터는 별매품입니다.
9V/12V등의 다양한 전압이 함께 지원되는 고속 충전기를 사용하는 경우 정상적으로 충전이 진행되지 않으며, 제품이 고장날 수 있습니다.



제품 사용하기

1. 제품의 [전원] 버튼을 길게 누르면 전원이 켜지고 블루투스 페어링 모드로 연결됩니다.
2. 스마트폰의 블루투스 기능을 활성화한 후, 연결 가능한 기기 목록에서 [eversysing MC]를 선택합니다.
3. 스마트폰의 스피커에서 에브리싱 앱은 다운로드해 설치한 후, 제품을 사용합니다.
4. 마이크/예코/스피커 볼륨을 사용하여 원하는 소리로 조절합니다.
5. 노래 재생 중 제품의 [⏪]를 누르면 재생/일시정지합니다.


- 1. 제품의 전원을 켜면 이전에 연결되었던 스마트폰과 자동으로 연결됩니다.

노래하며 녹음/녹화하기

1. LINE OUT 케이블을 이용하여 제품의 [LINE OUT] 단자와 녹음할 기기를 연결합니다.
2. 에브리싱 앱의 녹음/녹화 기능을 활용하여 녹음/녹화할 수 있습니다.

MP3로 사용하기

1. 제품의 [microSD 카드 슬롯]에 음악 파일이 저장되어 있는 microSD 카드를 그림과 같은 방향으로 향하게 한 뒤, 가볍게 눌러 넣습니다.
2. microSD 카드를 넣으면 자동으로 microSD 카드의 음악이 재생됩니다.
3. 제품의 [⏪] / [⏩] / [⏸] 버튼을 이용하여 음악을 감상합니다.



eversysing 노래방 모바일 애플리케이션 사용 안내

지원 기기	Android 기종 (OS 5.0 이상), iPhone, iPad (OS 9.0이상)
지원 언어	한국어, 일본어, 영어
개발사	S.M.Entertainment Group (주)eversysing
주요 기능	1. 매일 업데이트 되는 최신곡 2. 원음 수준의 하이퀄리티 반주음 3. 가창 후 원하는 구간만 재가창하는 구간 다시 부르기 기능 (18년 9월 예정) 4. 녹음/녹화 및 얼굴을 인식하는 라이브 스티카 기능 5. 다양한 컨텐츠 공유 기능 6. Google Chromecast 연동 7. Sing with Star 콘텐츠 제공 - 아티스트와의 듀엣 기능 8. 다양한 이벤트 상시 진행 9. S.M.Online Audition 진행

무료 쿠폰 등록 방법	1단계. eversysing 모바일 애플리케이션 다운로드 2단계. 회원가입 3단계. 쿠폰번호 등록 <ul style="list-style-type: none"> ● Android 기종 <ol style="list-style-type: none"> 1. 모바일 애플리케이션 로그인 2. My > VIP 혜택 안내 버튼 > 쿠폰등록 3. 16자리 쿠폰번호 등록 ● iPhone, iPad <ol style="list-style-type: none"> * 앱스토어 정책에 따라, iOS 기종의 경우 앱 내에서 쿠폰 등록이 불가능합니다. 1. www.eversysing.com 로그인 2. Home의 우측 상단 프로필 이미지 > 내 이용권 3. 16자리 쿠폰번호 등록
-------------	---

자주 묻는 질문 (FAQ)

전원이 들어오지 않아요	배터리가 방전되었을 수 있으므로 1시간 이상 충전한 다음 확인하세요.
배터리 충전이 잘 안돼요	사용하는 어댑터가 정식 인증된 5V 2A 규격인지 확인하세요. 해당 규격이 아닌 어댑터를 사용할 경우, 충전이 되지 않아 전원이 켜지지 않을 수 있습니다. 스마트폰의 충전 어댑터를 통해서도 충전이 가능하나, KC 인증을 받은 5V 2A 어댑터인지 확인하여야 합니다. 충전기에 이상이 있는지 확인하세요. 해당 충전기로 스마트폰을 30분 이상 충전한 뒤 충전이 잘 되는지 확인해 보세요.
상태 LED가 빨간색으로 점멸해요	배터리가 부족할 경우 상태 LED가 빨간색으로 점멸합니다. 충전을 해주세요.
소리가 안 나와요	제품의 전원이 켜져있는지 확인해 주세요. 마이크 볼륨이 꺼진 상태가 아닌지 확인해 주세요.
예코 소리가 안 나와요	예코 볼륨이 꺼진 상태가 아닌지 확인해 주세요.
LINE OUT 단자에 이어폰을 연결했는데 소리가 안 나와요	연결한 이어폰이 3극 이어폰인지 확인해 주세요. 4극 이어폰을 연결할 경우 소리가 출력되지 않습니다.
블루투스 연결이 안 돼요	제품과 스마트폰의 거리가 너무 멀지는 않은지 확인해 주세요.
안내 멘트 소리 크기를 조절하고 싶어요	안내 멘트가 나올 때 마이크 볼륨을 조절합니다. (구입 시 안내 멘트 소리가 다소 클 수 있으니 주의하시기 바랍니다.)
안내 멘트를 확인하고 싶어요	전원 ON : Bluetooth Mode 전원 OFF : Power OFF microSD 카드 삽입 시 : Music 블루투스 모드 선택 시 : Bluetooth Mode

제품 사양

Type	Details	Descriptions
Bluetooth	Bluetooth Spec.	Bluetooth 4.1
	Profiles	A2DP, AVRCP, HFP
	Codec	SBC
	Distance	10 Meter _ Class 2
	Product Form	Product Form
Product Form	Audio Format	MP3, WAV
	microSD Card	up to 128GB
Buttons	Power Key	
	Play / Next / Prev. key	
	Mic vol. Slide key	
	Main vol. Slide key	
	Echo control Slide key	
Bluetooth pairing Key	Bluetooth pairing Key	
	Echo cancel key	
	micro USB	
	3.5 pi Jack	
	microSD card socket	
SPK Unit	최대 5W * 2	
	F/R 90Hz~20KHz	
Mic Unit	C type	
	Charging	5V/2A 어댑터 사용 권장
Battery	Li-Ion 2500mAh 19650	
	LED Indicate	R/G/B
Life Time	MP3 재생시간 : 최대 9시간 (Mid-range volume)	
	마이크/반주 : 최대 5시간 (Mid-range volume and Bluetooth mode)	
		* 사용시간은 음량 크기와 LED 라이팅에 따라 변동될 수 있습니다.

A/S 신청하기

제품 문의 및 고객센터

- 1577-5557
- 제품, 모델명, 고장상태 등을 확인하여 정확히 알려주시면 친절하고 빠른 상담 서비스를 받으실 수 있습니다.
- 서비스 센터를 방문하시는 경우 A/S 전문 기사의 정확하고 빠른 서비스를 받으실 수 있습니다.
- 아이리버본의 전화번호 및 위치는 홈페이지(www.river.co.kr) 고객센터 → 아이리버본 → 지원안내를 참고하세요.

택배를 이용하는 경우

- www.river.co.kr에서 고객지원 페이지를 참조하시기 바랍니다.
- 충격으로 인한 파손의 위험이 있으니 충격을 받지 않게 포장해서 발송해 주시기 바랍니다.
- 성함, 연락처, 고장 증상을 메모하여 함께 발송해 주시기 바랍니다.
- 품질보증기간 내의 무상수리인 경우 택배 요금은 당사 부담입니다. (자정 택배사 이용 시)
- A/S 관련 규정 및 세부사항은 www.river.co.kr을 참고하시기 바랍니다.

제품보증서

품질보증서

1. 본 제품은 엄밀한 품질관리 및 검사 과정을 거쳐 만들어진 제품입니다.
2. 소비자의 정상적인 사용 상태에서 보증기간 이내에 발생한 고장에 대해서는 무상으로 수리에 드립니다. 보증기간 이내라도 보증서의 유상 서비스 안내에 해당하는 경우는 서비스 요금이 부과됩니다.
3. 보증서는 대한민국 내에서만 유효합니다.
4. 수리를 의뢰하실 때에는 반드시 이 보증서를 제시하시기 바랍니다.
5. 보증 기간은 아래와 같습니다.

보증 내용 (조건)

- 무상 서비스 안내
구입일로부터 보증기간 내에 정상적인 사용 상태에서 이상이 발생한 경우에는 무상으로 수리하여 드립니다. 유상 서비스 안내
보증기간이 경과한 경우 / 보증기간 이내라도 하기의 경우는 유상수리에 해당합니다.
 - 천재지변(화재, 낙뢰, 홍수해 등에 의한 고장
 - 사용 전원의 이상 및 접속 기기의 불량으로 발생한 고장
 - 사용자 부주의에 의한 고장 (낙하, 침수, 충격, 파손, 무리한 동작일 경우
 - 제품의 임의변경 및 공식 서비스 센터가 아닌 곳에서 수리를 받은 경우
 - 보증서의 분실, 구입점의 날인이 없는 경우 또는 기재 내용을 변경한 경우

본체	액세서리	
1년	2개월	micro USB 충전 케이블 / 보증제외 / 간단 사용 설명서 & 품질보증서

제품 보증기간은 구입일로부터 입니다. 자세한 사항은 홈페이지를 참고하시기 바랍니다. 액세서리는 수리가 되지 않습니다. / 액세서리는 보증 기간내 이상시 교체 서비스되며, 제품 교환 사유에 포함되지 않습니다.

모델명	S/N				
고객만	성 명	전화번호			
	주 소				
판매점	성 명	전화번호			
	주 소				
판매일	년	월	일	판매자	(인)