



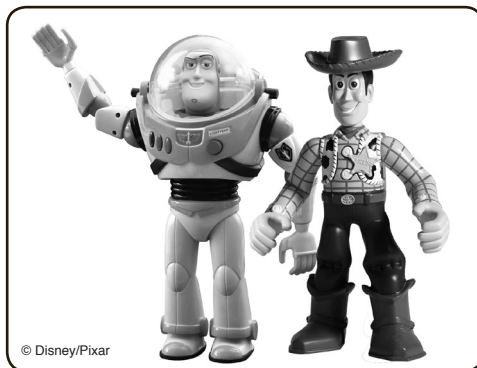

140400_V0_SORIANA

INSTRUCTIONS FOR USE MANUAL DE INSTRUCCIONES

WALKIE TALKIE

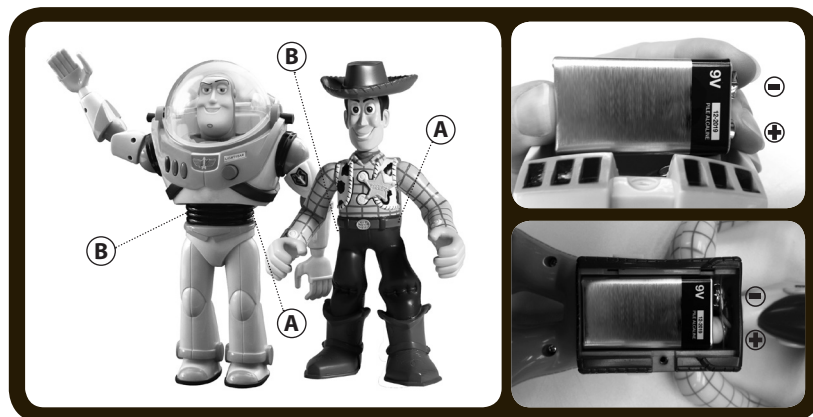

Made in China



0359

2x 6LR61



IMC TOYS, S.A. • Pare Llauredor, 172 • 08224 Terrassa (Barcelona) SPAIN
Tel. 0034 937 888 992 • Fax 0034 937 332 833 • www.imc.es

After Sales Service • Servicio Posventa
e-mail: sat@imc.es

ITEM 140400TSS • EAN: 8421134140400 • 150514

EN - ENGLISH

WALKIE TALKIE

USE AND OPERATING INSTRUCTIONS

IMC TOYS products undergo strict production controls to guarantee the enjoyment and safety of your children. They are easy to use and operate. We are certain that they will provide your children with great entertainment. Thank you for purchasing one of our products.

To consult our extensive product catalogue, please visit our web page at www.imc.es.

PLACEMENT AND/OR REPLACEMENT OF THE BATTERIES:

Open the battery compartment cover using a Philips screwdriver. Then insert a 6LR61/9V alkaline battery, in each unit. Respect the polarity of each one, as indicated in the diagram. Changing or handling the batteries must always be carried out under the supervision of an adult.

To start

Switch the ON/OFF (A) selector to the ON position. Press the transmission button "PUSH TO TALK" (B) and speak into the integrated speaker-microphone, placing it at a distance of approximately 8 cm from the mouth.

The best coverage and the greatest range is achieved in open spaces, without obstacles that may get in the way, such as buildings, trees, etc. Some locations may have very poor coverage such as places that are near power lines, inside homes.

RECOMMENDATIONS FOR USE:

If the communication range is short, the best reception is achieved in open spaces without obstacles. In built-up areas and enclosed spaces with thick walls and radio-electric emissions the communication distance can be seriously impaired. Reception can be poor in some places close to electric pylons. Avoid these when possible.

Construction and emergency teams use radio sets. Avoid activating your Walkie Talkie in nearby areas where possible interferences can arise.

Do not touch the antenna or allow your fingers to go near it while playing, as this will considerably weaken the receiving and transmitting signal.

TROUBLESHOOTING:

If the transmission distance shortens or the sound volume decreases, this could be due to spent batteries, which should be replaced.

CARE AND SAFETY

To clean the unit, use a slightly moist cloth. Do not use detergents or solvents. In case the device gets wet, turn it off and remove the batteries immediately.

Dry the battery compartment with a dry cloth. Leave the battery compartment uncovered all night so that it may dry completely. Do not attempt to use the device until it is completely dry.

SAFETY

WARNINGS!

- Warning. Not suitable for children under 3 years of age. It contains small parts which might be ingested by them. Choking hazard.
- Please keep the packaging for future reference as it contains very important information.
- Please note that due to technical improvements this product may differ from the one that appears in the illustration.
- This product requires one 6LR61/9V ALKALINE battery per unit (not included).
- The batteries or accumulators must be inserted according to the polarity indicated in the illustration.
- Used batteries or accumulators must be removed from the toy; failure to do so could cause damage.
- Do not mix old batteries with new ones.
- Do not mix different types of batteries.
- This product achieves better performance using alkaline batteries.
- Non-rechargeable batteries must not be recharged.
- The battery terminals must not be bridged or shorted.
- Changing or handling the batteries must always be carried out under the supervision of an adult.
- Remove the batteries from the compartment if the unit is not going to be used for a long period of time.
- Please respect the environment and deposit used batteries in the containers provided.

Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision.

Use only those batteries recommended by the manufacturer or equivalents. Read the instructions before use, follow them and keep them for reference.

Under the environment with radio frequency interference, the sample may malfunction and will be resumed to normal after removal of the interference. Under the environment with electrostatic discharge, the sample may malfunction and require user to reset the sample. Under the environment with Fast Transient, the sample may malfunction and require user to reset the sample. Remove all elements designed to fasten and protect the product during transport before giving it to children (plastic pieces, labels, wires, etc.).

RECOMMENDATIONS FOR RESPONSIBLE USE AND FOR PROTECTING THE ENVIRONMENT

Put all the transport packaging, cardboard, plastic, etc. in the recycling containers in your neighbourhood.

Use rechargeable batteries whenever possible. Remember to turn off the toy if you have finished playing with it and take out the batteries if you are not going to be using it again for a long time.

If you no longer want the toy and it still works, do not throw it away. Remember that other people can still enjoy it, and

find bodies or associations that can give it to them.

At the end of the life span of this product, it must not be disposed of as normal household rubbish. It should be delivered to a collection point for recycling electrical and electronic devices. Consult the symbol on the product, in the user manual or on the packaging for more information.

The materials are recyclable in accordance with their markings. If you recycle materials or find ways to reuse old devices, you make a considerable contribution to protecting the environment.

Please consult the nearest recycling centre or local authorities.

DECLARATION OF CONFORMITY

in accordance with the Directive 1999/5/EC

(to available to the Authority of supervision and control)

This declaration of conformity is issued under the exclusive responsibility of the manufacturer:

ITEM: 140400 WALKIETALKIE
(Class (EUT) 3 Type (EUT) II) / (Category (EUT) I)

Meets:

A) The technical documentation in reference to the product.

B) Essential requirements and other relevant provisions of Directive 1999/5/EC, when the product is used for its designated purpose.

C) With the set of test reports and essential specifications techniques of radio frequencies and the category of radio equipment identified by the notified body chosen.

The notified body chosen by the manufacturer:

INTERTEK TESTING & CERTIFICATIONS LTD
Cleeve Road, Leatherhead, Surrey KT22 7SB

Notified Body number: 0359

Requirements for safety and security following health and safety requirements of this Directive and by the type of product: EN71 Part 1: 2011/EN71 Part 2: 2011/EN71 Part 3: 2013 _ RoHS Directive (2011/65/EU). EN 62115: 2005 / A11: 2012 _ Cadmium content (Formerly Directive 91/338/EEC). EC/1907/2006 REACH. Phthalates content (Formerly Directive 2005/84/EC). EC/1907/2006 REACH. ETSI EN300 220-1 V2.4.1 (2012-05) _ ETSI EN300 220-2 V2.4.1 (2012-05) _ ETSI EN301 489-1 V1.9.2 (2011-09) _ ETSI EN301 489-3 V1.4.1 (2002-08) _ EN55022:2006+A1:2007 _ EN61000-4-2:2009 _ EN61000-4-3:2006+A1:2008+A2:2010 _ EN62479:2010

*To get more accurate information about product conformity, thanks to contact our customer services by email using the following address: qualitysp@imc.es

Name and address of the manufacturer:

IMC TOYS, S.A. _ Pare Llauredor, 172
08224 Terrassa, Barcelona, Spain

Signed for and on behalf of:

Josep Matarrin Carro:

Quality Manager IMC TOYS

Date and signature: 01/04/2014



If you have a claim, please contact the authorised distributor.

INSTRUCCIONES DE USO Y FUNCIONAMIENTO

Los juguetes de IMC TOYS siguen estrictos controles en su producción para garantizar el disfrute y la seguridad de los niños. Son de fácil uso y funcionamiento. Estamos seguros que les proporcionarán grandes momentos de entretenimiento. Le agradecemos la adquisición y la confianza depositada en uno de nuestros productos. Para ver nuestro extenso catálogo de productos, le invitamos a que visite nuestra página web en www.imc.es.

COLOCACIÓN Y/O SUSTITUCIÓN DE LAS PILAS:

Abra la tapa del compartimiento de las pilas con la ayuda de un destornillador de estrella. A continuación inserte una pila de 6LR61/9V alcalina, en cada unidad, respetando la polaridad y siguiendo las indicaciones del gráfico. La sustitución de las pilas deberá ser supervisada por un adulto.

Puesta en marcha

Ponga el interruptor ON-OFF (A) en ON. Hable a través del micrófono altavoz integrado, apretando el botón de transmisión. Suéltelo para escuchar. Apriete el botón de transmisión "PUSH TO TALK" (B) y hable a través del altavoz-micrófono integrado, manteniéndolo a unos 8 cms. de la boca. El mejor alcance se logra en espacio abierto, y sin obstáculos, como edificios, árboles, etc. Ciertos lugares pueden tener muy mala propagación como la proximidad a postes de tendido eléctrico, en el interior de viviendas.

RECOMENDACIONES DE USO:

Si la distancia de comunicación es reducida, el mejor alcance se logra en espacio abierto, y sin obstáculos. En zonas urbanas y en sitios cerrados con gruesos muros y emisiones radioeléctricas, la distancia de comunicación puede verse seriamente afectada. Ciertos lugares pueden tener muy mala propagación como la proximidad a postes de tendido eléctrico, evítelos en lo posible. Los equipos de construcción y emergencias usan equipos de radio. Evite activar su Walkie Talkie en zonas cercanas donde puedan crearse posibles interferencias.

No toque o acerque los dedos a la antena durante el juego, ello acorta en gran medida la señal de recepción y transmisión.

RESOLUCIÓN DE PROBLEMAS:

Si la distancia de transmisión se reduce o el volumen sonoro desciende puede ser debido al agotamiento de las baterías y deberán ser sustituidas.

CUIDADO Y SEGURIDAD

Para limpiar el equipo, use un paño ligeramente humedecido. No use detergentes o disolventes. En el caso de que se mojará el equipo, apáguelo y saque las pilas inmediatamente. Seque el compartimiento de pilas con un trapo seco. Deje destapado

toda la noche el compartimiento de pilas para que se seque completamente. No intente utilizar el equipo hasta que no esté completamente seco.

SEGURIDAD ¡ADVERTENCIAS!

- Advertencia. No recomendado para niños menores de 3 años. Contiene pequeñas piezas susceptibles de ser ingeridas. Peligro de asfixia.

- Por favor, guarde el embalaje para futuras referencias, ya que contiene información muy importante.

- La empresa se reserva el derecho a que el producto pueda diferir de la ilustración por mejoras técnicas.

- Este producto requiere 1 pila 6LR61/9 V ALKALINA por unidad (no incluidas).

- Las pilas o acumuladores deben ser colocados respetando la polaridad indicada en el gráfico.

- Las pilas o acumuladores usados deberán ser retirados del juguete, podrían causar averías.

- No mezclar pilas viejas con pilas nuevas.

- No mezclar diferentes tipos de pilas.

- Para un mejor funcionamiento recomendamos el uso de pilas alcalinas.

- Sólo deben utilizarse pilas del tipo recomendado por el fabricante o equivalentes.

- Las pilas no recargables, no deben ser recargadas.

- Los bornes de las pilas no deben ser cortocircuitados.

- La sustitución o manipulación de las pilas, deberá ser realizada siempre bajo la supervisión de un adulto.

- Retire las pilas del compartimiento, cuando no vaya a utilizar la unidad por un periodo largo de tiempo.

- Por favor, sea respetuoso con el medio ambiente, y deposite las pilas gastadas en los contenedores para tal fin.

- Las pilas recargables deben retirarse del juguete antes de ser cargadas.

- Las pilas recargables sólo deben ser cargadas bajo la supervisión de un adulto.

- Lea las instrucciones antes de usar, señales y guardelas como referencia.

- En un entorno con interferencias de radio frecuencia, la muestra puede funcionar incorrectamente y su funcionamiento volverá a ser normal cuando se elimine la interferencia.

- En caso de descarga electrostática, puede provocarse un mal funcionamiento de la muestra y por tanto el usuario deberá reiniciarla.

- Si se producen transitorios, la muestra funcionará mal y el usuario deberá reiniciarla.

- Quitar todos los elementos destinados a la sujeción y protección del producto durante el transporte antes de dárselo a los niños (plásticos, etiquetas, alambres, etc.).

- Si se producen transitorios, la muestra funcionará mal y el usuario deberá reiniciarla.

- Si se producen transitorios, la muestra funcionará mal y el usuario deberá reiniciarla.

- Si se producen transitorios, la muestra funcionará mal y el usuario deberá reiniciarla.

- Si se producen transitorios, la muestra funcionará mal y el usuario deberá reiniciarla.

- Si se producen transitorios, la muestra funcionará mal y el usuario deberá reiniciarla.

- Si se producen transitorios, la muestra funcionará mal y el usuario deberá reiniciarla.

- Si se producen transitorios, la muestra funcionará mal y el usuario deberá reiniciarla.

- Si se producen transitorios, la muestra funcionará mal y el usuario deberá reiniciarla.

- Si se producen transitorios, la muestra funcionará mal y el usuario deberá reiniciarla.

Utiliza pilas recargables siempre que puedas. Recuerda desconectar el juguete si has terminado de jugar y retira las pilas del juguete si no lo vas a usar por un largo periodo de tiempo.

Si el juguete todavía funciona y ya no lo quieres, no lo tires. Recuerda que otras personas pueden seguir disfrutando de él, busca entidades y/o asociaciones que puedan hacérselo llegar.

No debe tirar el producto a un contenedor de basura de casa cuando ya no le sea de utilidad. Debe llevarlo a un punto de reciclaje de dispositivos eléctricos y electrónicos. Consulte el símbolo inscrito en el producto, el manual de usuario o el embalaje para más información. Los materiales son, según el marcado, reciclables. Si recicla el material o encuentra formas de reutilizar los dispositivos viejos, contribuye de forma importante a la protección del medio ambiente.

Por favor, consulte con el centro de reciclaje o con las autoridades locales más cercanos.

DECLARACIÓN DE CONFORMIDAD

de acuerdo con la directiva 1999/5/CE (a disposición de las autoridades de supervisión y control)

Declaramos bajo nuestra responsabilidad, que de acuerdo con las disposiciones descritas en dicha directiva y transpuesta al Real Decreto 1890/2000 del 20 de Noviembre, el producto:

REF: 140400 WALKIETALKIE
(Clase (EUT) 3 Tipo (EUT) II) / (Categoría (EUT) I)

Cumple:

A) La documentación técnica relativa al mismo.
B) Requisitos esenciales y otras disposiciones de la Directiva 1999/5/CE, cuando el producto es usado para su propósito designado.

C) Con el conjunto de test e informes de radio esenciales y especificaciones técnicas de la categoría de equipo de radio identificados por el organismo notificado escogido.

El organismo notificado escogido por el fabricante:

INTERTEK TESTING & CERTIFICATIONS LTD
Cleeve Road, Leatherhead, Surrey KT22 75B

Número Organismo Notificado: 0359

Requisitos en materia de seguridad y protección siguiendo las exigencias de salud y seguridad de la presente directiva y de la tipología de producto: EN71 Part 1: 2011/EN71 Part 2: 2011/EN71 Part 3: 2013 _ RoHS Directive (2011/65/EU)_ EN 62115: 2005 / A11: 2012 _ Cadmium content (Formerly Directive 91/338/EEC)_ EC/1907/2006 REACH _ Phthalates content (Formerly Directive 2005/84/EC)_ EC/1907/2006 REACH _

ETSI EN300 220-1 V2.4.1 (2012-05) _ ETSI EN300 220-2 V2.4.1 (2012-05) _ ETSI EN301 489-1 V1.9.2 (2011-09) _ ETSI EN301 489-3 V1.4.1 (2002-08) _ EN55022:2006+A1:2007 _ EN61000-4-2:2009 _ EN61000-4-3 :2006+A1:2008+A2:2010 _ EN62479:2010

* Para un mayor detalle e información respecto a la conformidad del producto, pueden contactar con nuestro servicio al cliente a través de este correo electrónico: qualitysp@imcs

Nombre y dirección del fabricante:
IMC TOYS, S.A., Pare Llaurador, 172

08224 Terrassa, Barcelona, Spain

Firmado por y en nombre de:

Josep Matarin Carro;

Quality Manager IMC TOYS

Fecha y firma: 01/04/2014



Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1 Reorient or relocate the receiving antenna.
- 2 Increase the separation between the equipment and receiver.
- 3 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4 Consult the dealer or an experienced radio/TV technician for help.

LEA ESTE ISNTRUCTIVO ANTES DE UTILIZAR EL PRODUCTO
RADIO DE COMUNICACIÓN

MARCA: TOY STORY MODELO: 140400

IMPORTADOR: TIENDAS SORIANA, S.A. DE C.V.

ALEJANDRO DE RODAS No. 3102-A

COL. CUMBRES 8° SECTOR C.P. 64610

MONTERREY, N.L., MEXICO

R.F.C. TSO-991022-PB6 TEL. 01800 8329200

HECHO EN CHINA

ESPECIFICACIONES: 18 V cc

REQUIERE 2 BATERIAS TIPO "6LR61" DE 9 V cc C/U

ADVERTENCIAS: LAS BATERIAS DEBEN SER COLOCADAS
POR UN ADULTO