RC-80

Operation Manual

LED Indicator

Arm — Disarm
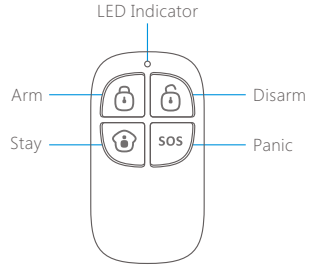Stay — Panic

Features

The remote control enables you to turn the alarm system on and off before entering the home or after exiting. If there is an emergency, press SOS button on the remote control to trigger the panel. RC-80, compact and portable, is designed to fit on a keychain, in a pocket, or in a purse.

LED Indication

LED flashes once: sends the transmitting signal
Low light-level: Low battery, please replace the battery immediately.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Specifications

Power supply   DC 3V (CR2025 Coin Battery x 1pc)
Alarm current   ≤ 7mA
Transmitting distance   ≤80m (in open area)
Radio frequency   315.8599MHz
Housing material   ABS plastic
Operating temperature   -10°C~55°C
Relative humidity   ≤80% (non-condensing)
Dimensions (L x W x H)   58 x 31 x 9.5mm

Usage

	Arm	Press to arm the alarm panel and all of the accessories. (Away Mode)
	Disarm	Press to disarm the security system.
	Stay	Press to arm all sensors except the ones in zone A, sensors in zone A will not activate an alarm. (Home Mode)
SOS	Panic	Press to activate a panic alarm and the control panel auto-dials the pre-set phone numbers immediately.
+	Mute Arm	Press to arm the system in mute.
+	Mute Disarm	Press to disarm the system in mute.