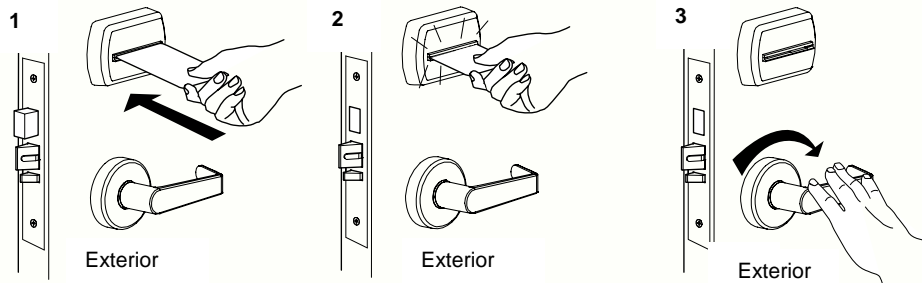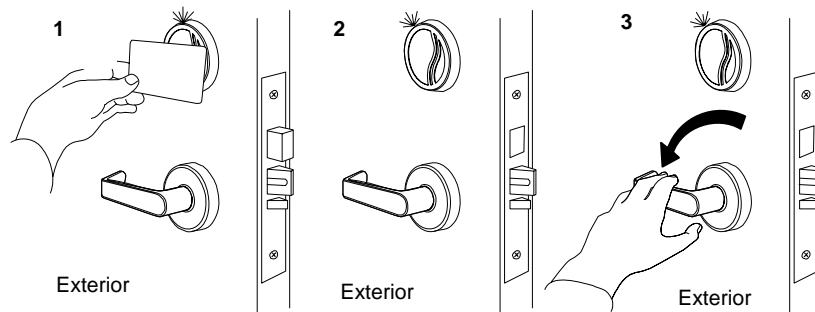# Quantum™
Lock Operation Instructions

Unlocking the Quantum™ MT™ lock from the outside

1. Fully insert your keycard into the slot.

2. Remove the keycard from the slot.

3. While the green light is flashing, turn the lever and open the door.

Unlocking the Quantum™ RFID lock from the outside

1. Bring the flat surface of your keycard near the circular RFID reader. When the keycard is close enough to be read, the yellow light will flash on the RFID reader. You will hear the lock operate.

2. The green light will begin to flash once access has been granted.

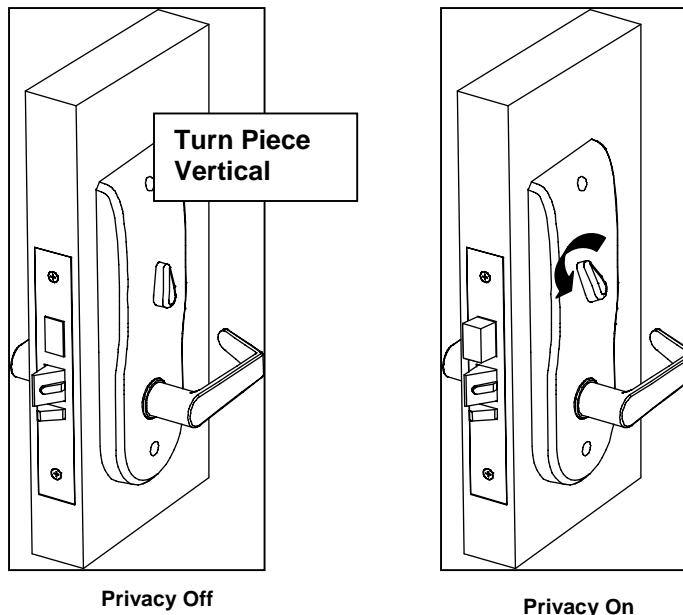3. Turn the lever and open the door while the green light is flashing.

FCC Warning: The users of this equipment shall not change or modify the equipment in any way, or they could void their authority to operate the equipment under FCC rules.

Locking and unlocking the door from the inside

- Rotate the turn piece to engage the privacy feature.

- To unlock the door from the inside, simply turn the lever.

Turn Piece Vertical

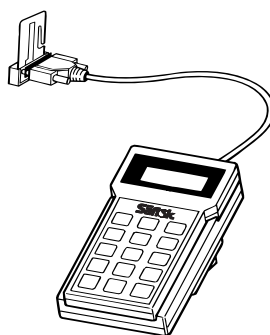**Privacy Off**

Privacy On

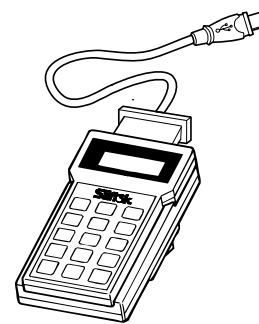## Programming Quantum Locks Using the LPI and LPI-R Probes

The front desk system (System 6000™, DeskLinc™, or Passport™) will transfer the lock code information from the main computer to the lock via the handheld LPI device.

Follow the steps for lock programming in the system's operations manual.

- For Quantum MT locks, insert the probe directly into the lock to transfer the lock code information from the LPI Device to the lock.

- For Quantum RFID locks, remove the rubber cover from the port on the bottom of the RFID reader. Plug in the LPI-R device cable to transfer the lock code information from the LPI Device to the lock.

LPI Probe for Quantum MT Card Readers

LPI-R Probe for Quantum RFID Readers

For worldwide office locations and contact information, visit us at **www.Saflok.com**.