


KTS-1567 说明书尺寸: 210*148mm, 骑马钉装, 装订成册, 单色双面印刷, 80G书写纸

BLUETOOTH SPEAKER Party Speaker with Multi-Color Round Running Lights EDS-8000 Instruction Manual Please read carefully before use and keep for future reference

IN THE BOX Upon opening your new dual wireless speakers, first check to ensure all of the following contents Charging Cable · Wired Microphone User Manual IMPORTANT SAFETY INSTRUCTIONS 4. Follow all inistructions. 5. WARNING: To prevent fire or shock hazard, do not expose this equipment to rain or moisture. **KEY FEATURES** To not store and operate this product near liquid. 6. Clean only with dry cloth. . Not store and not operate this product near any heat sources such as radiators and heat regisers, stove or other appliances (including amplifiers) that produce heat. Keep this product in a we • 8" Full-frequency speakers pump out room-filling, high-quality audio with ease ventilated place. 8. Not ignore the safety purpose of the polarized or grounding plug. A polarized plug has two Bluetooth® functionality allows you to wirelessly stream all your favorite music content from blades being wider than the other. A grounding plug has two blades plus a round pin to ground. The wide blade or the third prong is intended to provide security. If the provided plug does not fit into your outlet, consult an electrician to replace the outlet. 9. Protect all wires connected to this unit from being walked on or pinched, particularly at plugs Bluetooth-enabled devices in high-quality audio Start the party off right with multiple lighting effects and schemes that will leave a lasting impresand the point where the cord exits the unit. When unplugging from the electrical outlet, grasp the sion on all your friends and family plug and do not pull the cord. O. Disconnect the unit during lightning storms or when long period is to remain unused. Keep this unit off when connecting all the devices connected to it. After finishing the installation and connections, connect all your equipment with low volume. • Live out your inner rockstar dreams during a fun time of karaoke with friends and family thanks to the MIC input and included wired microphone level. Once all devices are connected, slowly increase the volume or level controls to achieve the • Lighting effects that dance along with the music and make you want to dance along too 13. Before placement, installation, assembly or suspending any product, inspect all equipment, suspension, cabinets, transducers, brackets and associated equipment. Any missing component corroded, deformed, or with non-nominal load can reduce the intensity, placement and arrange-• Connect to other speaker True Wireless Speakers (TWS) allowing you to sync speakers from each other without any wires ment of the installation significantly. Any of these conditions can reduce the security of the facilit • Ensure the fun never has to stop by keeping the speaker at a full charge with the included USB and must be corrected immediately. Use only suitable equipment for the loading conditions of the installation and that any possibility of reducing term, unexpected overload, never exceed the capacity of the material or equipment. 14. Consult a licensed professional to install the equipment and make sure that all local, regional Built-in TF card slot and USB port gives you with the option of playing all your favorite audio files with removable storage devices, such as TF memory cards and USB flash drives and national regulations related to security are understood and adhered to. • Tune in on all your favorite local radio stations thanks to the FM tuner · Accessories included: User Manual, Wired Microphone, and USB charging cable exposed to rain or moisture, or if the unit does not operate normally, or has been dropped. CHARGE THE BATTERY FULLY BEFORE FIRST USE TO OPTIMIZE ITS LIFETIME PERFOR-

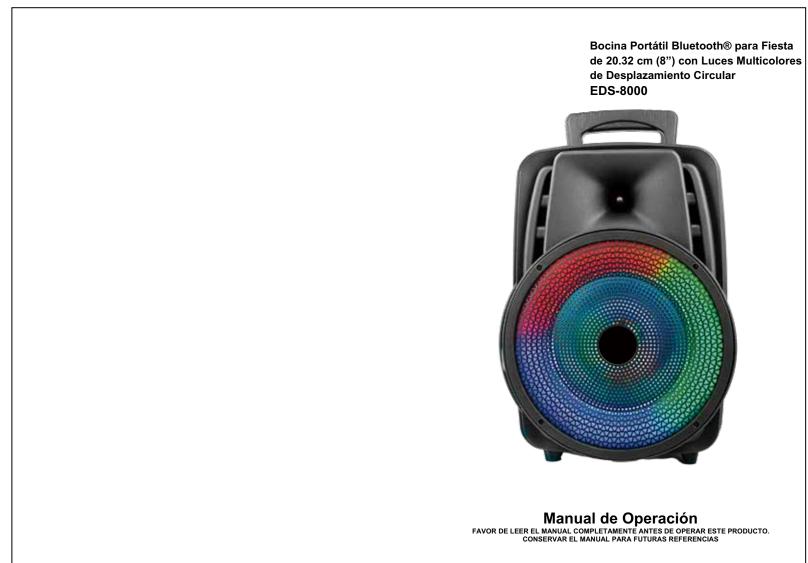

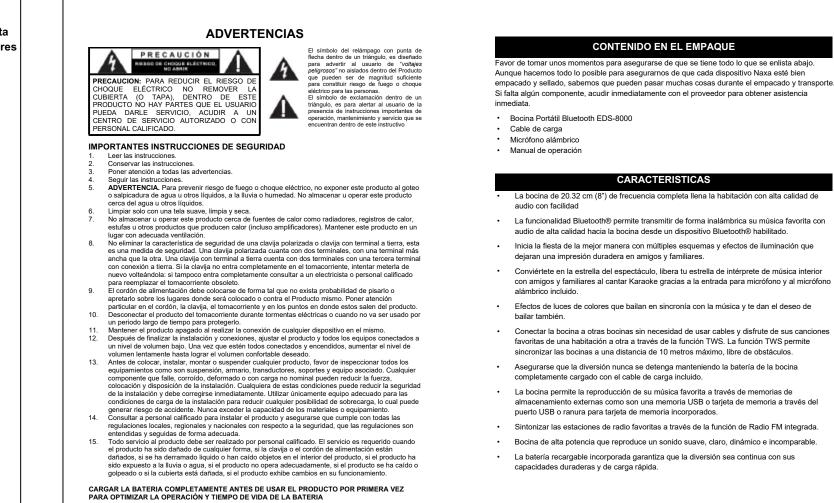

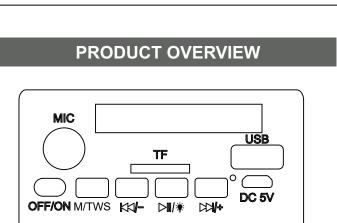

1. POWER ON/OFF/: Turn on/off the machine

- 2. MODE :change to the different function, Press and hold for TWS function
- 3. I III/-: In FM/USB/TF/Bluetooth mode, press to move to previous channel/track. Press and 4. Play/Pause: In USB/TF/Bluetooth mode, press for play and pause. In FM mode, Press: station
- hold to change the RGB light mode 5. Fig. 1. In FM/USB/TF/Bluetooth mode, press to move to next channel/track. Press and hold
- 6. DC-5V: DC-5V USB charge port
- 7. TF slot: Play the Mp3 file from TF card
- 8. USB slot: Play the Mp3 file from USB 9. MIC-IN: Microphone-in

PAIRING A BLUETOOTH® DEVICE

smartphone or tablet device). A device must be paired with the unit before using them

- To pair a Bluetooth® enabled device with the Speaker, follow these steps: 1. Make sure Bluetooth® is enabled on your device and that it is next to the unit before
- 2. Turn on the Speaker. Use the Mode button to switch to Bluetooth® mode.
- 3. Use your device to search for nearby Bluetooth devices. The Speaker will be listed as "EDS-8000". (This function is usually in the Bluetooth® settings menu; refer to your device's instruction manual to learn more.
- 4. Select "EDS-8000" from the list of found/available devices. The Speaker will make a confirmation tone to indicate a successful connection
- You can now start playback on your connected device to begin streaming music to the

TWS FUNCTION

- The Wireless speaker allows you to enjoy your favorite audio played over multiple peakers at the same time thanks to the included TWS function. To use the TWS
- 1. Please purchase 2 Bluetooth speaker if you want to use TWS function 2. Turn on one speaker, connect the speaker via Bluetooth to your device. You should
- see "EDS-8000" in the list over Bluetooth devices. 3. Turn on the second speaker, press the M(TWS)button and hold it for 3 seconds.
- 4. To disconnect the speaker from TWS, press and hold the TWS button on the first
- NOTE: You will hear a tone sound, the devices are disconnected from TWS mode.

TF MODE

The Wireless speaker allows you to enjoy your favorite audio played from external storage devices, such as TF cards. To use do so, follow these steps: . Insert the TF card into the TF card slot.

- Press the "Play/Pause" button to start or stop playback. Briefly press the ◄◄/- or ▶▶┃/+
- button to skip to the previous or next song. Press and hold the 14.4- or 14.4- button to decrease or increase the volume.

NOTE: When a TF card is inserted into the TF card slot, the unit will automatically switch to TF mode and begin playing Mp3 audio files from the inserted TF card. You can also enter TF mode by pressing the "MODE" button to cycle through modes

USB MODE

The Wireless speaker allows you to enjoy your favorite audio played from external storage

- 2. Press the "Play/Pause" button to start or stop playback. Briefly press the 【◀◀/- or ▶▶ //+ button to skip to the previous or next song. Press and hold the Idd/- or Idd/+ button to decrease or increase the volume.
- to USB mode and begin playing Mp3 audio files from the inserted USB flash drive. You can also enter USB mode by pressing the "MODE" button to cycle through modes.


FM RADIO

The Wireless speaker allows you to enjoy your favorite local FM radio stations. To use do so,

- 1. Press the MODE button to change to FM radio mode.
- 2. Press the "Play/Pause" button to automatically search for available FM channels
- 3. Once the scan is complete, you can use the Idd/- or Idd button to search the previous or next stations. Press and hold the I
- NOTE: During the station scan, the Bluetooth speakers will pre-record all found stations into memory. The scan procedure will take several minutes to complete and should not be

. Pantalla de leds

- MIC: Conector de Entrada para Micrófono alámbrico de Ø 6.5 mm
- 3. TF: Ranura para tarjeta de Memoria. Reproduce archivos de audio en formato MP3. 4. USB: Puerto para memorias USB. Reproduce archivos de audio en formato MP3. OFF/ON: Presionar para Encender o Apagar la bocina.
- 6. M/TWS: Presionar para seleccionar el modo de operación de Bluetooth®, Radio FM Memoria USB, Tarjeta de memoria. Presionar y sostener para activar la función TWS.
- ⊮/-: En los modos de Memoria USB, Tarjeta de memoria, Bluetooth® y Radio FM, presionar para saltar a la pista o estación anterior. Presionar y sostener para disminuir el nivel del 8. • II / : En los modos de Memoria USB, Tarjeta de memoria y Bluetooth®, presionar para Iniciar, Pausar o Reanudar la Reproducción. En el modo de Radio FM, presionar para
- seleccionar la estación deseada a sintonizar; presionar y sostener para iniciar el escaneo y almacenamiento automático de las estaciones con señal fuerte. Presionar y sostener para cambiar el modo de iluminación RGB. 9. »/+: En los modos de Memoria USB, Tarjeta de memoria, Bluetooth® y Radio FM, presionar
- para saltar a la pista o estación siguiente. Presionar y sostener para aumentar el nivel del
- 10. DC 5V: Conector de entrada micro USB de alimentación 5 Vcc. Insertar el cable de carga incluido para conectar la bocina a la fuente de alimentación para cargar la batería recargable

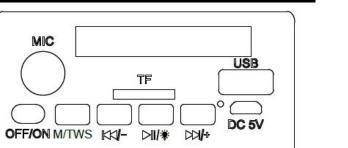

Teléfono Inteligente, Tableta, etc.) de forma inalámbrica a través de la bocina. Usar el dispositivo Bluetooth® conectado para seleccionar la canción, reproducir/pausar y control de volumen. FUNCION DE CONEXIÓN INALAMBRICA ESTEREO "TWS"

Jsar el modo de Bluetooth® para transmitir música de forma inalámbrica desde un dis

se encuentra cercano a la bocina antes de intentar sincronizarlos.

identificado como "EDS-8000" en la lista de dispositivos encontrados.

entra automáticamente al modo de sincronía.

Bluetooth debe sincronizarse con la bocina antes de usarlos en conjunto por primera vez

Bluetooth® sincronizado (por ejemplo, Teléfono Inteligente o Tableta) a la bocina. El dispositivo

Asegurarse que la función de Bluetooth® está habilitada en el dispositivo externo y que este

2. Encender la bocina y seleccionar el modo de Bluetooth® presionando "M/TWS". La bocina

3. Usar el dispositivo Bluetooth® externo para buscar dispositivos Bluetooth® cercanos (esta

4. Seleccionar "EDS-8000" en la lista de dispositivos encontrados/disponibles. La bocina emite

función se encuentra usualmente en el menú de ajustes Bluetooth®, referirse al manual de operación del dispositivo Bluetooth® externo para mayor información). El producto es

- La bocina Bluetooth® permite disfrutar de sus archivos de audio favoritos reproduciéndolos en dos
- bocinas al mismo tiempo gracias a la función TWS. Para usar la función TWS, realizar los
- 1. Favor de comprar dos bocinas Bluetooth® del mismo modelo y nombre de sincronía cor función TWS. 2. Encendre una bocina, sincronizar la bocina al dispositivo Bluetooth® como se explicó en
- SINCONIZANDO A UN DISPOSITIVO BLUETOOTH®. 3. Encender la segunda bocina, presionar y sostener "M/TWS" por 3 segundos
- aproximadamente, la bocina emitirá un sonido cuando las bocinas se conectan a través de
- la función TWS, ahora podrá escuchar la Transmisión Inalámbrica Estéreo (TWS) a través 4. Ahora está listo para iniciar la reproducción del dispositivo Bluetooth® externo (por ejemplo,
- Teléfono Inteligente, Tableta, etc.) de forma inalámbrica a través de las bocinas. Usar el 5. Para desconectar las bocinas de la función TWS, presionar y sostener M/TWS" por 3 segundos aproximadamente en la primera bocina. La bocina emitirá un sonido cuando las
- bocinas se desconectan. Para volver a conectar con la función TWS, repetir los pasos Nota: La función TWS es solo para dos bocinas a la vez. No puede admitir más de dos bocinas al

Al insertar una memoria USB en el puerto USB, la Bocina Bluetooth® cambia automáticamente al modo de memoria USB y comenzará a reproducir los archivos de audio MP3 desde la memoria USB.

TARJETA DE MEMORIA TF

La bocina Bluetooth® permite disfrutar de sus archivos de audio favoritos desde unidad de

almacenamiento externas, como una tarjeta de memoria. Para usar la función de Tarjeta de

Insertar una tarjeta de memoria TF a través de la ranura para tarjeta de memoria.

Al insertar una tarjeta de memoria en la ranura para tarjeta de memoria, la Bocina

También puede cambiar al modo de tarjeta de memoria presionando "M/TWS"

La bocina Bluetooth® permite disfrutar de sus archivos de audio favoritos desde unidad de

almacenamiento externas, como una memoria USB. Para usar la función de memoria USB,

6. Presionar "▶ II " para Iniciar. Pausar o Reanudar la reproducción. Presionar "₩/-" o "▶/+ para saltar a la pista anterior o siguiente. Presionar y sostener "⋈/-" o "⋈/+" para ajustar el

os archivos de audio MP3 desde la tarjeta de memoria.

4. Insertar una memoria USB a través del puerto USB.

Encender la bocina.

volumen al nivel deseado.

Presionar " ▶ II " para Iniciar. Pausar o Reanudar la reproducción. Presionar "I4/-" o "▶I/+

para saltar a la pista anterior o siguiente. Presionar y sostener "IM/-" o "IM/+" para ajustar el

Bluetooth® cambia automáticamente al modo tarieta de memoria y comenzará a reproducir

Se recomienda insertar/remover la tarjeta de memoria estando la bocina apagada, para

memoria, realizar los siguientes pasos:

volumen al nivel deseado.

También puede cambiar al modo de memoria USB presionando "M/TWS" Se recomienda insertar/remover la memoria USB estando la bocina apagada, para evitar daños a la bocina y a la memoria USB.

Cuando esté en modo de bajo consumo que requiera carga, el volumen del altavoz caerá automáticamente a aproximadamente el 70% del volumen principal y el icono de batería baja aparecerá en la pantalla LED. Usar el cable de carga incluido para conectar la bocina a la fuente de alimentación para recargar

- 1. Insertar el conector micro USB del cable de carga al conector "DC 5V" de la bocina. Entonces, Insertar el conector USB del cable de carga al conector USB del adaptador de corriente (no incluido) u otra fuente de alimentación, como puedes ser el puerto USB de una
- 2. El led indicador de carga enciende cuando la batería se está cargando. El led indicador de carga se apaga cuando la batería se carga completamente.

Para prolongar la vida útil de la batería, no recargarla por más tiempo del especificado.

El tiempo de operación de la batería varía dependiendo del uso, música fuerte con sonidos graves consumen más energía.

BATTERY

1. When in low power mode that requires charging, speaker volume will automatically fall to 2. Use DC 5V adaptor for charging, the charging indicator light will turn on when the product is

NOTE: If the speaker is not used for a prolonged period of time, charge speaker more than 12 hours; otherwise, it will cause damage to the battery.

SPECIFICATIONS

3. Upon reaching a full charge, the charging indicator light turns off.

Speakers	8" x 1
Wireless Source	Bluetooth®, V5.0+EDR
Feature Function	TWS
PMPO Output	2000W
Media Inputs	USB Port, TF Card Slot
Radio Tuner	FM
Light Effects	Multi-Color LED
Power Source	1500mAh Rechargeable Battery
Battery Type	Built-in Lithium Rechargeable
Play Time	Up to 2 Hours. (Play time will vary depe on the volume level and type of media p
Accessories Included	User Manual, Wired Microphone, and USB Charging Cable

Speakers	8" x 1
Wireless Source	Bluetooth®, V5.0+EDR
Feature Function	TWS
PMPO Output	2000W
Media Inputs	USB Port, TF Card Slot
Radio Tuner	FM
Light Effects	Multi-Color LED
Power Source	1500mAh Rechargeable Battery
Battery Type	Built-in Lithium Rechargeable
Play Time	Up to 2 Hours. (Play time will vary depend on the volume level and type of media pla
Accessories Included	User Manual, Wired Microphone, and USB Charging Cable

Speakers	8" x 1
Wireless Source	Bluetooth®, V5.0+EDR
Feature Function	TWS
PMPO Output	2000W
Media Inputs	USB Port, TF Card Slot
Radio Tuner	FM
Light Effects	Multi-Color LED
Power Source	1500mAh Rechargeable Battery
Battery Type	Built-in Lithium Rechargeable
Play Time	Up to 2 Hours. (Play time will vary depending on the volume level and type of media played
Accessories Included	User Manual, Wired Microphone, and USB Charging Cable

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful intereference to radio or television reception, which can be

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the grantee of this device may void

SUPPORT

If you have problems with your device, please consult the instructions in this manual. Please tation for your device. For additional assistance, please contact Naxa Technical Support.

Naxa Technical Support 2320 East 49th St.

FCC NOTICE

any interference received, including that may cause undesired operation. determined by turning the equipment off and on, the user is encouraged to try to correct the

- interference by one or more of the following measures:

CAUTION ON MODIFICATIONS

the authority granted by the FCC to operate the equipment
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled
environment. This equipment should be installed and operated with minimum distance 0cm

Vernon, CA 90058 (866) 411-6292

No conectar la bocina a una fuente de alimentación diferente a la especificada en este manual o en la etiqueta de marcado, en caso contrario se puede generar riesgo de fuego o choque eléctrico.

 Si la bocina no es usada por un periodo largo de tiempo, favor de cargar la batería al menos Desechar la batería de forma adecuada para evitar daños al medio ambiente.

ESPECIFICACIONES		
Bocina	Bocina de 20.32 cm (8")	
Conexión inalámbrica	Bluetooth® V5.0 + EDR	
Función de conexión inalámbrica	TWS	
Potencia de salida de audio PMPO	2 000 W	
Entradas	Puerto USB, Ranura para tarjeta de memoria, Entrada para Micrófono	
Sintonizador	Radio FM	
Efectos de luz	Luz led disco de colores	
Batería recargable interna	1 500 mAh Batería de Litio	
Formato de archivos de audio	MP3	
Tiempo de reproducción	Hasta 2 horas (el tiempo de reproducción varía dependiendo del nivel de volumen y tipo de música que	

Las especificaciones y el diseño de este producto están sujetos a cambios sin previo aviso para

INDICACIONES SOBRE EL MEDIO AMBIENTE doméstica para evitar daños al medio ambiente, en su caso acudir al centro de desechos sólidos de su localidad. La separación adecuada de los desechos ayuda a evitar posibles efectos negativos sobre la salud humana y el medio ambiente y promueve el reciclaje de los materiales que componen el producto. Informarse en su localidad sobre los organismos de

NOTICIA FCC

sujeta a las dos siguientes condiciones: (1) es posible que este producto no cause interferencia periudicial, v (2) este producto debe aceptar cualquier interferencia, incluvendo la que pueda causar la operación no deseada.

Nota: Este producto ha sido probado y cumple con las limitaciones de un equipo digital Clase B, de acuerdo con la Parte 15 de las Normas FCC. Estos límites están diseñados para permitir una protección razonable contra interferencia dañina en una instalación residencial. Este producto genera, usa y puede emitir energía de frecuencia radial y, de no ser instalado y utilizado de acuerdo con las instrucciones, puede causar interferencia dañina a las comunicaciones radiales. Sin embargo, no existe garantía de que la interferencia no pueda ocurrir en una instalación particular. Si este producto causa una interferencia dañina a la recepción de la radio o la televisión, lo cual se puede determinar encendiendo y apagando el equipo, se recomienda al usuario tratar de corregir la interferencia mediante una o más de las siguientes medidas: Aumentar la separación entre el producto y el receptor. Conectar el equipo a una salida de un circuito diferente al receptor. Consultar a su proveedor o a un técnico de Radio y televisión.

PRECAUCION SOBRE MODIFICACIONES

puede anular la propiedad para operar el producto.

manual, así como las ultimas noticias, recomendaciones y documentación que puede encontrar en nuestra pagina web www.naxa.com. Si necesita asistencia futura, favor de contactar al centro de servicio autorizado o soporte técnico autorizado.

http://www.naxa.com/supportcenter/

La bocina Bluetooth® permite disfrutar las estaciones de Radio FM locales. Para usar la función

de Radio FM, realizar los siguientes pasos.

- 1. Estando la bocina encendida, presionar "M/TWS" para seleccionar el modo de Radio FM. 2. Presionar y sostener " ➤ II / □" para iniciar el escaneo y almacenamiento de las estaciones de radio con señal en la memoria automáticamente.
- 3. Una vez que el escaneo y almacenamiento de las estaciones finaliza, presionar "iu" o "iu" para saltar a la estación anterior o siguiente; presionar y sostener "⋈/-" o ">)/+" para ajustar el volumen al nivel deseado
- 4. Presionar "VOL-" o, "VOL+ para ajustar el volumen al nivel deseado

- Durante el escaneo de las estaciones, la Bocina Bluetooth® almacena las estaciones con señal encontradas en la memoria. El procedimiento de escaneo tarda varios minutos en
- completarse y no debe ser interrumpido.

CARGA DE LA BATERIA

La bocina opera con una batería recargable interna. Antes de operar la bocina por primera vez, cargar la batería completamente para asegurar un óptimo desempeño y duración de la batería.

- La batería usada en la bocina no es reemplazable por el usuario.
- La batería usada en la bocina puede presentar riesgo de fuego o quemaduras químicas si estas son operadas de forma inadecuada. No deiar la batería en un lugar expuesto a los ravos directos del sol o dentro de un automóvil