

ARCAM

solo movie/music

Handbook Solo movie/music

Manuel Solo movie/music

Handbuch Solo movie/music

Handleiding Solo film/muziek

Manual Solo movie/music

Руководство Solo movie/music

Manuale Solo movie/music

手册 Solo movie/music

ARCAM

INPUT-

INPUT+

■ / ▲



Blu-ray Disc
VIDEO
ULTRA HIGH PERFORMANCE 24-BIT DAC



ARCAM
SOLO MOVIE

▶/II

◀

POWER



solo movie


dts-HD
Master Audio

HDMI

DOLBY
TRUEHD

ARCAM solo movie/music

Handbook Solo movie / music

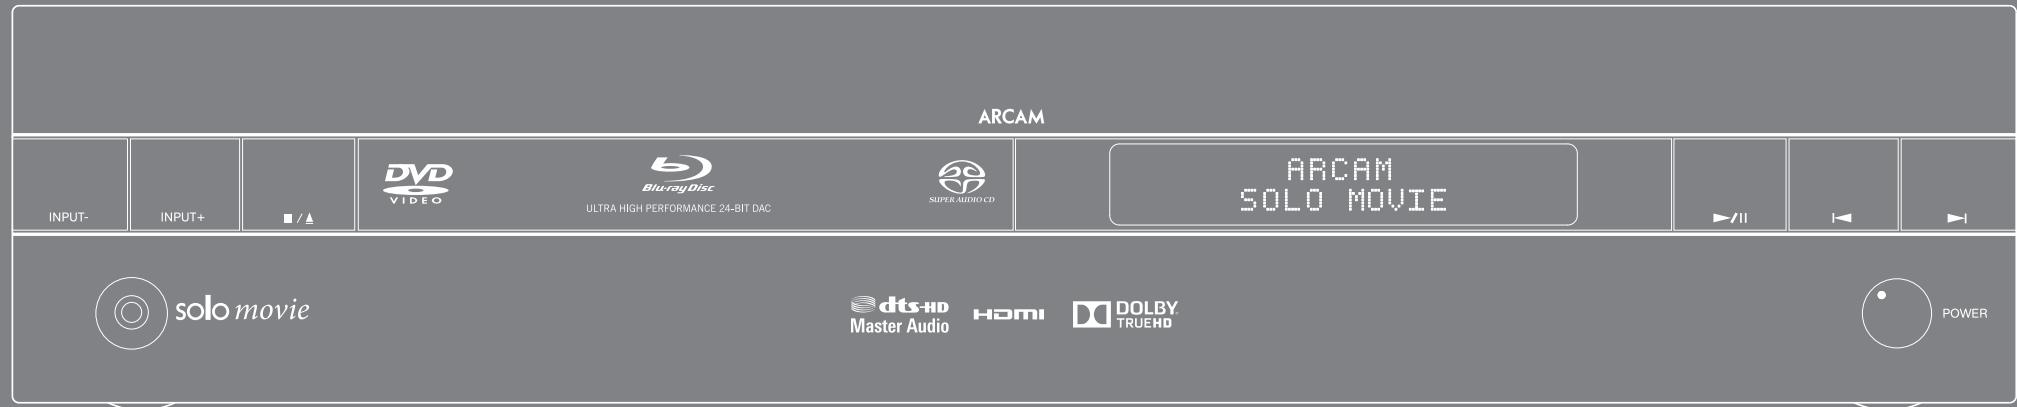

welcome...



<i>... and thank you for purchasing the Arcam Solo movie/music.</i>	
<i>Arcam has been producing specialist audio equipment of remarkable quality for over three decades and the new Solo movie/music is the latest in a long line of award winning Hi-Fi and home cinema products.</i>	
<i>We hope that the care and effort we have put into building this product will be amply demonstrated in its superior performance and reliability, ensuring that you enjoy many years of ownership.</i>	
<i>This handbook is a guide to installing and using the Solo movie/music. Use the contents list on the next page to guide you to the section of interest.</i>	
<i>We hope that your Solo movie/music will give you years of trouble-free operation. In the unlikely event of any fault, or if you simply require further information about Arcam products, our network of dealers will be happy to help you. Further information can also be found on the Arcam website at www.arcam.co.uk.</i>	
The Solo movie/music development team.	
	safety
	E-4
	before you begin...
	E-6
	overview
	E-7
	front panel
	E-8
	top panel
	E-9
	rear panel
	E-10
	audio/video connections
	E-11
	other connections
	E-13
	antenna connectors
	E-14
	speakers
	E-15
	disc & file formats
	E-16
	basic operation
	E-17
	remote control
	E-18
	customising the remote
	E-22
	playing a disc
	E-25
	network/usb operation
	E-26
	listening to radio
	E-27
	settings menu
	E-28
	troubleshooting
	E-34
	technical specifications
	E-36
	product guarantee
	E-38
	trademarks
	E-39



Important safety instructions

1. Read these instructions

All the safety and operating instructions should be read before this product is operated.

2. Keep these instructions

The safety and operating instructions should be retained for future reference.

3. Heed all warnings

All warnings on the appliance and in the operating instructions should be adhered to.

4. Follow all instructions

All operating and use instructions should be followed.

5. Do not use this apparatus near water

The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool.

6. Clean only with dry cloth.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.


13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Please keep the unit in a well-ventilated environment.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping or splashing. Objects filled with liquids, such as vases should not be placed on the apparatus.

ATTENTION: The mains plug or appliance coupler is used as a disconnect device, the disconnect device shall remain readily operable.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.


□ This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Correct disposal of this product
This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly.

CAUTIONS ON INSTALLATION

For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.

More than 0.3 m (12 in.) is recommended
Do not place any other equipment on this unit

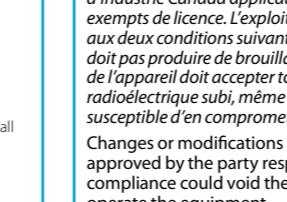

FCC/IC INFORMATION (FOR US AND CANADA CUSTOMERS)

1. Product

This product complies with Part 15 of the FCC Rules/ Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning

2. Important notice: do not modify this product

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements.

Modification not expressly approved by ARCAM may void your authority, granted by the FCC, to use the product.

3. Note

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning

the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the product into an outlet on a circuit different from that to which the receiver is connected.

- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.


FDA INFORMATION (FOR US CUSTOMERS)

Complies with 21 CFR 1040.10 and 1040.11

except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.

A NOTE ABOUT RECYCLING

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations. When discarding the unit, comply with local rules or regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal. This product and the supplied accessories, **excluding the batteries**,



constitute the applicable product according to the WEEE directive.

CORRECT DISPOSAL OF THIS PRODUCT

These markings indicate that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal and to conserve material resources, this product should be recycled responsibly.

To dispose of your product, please use your local return and collection systems or contact the retailer where the product was purchased.

before you begin...

What's in the box?

- Solo movie/music
- Remote control
- 2 x AAA batteries
- DAB/FM antenna
- Bluetooth antenna
- Wi-Fi antenna
- User manual
- Registration card
- Power cord

Placing the unit

- Place the unit on a level, firm surface, avoiding direct sunlight and sources of heat or damp.
- Do not place the unit on top of a power amplifier or other source of heat.
- Do not place the unit in an enclosed space such as a bookcase or closed cabinet unless there is good provision for ventilation. The product is designed to run warm during normal operation.
- Do not place any other component or item on top of the unit as this may obstruct airflow around the heat-sink, causing the product to run hot. (The unit placed on top of the amplifier would also become hot.)
- Make sure the remote-control receiver to the left of the front panel display is unobstructed, otherwise this will impair the use of the remote-control.
- Do not place your record deck on top of this unit. Record decks are very sensitive to the noise generated by mains power supplies which will be heard as a background 'hum' if the record deck is too close.
- The normal function of the unit may be disturbed by strong electromagnetic interference. If this occurs, simply reset the unit with the power button, or move the unit to another location.

Power

The amplifier is supplied with a moulded mains plug already fitted to the lead. Check that the plug supplied fits your supply – should you require a new mains lead, please contact your Arcam dealer. If your mains supply voltage or mains plug is different, please contact your Arcam dealer immediately.

The Solo can be switched for operation between 220–240V (switch position 230V) and 110–120V (switch position 115V).

NOTE

Ensure that the Solo is switched off and the power lead removed before changing the position of the voltage range switch. Also ensure that this selector switch is set to the appropriate voltage for your region.

Push the IEC plug end of the power cable into the socket on the back of the unit, making sure that it is pushed in firmly. Plug the other end of the cable into your mains socket and, if necessary, switch the socket on.

The unit can be turned on using the **POWER** switch on the front panel. While switched on, the power button LED will glow green.

Standby power

The Solo can be switched into standby mode using the \diamond button on the remote control. While in standby mode the power button LED will glow red and power consumption is less than 0.5 Watts. While in standby mode, it may be possible to hear a slight residual hum coming from the mains transformer inside the amplifier. This is perfectly normal. However, if the unit is to be left unused for an extended period, we recommend that you disconnect it from the mains supply to save power.

Interconnect cables

We recommend the use of high-quality screened cables that are designed for the particular application. Other cables will have different impedance characteristics that will degrade the performance of your system (for example, do not use cabling intended for video use to carry audio signals). All cables should be kept as short as is practically possible.

It is good practice when connecting your equipment to make sure that the mains power-supply cabling is kept as far away as possible from your audio cables. Failure to do so may result in unwanted noise in the audio signals.

For information on speaker cabling, please refer to "speakers" on page E-15.

Radio interference

The Solo is an audio/video device containing microprocessors and other digital electronics. Each model has been designed to very high standards of electromagnetic compatibility. This is a Class B product. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures. If the Solo causes interference to radio or television reception (which can be determined by switching the Solo off and on), the following measures should be taken:

- Re-orient the receiving antenna or route the antenna cable of the affected receiver as far as possible from unit and its cabling.
- Relocate the receiver with respect to the Solo
- Connect the affected device and the Solo to different mains outlets.

If the problem persists, please contact your Arcam dealer.

Laser radiation

CLASS 1 LASER PRODUCT

If the built-in disc player of the Solo is operated whilst the outer casing is removed, invisible radiation could cause eye damage.

overview

The Solo represents a new dimension in experiencing music and movies. Solo brings the performance normally associated with high fidelity separates to a new audience of style-conscious music and movie lovers. When coupled with Arcam's proprietary decoding techniques, the resulting picture and sound are simply world class.

Arcam developed the world's first DAB radio and the clarity of reception will bring hours of musical enjoyment from the built-in DAB and FM receiver.


Arcam has brought all its experience to bear to deliver stunning surround-sound decoding and amplification from high resolution Dolby True HD, DTS Master HD decoding modes. The remote control supplied with the Solo is a back lit 'universal' controller. It is easy to set up and can be used to control a complete system. It can be programmed using a vast internal code library to control set top boxes, TVs and audio/video devices.


At last an all-in-one home cinema

system



with a level of performance that

will truly bring music and movies to life.

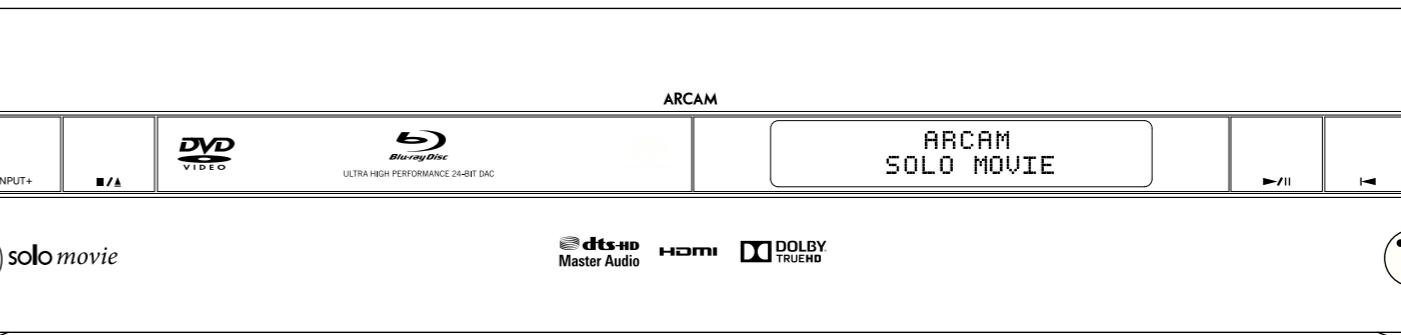


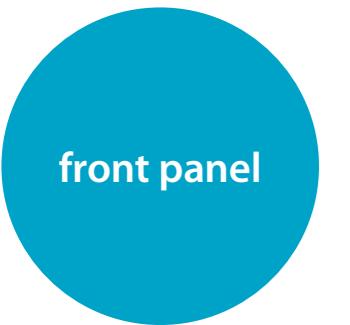

Front panel controls

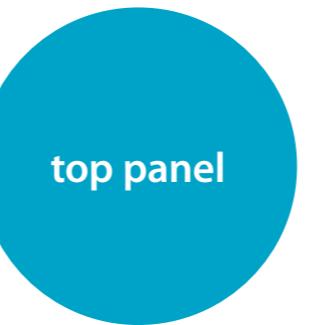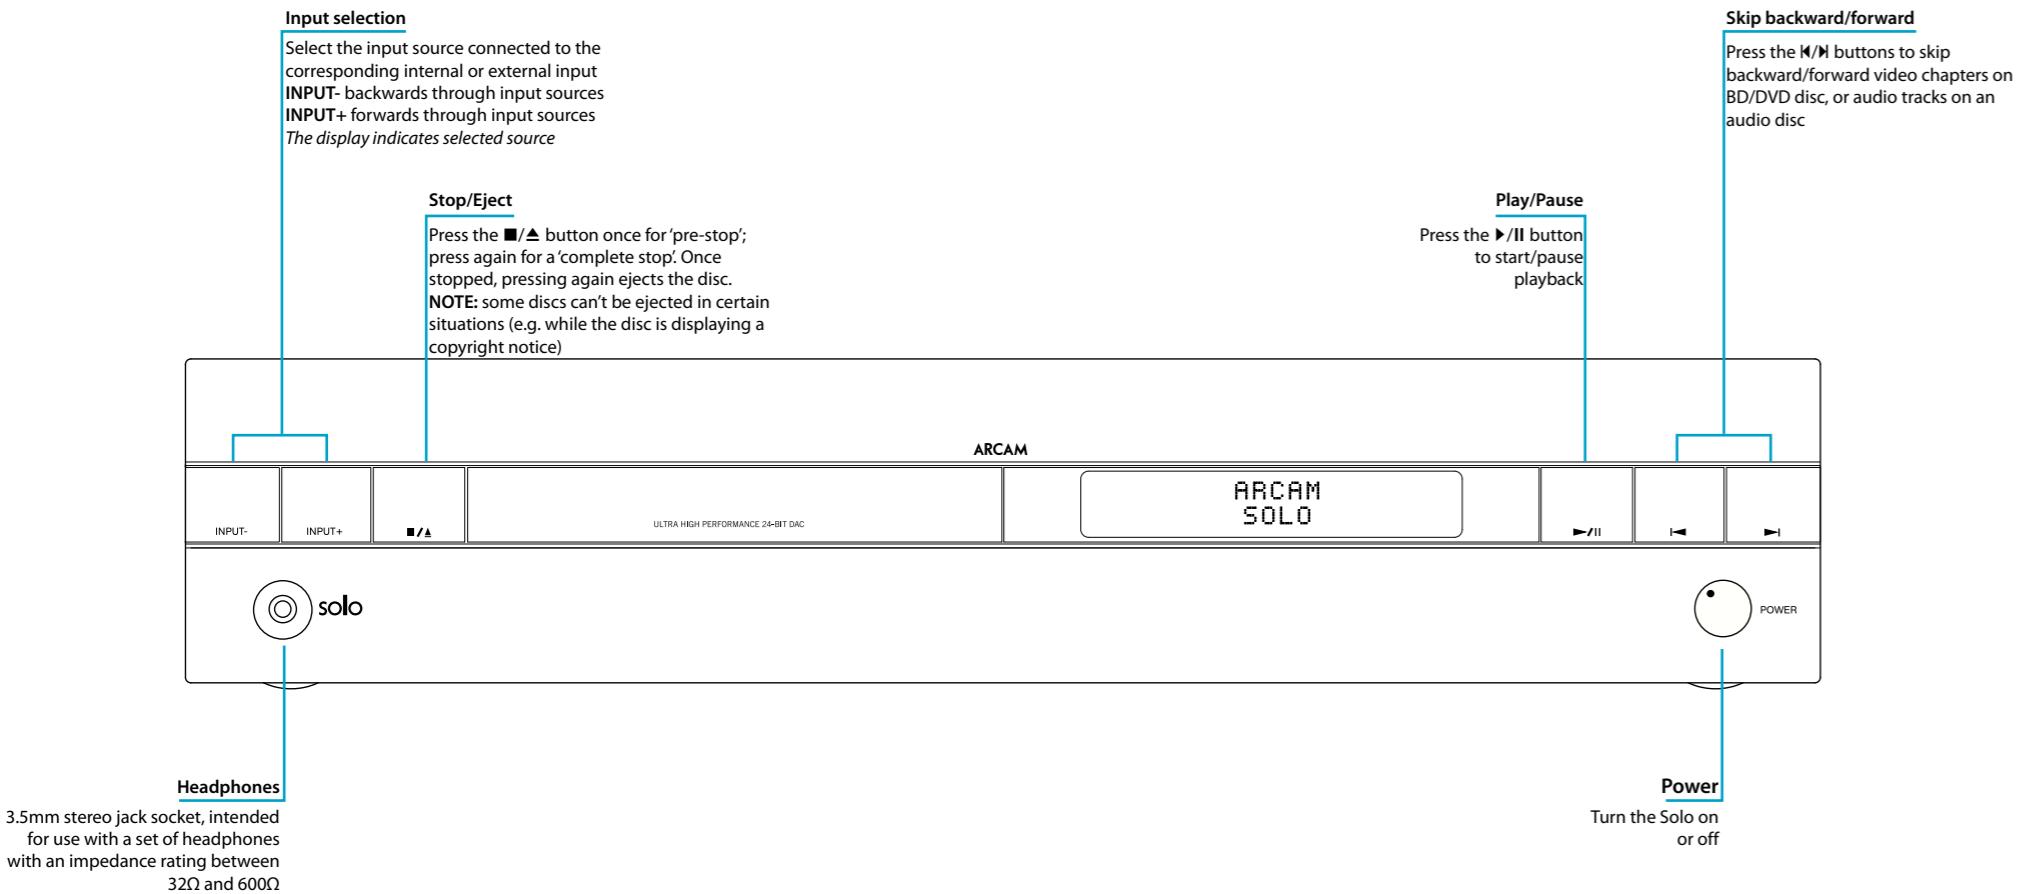


Top panel controls

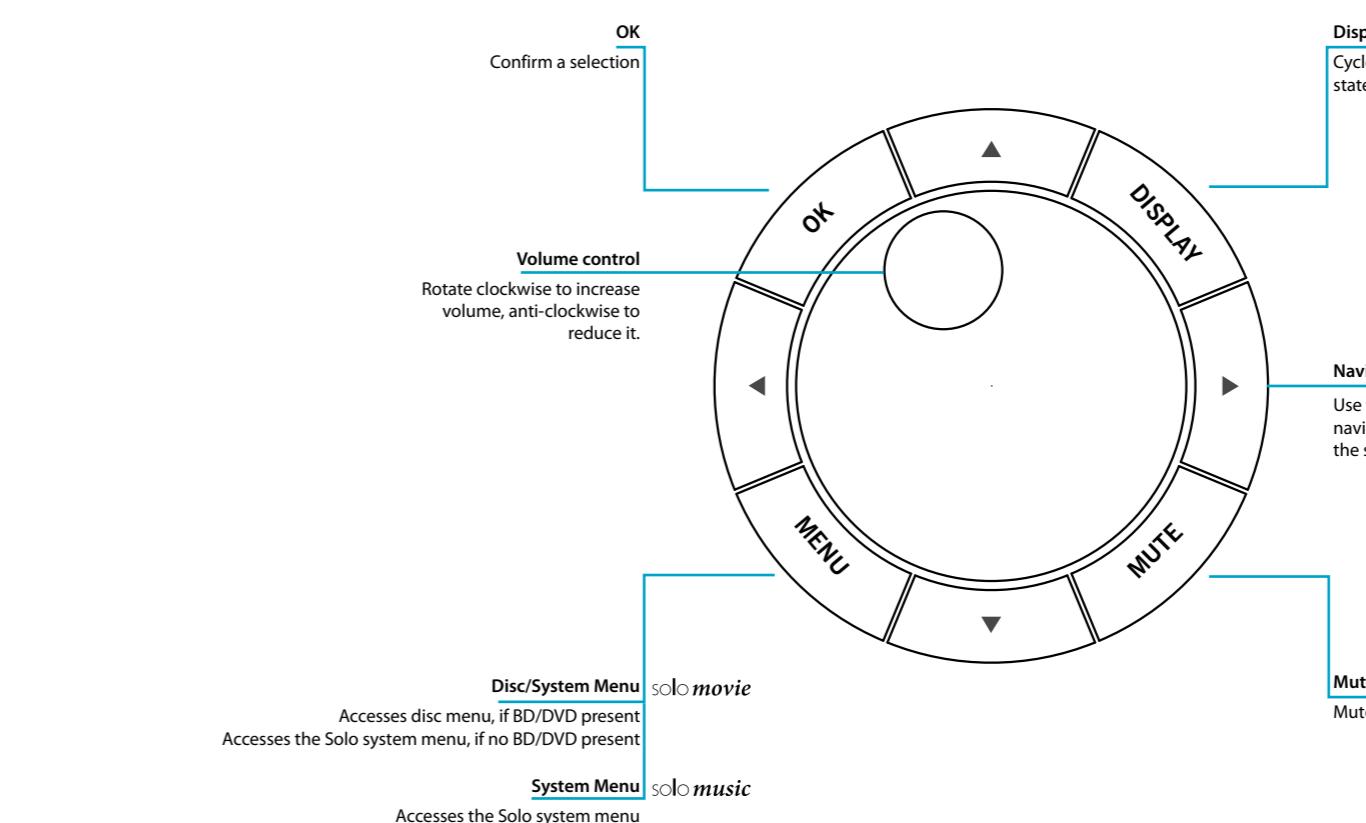

rear panel

Rear panel connections

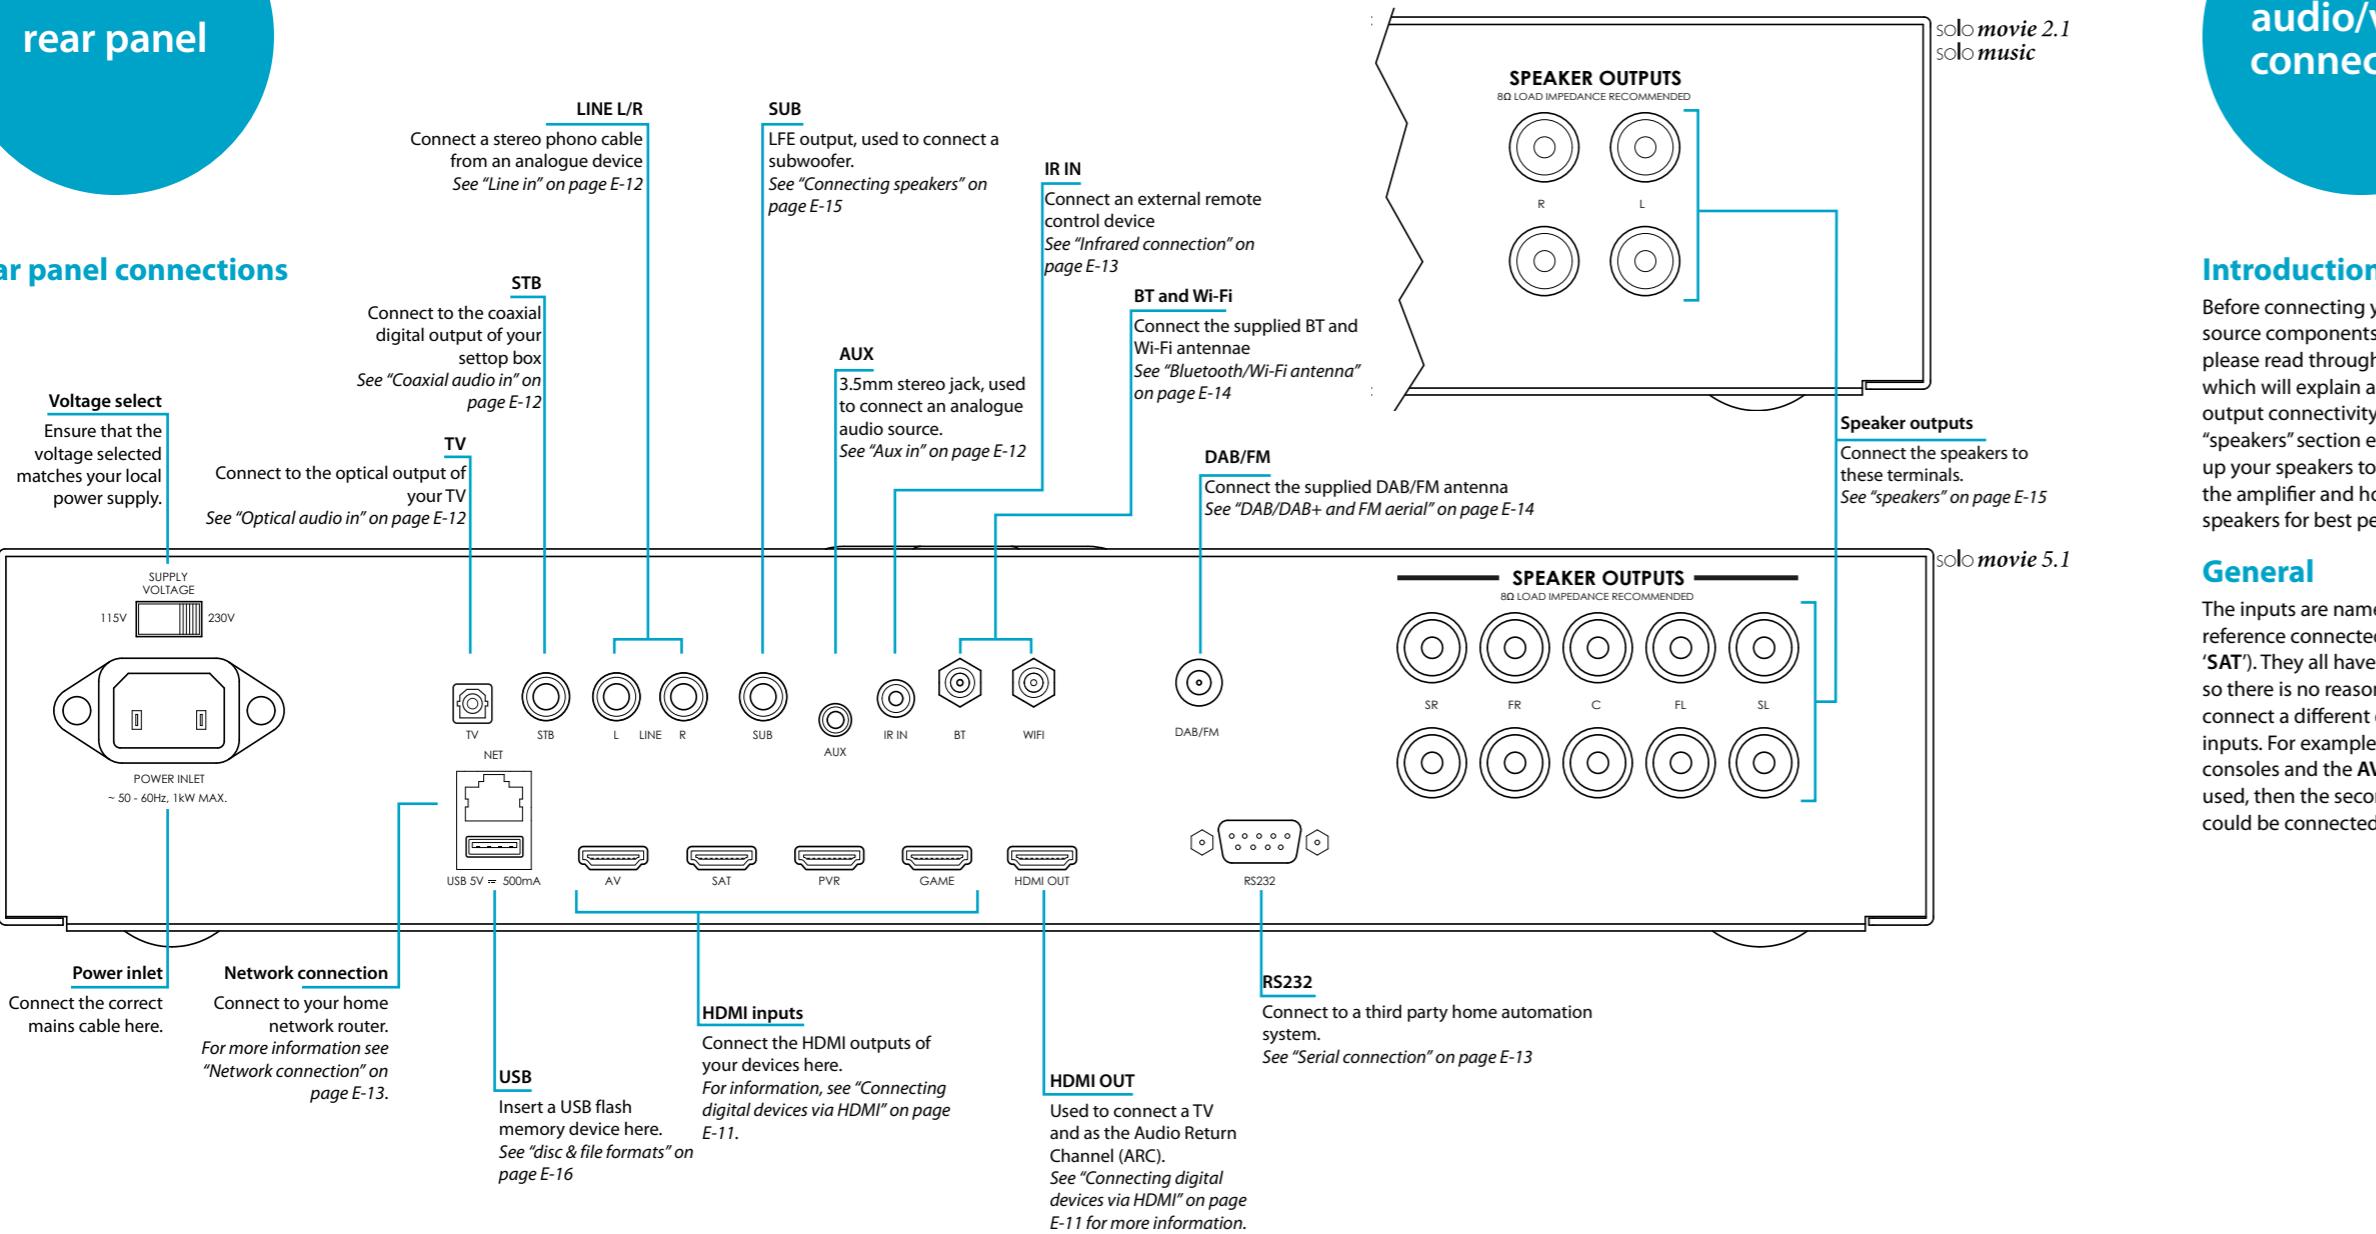

audio/video connections


Introduction

Connecting digital devices via HDMI

Before connecting your Solo to your source components and speakers, please read through the next few pages which will explain all the input and output connectivity that is available. The "speakers" section explains how to connect up your speakers to avoid damage to the amplifier and how to arrange your speakers for best performance.

General

The inputs are named to make it easier to reference connected devices (e.g. 'AV' or 'SAT'). They all have the same input circuit, so there is no reason why you should not connect a different device to any of the inputs. For example, if you had two games consoles and the AV input was not being used, then the second games console could be connected to the AV input.

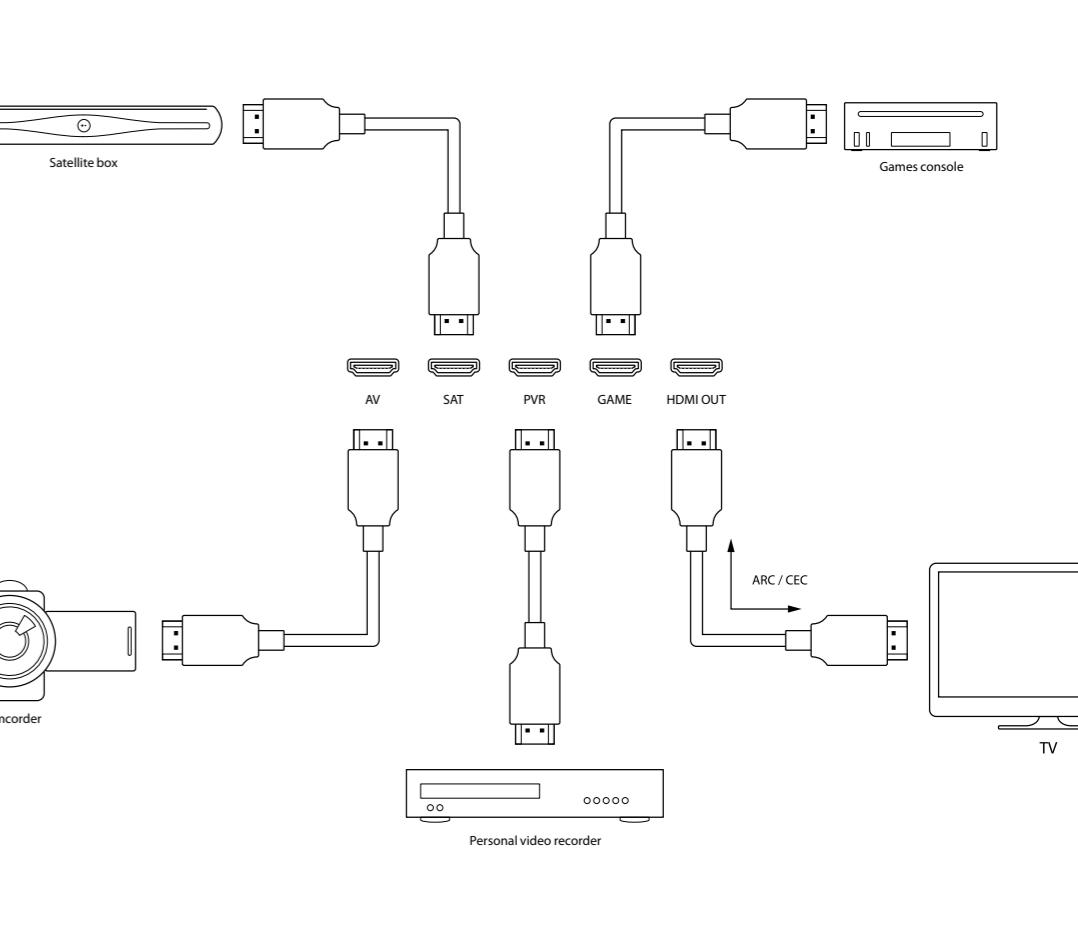


other connections

Digital audio connections


Optical audio in

If your TV set does not support ARC, connect the optical audio output of the TV to this input

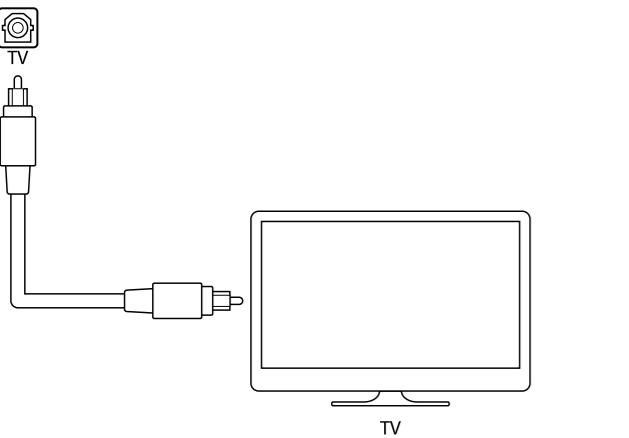

Coaxial audio in


Connect the coaxial audio output of your set-top box

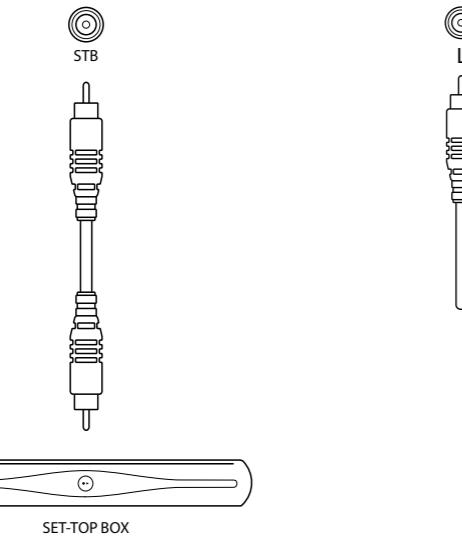

Analogue audio connections

Line in

Connect any analogue audio device to these inputs using a RCA stereo phono cable

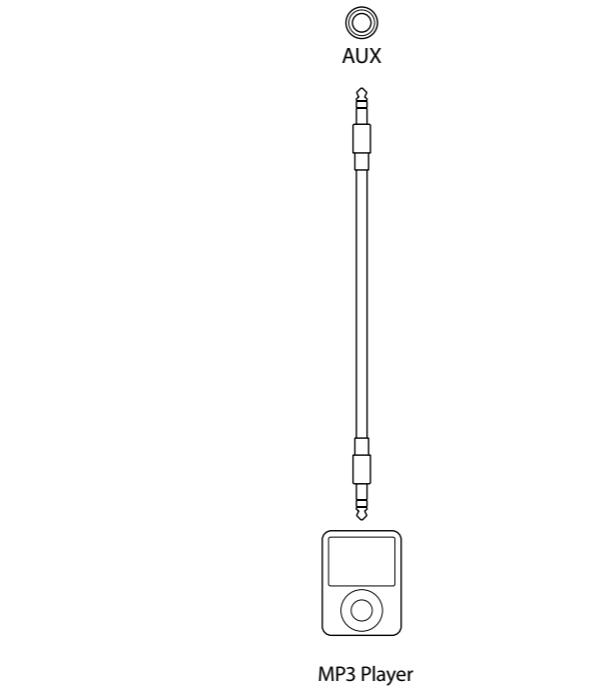

Aux in

Connect any analogue audio device to the AUX input using a 3.5mm jack lead



Bluetooth connection

The Solo has built in *Bluetooth* wireless technology for seamless integration with any *Bluetooth* enabled device.

Pairing with *Bluetooth* devices

To place the Solo in pairing mode, select the *Bluetooth* input, then press and hold the **OK** key on the remote control. Follow the advice provided in the operation instructions for your *Bluetooth* device. Select **SOLO XXXXXX** (where **XXXXXX** is a unique number assigned to your Solo) from the list of *Bluetooth* devices to complete the pairing. Once the pairing procedure is finished, it does not need to be performed again.

USB connection

USB memory devices (flash drives) can be used for media playback and are necessary for storage of downloaded BD-Live content. To enjoy BD-Live content, the following specification is recommended:

- Capacity 2GB or more
- Formatted FAT32
- USB2.0 high speed (480Mbps)

The Solo can also play files stored on a USB mass storage device, typically a pen drive, but any USB device that complies with the 'mass storage device' class is compatible. The Solo only supports the direct connection of USB devices and will not support devices connected through a hub. If regular access to the **USB** socket

Network connection

The Solo can be connected to your network using either a wired or wireless connection.

Wireless connection

In order to connect to your Wi-Fi network, the supplied Wi-Fi antenna needs to be connected to the Solo and the unit's wireless settings must be correctly configured. Please refer to "Bluetooth/Wi-Fi antenna" on page E-14, for antenna installation instructions and "Network" on page E-30 for information on setting up the wireless network interface.

Wired connection

If an Ethernet cable is connected, the Solo will automatically attempt to connect to your network.


You should use CAT5 cable plugged into the RJ45 socket labelled **NET** on the rear panel.

If your network uses static IP addressing rather than DHCP, you will need to provide IP address, gateway and DNS; see "Network" on page E-30 for information on setting up the network.

Infrared connection


The infrared input allows the connection of external IR receivers, when the Solo front panel IR receiver is fully or partially obstructed. The tip is the modulated signal, sleeve is ground.

A supplier of infra-red receivers and emitter accessories and systems is Xantech. See www.xantech.com for more information, or ask your Arcam dealer

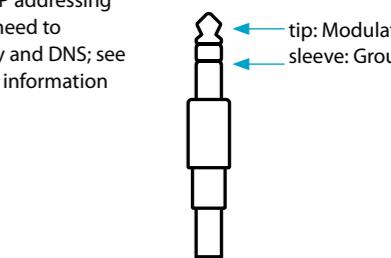

NOTE

The **IR** input is designed for modulated signals. If the external IR receiver demodulates the IR signal, it will not work. Also the unit does not provide power for external receivers on the **IR** jack, therefore an external power source will be required.

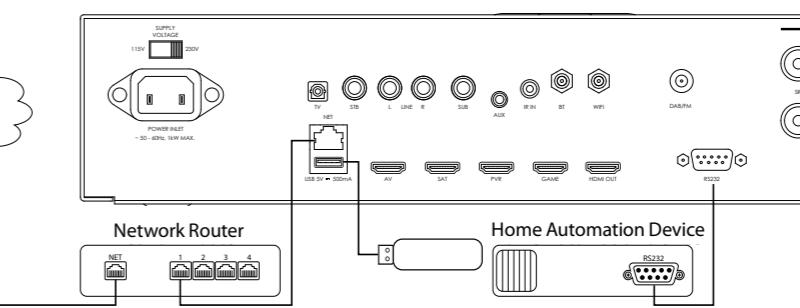

antenna connectors

DAB/DAB+ and FM aerial

The Solo is fitted with an FM and a DAB/DAB+ receiver module. The type of aerial you need depends on your listening preferences and the local conditions. Your Solo is capable of superb radio reception, but only if it is receiving a good quality transmission signal.

Try the aerials supplied with your unit. If you are in a medium to strong signal area, these should be adequate for good reception. In areas with poor signal strength, you may require a roof or loft mounted aerial.

Contact your local Arcam dealer or aerial installation experts for advice about local reception conditions.

In strong signal areas, the DAB/DAB+/FM 'T' wire aerial supplied can be used with reasonable results. Mount the aerial as high up as possible on a wall.

In the UK the 'T'-elements need to be positioned vertically for DAB/DAB+ reception since broadcasts are vertically polarised. In other localities, check with your Arcam dealer or try both horizontal and vertical positions for best reception.

Try each usable wall of the room to see which gives best reception and use tacks or adhesive tape to secure the aerial in a 'T' shape, but note that no tacks should come into contact with the internal wire of the aerial.

In weak signal areas, a high-gain, externally-mounted or roof-mounted aerial is desirable in order to receive the highest number of services.


In Band III transmission areas (such as the UK), use a multi-element Yagi aerial with the elements mounted vertically, as the transmissions are vertically polarised. If you are close to more than one transmitter, use an omnidirectional or folded dipole aerial.

If the DAB/DAB+ services in your area are transmitted on L-band, then ask your dealer for advice for the best aerial to use.

Bluetooth/Wi-Fi antenna

The Solo is supplied with both a Bluetooth and Wi-Fi antenna.

The two antennae are identical and need to be inserted into the connectors labelled BT and WiFi located at the rear of the Solo.

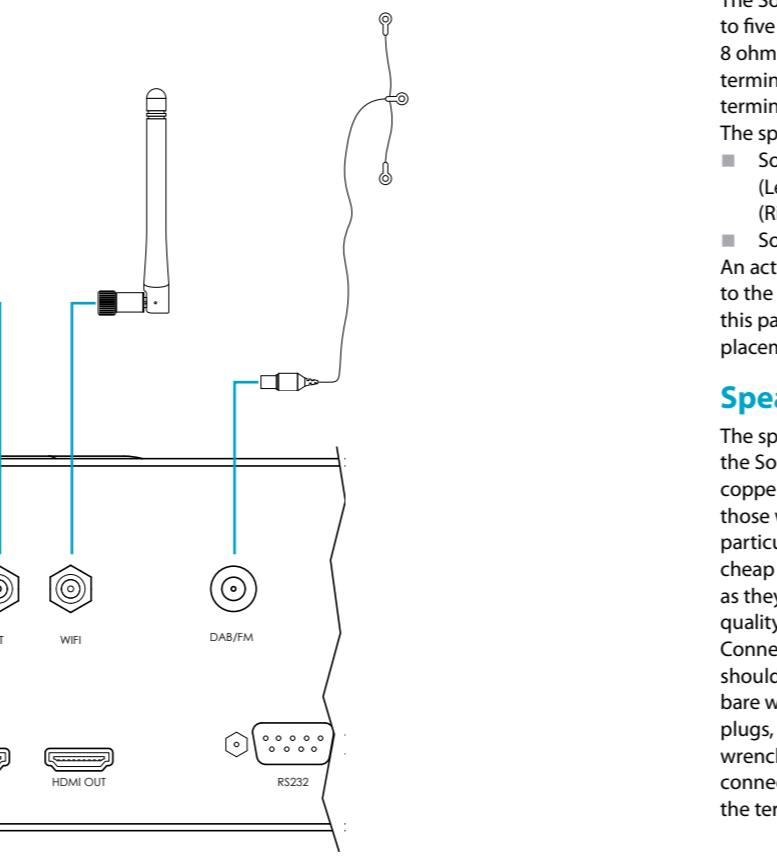

speakers

Connecting speakers

The Solo is designed to drive a set of up to five speakers, rated between 4 and 8 ohms. The unit is fitted with speaker terminals that can accept either spade terminals or bare wires.

The speakers are:

- Solo movie: LS (Left Surround), L (Left), C (Centre), R (Right) and RS (Right Surround).
 - Solo music: L (Left), R (Right)
- An active subwoofer may be connected to the SUB output. See the diagram on this page for recommended speaker placement.

Speaker cables

The speakers should be connected to the Solo using good-quality, high-purity, copper cables. Solid core cables, or those with surface-only conductors, are particularly suitable. Bell wire and very cheap speaker cables should be avoided, as they significantly degrade the sound quality.

Connections to the speaker terminals should always be tight, whether using bare wires, spade connectors or "banana" plugs, but do not use tools such as pliers, wrenches or spanners to tighten the connectors as these may cause damage to the terminals.

Speaker positioning

The advice given here is a general guideline for setting up speakers. Refer to the documentation supplied with your speakers for more precise information. Visit www.dolby.com for useful information on listening-room layouts.

Room acoustics

Your room's shape and how it is furnished will affect the sound you hear. For instance, too many bare surfaces may cause a harshness to the sound. Carpets, wall-hangings and curtains can all help. If you have a choice of listening rooms, avoid one that is perfectly square or has one dimension exactly twice another. Such a room can aggravate resonances that colour the sound.

The closer you place a speaker to corners and the intersection of wall and floor or wall and ceiling, the stronger the bass output, which may over-emphasise the bass. Moving a speaker just a few inches can sometimes make a big difference

Subwoofer

The location of the subwoofer will affect the overall sound quality. Placing it next to a wall or in a corner will often boost efficiency and give a cleaner low bass sound. However, all rooms react differently and we recommend that you experiment with positioning by allowing at least 15cm clearance between the walls and the unit.

Speaker setup


Proper speaker placement is the key to achieving the best home theatre sound (see diagrams). As a rough guide, speakers should be placed on rigid stands about 15cm from the rear wall and at least 60cm from any side wall.

Speakers should never be placed on the floor (unless they are floor-standing speakers), or in corners. Speaker drivers should be at, or a little above, ear level when seated. If possible, centre your seating area between the surround speakers.

Sound will depend on the acoustics of the listening room so experimenting with speaker positioning is very worthwhile.

Speaker stands

The more firmly a speaker is held, the better it will sound. We recommend the use of rigid metal stands of 40–60cm height.

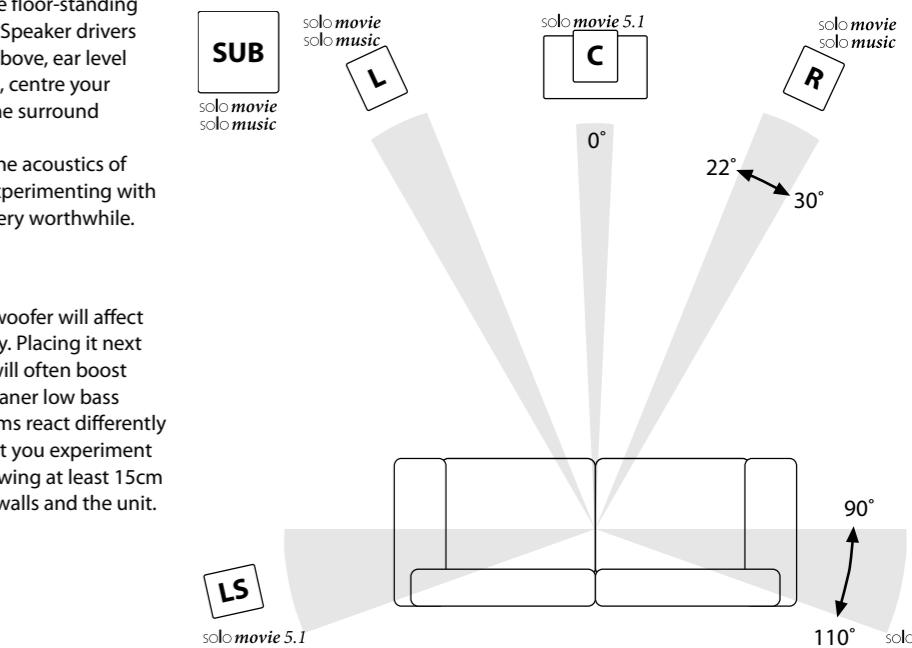

disc & file formats

Playable discs

The Solo movie supports the following disc types:



Blu-ray 3D



Blu-ray Disc



DVD-Video



DVD-R



DVD-RW



CD-Audio



CD-R



CD-RW



Super Audio CD

The Solo music supports the following disc types:



CD-Audio



CD-R



CD-RW



Super Audio CD

Playback of the following file formats are supported (over Disc, USB and network) by both Solo movie and Solo music:

- FLAC, up to 24 bit, 192 KHz
- WAV, up 24 bit, 192 KHz
- AAC, up to 24 bit, 96 KHz
- AIFF, up to 24 bit, 192 KHz
- OGG, up to 24 bit, 192 KHz
- MP3, up to 320 kbps, 48 KHz
- WMA, up to 192 kbps, 48 KHz

Supported video formats (Solo movie only)

Video file compatibility with your player is limited as follows:

- Maximum resolution size: 1920x1080 (W x H) pixels
- File extensions: .wmv, .avi, .mp4, .mpeg, .mpg, .vob, .mkv (Note: Files encoded by DivX cannot be played on this player)
- Playable Audio format: Dolby Digital, DTS, MP3, WMA, AAC
- Sampling frequency: within 32 to 48kHz (WMA), within 8 to 48kHz (Mp3), within 32 to 320kbps (WMA), within 32 to 320kbps (Mp3)
- Bit rate: within 32 to 192kbps (WMA), within 32 to 320kbps (Mp3)
- Not all of the WMA and AAC Audio formats are compatible with your player.
- Blu-ray, DVD, or USB 2.0 are recommended to play back HD WMA movie files.
- Your player does not support files that are recorded with GMC (Global Motion Compensation) or Qpel (Quarter pixel). Those are video encoding techniques in MPEG4 standard, like DivX.

Region coding (Solo movie only)

Blu-ray disc players and Blu-ray or DVD discs are assigned region codes according to the region in which they are sold. If the region codes do not match, the disc will not play.

Blu-ray Disc Area region code	
A	North America, Central America, South America, Korea, Japan, Taiwan, Hong Kong and South East Asia
B	Europe, Greenland, French territories, Middle East, Africa, Australia and New Zealand
C	India, China, Russia, Central and South Asia
All	All areas

Symbols indicating disc will play in North America:
Blu-ray Discs:

DVDs:

Symbols indicating disc will play in Europe:
Blu-ray Discs:

DVDs:

basic operation

Operating your Solo

Introduction

This section explains the basic operation of the Solo. Note that it may be necessary to configure the Solo correctly for optimum performance. Details regarding system settings can be found in "settings menu" on page E-28.

Switching on

Switch the unit on by pressing the power button. The status LED glows green when the unit is powered up. If the power button is pressed (or power is removed) whilst in standby, the unit will enter standby mode when power is re-applied.

Standby

The Solo has a standby mode which can be entered by pressing on the remote control. When in standby mode, the display is blank and the POWER LED glows red.

If the unit is to be left unused for an extended period, we recommend that you disconnect it from the mains supply to save power.

To switch on from standby, press the button on the remote control.

A particular input source can also be selected using the source option from the home screen, as described in the previous section.

Home screen

Press the button at any time to display the Solo home screen. The home screen will allow you to access the following:

	Start playing a CD/DVD/BD disc. See "playing a disc" on page E-25.
	Allows you to play multimedia files. See "network/usb operation" on page E-26.
	Network input (e.g UPnP devices), USB solid-state device (e.g. pen drive) input
	Internal disc player
	Audio-Visual HDMI input
	Satellite HDMI input
	Personal Video Recorder HDMI input
	Game console HDMI input
	Phono jack analogue audio input
	3.5mm analogue audio input
	Set Top Box coaxial digital audio input
	TV optical audio input

Selecting a source

To select a particular source, press the INPUT- or INPUT+ buttons on the front panel until that source is shown on the front panel display, or press the corresponding source button on the remote (see "Device mode / Source keys" on page E-19).

The following sources are available:


	Internal DAB/FM tuner
	Internal Bluetooth input
	Network input (e.g UPnP devices), USB solid-state device (e.g. pen drive) input
	Internal disc player
	Audio-Visual HDMI input
	Satellite HDMI input
	Personal Video Recorder HDMI input
	Game console HDMI input
	Phono jack analogue audio input
	3.5mm analogue audio input
	Set Top Box coaxial digital audio input
	TV optical audio input

Volume control

The volume can be increased or decreased either by turning the top panel rotary control (see "Top panel controls" on page E-9) or by using the volume control button on the remote control (see "Volume control" on page E-19).

Headphones

To use headphones with the Solo, plug the headphones into the phones socket on the front panel. When headphones are plugged into the front panel phones socket, the speaker and sub outputs are muted and the audio will be down-mixed to two channels (2.0).

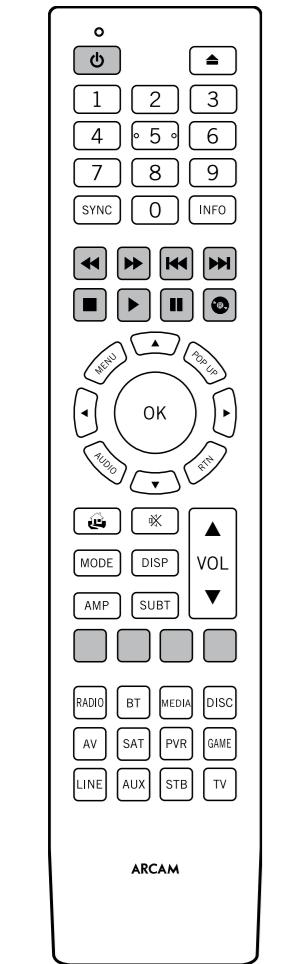

The Solo universal remote control

The Solo remote is a sophisticated 'universal' backlit remote control that can control up to eight devices. It is pre-programmed for use with the Solo and with its extensive built-in library of codes, it can also be used with thousands of third party audio-visual components, such as TVs, satellite receivers, set-top boxes, PVRs, etc.

The Solo remote is a 'learning' remote, so you can teach it almost any function from an old single-device remote.

Inserting batteries into the remote control

- Open the battery compartment on the back of the handset, by removing its cover.
- Insert two 'AAA' batteries, as indicated in the battery compartment.
- Place the battery compartment cover back firmly into its locked position with a click.

Using the remote control

Please keep in mind the following when using the remote control:

- Ensure there are no obstacles between the remote control and the remote sensor on the Solo. The remote has a range of about 7 metres. (If the remote sensor is obscured, the IR remote control input jack on the rear panel is available. Please consult your dealer for further information.)
- Remote operation may become unreliable if strong sunlight or fluorescent light is shining on the remote sensor of the Solo.
- Replace the batteries when you notice a reduction in the operating range of the remote control.

NOTE

The Solo remote complies with Part 15 of the FCC rules

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide a reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet or a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Useful information

Backlight

A backlight comes on for eight seconds whenever a key is pressed. This helps you use the handset in subdued lighting conditions.

Power LED blinks

Short blinks indicate a valid key press. Multiple short blinks convey information (such as a device code) or signal the beginning and successful completion of a programming sequence. The symbol '...' is used in the manual to indicate a power LED blink.

Timeouts and unassigned keys

Time out – After 30 seconds, the remote exits the programming state and returns to normal operation.

Stuck key timeout – After any key is pressed continuously for 30 seconds, the remote control stops sending IR transmission to conserve battery life. The remote control remains off until all keys are released.

Unassigned keys – the remote ignores any unassigned key presses for a particular device mode and does not transmit IR.

Low voltage indicator

When the batteries are running down, the LED flashes five times whenever you press a button:




If this happens, fit two new AAA alkaline batteries as soon as possible.

Device mode / Source keys

As the remote can control your Solo as well as a range of other equipment, many of the buttons have more than one function depending on the 'device mode' selected on the remote control.

The device mode keys (shown below) select the source on the Solo. If one of these keys is pressed briefly, a command is transmitted to change the source on the unit.

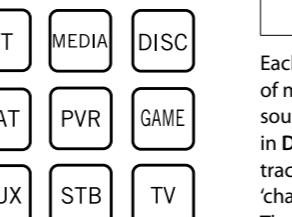

Each device mode changes the behaviour of many of the remote keys to control the source device appropriately. For example: in DISC mode **◀** plays the previous CD track, but in AV mode **◀** issues the TV 'channel down' command.

The remote control remains in the last selected device mode, so it is not necessary to press a device mode key before every command key if all you are doing is playing or skipping tracks on a CD, for example.

RADIO

Internal DAB/FM tuner

BT

Internal Bluetooth input

MEDIA

Network input (e.g UPnP devices), USB solid-state device (e.g. pen drive) input

DISC

Internal disc player

AV

Audio-Visual HDMI input

SAT

Satellite HDMI input

PVR

Personal Video Recorder HDMI input

GAME

Game console HDMI input

LINE

Phono jack analogue audio input

AUX

3.5mm analogue audio input

STB


Set Top Box coaxial digital input

TV


TV optical audio input

Navigation keys

The navigation keys steer the cursor in setup menus or on-screen menus. They also replicate the navigation functions of original remotes supplied with other home entertainment devices in your system. The OK key confirms a setting.

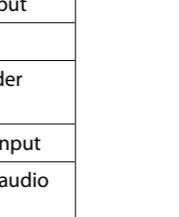

Volume control



For example, if you are listening to a CD, you will probably have the Solo in CD device mode to control the CD player. You can use the volume controls on the remote directly to adjust the volume of the Solo without first having to press the AMP key to put the remote into AMP device mode. The volume buttons 'punch through' the CD device mode on the remote to the AMP device mode. Volume 'punch through' can be disabled individually for any device mode if desired.

Customising the Solo remote

The remote control offers a code learning feature that allows you to copy up to 16 functions from an original remote control onto the remote keypad. For details of this, and other customisation features, see "customising the remote" on page E-22.

AMP device mode

The **AMP** device mode button configures the remote to control the Solo. Pressing this button does not affect the currently selected input on the Solo.

The functionality of the Solo is context sensitive for the internal sources and is described in the following table.

∅	Toggles Solo power between standby and powered on.
▲	Open/close disc tray.
0...9	Searches for and plays the track corresponding to the key pressed when playing a CD.
SYNC	Lipsync. Delays may be introduced into the video signal by video processing which causes a mismatch between the audio and video timing. You will notice this by speech sound being out of synchronization with the lip movements in the video. To compensate for this, you can adjust the lip sync delay. Press the sync button and use the ◀ and ▶ navigation buttons. Press again to exit the lipsync trim menu.
INFO	Info cycles through the information displayed on the lower left portion of the front panel display
◀	Rewind CD, DVD or BD.
▶	Fast Forward CD, DVD or BD.
◀◀	Skip back to the beginning of the current/previous track on CD, DVD or BD.

	Skip forward to the beginning of the next track on CD, DVD or BD.	DISP	Cycles panel option
	Stop playback on CD, DVD or BD.		Increases volume
	Play content on CD, DVD or BD.	AMP	Resets
	Pause playback on CD, DVD or BD.	SUBT	Cycles option or BD
IU	Disc menu.	RED	Red b
UP	Activates BD pop up menu, if available.	GREEN	Green
N	Return from menu on BD/DVD menus.	YELLOW	Yellow
IO	Selects between the available audio tracks on a BD/DVD	BLUE	Blue b
	Navigate the files and menus on the screen. OK selects the highlighted file or enters the highlighted menus on the screen - equivalent to 'Enter' or 'Select' on some remote control.	RADIO	Intern
	BT	Intern	
	MEDIA	Netwo	
	DISC	Intern	
	AV	AV HD	
	SAT	Satelli	
	PVR	PVR H	
	GAME	Game	
	LINE	Phon	
	AUX	3.5mn	
	STB	STB di	
	TV	TV op	

through the front	Bluetooth commands												
play's brightness	The Bluetooth audio input is selected by pressing BT in AMP device mode on the remote control. When connected to an audio streaming device, the keys below are used to navigate music tracks.												
decrease amplifier	<table border="1"> <tbody> <tr> <td></td><td>Selects the previous/next track in the current playlist.</td></tr> <tr> <td></td><td>Play current track.</td></tr> <tr> <td></td><td>Pause current track.</td></tr> </tbody> </table>		Selects the previous/next track in the current playlist.		Play current track.		Pause current track.						
	Selects the previous/next track in the current playlist.												
	Play current track.												
	Pause current track.												
remote to AMP mode	Network media /USB commands												
through subtitle	When using the network client, the keys below are used to navigate music files in AMP device mode.												
f available on DVD	<table border="1"> <tbody> <tr> <td></td><td>Navigates the files on screen. OK selects/plays the highlighted file.</td></tr> <tr> <td></td><td>Selects the previous/next track in the current playlist.</td></tr> <tr> <td></td><td>Play current track.</td></tr> <tr> <td></td><td>Pause current track.</td></tr> <tr> <td></td><td>Stops playback.</td></tr> <tr> <td></td><td>Returns navigation to the top level of the network client menus ('Home').</td></tr> </tbody> </table>		Navigates the files on screen. OK selects/plays the highlighted file.		Selects the previous/next track in the current playlist.		Play current track.		Pause current track.		Stops playback.		Returns navigation to the top level of the network client menus ('Home').
	Navigates the files on screen. OK selects/plays the highlighted file.												
	Selects the previous/next track in the current playlist.												
	Play current track.												
	Pause current track.												
	Stops playback.												
	Returns navigation to the top level of the network client menus ('Home').												
on for BD													
button for BD													
button for BD													
on for BD													
FM/DAB tuner input													
<i>Bluetooth</i> input													
USB media input													
disc input													
input													
HDMI input													
DLL input													
Console HDMI input													
Dig analogue input													
Dig analogue input													
Digital coaxial audio													
Digital audio output													

PVR d

The PVR device mode button
as the source.
If configured to work with
(hard disc) video recorder

	o	remote can subsequently control device.	ice.
	Toggles Solo power between standby and powered on		
o	Functions as original remote number key – usually for channel selection		
o	Display INFO or OSD (On Screen Display)function, if available		
E	Selects the Library or Media function		
	Rewind		
	Fast forward		
	Channel down		
	Channel up		
	Stop playback		
	Play content		
	Pause content		
	Record		
J	Opens the EPG (Electronic Program Guide) on some satellite and cable set top boxes		
	Navigate setup and programme selection menus. OK confirms a selection (equivalent to 'Enter' or 'Select' on some remotes)		
	Returns navigation to the top level of the menu ('Home')		
O	Selects the Help function		

through

button for I

The TV device m
Solo remote to c
television or othe
this button also

ngles power between
ndby and on. (Some TVs
uire you to use a number
to turn them on).
nctions as original remote
mber key – usually for
nnel selection
play INFO or OSD (On
reen Display)function, if
ilable
annel down
annel up
lays picture information;
function is TV specific.
de
vigate setup and
gramme selection menus.
confirms a selection
equivalent to 'Enter' or
'Select' on some remotes)
urns navigation to the top
el of the menu ('Home')
les through subtitle
tions, if available
ets remote to AMP mode
D key for TV
EEN key for TV
LLOW key for TV
IF key for TV

• GAME, LINE and AU
oice modes

AUX, AV, GAME and LINE device
The buttons select **AUX, AV, GAME and LINE** as the source.

customising the remote

NOTE

On the following pages, a single 'blink' of the remote's power LED is indicated by the symbol .

Code learning

The supplied remote comes with a complete library of pre-programmed codes. After you have set up the remote for your device, you may find that there are one or more functions on your original remote which do not have a place on the keypad. For convenience, the remote offers a Code Learning feature that allows you to copy up to 16 functions from an original remote control onto the remote keypad.

Before you start, make sure that:

- The original remote control is working correctly.
- The remotes are not pointing at your device.
- The remotes have fresh batteries.
- The remotes are not in direct sunlight or under strong fluorescent lights.

NOTE

Learned functions are mode-dependent. You could assign up to eight different functions to a single key – a separate learned function for each mode.

Direct code setup (Method 1)

The first method is to program the remote with the 3-digit code number for the device you wish to control – see "device code tables". Make a note of the suggested number or numbers – the most popular code is listed first. Now power on the device.

1. Press the Device key for the product you want to set up, together with the 1 key. Hold down both buttons for three seconds until the LED stays lit.
2. You are now in setup mode, and you can release the buttons.
3. Enter a 3-digit code for the device.
4. If the 3-digit code number you entered is correct for the device, it will turn off. If it doesn't turn off, enter the next code number from your list until the device does turn off.
5. Once you have found the correct code, press the Device key again. The LED blinks three times  to confirm that the code has been successfully stored.

Library search setup (Method 2)

Library search allows you to scan through all the codes contained in the remote's memory. It can take a lot longer than the previous method, so only use this method if:

- Your device does not respond to the remote after you have tried all the codes listed for your brand.
 - Your brand is not listed at all in the Device Code tables.
1. Press the Device key for the product you want to set up, together with the 1 key. Hold down both buttons for three seconds until the LED stays lit.
 2. Point the remote control at the product you wish to control and press the  or  button on the navigation pad. Each time the  button is pressed, the code counts up (or down) one code number with a signal to power off the device.
 3. Continue pressing the up or down button, in approximately one second intervals, until the device turns off. (DO NOT alternate the up and down button – you need to move in only one direction.)
 4. To store the correct code, press the Device key again. The LED blinks three times  to confirm that the code has been successfully stored.

Learning setup (Method 3)

The third method involves 'teaching' the Arcam remote from the original remote for the device. The two remotes should be facing each other, approximately 10 cm apart.

- Your device does not respond to the remote after you have tried all the codes listed for your brand.
 - Your brand is not listed at all in the Device Code tables.
1. Press the Device key for the product you want to set up, together with the 3 key. Hold down both buttons for three seconds until the LED stays lit.
 2. Press the button on the Arcam remote that you want to assign a command to. The LED blinks once  indicating that the remote is ready to learn the command.
 3. Press and hold the appropriate key on the other remote until the LED blinks twice . This indicates the Arcam remote has learned the command from your other remote.
 4. Continue learning the commands from your other remote by pressing the next button on the remote and repeating steps 2 and 3.
 5. Once the remote has learned all the selected commands, press and hold the Device key you used to enter learning together with the Numeric 3 key to store the learned commands.

NOTE

If the Arcam remote LED blinks five times  there was an error in the learning process.
The AMP and RADIO keys do not learn commands.

Important notes

- Once you start a Code Learning session, you have approximately ten seconds to conduct each step. Any longer, and a timeout means that you'll have to start the process again.
- The Learning feature is mode-specific – you can copy one feature *per mode* onto a key
- The remote can learn approximately 16 functions in total.
- To replace a learned function, simply assign a new function to the same key.
- Learned functions are retained when you change batteries.
- If Code Learning fails, try altering the distance between the two remotes; make sure that the ambient light is not too bright.

Deleting the learned data

To delete all the learned data for a device:

1. Press the Device key for the product you want to set up, together with the 3 key. Hold down both buttons for three seconds until the LED blinks.
2. Press the INFO key and count the number of blinks ( =1,  =2,  =3, etc.). There is a time gap between digits. (Note that '0' is represented by ten blinks: ).
3. Press and hold down the key on which you want to delete the data for three seconds. The LED blinks twice . If any further key press is made, the remote escapes from erase mode without deleting the learned data.
4. If any further key press is not made for 30 seconds after the LED blinks twice , the remote leaves erase mode without deleting the learned data.
5. If any further key press is not made for 30 seconds, the LED blinks twice , the remote gets out of the erase mode automatically without deleting the learned data.
6. If you press the Device key one more time within 30 seconds after LED blinks twice , you can finish the erase mode deleting all the data learned on the Device. The LED blinks three times  to confirm.

Reading stored code numbers




- When you first unpack your remote and insert the batteries, it is able to control certain Arcam components automatically (e.g. Amplifiers, Tuners and Disc Players). We achieve this by programming specific Arcam device codes onto the relevant device mode keys, then locking the device modes so you don't reprogram them inadvertently.
- If you want to override these locked default settings – to control a third-party amplifier, for example – you will first need to unlock AMP mode before setting up the remote using one of the learning methods described on the previous page.

Locking/Unlocking a specific device mode

Device mode	Default status	Default codes
AMP	Locked	001 (Arcam code 16)
AV	Unlocked	Code learning only
SAT	Unlocked	128 (Sky+)
PVR	Unlocked	018 (Humax 9300)
GAME	Unlocked	Code learning only
LINE	Unlocked	Code learning only
AUX	Unlocked	Code learning only
STB	Unlocked	030 (Bush, Goodmans, Grundig)
TV	Unlocked	108 (Philips TV)

playing a disc

Note that you need to change the system code on the product you wish to control, as well as the remote.

1. The device keys that may be Locked or Unlocked.
2. Lock and Unlock are toggles (they change from Lock to Unlock to Lock, etc.).
3. Press and hold the Device and 6 keys together for three seconds.
4. The power LED stays lit, showing that it is in Lock/Unlock setup mode.
5. If there is no further key input for 30 seconds, the LED goes off and the remote leaves Lock/Unlock setup mode.
6. To verify the status of a device, press the 3 6 9 keys in sequence:
7. If Lock is set, the LED blinks three times: .
8. If Unlock is set, the LED blinks five times: .
9. If you press a valid Device key within 30 seconds, the LED blinks three times:  and the remote leaves Lock/Unlock setup mode.

Controlling the volume of other devices

By default, the volume keys and mute key control the amplifier volume.

You can configure these buttons so they send volume commands to another device. In the following example, the volume commands are sent to a linked AV device (your television, for instance):

1. Press **AV+5** for three seconds, until the LED lights and stays on.

2. Press **VOL UP**.

3. Press **AV** again. The LED blinks three times .

The volume and mute keys will now send the volume commands to the TV.

To set the volume buttons to control the amplifier once more, repeat the above steps, except press **AMP** in step 3.

Hidden commands

Command	Effect
AMP+▲	Sends a Power On command
AMP+▼	Sends a Power Off command

Factory default reset

You can reset your remote to the original factory default settings.

Press and hold both the  (HOME) and **MENU** keys for about five seconds until the power LED blinks five times .

The volume and mute keys will now send the volume commands to the TV.

To set the volume buttons to control the amplifier once more, repeat the above steps, except press **AMP** in step 3.

Device codes

The tables that begin on "device code tables" on page DC-1 (at the end of this user manual) list 3-figure codes for different manufacturer's devices. Use these when setting your remote up to control your devices, as described in "Direct code setup (Method 1)" on page E-22.

If more than one code number is listed, try the first number. If the results are unsatisfactory, continue trying the numbers for that manufacturer to get the best 'fit' with the functionality required.

Press and hold both the  (HOME) and **MENU** keys for about five seconds until the power LED blinks five times .

All programming and setup codes that you have entered into the remote are erased and the remote returns to the original factory default settings.



Disc information

Some discs contain multiple audio streams, such as a standard Dolby Digital 5.1 soundtrack and a high definition Dolby TrueHD surround soundtrack. The audio stream can be changed during playback. The secondary audio (e.g. director's commentary) of Blu-Ray Discs (if present) can also be changed if alternatives are available.

Note: Audio language is changed using the settings menu: see "Language" on page E-30.

Press **AUDIO** to cycle through the available audio streams.

Soundtrack selection

Bonusview and BD-Live are features of the Blu-ray Disc format. Bonusview provides Picture in Picture and Virtual Package functions for compatible discs. BD-Live discs additionally provide a variety of features via the Internet. Virtual Package/BD-LIVE data must be saved to a USB memory device connected to the Solo. To enjoy these functions, connect a USB memory device (minimum 1 GB capacity; 2 GB or more is recommended) supporting FAT 32 and USB 2.0 High Speed (480 Mbit/s) to the USB connector. (For details, refer to "USB connection" on page E-13)

If there is insufficient storage space, the data is not copied/downloaded. Delete unneeded contents or use a new USB memory device.

If a USB memory device containing other contents (previously recorded) is used, the video and audio may not play back properly.

If the USB memory device is disconnected from this unit during playback of Virtual Package/BD-LIVE contents, playback of the disc will stop.

Some time may be required for the contents to load (read/write).

BD-Live

The Solo is compatible with BD-Live, allowing for a variety of functions when used with BD-Live compatible discs. BD-Live allows content such as the latest movie trailers and BD-J interactive games to be downloaded from the Internet to USB storage.

Available BD-Live functions are entirely dependant on the Blu-ray disc being played. Consult the disc manual for operational information.

NOTE

The Solo must have an active Internet connection to use BD-Live functions. Refer to "Network" on page E-30

BD-Live Internet access can be disabled using the **BD-Live Internet** access setting in the **System** menu. See "Network" on page E-30

Playback operations may require use of the colour-coded keys on the remote control.

Virtual Package

Blu-ray discs supporting Virtual Package allow for extra content to be automatically transferred from the disc or from the Internet to USB storage for interactive viewing. Features available include secondary video and audio, subtitles and movie trailers.

NOTE

Playback methods are disc-dependant – refer to the disc manual.

Playback operations may require use of the colour-coded keys on the remote control.

network/usb operation

Playing media files

The **MY MEDIA** icon is shown on screen when the Solo is first switched on. To play video, image files (e.g. photographic slideshows) or audio files, highlight the **MY MEDIA** icon and press **OK**.



Video and audio files can be played from the uPnP Network, USB media or CD-R/RW discs. For a list of supported audio and video file formats, see "disc & file formats" on page E-16

To play media files, insert the USB device or data disc into the player. The **MY MEDIA** menu is displayed with music, video and/or picture file symbols:

To play all available files without making any selection, press **OK** to go to the Play menu, described below.

To select particular files, use the **▲/▼** cursor keys on the remote control to highlight the media device to navigate the **MY MEDIA** menu. Press **OK** to select the media device and display the file and folder contents.

NOTE

When there are no playable files or folders within the selected media or folder, 'Empty' is displayed.

Rapid playback

Press **◀◀** or **▶▶** during playback to activate rapid reverse or forward playback. Further button presses change the playback speed. Speeds of 2x, 4x, 8x, 16x and 32x normal speed are available. Press **▶** to resume normal playback.

MusicLife App

MusicLife enables you to control your Solo product from your iOS device.

It can be used to stream music to your product from a UPnP server such as a NAS drive, or music stored locally on the iOS device.

Additionally, the app features a remote control interface, which contains the most common features of the infrared remote control, as well as useful information such as the current input, volume, audio decoder and the units IP address

Play a music file

Use the **▲/▼** cursor keys to highlight a music file and press **OK** or **▶** to start playback.


Play a video file

Use the **▲/▼** cursor keys to highlight a video file and press **OK** or **▶** to start playback. Press **DISPLAY** to view relevant video file playback information.

NOTE

The Solo will need to have the "Network Media" option enabled. For instructions on how to do this, please refer to "System" on page E-32.

Minimum OS requirements for the app: iOS 7

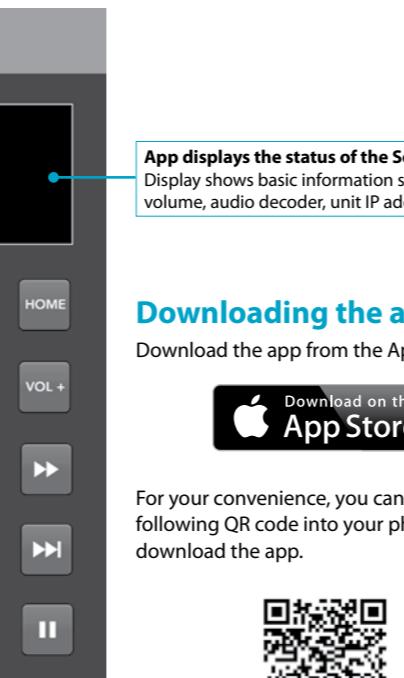

App displays the status of the Solo

Display shows basic information such as input, volume, audio decoder, unit IP address.

Downloading the app

Download the app from the App Store®.



For your convenience, you can scan the following QR code into your phone to download the app.



listening to radio

Tuning/Channel selection

The Solo is fitted with a FM, DAB/DAB+ (digital radio) tuners. DAB/DAB+ broadcasts are not available in all locations.

This section deals with tuner operation, for information on setting up the tuner and installing aerials see "DAB/DAB+ and FM aerial" on page E-14.

When a tuner input is selected, the OSD shows a list of radio presets plus an information panel giving all available information about the current frequency (for FM) or station (for DAB/DAB+).

The front panel will also give the same

information, pressing the **INFO** key

will cycle through the various items of information:

FM

- Programme type (if available)
- Radiotext (if available)
- Audio format
- Signal strength

DAB/DAB+

- Programme type
- Radio text (if available)
- Bit-rate and CODEC of transmission
- Audio format
- Signal quality

DAB/DAB+ digital radio

Digital Audio Broadcasting (DAB/DAB+) radio is becoming more widely available. See www.worlddab.org/country-information for information on DAB/DAB+ availability.

You will need to scan for available stations before being able to listen to them.

To scan for DAB/DAB+ stations, first select the DAB/DAB+ tuner then press and hold the **OK** key. The Solo will then scan all the DAB/DAB+ radio frequencies and compile a list of the stations that are available.

In Europe, the internal FM radio is capable of receiving RDS (Radio Data System) radiotext signals that are transmitted on some stations. The RDS information typically includes the radio station name, the music or speech genre as well as additional information related to the current programme. On music stations this is often information on the currently playing track.

FM analogue radio

Incremental frequency tuning on FM radio is done using the **◀◀** and **▶▶** buttons on the remote control in **RADIO** device mode.

You can scan to the next (or previous) strong signal by using the **◀◀** and **▶▶**. You can stop a scan at any time by pressing either **◀◀** or **▶▶** button.

The front panel will also give the same

information, pressing the **INFO** key

will cycle through the various items of

information:

Deleting presets

When in tuner browse mode (using **◀◀** and **▶▶** to scroll through the presets), the yellow button on the remote is used to delete the currently highlighted (but not playing) station or frequency.

settings menu

The Settings menus allow you to configure all aspects of your Solo. The next few pages will go through the menu items and explain their function. The Settings menus may look daunting if you are new to setting up home cinema, but the majority of them need only be configured once when you first install the system. The best way to view the Settings menus is on your display device (TV or projector), using the on-screen display (OSD) capability of the Solo. This is highly recommended when setting up the Solo movie. To view the OSD for the system setup, connect the video output to your display device. However, setting up the Solo music may be performed using the Solo front panel display only, should an external display device is not available. The diagrams in this section will aid you with navigating through the settings menu and all the available options.

Entering the settings menu

The SETTINGS icon is shown on the screen when the Solo is first switched on. If the main menu is not currently displayed, press  on the remote control to display it. Note that during the playback of music, video or JPEG files, further button presses may be required to exit the folder structure.

With the SETTINGS icon highlighted, press  to enter the Settings menu

Navigating the menus

The Solo menus can be navigated by using the cursor (arrow) keys on the remote control.

1. Use the  and  keys to navigate up and down the main headings in the left-hand panel.
 2. With the main section you require highlighted, use the  key to enter the middle column.
 3. Use the  and  keys to navigate up and down the options in the middle column. Some options may be greyed out because they are not currently selectable.
 4. Pressing  selects a setting: use the  and  keys to change the setting.
 5. Press  to confirm the setting. Go back to step 4 to adjust any other settings in the current section.
 6. Press  or  to return to the previous screen if you want to select another section to adjust.
- Press the  button to return to the home screen at any time.

Display

solo movie

With the SETTINGS icon highlighted on your display, press  to show the 'Display' options.

Press  to move to the options in the second column.

With the main section you require highlighted, use the  key to enter the middle column.

Use the  and  keys to navigate up and down the options in the middle column. Some options may be greyed out because they are not currently selectable.

Pressing  selects a setting: use the  and  keys to change the setting.

Press  to confirm the setting. Go back to step 4 to adjust any other settings in the current section.

Press  or  to return to the previous screen if you want to select another section to adjust.

Press the  button to return to the home screen at any time.

Resolution – Set the video resolution of the HDMI output (applies to the internal disc player only):

- **Auto**: Sets the TV's preferred resolution.
- **4K2K**: Ultra HD video.
- **1080p**: Full HD progressive video.
- **1080i**: Interlaced HD video.
- **720p**: Progressive HD video.
- **480p/576p**: 480 lines (NTSC) or 576

lines (PAL) progressive video
■ **480i/576i**: 480 lines (NTSC) or 576 lines (PAL) Standard Definition interlaced video.

TV System – Set the video signal format. If the colour or picture quality of analogue video appears incorrect, change this setting. It should not need to be adjusted in normal use. You can select NTSC (the USA and Canada video standard), PAL (the Europe, Australia and China video standard) or AUTO which will output the frame rate required by the TV.

HDMI Color Space – 'Colour Space' refers to the number of individual colors that can be displayed on the screen. If you know the color space capability for the connected TV, you can match it by selecting one of these options. We recommend you select 'Auto'.

HDMI Deep Color – sets the level of Deep Colour processing applied to the HDMI video output. You can select 'Auto' or 'Off'. If this option is set to Auto and your TV supports Deep Color, the screen displays colours at 30-, 36- or 48-bit accuracy (compared to the 24-bit accuracy of standard colour).


HDMI 1080p 24Hz – You can select 'Auto' or 'Off'. Movies are recorded on film at a rate of 24 pictures (frames) per second. Many of the movies on Blu-ray Discs are placed on the discs at this frame rate. If your TV

supports 24 frames per second, but you would prefer to view the video at a higher frame rate, you should turn off HDMI 1080p 24Hz.

NOTE

- The connected equipment (AV receiver, TV/projector) must be 1080/24p compatible
- The output resolution must be set to **1080p or HDMI Auto**

HDMI 3D – To turn the 3D feature (if available) on or off. You can select 'Auto' or 'Off'

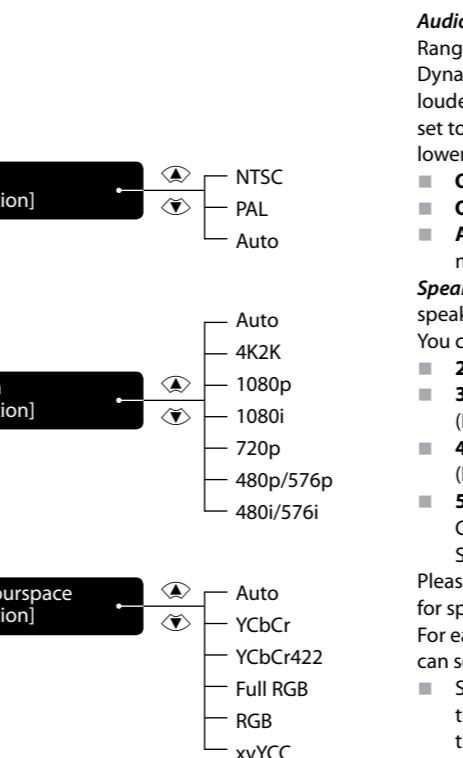

Display settings diagram applies to solo movie

Audio

solo movie

With the SETTINGS icon highlighted on your display, press  to show the 'Audio' options.

Press  to move to the options in the second column.

With the main section you require highlighted, use the  key to enter the middle column.

Use the  and  keys to navigate up and down the options in the middle column. Some options may be greyed out because they are not currently selectable.

Pressing  selects a setting: use the  and  keys to change the setting.

Press  to confirm the setting. Go back to step 4 to adjust any other settings in the current section.

Press  or  to return to the previous screen if you want to select another section to adjust.

Press the  button to return to the home screen at any time.

Audio DRC – Selects the Audio Dynamic Range Control mode to 'Off', 'On' or 'Auto'. Dynamic Range is the range between the loudest sounds and the quietest ones. If set to 'On' you can listen to a movie at a lower volume without losing sound clarity. Note that most of the home cinema speakers are small.

Level - calibration settings for the test noise signal level through the loudspeakers and measured at the listening position

Speaker Setting – sets the number of speakers and the level, distance and size. You can select:

- **2 Channels** – L (Left), R (Right)
- **3 Channels** – L (Left), C (Centre), R (Right)
- **4 Channels** – L (Left), R (Right), LS (Left Surround), RS (Right Surround)
- **5 Channels** – L (Left), R (Right), C (Centre), LS (Left Surround), RS (Right Surround)

Please refer to the "speakers" on page E-15 for speaker naming and placement.

For each of the speaker configuration you can set the following:

- **Subwoofer presence** (**On** or **Off**). If the subwoofer presence is set to **On**, then the following subwoofer settings can be adjusted: level, distance and crossover

Size - Large (capable of full frequency range reproduction) or Small (not capable of full frequency range reproduction at the low frequency end). Note that most of the home cinema speakers are small.

Movie mode: This mode provide a surround sound effect from a stereo input.

Music mode: This mode is similar to the movie mode, but with less emphasis on the surround channels, in order to preserve the original stereo image.

SACD Priority – Selects the SACD track used. (Solo movie only). You can select:

- **Multi-ch** – Multi-channel track
- **2-ch** – Stereo track

solo music

Subwoofer – Specify whether or not a subwoofer is connected to the unit. If the subwoofer presence is set to **On**, then the following subwoofer settings can be adjusted:

Level - calibration settings for the test noise signal level through the loudspeakers and measured at the listening position

There are three different options available for this setting: **Off**, **Movie** or **Music**. The **Movie** and **Music** modes are intended for use as their names suggest. Due to the different recording methods used for movies and music it is recommended that the correct decoding mode for your source

Settings Menu

Audio

With the SETTINGS icon highlighted on your display, press  to show the 'Audio' options.

Press  to move to the options in the second column.

With the main section you require highlighted, use the  key to enter the middle column.

Use the  and  keys to navigate up and down the options in the middle column. Some options may be greyed out because they are not currently selectable.

Pressing  selects a setting: use the  and  keys to change the setting.

Press  to confirm the setting. Go back to step 4 to adjust any other settings in the current section.

Press  or  to return to the previous screen if you want to select another section to adjust.

Press the button to return to the home screen at any time.

Audio DRC – Selects the Audio Dynamic Range Control mode to 'Off', 'On' or 'Auto'.

Level - calibration settings for the test noise signal level through the loudspeakers and measured at the listening position

Speaker Setting – sets the number of speakers and the level, distance and size. You can select:

- **2 Channels** – L (Left), R (Right)
- **3 Channels** – L (Left), C (Centre), R (Right)
- **4 Channels** – L (Left), R (Right), LS (Left Surround), RS (Right Surround)
- **5 Channels** – L (Left), R (Right), C (Centre), LS (Left Surround), RS (Right Surround)

Size - Large (capable of full frequency range reproduction) or Small (not capable of full frequency range reproduction at the low frequency end). Note that most of the home cinema speakers are small.

Movie mode: This mode provide a surround sound effect from a stereo input.

Music mode: This mode is similar to the movie mode, but with less emphasis on the surround channels, in order to preserve the original stereo image.

SACD Priority – Selects the SACD track used. (Solo movie only). You can select:

- **Multi-ch** – Multi-channel track
- **2-ch** – Stereo track

Subwoofer Out – Subwoofer presence (On or Off). If the subwoofer presence is set to **On**, then the following subwoofer settings can be adjusted: level, distance and crossover

Level - calibration settings for the test noise signal level through the loudspeakers and measured at the listening position

There are three different options available for this setting: **Off**, **Movie** or **Music**. The **Movie** and **Music** modes are intended for use as their names suggest. Due to the different recording methods used for movies and music it is recommended that the correct decoding mode for your source

Subwoofer Out – Subwoofer presence (On or Off). If the subwoofer presence is set to **On**, then the following subwoofer settings can be adjusted: level, distance and crossover

Level - calibration settings for the test noise signal level through the loudspeakers and measured at the listening position

There are three different options available for this setting: **Off**, **Movie** or **Music**. The **Movie** and **Music** modes are intended for use as their names suggest. Due to the different recording methods used for movies and music it is recommended that the correct decoding mode for your source

Language

solo movie / solo music


OSD – Select one language to be used for the On Screen Display (OSD).

solo movie

Disc Menu – Set the language used for the Disc Menu and Pop-up Menu. The available languages depend on the disc. 'Auto' sets the priority language of the disc.

Disc Audio – Set the language for the soundtrack. The available languages depend on the disc. 'Auto' sets the priority language of the disc.

Disc Subtitle – Set the language used for the subtitles. The available languages depend on the disc. 'None' prevents the display of subtitles.

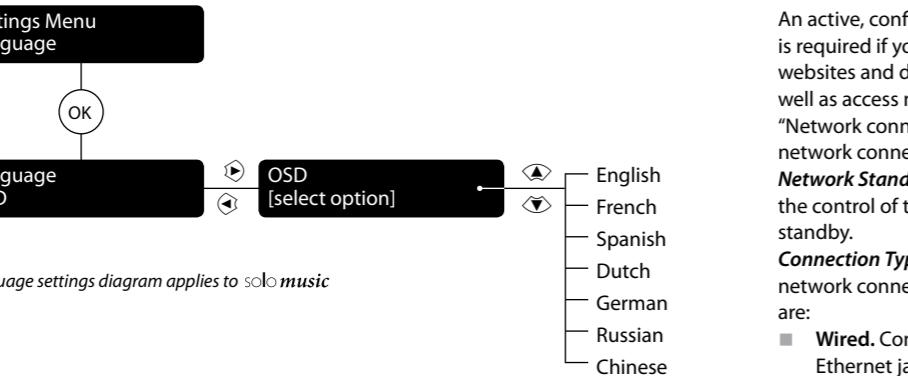

Network

solo movie / solo music

Auto. This last method allows the Solo to automatically connect to a wireless router which supports either Wi-Fi Protected Setup (WPS) or by entering a unique PIN into the access point. Please consult your router's user manual on instructions on how to enable WPS or how enter the required PIN.

Network Standby – Enables or disables the control of the Solo while the unit is in standby.

Connection Type – Select the type of network connection required. The options are:

- **Wired**. Connect a network cable to the Ethernet jack and into a wired router, as shown on page E-13.

- **Wireless**. Please follow the on-screen instructions for all the steps required to connect to a wireless network. The Solo can connect to a Wi-Fi network using three different methods, which are briefly described below. Note that you must have the following information readily available: the network name (also called SSID or AP Name), network security mode and the network security key.

Scan. This method will search all available wireless networks. Choose the desired network to connect to (shown under "AP Name") and enter its network key using the on-screen keyboard.

Manual. Choose this method if you know the name of the access point you would like to connect to. Once this is entered, you will be prompted for the security mode of the access point. If the network chosen is a secure network, you will be prompted to enter the network security key on the next screen.

IP Setting – You can set your player to automatically obtain an IP address when it connects to your ISP. Some providers require that you enter a fixed IP address that does not change: this must be entered using the 'Manual' setting.

IP Address – Use the cursors to navigate between segments and use the 0-9 keys on the remote to enter the IP address assigned to your unit by your network

administrator. Press **OK** to save the setting. **Subnet Mask** – Use the cursors to navigate between segments and use the 0-9 keys on the remote to enter the subnet mask of your network. Press **OK** to save the setting.

Default Gateway – Use the cursors to navigate between segments and use the 0-9 keys on the remote to enter the Internet gateway address. Press **OK** to save the setting.

DNS1 – Use the cursors to navigate between segments and use the 0-9 keys on the remote to enter the IP address of your Primary DNS server. Press **OK** to save the setting.

DNS2 – Use the cursors to navigate between segments and use the 0-9 keys on the remote to enter the IP address of your Secondary DNS server. Press **OK** to save the setting.

solo movie

BD-Live Connection – To set the BD-Live Internet access level.


The access levels are:

- **Permitted**: All BD-Live discs are allowed access to BD-Live websites.

- **Partial Permitted**: Allows Internet access to BD-Live content with valid certificates only.

- **Prohibited**: Prohibit all BD-Live discs from accessing BD-Live websites.

Proxy Setting – If you are accessing the network using a proxy server, enter its settings here.

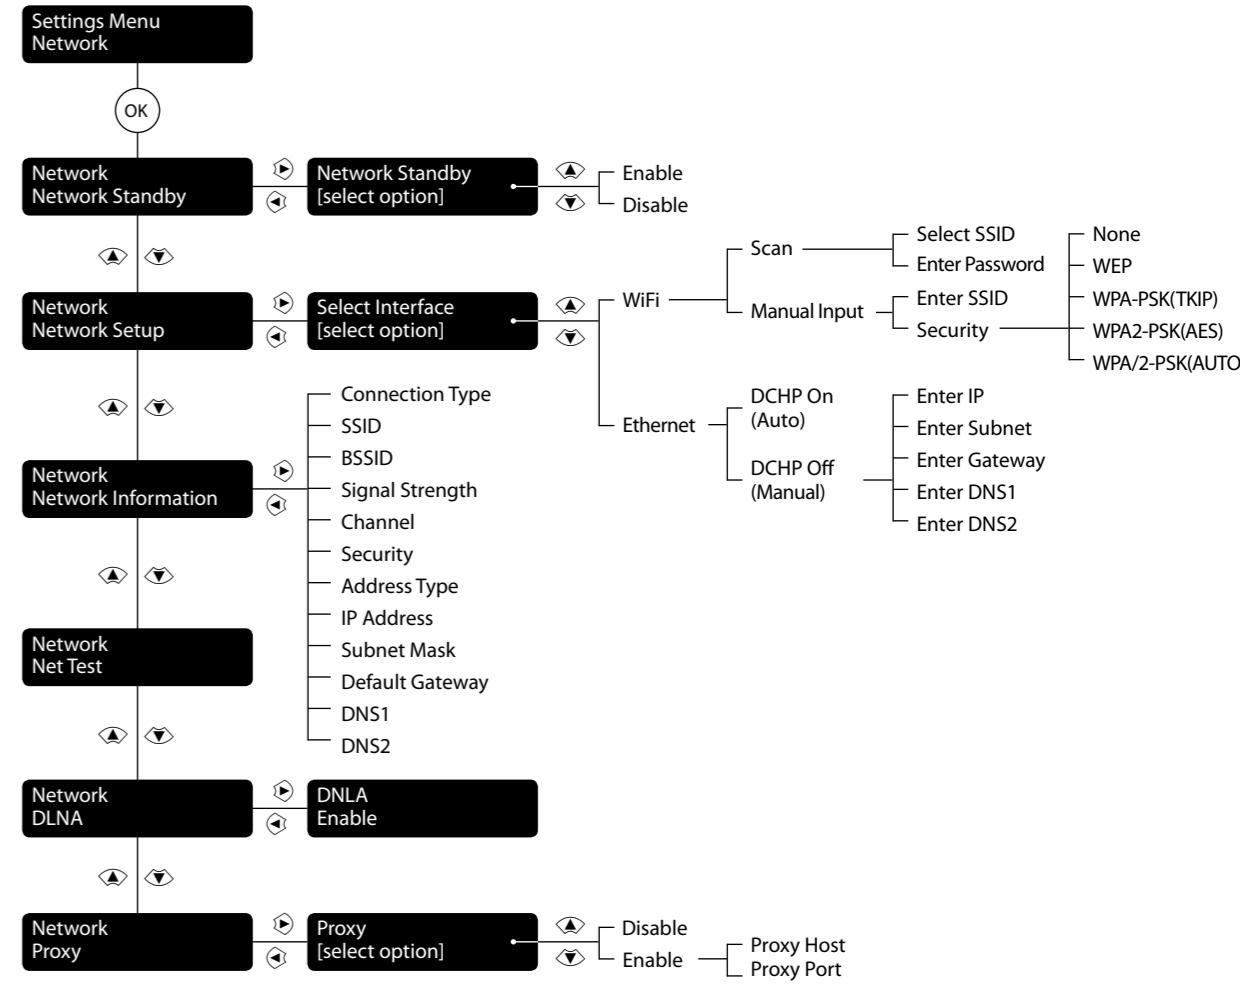

Network settings diagram applies to solo music

System

solo movie

Screen Saver – sets the duration of a static image display before the screen saver is shown. The options are: 5/10/15/20/25/30 Minutes or Off. Pressing any button on the unit or remote deactivates the screen saver.

solo movie / solo music

Disc Auto Playback – controls whether an optical disc (e.g. BD, DVD, CD) will play automatically after it has been loaded or after the Solo is turned on.

- **On:** Optical discs will play automatically.
- **Off:** play must be pressed to play a disc.

CEC – The Consumer Electronics Control (CEC) option is used to allow all supported devices connected by HDMI to work together as a single system.

CEC may be turned 'On' or 'Off', to link or unlink the supported devices.

Firmware Update – If the Solo is connected to the Internet, you can check for an upgrade to your unit's firmware by selecting this menu item and pressing OK to highlight 'Network', then press OK again.

A message appears if no new firmware is available, otherwise follow the on-screen instructions. A message tells you when the upgrade is complete.

Load Defaults – Press OK with this item highlighted to reset all system settings to factory defaults (including parental controls, radio presets, paired device, etc.).

You are asked to confirm that you want to load the factory default settings. For 'No' press OK; for 'Yes' press OK then OK.

System Information – Highlight this option and press OK to display system information.

The System Information panel shows information about your unit, such as the product name, firmware version, MAC addresses and support information.


solo movie

BD-Live Storage – This option allows you to review or delete BD-Live data stored on an external USB drive.

The options are:

- **Information:** Highlight and press OK to show file information on the BD-Live data.
- **Erase data:** Highlight and follow the on-screen instruction to erase BD-Live storage data.

NETWORK MEDIA – The Solo is capable of playing UPnP content. Note that the Solo movie will play both audio and video files, whereas the Solo music will play audio content only. This features can be disabled by setting it to **Off**.

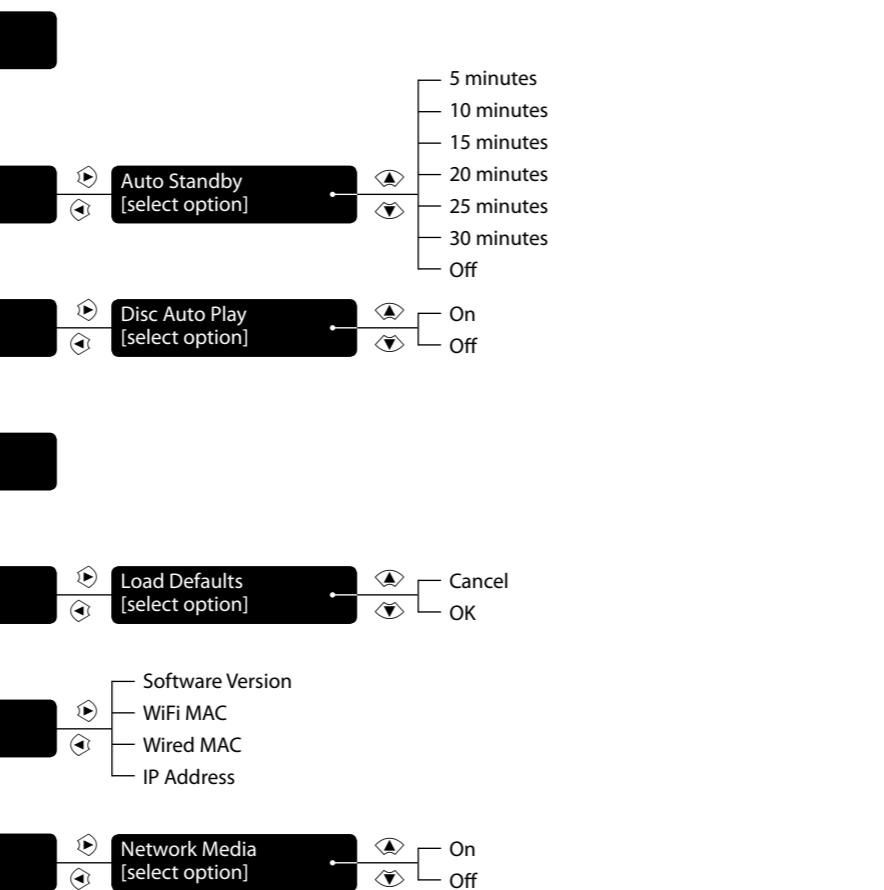

System settings diagram applies to solo music

Security/Parental Control

solo movie

Change Password – Sets or changes the 4-digit password. Press the 0–9 buttons for the current password (the initial password is 0000), then press OK.

Enter the new password to confirm, then press OK.

Parental Control – Parental control settings can be used to prevent the viewing of material inappropriate for children. According to the level set, a disc may be stopped or have certain scenes cut or substituted with alternative scenes, depending on the disc.

To set the parental control level:

1. Select 'Settings' → 'Security' → 'Parental Control'.
2. Enter your password using the remote control numeric buttons. The default password is 0000.
3. Once the Parental Control menu is accessed, press the ↑/↓ cursor buttons and press OK to select the desired parental control level

NOTE

- If the parental control level is set and you try to play a disc with a level higher than the current parental level, a password panel opens.

- If an attempt to change the parental control or parental level is made, a password panel opens.

Cinavia Notice

solo movie

This product uses Cinavia technology to limit the use of unauthorised copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorised copy is detected, a message will be displayed and playback or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Centre at www.cinavia.com. To request additional information about Cinavia by mail, send a postcard with your mailing address to:

Cinavia Consumer Information Centre,
P.O. Box 86851,
San Diego,
CA, 92138
USA

Off	All discs are played back
KID SAFE	Suitable for children
G	All children and general audience
PG	Parental guidance suggested
PG-13	Unsuitable for children under 13
PGR	Parental guidance recommended
R	Restricted; cinemas require children under the age of 17 to have an accompanying adult parent or guardian
NC-17	Cinemas do not admit anyone younger than 17 years old
ADULT	Adult rating; discs of any rating (Adult/General/Children) can be played back

troubleshooting

English

Problem	Check that...
There are no lights on the unit	<ul style="list-style-type: none"> ■ the power cord is plugged into the Solo and the mains socket it is plugged into is switched on. ■ the unit is powered up. ■ if a red LED is present, the Solo is in standby mode. Press any button on the front panel or remote control.
The unit responds erratically or not at all to the remote control	<ul style="list-style-type: none"> ■ there are fresh batteries in the remote control. ■ the front panel window is visible and you are pointing the remote control towards it.
The front panel display is blank	<ul style="list-style-type: none"> ■ the display hasn't been turned off. Press the DISPLAY button on the front panel or remote control.
No picture is being produced	<ul style="list-style-type: none"> ■ your viewing device is turned on and switched to display your Solo. Test by pressing the HOME button on the Solo or on the remote and look for the main menu screen on your display device. ■ the correct video input is selected on the Solo. ■ the video source is on, is operating normally, and is in 'play' mode if appropriate.
There are bright edges or 'ghosts' on the picture	<ul style="list-style-type: none"> ■ ensure the 'sharpness' control on your display device is switched off or set to near minimum. ■ for HDMI connections, try using a shorter cable or alternatively a different brand.
No sound is produced	<ul style="list-style-type: none"> ■ the correct input has been selected. ■ the correct input has been selected. See "Device mode / Source keys" on page E-19. ■ the source equipment is on, is operating normally and is in 'play' mode if appropriate. ■ the volume is turned up to a reasonable level and the Solo is not in mute mode.
The sound is poor or distorted	<ul style="list-style-type: none"> ■ you have selected the correct size of speakers to suit your system in the setup menu.

Problem	Check that...
Sound only comes from some of the speakers	<ul style="list-style-type: none"> ■ you have an appropriate surround source selected and playing. ■ the BD/DVD disc is encoded in the appropriate format, and the correct format has been selected in the disc start menu of the BD player (if applicable). ■ the display window indicates that the disc you are playing is a multichannel recording (you may need to press the INFO key several times until you get to the 'incoming format' display). ■ all the speakers are correctly connected to the speaker terminals and are secure. ■ you have configured the Solo to include all the speakers in your system.
Unable to select decoding modes	<p>The Solo can only apply decoding to sources which have been encoded in the same format. Check that:</p> <ul style="list-style-type: none"> ■ digital source is selected and connected. ■ the source is playing appropriately encoded material. ■ the BD/DVD disc is encoded in the appropriate format and that the correct format has been selected in the disc start menu of the BD player (if applicable).
When playing a BD/DVD, the Solo selects Dolby Pro Logic	<ul style="list-style-type: none"> ■ sometimes BD/DVD discs contain material at either the beginning or the end of the main movie that is not in full 5.1 format, but in two-channel or Dolby Pro Logic decoding.
Hum on the analogue input	<ul style="list-style-type: none"> ■ all cables are making a good connection. If necessary withdraw the cable from the connector and plug it fully in again (turn the power off before doing this). ■ the connections inside the source cable connector are not broken or badly soldered. ■ if the hum originates only when one particular source component is connected, that an aerial cable, or dish connection to this source is ground isolated. Contact your installation contractor.

Problem	Check that...
There is radio or television reception interference	<ul style="list-style-type: none"> ■ where the interference is coming from. Switch off each source component in turn, then any other equipment. Most electronic equipment does generate low levels of interference. ■ try re-arranging cabling from the nuisance source away from other cabling. ■ ensure that the cabling used is high quality, specified for its purpose, and is properly screened. ■ if the problem persists, contact your dealer.
The source switching changes randomly or freezes on one source	<ul style="list-style-type: none"> ■ there are no static or impulse interference problems caused by nearby power equipment switching, e.g., heating or air conditioning control. Switch the Solo off, wait ten seconds, then switch it on again to clear an operating problem. Contact your installer if the problem returns or persists. ■ there is no direct sunlight shining on the infra-red detector behind the front panel display.
When a USB memory device is connected, 'USB' is not shown in the network client's list of folders	<ul style="list-style-type: none"> ■ a USB memory device is connected that conforms to the mass storage class. ■ a USB hub is not being used.
If files on a USB memory device cannot be played:	<ul style="list-style-type: none"> ■ the USB device is formatted in FAT16 or FAT32. ■ the USB device does not have multiple partitions. ■ the files are in a compatible format.
If files on a computer cannot be played	<ul style="list-style-type: none"> ■ the files are in a compatible format. ■ the computer is connected via a network and not USB – the Solo USB port cannot be used for a direct connection to a computer

Problem	Check that...
If you cannot connect to a wired network	<ul style="list-style-type: none"> ■ the Ethernet cable you are using is correctly connected between the Solo and the network hardware. ■ the network is set up for fixed IP addressing and you have the Solo set to use DHCP. ■ the network is set up for DHCP and you have the Solo set to use fixed IP addressing.

USB firmware update

The firmware in your Solo can be updated from a USB flash drive containing firmware update files. You can download the latest firmware file, together with upgrading instructions, from the Arcam website (www.arcam.co.uk)



Solo movie 5.1

Continuous power output, per channel	
2 channels driven, 1kHz, 0.2% THD (8Ω/4Ω)	75W/120W
5 channels driven, 1kHz, 0.2% THD (8Ω/4Ω)	60W/75W
Residual noise & hum (A-wtd)	300µV
Stereo line inputs	
Maximum input	2.1V rms
Input impedance	10kΩ
Signal/noise ratio (A-wtd ref 100W)	90dB
Frequency response	20Hz—20kHz ± 0.1dB
Headphone output	
Maximum output level into 32Ω	2.5Vrms
Output impedance	1Ω
Video	
HDMI In/Out supported formats	4K2K (24/30Hz), 1080p (50/60Hz), 1080i (50/60Hz), 720p (50/60Hz), 480p/576p, 480i/576i
Digital interfaces	
USB	USB 2.0 High Speed (480 Mbit/s)
Network	10 BASE-T / 100 BASE-TX
S/PDIF Optical	44.1kHz, 48kHz, 88.2kHz, 96kHz
S/PDIF Coaxial	44.1kHz, 48kHz, 88.2kHz, 96kHz, 192kHz
Bluetooth	SBC, AAC, aptX, aptX-LL

Continual improvement policy

Arcam has a policy of continual improvement for its products. This means that designs and specifications are subject to change without notice.

General	
Mains voltage	110–120V or 220–240V, 50–60Hz
Power consumption (maximum)	1kW (Thermal dissipation approx. 3400 BTU/hour)
Power consumption (idle, typical)	60W (Thermal dissipation approx. 200 BTU/hour)
Power consumption (standby)	<0.5W
Dimensions (W x D x H)	420 x 414 x 90mm
Weight (net)	12.0kg
Weight (packed)	15.5kg
Supplied accessories	Mains lead Remote control 2 x AAA batteries User manual DAB/FM aerial Bluetooth antenna Wi-Fi antenna
E&OE	
NOTE: All specification values are typical unless otherwise stated	

Continual improvement policy

Arcam has a policy of continual improvement for its products. This means that designs and specifications are subject to change without notice.

Solo movie 2.1 / Solo music

Continuous power output, per channel	
2 channels driven, 1kHz, 0.2% THD (8Ω/4Ω)	80W/125W
Residual noise & hum (A-wtd)	
300µV	
Stereo line inputs	
Maximum input	2.1V rms
Input impedance	10kΩ
Signal/noise ratio (A-wtd ref 100W)	90dB
Frequency response	20Hz—20kHz ± 0.1dB
Headphone output	
Maximum output level into 32Ω	2.5Vrms
Output impedance	1Ω
Video	
HDMI In/Out supported formats	4K2K (24/30Hz), 1080p (50/60Hz), 1080i (50/60Hz), 720p (50/60Hz), 480p/576p, 480i/576i
Digital interfaces	
USB	USB 2.0 High Speed (480 Mbit/s)
Network	10 BASE-T / 100 BASE-TX
S/PDIF Optical	44.1kHz, 48kHz, 88.2kHz, 96kHz
S/PDIF Coaxial	44.1kHz, 48kHz, 88.2kHz, 96kHz, 192kHz
Bluetooth	SBC, AAC, aptX, aptX-LL

Continual improvement policy

Arcam has a policy of continual improvement for its products. This means that designs and specifications are subject to change without notice.

General	
Mains voltage	110–120V or 220–240V, 50–60Hz
Power consumption (maximum)	1kW (Thermal dissipation approx. 3400 BTU/hour)
Power consumption (idle, typical)	60W (Thermal dissipation approx. 200 BTU/hour)
Power consumption (standby)	<0.5W
Dimensions (W x D x H)	420 x 414 x 90mm
Weight (net)	11.5kg
Weight (packed)	15.0kg
Supplied accessories	Mains lead Remote control 2 x AAA batteries User manual DAB/FM aerial Bluetooth antenna Wi-Fi antenna
E&OE	
NOTE: All specification values are typical unless otherwise stated	

Continual improvement policy

Arcam has a policy of continual improvement for its products. This means that designs and specifications are subject to change without notice.

product guarantee

Worldwide Guarantee

This entitles you to have the unit repaired free of charge, during the first two years after purchase, provided that it was originally purchased from an authorised Arcam dealer. The Arcam dealer is responsible for all after-sales service. The manufacturer can take no responsibility for defects arising from accident, misuse, abuse, wear and tear, neglect or through unauthorised adjustment and/or repair, neither can they accept responsibility for damage or loss occurring during transit to or from the person claiming under the guarantee.

The warranty covers:

Parts and labour costs for two years from the purchase date. After two years you must pay for both parts and labour costs. **The warranty does not cover transportation costs at any time.**

Claims under guarantee

This equipment should be packed in the original packing and returned to the dealer **from whom it was purchased**. It should be sent carriage prepaid by a reputable carrier – **not** by post. No responsibility can be accepted for the unit whilst in transit to the dealer or distributor and customers are therefore advised to insure the unit against loss or damage whilst in transit.

For further details contact Arcam at support@arcam.co.uk.

Problems?

If your Arcam dealer is unable to answer any query regarding this or any other Arcam product please contact Arcam Customer Support at the above address and we will do our best to help you.

On-line registration

You can register your product on-line at www.arcam.co.uk.

trademarks

<http://www.sherwoodamerica.com>.

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301,
USA

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

App Store™ is a service mark of Apple Inc.

'AVCHD' and the 'AVCHD' logo are trademarks of Panasonic Corporation and Sony Corporation.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

'BD-LIVE' logo is a trademark of Blu-ray Disc Association.

'Blu-ray Disc', 'Blu-ray' and the 'Blu-ray Disc' logo are trademarks of Blu-ray Disc Association.

'BONUSVIEW' is a trademark of Blu-ray Disc Association.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

For DTS patents, see <http://patents.dts.com>.

Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS in combination with the Symbol, the DTS-HD logo and DTS-HD Master Audio are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.

DVD is a trademark of DVD format/Logo licensing Corporation.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

This product uses some software programs which are distributed under the GPL license. Accordingly, the following GPL software source codes that have been used in this product can be provided after asking at

to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

ENGLISH

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

2. You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The 'Program', below, refers to any such program or work, and a 'work based on the Program' means either the Program or any derivative work under copyright law that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term 'modification'.) Each licensee is addressed as 'you'.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it. For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free

redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program. If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances. It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice. This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

10. If you wish to incorporate parts of the Program into

other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW.

EXCEPT WHEN OTHERWISE STATED IN WRITING

THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES

PROVIDE THE PROGRAM 'AS IS' WITHOUT WARRANTY

OF ANY KIND, EITHER EXPRESSED OR IMPLIED,

INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS

WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE,

YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY

MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS

PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES,

INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR

CONSEQUENTIAL DAMAGES ARISING OUT OF THE

USE OR INABILITY TO USE THE PROGRAM (INCLUDING

BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING

RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU

OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO

OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH

HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE

POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

If

you

You should also get your employer (if you work as a programmer) or your school, if any, to sign a 'copyright disclaimer' for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers)

written by James Hacker.

signature of Ty Coon, 1 April 1989

Ty Coon, President of Vice

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

use the GNU Library General Public License instead of this License.

Copyright 2004-2013 Verance Corporation. Cinavia™ is a Verance Corporation trademark. Protected by U.S. Patent 7,369,677 and worldwide patents issued and pending under license from Verance Corporation. All rights reserved.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than 'show w' and 'show c'; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a 'copyright disclaimer' for the program, if necessary. Here is a sample; alter the names:

FLAC Decoder Copyright © 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS 'AS IS' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE

10. If you wish to incorporate parts of the Program into

DOLBY, TRUEHD, DIGITAL PLUS, PL II

Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.

DTS-HD Master Audio™

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS in combination with the Symbol, the DTS-HD logo and DTS-HD Master Audio are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.

HDMI

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Arcam is under license. Other trademarks and trade names are those of their respective owners.

aptX® CSR

© 2013 CSR plc and its group companies.

The aptX® mark and the aptX logo are trade marks of CSR plc or one of its group companies and may be registered in one or more jurisdictions.

MP3

MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia


AAC/AAC Plus

aacPlus is a trademark of Coding Technologies. See codetech.vhost.noris.net for more information

E-42

ARCAM
solo movie/music

Manuel Solo movie/music

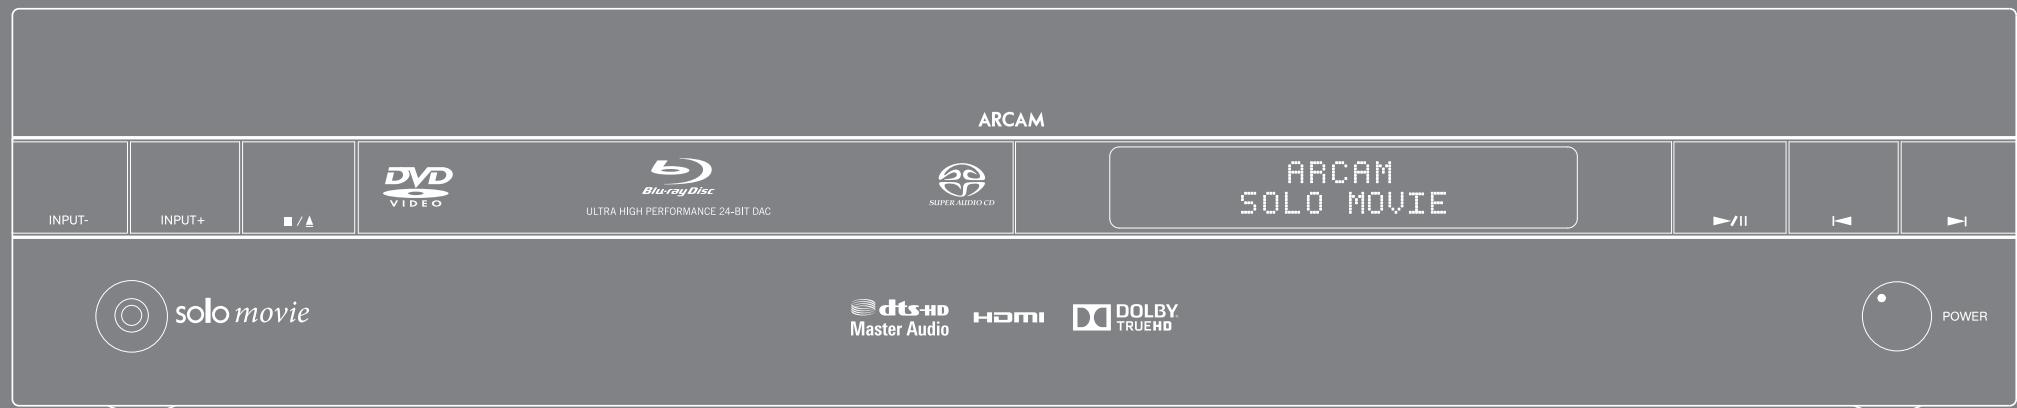

bienvenue...

Table des matières

... et merci d'avoir choisi la Arcam Solo movie/music.

Depuis plus de trois décennies, Arcam fabrique des équipements audio spécialisés de remarquable qualité et le nouveau Solo movie/music est la dernière manifestation d'une longue lignée d'appareils hi-fi et d'ensembles home cinéma primés.

Nous espérons que la performance et la fiabilité supérieures de ce produit seront non seulement une ample démonstration de l'attention et de l'effort que nous avons mis à le concevoir, mais aussi une garantie que vous en aurez l'usage de nombreuses années.

Ce manuel est un guide d'installation et d'utilisation de l'Solo movie/music. Reportez-vous à la table des matières page suivante pour rechercher les rubriques qui vous intéressent plus particulièrement.

Nous vous souhaitons des années de plaisir acoustique avec votre Solo movie/music. Dans l'éventualité, peu probable, où une panne surviendrait, ou si vous recherchez simplement des informations supplémentaires sur les produits Arcam, les représentants de notre réseau de revendeurs se feront un plaisir de vous aider. D'autres informations sont disponibles sur notre site web d'Arcam à l'adresse www.arcam.co.uk.

L'équipe de développement de l'Solo movie/music.

avant de commencer...	F-4
aperçu	F-5
panneau avant	F-6
panneau supérieur	F-7
panneau arrière	F-8
connexions audio/vidéo	F-9
autres connexions	
connecteurs d'antenne	F-11
enceintes	F-12
formats de disque et de fichier	F-13
fonctionnement de base	F-14
télécommande	F-15
personnalisation de la télécommande	F-16
lecture d'un disque	F-20
fonctionnement réseau / USB	F-23
écouter la radio	F-24
menus de configuration	F-25
Dépannage	F-26
spécifications techniques	F-32
garantie du produit	F-34
	F-36

avant de commencer...

Que contient la boîte ?

- Solo movie/music
- Télécommande
- 2 piles AAA
- Antenne DAB/FM
- Antenne Bluetooth
- Antenne Wi-Fi
- Le manuel de l'utilisateur
- La carte d'enregistrement
- Le cordon d'alimentation

Mise en place de l'appareil

- Posez l'appareil sur une surface plane et ferme, en évitant de l'exposer directement aux rayons du soleil ou à une source de chaleur ou d'humidité.
- Ne posez pas l'appareil au-dessus d'un amplificateur ou de toute autre source de chaleur.
- Ne mettez pas l'appareil dans un espace fermé tel qu'une bibliothèque ou une armoire à moins qu'elle ne soit pourvue d'une bonne ventilation. Le produit est conçu pour chauffer pendant son fonctionnement normal.
- Ne mettez aucun composant ou élément au-dessus de l'appareil, car il peut obstruer le flux d'air autour du dissipateur thermique, provoquant l'échauffement de l'appareil. (L'appareil placé au-dessus de l'amplificateur deviendrait également chaud.)
- Assurez-vous que le récepteur de la télécommande sur la Gauche du panneau d'affichage n'est pas obstrué, sinon cela peut générer l'utilisation de la télécommande.
- Ne posez pas votre platine-disque sur cet appareil. Les platines sont des appareils très sensibles aux bruits générés par l'alimentation secteur. Ces derniers peuvent s'entendre en bruit de fond si la platine est trop proche de l'appareil.
- Le fonctionnement normal de l'appareil peut être gêné par de fortes perturbations électromagnétiques. Si cela se produit, il suffit de réinitialiser l'appareil avec le bouton d'alimentation, ou de déplacer l'appareil en un autre lieu.

Alimentation

L'amplificateur est livré avec une prise de courant moulée intégrée au câble. Vérifiez que la prise livrée correspond bien à votre circuit électrique. Vérifiez que la prise livrée correspond bien à votre circuit électrique. S'il vous faut un autre câble d'alimentation, veuillez vous adresser à votre revendeur Arcam.

Si la tension ou les prises de votre circuit électrique sont différentes, contactez immédiatement votre revendeur Arcam.

L'Solo peut être positionné sur une tension de 220-240 V (position de sélecteur 230 V) ou sur 110-120 V (position de sélecteur 115 V).

REMARQUE

Veillez à ce que l'Solo soit éteint et le câble électrique débranché avant de modifier la position du commutateur de voltage. Assurez-vous également que ce sélecteur est réglé sur la tension convenant à votre région.

Insérez la prise IEC du câble d'alimentation dans la prise à l'arrière de l'appareil, en veillant à la pousser fermement. Branchez l'autre extrémité du câble sur votre prise secteur, et, si nécessaire, allumez celle-ci. Vous pouvez allumer l'appareil à l'aide du bouton MARCHE/ARRÊT situé sur sa façade. Lorsqu'il est allumé, le voyant lumineux du bouton marche/arrêt est vert.

Pour plus d'informations sur le câblage des haut-parleurs, veuillez-vous reporter à "enceintes" on page F-13.

Mode veille

Vous pouvez mettre l'Solo en mode veille au moyen de la touche Ø de la télécommande. En mode veille, le voyant lumineux du bouton marche/arrêt est rouge et la consommation d'énergie est inférieure à 0,5 watt.

En mode veille, il est possible qu'un bourdonnement résiduel provenant du transformateur électrique à l'intérieur de l'amplificateur soit audible. Ceci est tout à fait normal. Toutefois, si l'appareil ne doit pas être utilisé pendant longtemps, nous conseillons de le débrancher du circuit électrique afin d'économiser de l'énergie.

Câbles de branchement

Il est recommandé d'utiliser des câbles blindés de haute qualité, conçus pour ce genre d'application. L'utilisation d'autres câbles, dont les caractéristiques d'impédance diffèrent, risque d'affecter les performances de votre système. (Par exemple, n'utilisez pas de câble conçu pour un usage vidéo pour le transport des signaux audio). Les câbles doivent être aussi courts que possible.

Lors de la connexion du matériel, il convient de vérifier que les câbles d'alimentation secteur sont positionnés le plus loin possible de vos câbles audio. Vous évitez ainsi les bruits indésirables dans les signaux audio.

Si le lecteur de disque intégré à l'Solo est utilisé alors que le boîtier externe est enlevé, un rayonnement invisible pourrait provoquer des lésions oculaires.


aperçu

L'Solo est un appareil audio/vidéo qui contient des microprocesseurs et autres dispositifs électroniques numériques. La conception de chacun des modèles est conforme aux normes de compatibilité électromagnétique les plus strictes. C'est un produit de classe A. Dans un environnement domestique, cet appareil peut provoquer des interférences radio, auxquelles l'utilisateur pourra remédier en prenant les mesures nécessaires.

Si l'Solo des interférences sur la réception radio ou télévision (ce qui peut être déterminé en l'éteignant et en la rallumant), il faut prendre les mesures suivantes :

- Réorienter l'antenne ou placer le câble du récepteur affecté le plus loin possible de l'appareil et de ses câbles.
- Changer l'emplacement du récepteur par rapport à l'Solo
- Brancher l'appareil affecté et l'Solo sur des prises de courant différentes.


ARCAM

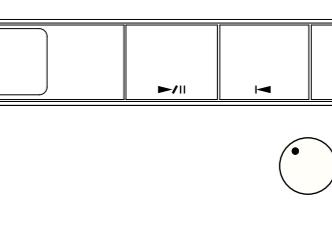




panneau avant

Commandes de la façade

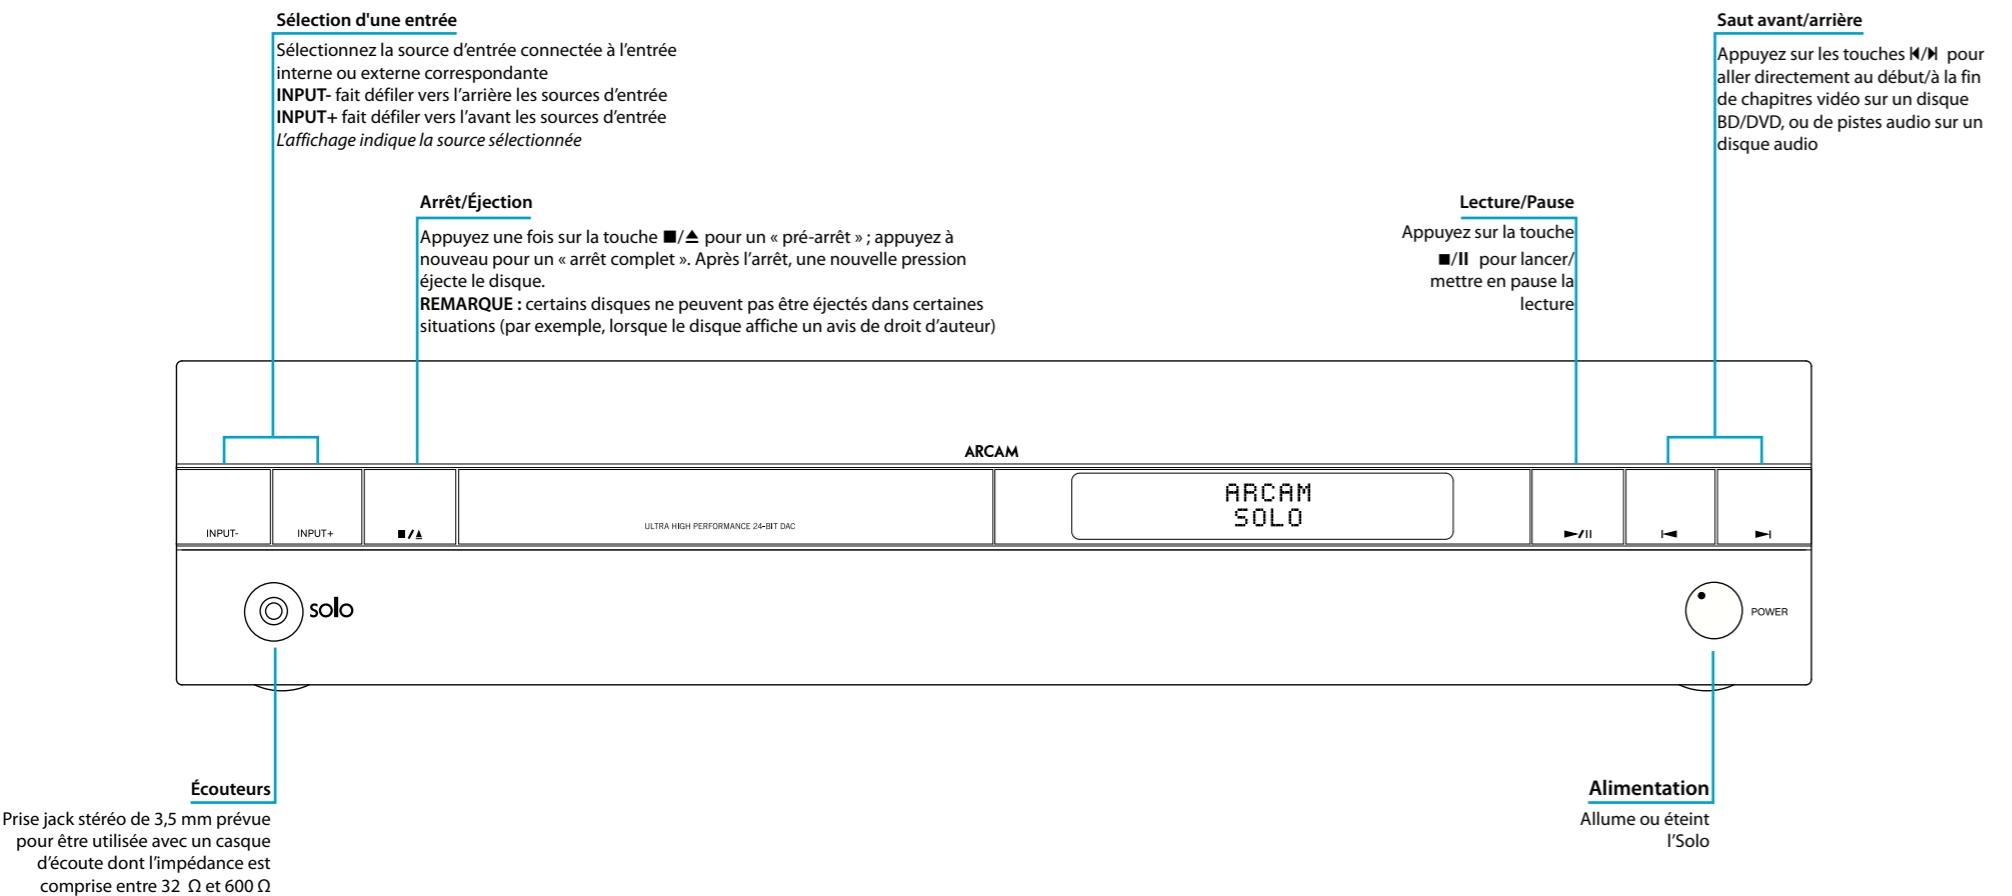


panneau supérieur

Commandes du panneau supérieur

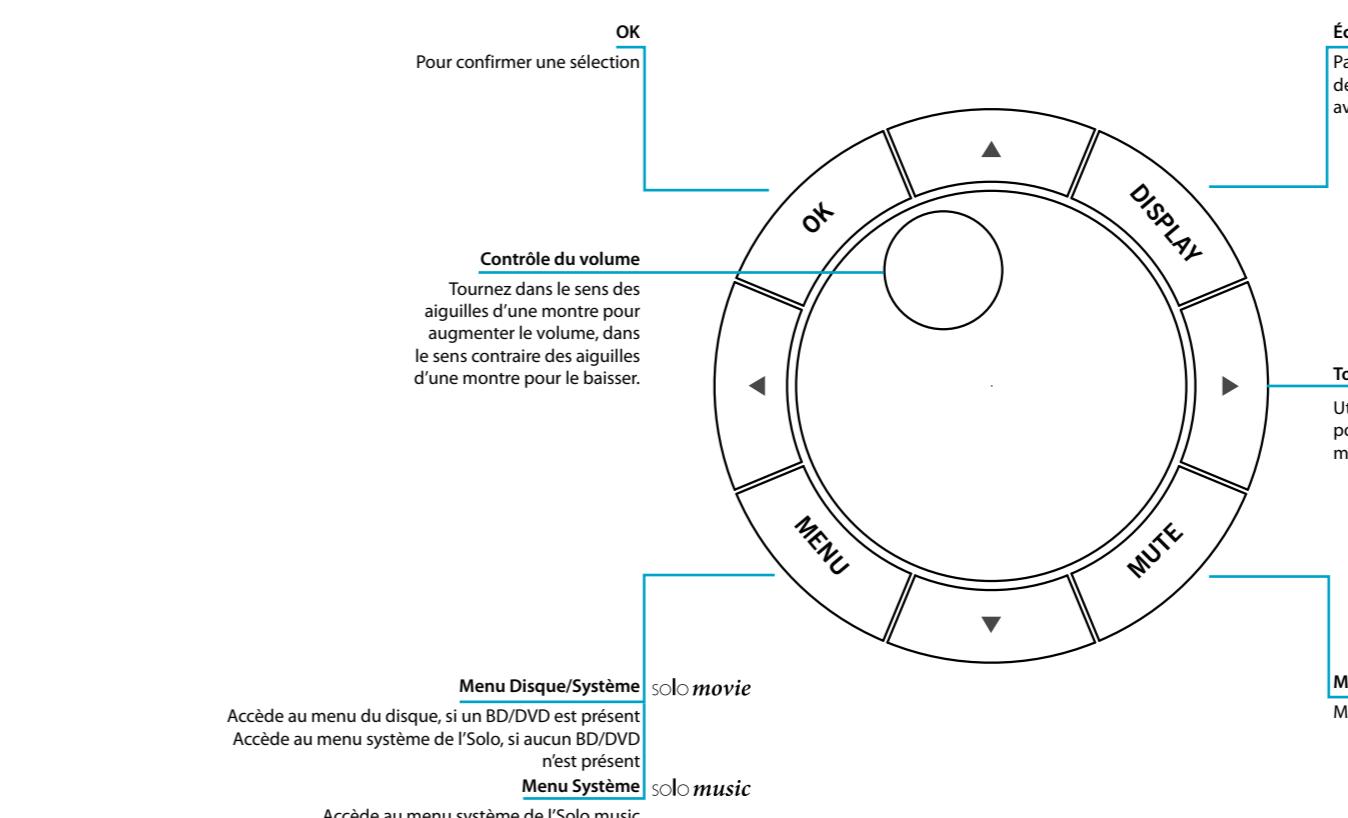

panneau arrière

Connexions du panneau arrière

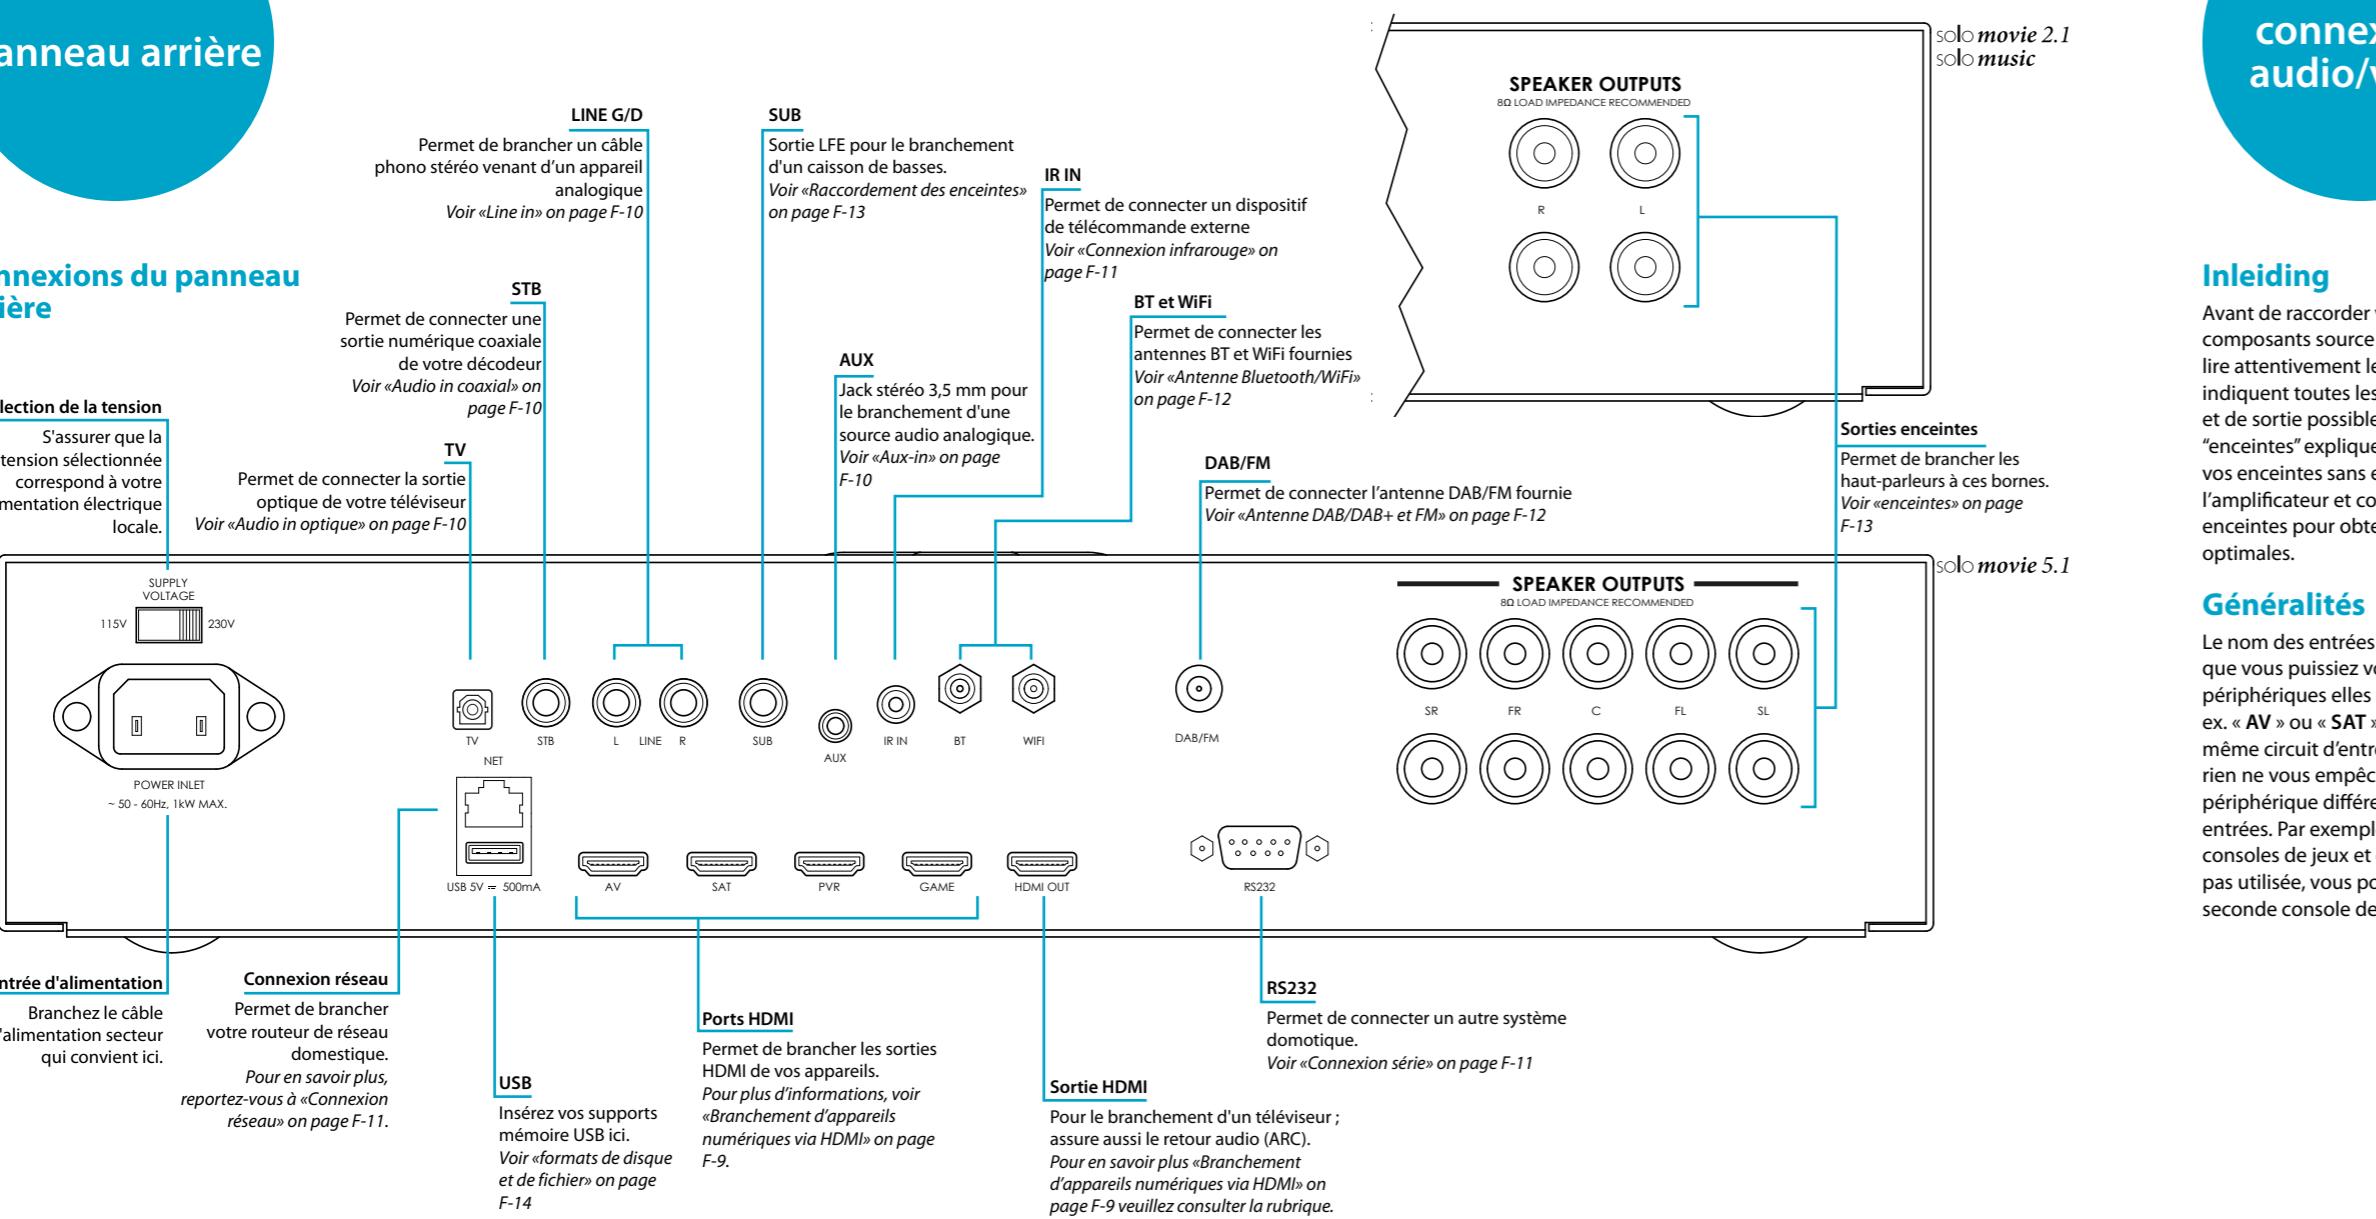


connexions audio/vidéo

Inleiding

Avant de raccorder votre Solo aux composants source et enceintes, veuillez lire attentivement les pages suivantes qui indiquent toutes les connexions d'entrée et de sortie possibles. La rubrique "enceintes" explique comment brancher vos enceintes sans endommager l'amplificateur et comment disposer vos enceintes pour obtenir des performances optimales.

Généralités

Le nom des entrées est indiqué pour que vous puissiez voir facilement à quels périphériques elles correspondent (par ex. « AV » ou « SAT »). Elles ont toutes le même circuit d'entrée. Par conséquent, rien ne vous empêche de brancher un périphérique différent sur chacune des entrées. Par exemple, si vous avez deux consoles de jeux et que l'entrée AV n'est pas utilisée, vous pouvez brancher la seconde console de jeux sur l'entrée AV.

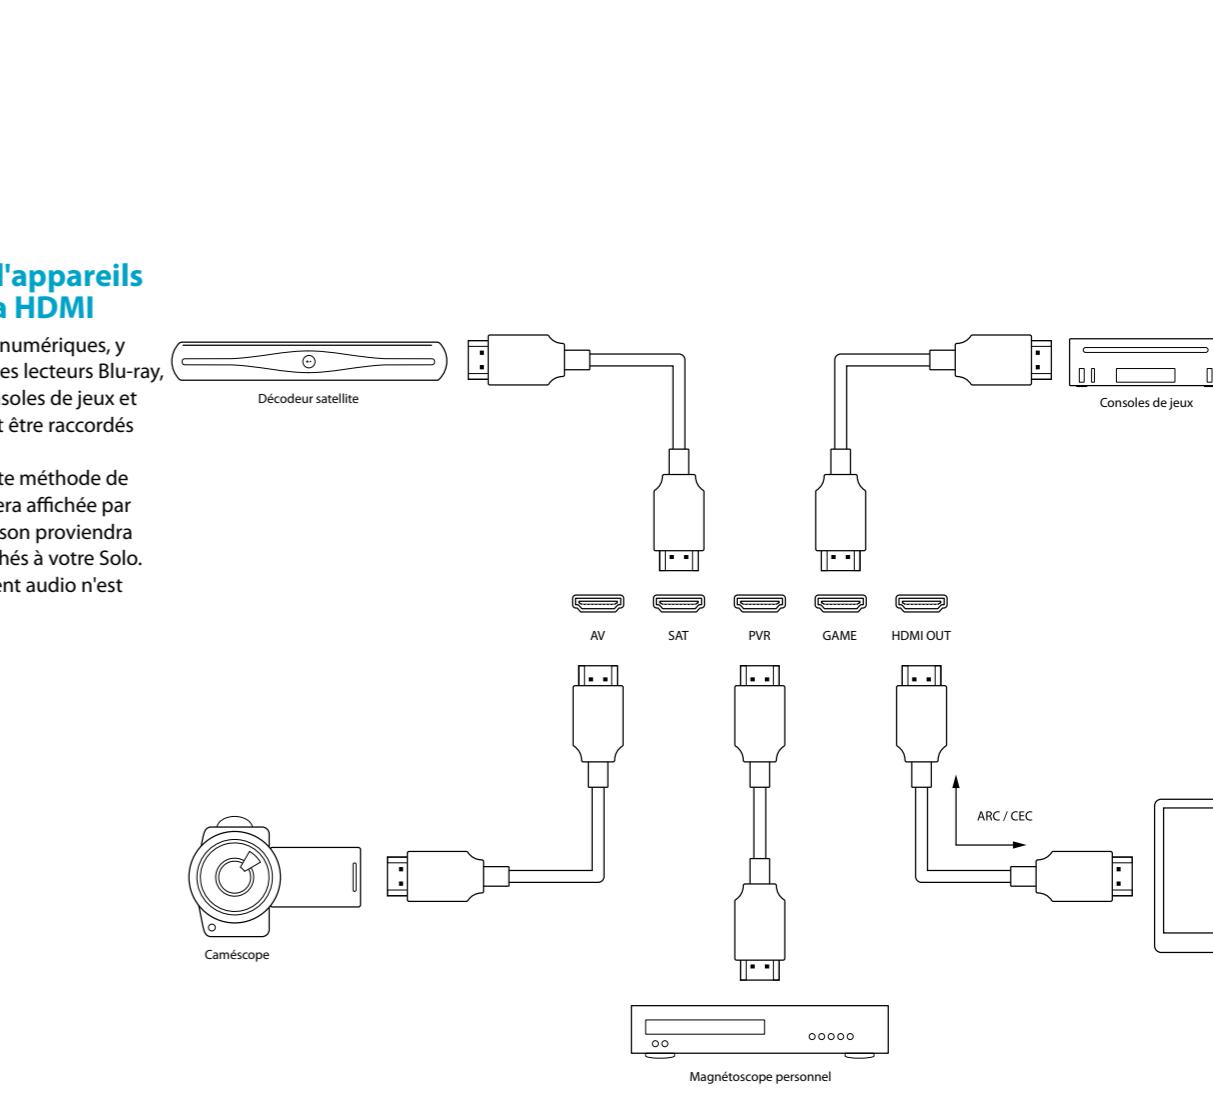


autres connexions

Connexions audio numériques


Audio in optique

Si votre téléviseur n'est pas compatible ARC, branchez la sortie audio optique du téléviseur à cette entrée

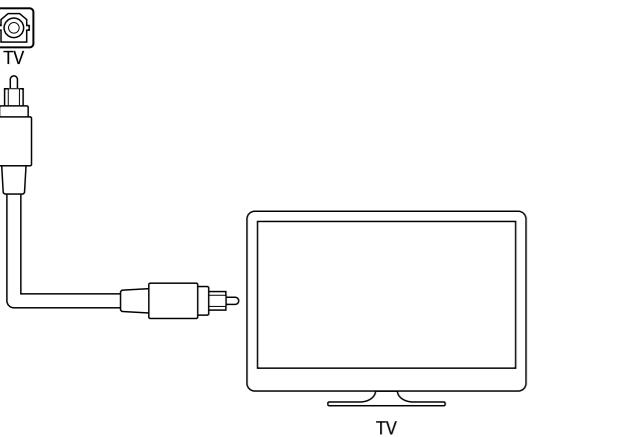

Audio in coaxial

Permet de connecter la sortie audio coaxiale de votre décodeur

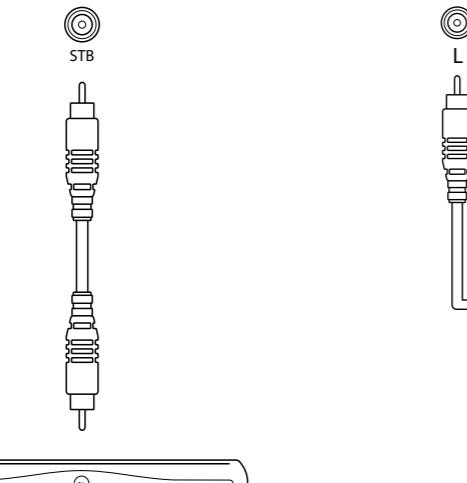

Connexions audio analogiques

Line in

Permet de connecter tout appareil audio analogique à ces entrées en utilisant un câble RCA phono stéréo



Aux-in

Permet de brancher tout type d'appareil audio analogique à l'entrée AUX de l'appareil audio en utilisant un fil à mini-jack 3,5 mm



Connexion Bluetooth

L'Solo dispose d'une technologie sans fil Bluetooth intégrée permettant une intégration fluide avec tous les appareils disposant de Bluetooth activé.

Jumelage avec des appareils Bluetooth

Pour placer l'Solo en mode d'appairage, sélectionnez l'entrée Bluetooth, puis maintenez enfoncée la touche OK de la télécommande. Suivez les instructions fournies par le guide d'utilisation de votre appareil Bluetooth. Sélectionnez SOLO XXXXXX (où XXXXXX est un numéro unique attribué à votre Solo) dans la liste des périphériques Bluetooth pour terminer l'appairage. Une fois que le jumelage est terminé, il n'a plus besoin d'être effectué à nouveau.

Connexion USB

Connexion USB

Les périphériques mémoire USB (mémoires flash) permettent la lecture multimédia et sont nécessaire pour stocker du contenu BD-Live téléchargé. Pour profiter du contenu BD-Live, les caractéristiques suivantes sont conseillées :

- Capacité de 2 Go ou plus


- FAT32 formaté

- USB2.0 haut débit (480 Mo/s)

L'Solo peut lire des fichiers stockés sur un périphérique de stockage de masse USB,

une clé USB en général, ou tout appareil USB de type « périphérique de stockage de masse » compatible.

L'Solo n'accepte qu'une connexion directe

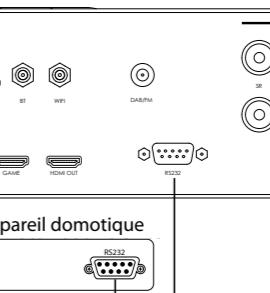

F-11

Connexion réseau

Câblage

Si un câble Ethernet est branché, l'Solo tente automatiquement de se connecter à votre réseau.

Vous devez utiliser un câble CAT5 branché

sur la prise RJ45 indiquée NET au dos de l'appareil.

Si votre réseau utilise une adresse IP


statique plutôt que le DHCP, il faudra

donner l'adresse IP, le portail d'accès à

Internet et le DNS ; Voir « Réseau »

on page F-28 pour plus de détails.

pointe : Signal modulé
prise : Terre

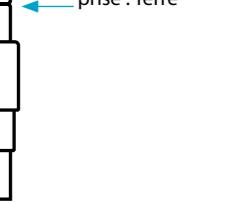

REMARQUE

L'entrée IR est conçue pour les signaux modulés. Si le récepteur infrarouge externe démodule le signal infrarouge, il ne fonctionnera pas. L'Solo ne permet pas non plus d'alimenter des récepteurs externes sur la prise infrarouge, il est donc nécessaire de fournir une source d'alimentation externe.

F-10

connecteurs d'antenne

Antenne DAB/DAB+ et FM

L'Solo est équipé d'un module de réception AM/FM et d'un récepteur DAB. Le type d'antenne dont vous avez besoin dépend de vos préférences d'écoute et des conditions locales.

Votre Solo est en mesure d'offrir une réception radio exceptionnelle, mais celle-ci dépend de la qualité du signal de transmission.

Testez les antennes livrées avec votre appareil. Si vous vous trouvez dans une région au signal moyen à fort, celles-ci devraient suffire à une bonne réception.

Dans les régions où le signal est faible, il vous faudra peut-être une antenne sur le toit ou de grenier.

Adressez-vous à votre revendeur Arcam ou à un spécialiste des installations d'antenne pour en savoir plus sur les conditions de réception locales.

Dans des régions où le signal est puissant, l'antenne filaire DAB/DAB+/FM « T » fournie peut servir. Montez l'antenne le plus haut possible sur un mur.

Au Royaume-Uni, les éléments « T » doivent être placés à la verticale pour la réception DAB/DAB+ car les transmissions sont polarisées à la verticale. Dans d'autres régions, veuillez consulter votre revendeur Arcam ou tester les positions horizontales et verticales pour obtenir une meilleure réception.

Antenne Bluetooth/WiFi

L'Solo est livrée avec Bluetooth et une antenne WiFi.


Les deux antennes sont identiques et doivent être insérées dans les connecteurs marqués BT et WiFi situés à l'arrière de l'Solo.

Testez tous les murs de la pièce pour voir quel mur donne la meilleure réception et utilisez des punaises ou du ruban adhésif pour maintenir l'antenne en forme de « T ». Sachez toutefois qu'aucune punaise ne doit rentrer en contact avec le fil interne de l'antenne.

Lorsque la qualité du signal est faible, il est conseillé d'utiliser une antenne à gain élevé, montée en extérieur ou sur le toit pour recevoir le plus grand nombre possible de services.

Dans les zones de transmission de bande III (au Royaume-Uni par exemple), utilisez une antenne Yagi à éléments multiples montés à la verticale, car les transmissions sont polarisées à la verticale. Si vous êtes proche de plus d'un transmetteur, utilisez une antenne omnidirectionnelle ou dipôle plié.

Si les services DAB/DAB+ de votre région sont transmis sur bande L, veuillez consulter votre revendeur pour savoir quelle antenne utiliser.

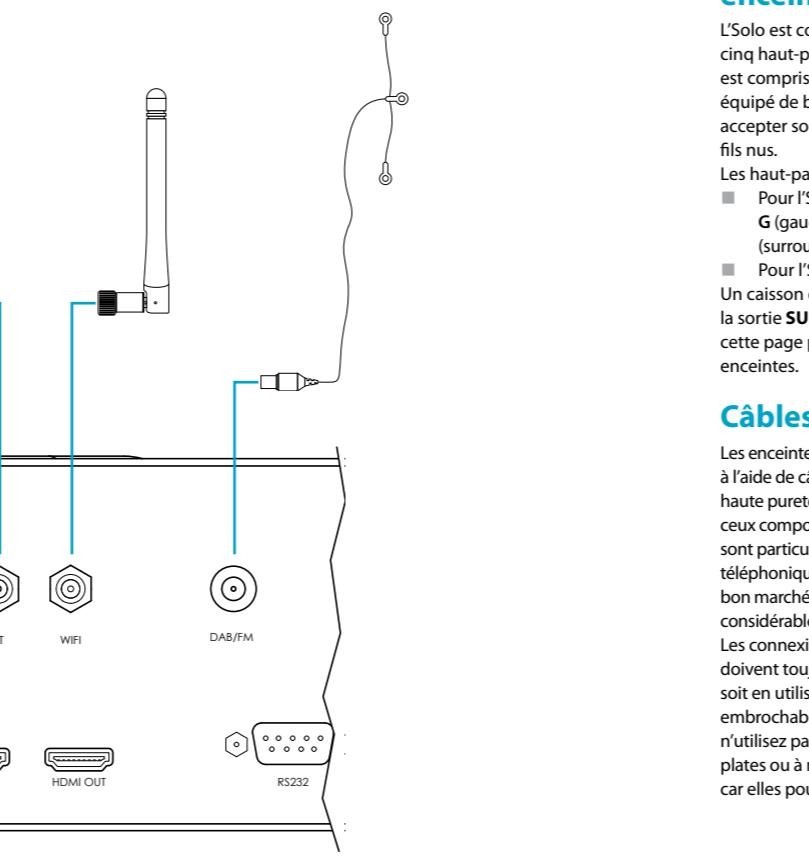

enceintes

Raccordement des enceintes

L'Solo est conçu pour piloter un ensemble de cinq haut-parleurs maximum, dont l'impédance est comprise entre 4 et 8 ohms. L'appareil est équipé de bornes de haut-parleur qui peuvent accepter soit des bornes embrochables ou des fils nus.

Les haut-parleurs sont :

- Pour l'Solo movie : SG (surround gauche), G (gauche), C (centre), D (droite) et SD (surround droit).
 - Pour l'Solo music : G (gauche), D (droite)
- Un caisson des graves actif peut être branché à la sortie SUB. Reportez-vous au diagramme de cette page pour le placement recommandé des enceintes.

Câbles d'enceintes

Les enceintes doivent être raccordées à l'Solo à l'aide de câbles de cuivre de qualité et de haute pureté. Des câbles à lame solide, ou ceux comportant des conducteurs en surface, sont particulièrement appropriés. Les fils téléphoniques et les câbles de haut-parleur très bon marché doivent être évités, car ils dégradent considérablement la qualité sonore.

Plus vous placerez un haut-parleur près de coins ou à l'intersection entre mur et plancher ou entre mur et plafond, plus la sortie des basses sera forte ce qui pourrait y mettre trop d'emphase. Déplacer un haut-parleur de quelques centimètres peut quelques fois faire toute la différence.

Configuration du haut-parleur

Un placement correct d'un haut-parleur est la clé pour obtenir la meilleure sonorité avec le


Positionnement des haut-parleurs

Les conseils donnés ci-après sont des recommandations générales concernant la configuration des hauts parleurs. Reportez-vous à la documentation fournie avec vos hauts parleurs pour obtenir une information plus précise. Visitez le site www.dolby.com pour avoir des informations utiles concernant l'agencement des espaces d'écoute.

Acoustique de la pièce

La forme de la pièce et son ameublement aura une influence sur le son que vous entendrez. Par exemple, trop de surfaces plates pourraient amplifier la sécheresse du son. Tapis, décorations murales et rideaux peuvent aider à compenser. Si vous avez un choix d'espaces d'écoute, évitez celui entièrement carré ou celui dont l'un des côtés est deux fois plus grand que l'autre. De tels espaces peuvent amplifier les résonances qui colorent la sonorité.

Les enceintes doivent toujours être bien ajustées, que ce soit en utilisant des fils nus, des connecteurs embrochables ou des fiches « banane », mais n'utilisez pas d'outils comme des pinces, des clés plates ou à molette pour serrer les connecteurs, car elles pourraient endommager les bornes.

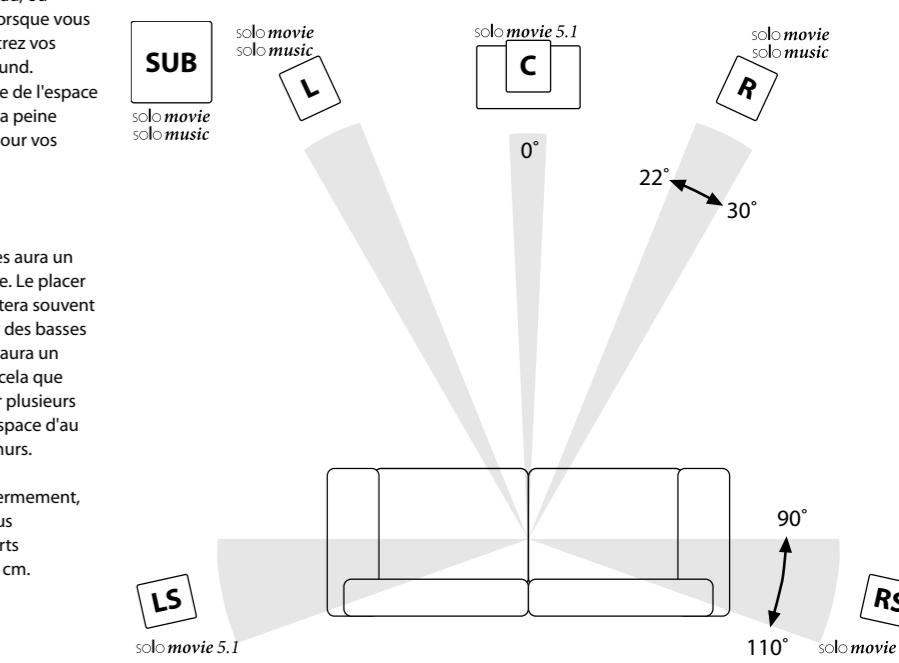

formats de disque et de fichier

Disques compatibles

L'Solo movie accepte les types de disques suivants :



Blu-ray 3D



Disque Blu-ray



DVD-Vidéo



DVD-R



DVD-RW



CD-Audio



CD-R



CD-RW



Super Audio CD

L'Solo musique accepte les types de disques suivants :



CD-Audio



CD-R



CD-RW



Super Audio CD

La lecture des formats de fichiers suivants est compatible (depuis un disque, le port USB et le réseau) à la fois avec l'Solo movie et l'Solo music :

- FLAC, jusqu'à 24bit, 192KHz
- WAV, jusqu'à 24bit, 192KHz
- AAC, jusqu'à 24bit, 96KHz
- AIFF, jusqu'à 24bit, 192KHz
- OGG, jusqu'à 24bit, 192KHz
- MP3, jusqu'à 320kbps, 48KHz
- WMA, jusqu'à 192kbps, 48KHz

Formats vidéo compatibles (Solo movie uniquement)

La compatibilité des fichiers vidéo avec votre lecteur est limitée comme suit : Des codes région sont attribués aux lecteurs Blu-ray et aux disques Blu-ray ou DVD Vidéo selon leur région de vente. Si les codes région ne correspondent pas, le disque ne pourra pas passer.

Code région	Région de disque
Blu-ray	

A	Amérique du Nord, Amérique Centrale, Amérique du Sud, Corée, Japon, Taïwan, Hong Kong et Asie du Sud-Est
B	Europe, Groenland, Territoires français d'Outre-Mer, Moyen Orient, Afrique, Australie et Nouvelle Zélande
C	Inde, Chine, Russie, Asie Centrale et Asie du Sud
Tous	Toutes les régions

Symboles indiquant qu'un disque peut passer en Amérique du Nord :
Disques Blu-ray :
DVD :

Symboles indiquant qu'un disque peut passer en Europe :
Disques Blu-ray :

Symboles indiquant qu'un disque peut passer en Asie du Sud-Est :
Disques Blu-ray :

Symboles indiquant qu'un disque peut passer en Asie du Sud :
Disques Blu-ray :

Symboles indiquant qu'un disque peut passer en Afrique :
Disques Blu-ray :

Symboles indiquant qu'un disque peut passer en Australie et Nouvelle Zélande :
Disques Blu-ray :

Codage régional (Solo movie uniquement)

Des codes région sont attribués aux lecteurs Blu-ray et aux disques Blu-ray ou DVD Vidéo selon leur région de vente. Si les codes région ne correspondent pas, le disque ne pourra pas passer.

Code région	Région de disque
Blu-ray	

A	Amérique du Nord, Amérique Centrale, Amérique du Sud, Corée, Japon, Taïwan, Hong Kong et Asie du Sud-Est
B	Europe, Groenland, Territoires français d'Outre-Mer, Moyen Orient, Afrique, Australie et Nouvelle Zélande
C	Inde, Chine, Russie, Asie Centrale et Asie du Sud
Tous	Toutes les régions

Symboles indiquant qu'un disque peut passer en Amérique du Nord :
Disques Blu-ray :

Symboles indiquant qu'un disque peut passer en Europe :
Disques Blu-ray :

Symboles indiquant qu'un disque peut passer en Asie du Sud-Est :
Disques Blu-ray :

Symboles indiquant qu'un disque peut passer en Asie du Sud :
Disques Blu-ray :

Symboles indiquant qu'un disque peut passer en Afrique :
Disques Blu-ray :

Symboles indiquant qu'un disque peut passer en Australie et Nouvelle Zélande :
Disques Blu-ray :

fonctionnement de base

Fonctionnement de votre Solo

Inleiding

Cette rubrique explique le fonctionnement de base de l'Solo. Notez qu'il peut être nécessaire de configurer l'Solo correctement pour obtenir des performances optimales. Les détails concernant les paramètres du système peuvent être trouvés à "menus de configuration" on page F-26.

Mise en marche

Appuyez sur la touche d'alimentation POWER pour allumer l'appareil. Le voyant devient vert lorsque l'appareil est mis sous tension. Si vous appuyez sur la touche power (ou si vous débranchez l'appareil) lorsque l'appareil est sur veille, ce dernier se remettra en mode veille à la prochaine mise sous tension.

Veille

L'Solo dispose d'un mode de veille que l'on peut activer en appuyant sur la touche Ø de la télécommande. En mode veille, l'écran devient noir et le voyant lumineux de MARCHE/ARRÊT est rouge. Toutefois, si l'appareil ne doit pas être utilisé pendant longtemps, nous conseillons de le débrancher du circuit électrique afin d'économiser de l'énergie. Pour sortir du mode veille, appuyez sur la touche Ø de la télécommande.

Une source d'entrée particulière peut également être sélectionnée en utilisant l'option de source à partir de l'écran d'accueil, comme décrit dans la section précédente.

Écran d'accueil

Pour sélectionner une source précise, utilisez la touche INPUT- ou INPUT+ jusqu'à ce que la source s'affiche sur l'écran de la façade, ou appuyez sur la touche correspondant à la source que vous recherchez sur la télécommande (reportez-vous à "Mode périphérique / Touches source" on page F-17).

Les sources suivantes sont disponibles :

	Commencez à jouer un disque CD/DVD/BD. Reportez-vous à "lecture d'un disque" on page F-23.
	Vous permet de jouer des fichiers multimédias. Voir "fonctionnement réseau / USB" on page F-24.
	Entrée réseau (par exemple, les périphériques UPnP), le port USB pour disque SSD (par exemple, les clés USB)
	Lecteur de disque interne
	Entrée HDMI audiovisuelle
	Entrée HDMI satellite
	Entrée HDMI de magnétoscope numérique
	Entrée HDMI de la console de jeux
	Entrée audio analogique pour fiche phono
	Entrée audio analogique 3,5 mm
	Entrée audio numérique coaxiale pour décodeur
	Entrée audio optique pour téléviseur

Sélection d'une source

Pour sélectionner une source précise, utilisez la touche INPUT- ou INPUT+ jusqu'à ce que la source s'affiche sur l'écran de la façade, ou appuyez sur la touche correspondant à la source que vous recherchez sur la télécommande (reportez-vous à "Mode périphérique / Touches source" on page F-17).

Contrôle du volume

Le volume peut être augmenté ou diminué, soit en tournant le bouton rotatif du panneau supérieur (reportez-vous à "Commandes du panneau supérieur" on page F-7) ou en utilisant la touche de contrôle de volume sur la télécommande (reportez-vous à "Contrôle du volume" on page F-17).

Écouteurs

Pour utiliser des écouteurs sur l'Solo, branchez les écouteurs sur la prise phones au centre de la façade. Lorsque des écouteurs sont branchés sur la prise phones de la façade, le haut-parleur et les sorties du coupon sont coupés et l'audio est sous-mixée sur deux canaux (2.0).




La télécommande universelle de l'Solo

La télécommande de l'Solo en est une « universelle » particulièrement sophistiquée capable de contrôler jusqu'à huit appareils. Elle est préprogrammée pour être utilisée avec l'Solo et avec sa vaste bibliothèque de codes intégrée, elle peut également être utilisée avec des milliers de composants audiovisuels de tiers, comme les téléviseurs, les récepteurs satellites, les décodeurs, les magnétoscopes numériques, etc.

La télécommande de l'Solo en est une « d'apprentissage ». Vous pouvez donc lui apprendre presque toutes les fonctions d'une ancienne télécommande pour un seul appareil.

Insertion des piles dans la télécommande

- Ouvrez le compartiment des piles situé au dos de la télécommande en enlevant son couvercle.
- Insérez deux piles AAA dans le compartiment comme illustré.
- Vous pouvez maintenant placer fermement le couvercle jusqu'à ce que vous entendiez un clic indiquant que le couvercle est verrouillé.

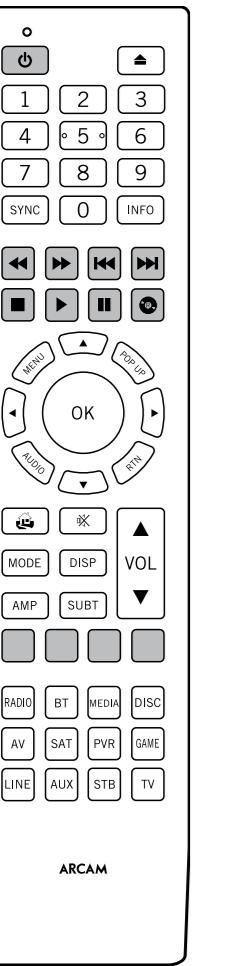

Utilisation de la télécommande

Veuillez garder à l'esprit les règles suivantes lorsque vous utilisez la télécommande

- Veillez à ce qu'aucun obstacle ne se trouve entre la télécommande et le capteur de la télécommande sur l'Solo. La portée de la télécommande est d'environ 7 mètres. (Si le capteur de la télécommande est obstrué, vous pouvez utiliser la prise d'entrée de la télécommande IF in au dos de l'appareil. Veuillez vous adresser à votre revendeur pour obtenir de plus amples informations.)
- La télécommande peut devenir capricieuse si le capteur de la télécommande sur l'Solo est exposé à une puissante luminosité solaire ou artificielle.
- Remplacez les piles si vous remarquez une réduction de la portée de la télécommande.

REMARQUE

La télécommande de l'Solo est conforme à la Section 15 des règles de la FCC

Cet équipement a fait l'objet de tests et a été jugé conforme aux limitations d'un appareil numérique de classe B, conformément à la Section 15 des règles de la FCC. Ces limites sont imposées pour assurer une protection suffisante contre les interférences produites dans une installation résidentielle. Cet appareil génère, utilise et peut émettre de l'énergie de fréquence radio et, s'il n'est pas installé et utilisé conformément aux instructions, peut produire des interférences nuisibles aux communications radio. Il n'est cependant pas garanti qu'aucune interférence ne se produira dans une installation particulière. Si cet appareil provoque des interférences nuisibles affectant la réception de programmes radio ou télévisés, ce qui peut être déterminé en éteignant puis rallumant l'appareil, l'utilisateur peut tenter de remédier à ces interférences en adoptant une ou plusieurs des mesures suivantes :

- Réorientez ou déplacez l'antenne de réception.
- Augmentez la distance entre l'appareil et le récepteur.
- Branchez l'appareil sur une prise située sur un circuit différent de celui sur lequel est branché le récepteur.
- Consultez votre revendeur ou un technicien radio/télévision expérimenté.

Informations utiles

Rétroéclairage

Lorsque les piles faiblissent, le voyant clignote cinq fois à chaque pression sur une touche :



Dans ce cas, veuillez installer dès que possible deux piles alcalines AAA neuves.

Si le voyant marche/arrêt clignote

Mode périphérique / Touches source

La télécommande étant capable de commander votre Solo ainsi que d'autres appareils, une bonne partie des touches auront plus d'une fonction, selon le « mode périphérique » sélectionné sur la télécommande.

Les touches de mode périphérique (illustrées ci-dessous) permettent de sélectionner la source sur l'Solo. Si vous appuyez brièvement sur l'une de ces touches, une commande transmise demande le changement de source sur l'appareil.



Chaque mode périphérique change le comportement d'un bon nombre de touches de la télécommande pour commander l'appareil source correctement. Par exemple : en mode DISC ↳ permet de lancer la lecture de la piste CD précédente, mis en mode AV ↳ lance la recherche de chaîne TV vers le bas.

Touches non attribuées : la télécommande ignore toute touche non attribuée pour un mode périphérique précis et ne transmet pas d'infrarouge.

Indicateur de piles faibles

Lorsque les piles faiblissent, le voyant clignote cinq fois à chaque pression sur une touche :



Dans ce cas, veuillez installer dès que possible deux piles alcalines AAA neuves.

Touches de navigation

Ainsi, si vous écoutez un CD, l'Solo sera probablement en mode périphérique CD pour pouvoir commander le lecteur CD. Vous pouvez utiliser les touches de volume de la télécommande directement pour régler le volume de l'Solo sans avoir au préalable à appuyer sur la touche AMP pour mettre la télécommande en mode périphérique AMP. Les touches de volume « perforent » le mode périphérique CD de la télécommande pour forcer le mode périphérique AMP.

Si vous le souhaitez, il est possible de désactiver ce « punch through » du volume sur un mode périphérique particulier.

Personnalisation de la télécommande de l'Solo

La télécommande est une commande d'apprentissage. Vous pouvez copier jusqu'à 16 fonctions d'une télécommande d'origine sur le clavier de la télécommande universelle. Pour obtenir des détails supplémentaires sur ces fonctions de personnalisation, voir "personnalisation de la télécommande" on page F-20.

Mode périphérique AMP

La touche de mode périphérique AMP configure la télécommande pour contrôler l'Solo. Le fait d'appuyer sur cette touche n'a aucune incidence sur l'entrée sélectionnée sur l'Solo.

La fonctionnalité de l'Solo dépend du contexte pour les sources internes et est décrite dans le tableau ci-dessous.

Ø	Pour mettre l'Solo en veille ou en marche.
▲	Ouverture/fermeture du plateau de disque.
0...9	Recherche et lit la piste correspondant à la touche actionnée lors de la lecture d'un CD.
SYNC	LipSync. Il est possible d'introduire des retards sur le signal vidéo par traitement vidéo qui entraîne une mauvaise coordination de l'audio et de la vidéo. Vous le remarquerez lorsque la voix est décalée par rapport aux mouvements des lèvres du film. Pour compenser ce décalage, vous pouvez régler le décalage lip sync. Appuyez sur la touche sync et utilisez les touches de navigation (◄ et ►). Appuyez de nouveau pour quitter le menu trim lipsync.
INFO	Les infos circulent grâce aux informations affichées sur la partie inférieure gauche de l'écran du panneau avant
◀	Retour rapide d'un CD, DVD ou BD.
▶	Avance rapide d'un CD, DVD ou BD.
◀	Pour revenir directement au début de la piste actuelle/ précédente sur le lecteur CD, DVD ou BD.
▶	Pour aller directement au début de la piste suivante sur le lecteur CD, DVD ou BD.
■	Arrêt de la lecture d'un CD, DVD ou BD.

▶	Lecture du contenu d'un CD, DVD ou BD.
II	Met en pause la lecture du CD, DVD ou BD.
MENU	Menu du disque.
POP UP	Active le menu contextuel du lecteur BD, si disponible.
RTN	Retourne du menu sur les Menus du BD/DVD.
AUDIO	Sélectionne entre les pistes audio disponibles sur un BD/DVD
AMP+	Parcourir les fichiers à l'écran. OK sélectionne le fichier ou entre le menu en surbrillance sur l'écran – équivalent à « Enter » ou « Select » sur certaines télécommandes.
AMP+◀	Mise en marche à partir du mode veille
AMP+▼	Mode veille lorsqu'il est en marche
AMP+◆	Modifie la résolution de l'image
◀	Retour de la navigation au niveau supérieur du menu (« Accueil »).
DISP	Pour activer ou désactiver la fonction silence de Solo
MODE	Parcoure les modes surround et downmix disponibles
VOL	Parcourt les options de luminosité de l'affichage en façade
AMP	Augmente/diminue le volume de l'amplificateur
SUBT	Réinitialise la télécommande au mode AMP
RED	Parcours des options de langue de sous titrage, si disponible sur le lecteur DVD ou BD
RED	Touche rouge pour BD

GREEN	Touche verte pour BD
YELLOW	Touche jaune pour BD
BLUE	Touche bleue pour BD
MENU	Menu du disque.
POP UP	Active le menu contextuel du lecteur BD, si disponible.
RTN	Retourne du menu sur les Menus du BD/DVD.
AUDIO	Sélectionne entre les pistes audio disponibles sur un BD/DVD
AMP+	Parcourir les fichiers à l'écran. OK sélectionne le fichier ou entre le menu en surbrillance sur l'écran – équivalent à « Enter » ou « Select » sur certaines télécommandes.
AMP+◀	Mise en marche à partir du mode veille
AMP+▼	Mode veille lorsqu'il est en marche
AMP+◆	Modifie la résolution de l'image
◀	Retour de la navigation au niveau supérieur du menu (« Accueil »).
DISP	Pour activer ou désactiver la fonction silence de Solo
MODE	Parcoure les modes surround et downmix disponibles
VOL	Parcourt les options de luminosité de l'affichage en façade
AMP	Augmente/diminue le volume de l'amplificateur
SUBT	Réinitialise la télécommande au mode AMP
RED	Parcours des options de langue de sous titrage, si disponible sur le lecteur DVD ou BD
RED	Touche rouge pour BD

Commandes Bluetooth

L'entrée audio **Bluetooth** est sélectionnée par une pression sur **BT** en mode périphérique **AMP** sur la télécommande. Lorsqu'un dispositif de streaming audio est connecté, les touches suivantes sont utilisées pour parcourir les morceaux de musique.

◀▶	Sélectionne la piste précédente/suivante sur la liste de lecture en cours.
▶	Lecture de la piste actuelle.
■	Pause de la piste actuelle.

Commandes du média réseau/USB

Lors de l'utilisation du client réseau, les touches ci-dessous permettent de parcourir les fichiers de musique en mode périphérique AMP.

◀▶	Parcourir les fichiers à l'écran. OK sélectionne/lance la lecture du fichier en surbrillance.
▶	Sélectionne la piste précédente/suivante sur la liste de lecture en cours.
◀▶	Sélectionne la piste précédente/suivante sur la liste de lecture en cours.
▶	Lecture de la piste actuelle.
■	Arrêt de la lecture.

Menus

Retour de la navigation au niveau supérieur des menus de client réseau (« Accueil »).

Mode périphérique SAT

La touche de mode périphérique SAT permet de sélectionner SAT comme source. Si elle est configurée pour fonctionner avec votre récepteur satellite, la télécommande de l'Solo peut ensuite contrôler l'appareil.

Ø	Pour mettre en veille ou en marche.
0...9	Fonctionne comme les touches chiffrées d'une télécommande d'origine, en général pour la sélection de chaîne.
INFO	Affiche la fonction INFO ou OSD, si disponible.
RTN	Retour
AUDIO	Avance rapide
DISC	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Menus
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes).
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Ouvre le guide électronique des programmes sur certains décodeurs satellite et câble
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes)
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Ouvre le guide électronique des programmes sur certains décodeurs satellite et câble
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes)
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Ouvre le guide électronique des programmes sur certains décodeurs satellite et câble
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes)
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Ouvre le guide électronique des programmes sur certains décodeurs satellite et câble
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes)
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Ouvre le guide électronique des programmes sur certains décodeurs satellite et câble
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes)
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Ouvre le guide électronique des programmes sur certains décodeurs satellite et câble
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes)
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Ouvre le guide électronique des programmes sur certains décodeurs satellite et câble
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes)
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Ouvre le guide électronique des programmes sur certains décodeurs satellite et câble
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes)
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Ouvre le guide électronique des programmes sur certains décodeurs satellite et câble
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes)
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Ouvre le guide électronique des programmes sur certains décodeurs satellite et câble
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes)
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Ouvre le guide électronique des programmes sur certains décodeurs satellite et câble
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes)
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Ouvre le guide électronique des programmes sur certains décodeurs satellite et câble
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes)
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu
BT	Enregistrement
BT	Ouvre le guide électronique des programmes sur certains décodeurs satellite et câble
BT	Navigation des menus de configuration et de sélection des programmes. OK confirme un réglage (équivalent à « Enter » ou « Select » sur certaines télécommandes)
BT	Retour de la navigation au niveau supérieur du menu (« Accueil »).
BT	Retour
BT	Avance rapide
BT	Chaîne vers le bas
BT	Chaîne vers le haut
BT	Arrêt de la lecture
BT	Lecture du contenu
BT	Pause du contenu

personnalisation de la télécommande

REMARQUE

Dans les pages suivantes, un seul clignotement du voyant de la télécommande est indiqué par le symbole

Apprentissage de code

La télécommande fournie comprend une bibliothèque exhaustive de codes préprogrammés. Après avoir configuré la télécommande pour votre appareil, il se peut qu'une ou plusieurs fonctions de la télécommande d'origine de votre appareil ne se retrouve(nt) pas sur les touches de la télécommande universelle. Pour pallier à cela, la télécommande propose une fonctionnalité d'Apprentissage de code qui vous permet de copier jusqu'à 16 fonctions de la télécommande d'origine sur le clavier de la télécommande universelle.

Avant de commencer, veillez à ce que :

- La télécommande d'origine fonctionne correctement.
- Les télécommandes ne soient pas dirigées vers l'appareil.
- Les télécommandes disposent de piles neuves.
- Les télécommandes ne sont pas en plein soleil ou sous un éclairage au néon trop puissant.

REMARQUE

Les fonctions apprises dépendent du mode. Vous pouvez en théorie attribuer jusqu'à huit fonctions différentes sur une seule touche (une fonction distincte apprise pour chaque mode).

Configuration de code directe (Méthode 1)

La première méthode consiste à programmer la télécommande avec le numéro de code à 3 chiffres pour l'appareil que vous souhaitez commander. (Voir « tableaux de codes d'appareils »). Inscrivez le ou les numéro(s) suggéré(s) (le code le plus populaire est répertorié en premier). Allumez votre appareil.

1. Appuyez sur la touche Dispositif pour le produit que vous souhaitez configurer, conjointement avec la touche 1. Maintenez les deux touches pendant trois secondes jusqu'à ce que le voyant reste allumé.
2. Vous êtes à présent en mode configuration, et vous pouvez relâcher les touches.
3. Saisissez un code à 3 chiffres pour l'appareil.
4. Si le numéro de code à 3 chiffres que vous avez saisi convient, l'appareil s'éteint. S'il ne s'éteint pas, veuillez saisir le numéro de code qui suit dans votre liste jusqu'à ce que l'appareil s'éteigne.
5. Une fois que vous avez trouvé le code approprié, appuyez une nouvelle fois sur la touche Périphérique. Le voyant clignote trois fois pour confirmer que le code a bien été enregistré.

Recherche sur bibliothèque (Méthode 2)

La recherche sur bibliothèque vous permet de passer en revue l'ensemble des codes contenus dans la mémoire de la télécommande. Cette méthode peut être beaucoup plus longue que la méthode précédente. Utilisez-la uniquement si :

- Votre appareil ne répond pas à la télécommande après que vous ayez essayé tous les codes indiqués pour la marque de votre appareil.
 - La marque de votre appareil n'apparaît pas sur les tableaux des codes d'appareil.
1. Appuyez sur la touche Dispositif pour le produit que vous souhaitez configurer, conjointement avec la touche 1. Maintenez les deux touches pendant trois secondes jusqu'à ce que le voyant reste allumé.
 2. Dirigez la télécommande vers le produit que vous souhaitez contrôler et appuyez sur les touches ou du pavé de navigation. À chaque pression sur les touches ou , le code augmente (ou diminue) un numéro de code pour signaler à l'appareil de s'éteindre.
 3. Continuez à appuyer sur la touche vers le haut ou vers le bas, à intervalles d'environ une seconde, jusqu'à ce que l'appareil s'éteigne. (NE PAS alterner la touche vers le haut ou vers le bas : vous devez vous déplacer dans une seule direction.)
 4. Appuyez une nouvelle fois sur la touche périphérique afin d'enregistrer le code approprié. Le voyant clignote trois fois pour confirmer que le code a bien été enregistré.

Configuration d'apprentissage (Méthode 3)

La troisième méthode consiste à « former » la télécommande Arcam à partir de la télécommande d'origine de l'appareil. Les deux télécommandes doivent être placées face à face, à environ 10 cm l'une de l'autre.

1. Appuyez sur la touche Dispositif pour le produit que vous souhaitez configurer, conjointement avec la touche 3. Maintenez les deux touches pendant trois secondes jusqu'à ce que le voyant reste allumé.
2. Appuyez sur la touche de la télécommande Arcam à laquelle vous souhaitez assigner une commande. Le voyant clignote une fois pour indiquer que la télécommande est prête à apprendre la commande.
3. Appuyez longuement sur la touche correspondante de l'autre télécommande jusqu'à ce que le voyant clignote deux fois . Cela indique que la télécommande Arcam a appris la commande à partir de votre autre télécommande.
4. Poursuivez l'apprentissage des commandes de votre autre télécommande en appuyant sur le bouton suivant sur la télécommande et répétez les étapes 2 et 3.
5. Une fois que la télécommande a appris toutes les commandes sélectionnées, appuyez longuement sur la touche de périphérique que vous avez utilisée pour effectuer un apprentissage avec la touche Numérique 3 pour enregistrer les commandes apprises.

REMARQUE

Si le voyant de la clignote cinq fois une erreur s'est produite dans le processus d'apprentissage. Les touches AMP et RADIO n'apprennent pas de commandes.

Pour supprimer une fonction apprise

Remarques importantes

- Après avoir commencé une session d'apprentissage de code, vous avez environ 10 secondes pour effectuer chaque étape. Au bout de 10 secondes, le délai est expiré et vous devez recommencer le processus.
- La fonctionnalité d'apprentissage dépend du mode : vous pouvez copier une fonction **par mode** sur une touche
- La télécommande peut apprendre un total d'environ 16 fonctions.
- Pour remplacer une fonction apprise, il suffit d'attribuer une nouvelle fonction sur la même touche.
- Les fonctions apprises restent en mémoire lorsque vous changez les piles.
- Si l'apprentissage de code ne se fait pas, essayez de modifier la distance entre les deux télécommandes. Vérifiez que l'éclairage de la pièce n'est pas trop vif.

Pour supprimer toutes les données apprises pour un dispositif :

1. Appuyez sur la touche Dispositif pour le produit que vous souhaitez configurer, conjointement avec la touche 4. Maintenez les deux touches pendant trois secondes jusqu'à ce que le voyant clignote.
2. Appuyez sur la touche INFO et comptez le nombre de clignotements ($\star\star\star = 1$, $\star\star\star\star = 2$, $\star\star\star\star\star = 3$, etc.). Il y a un intervalle de temps entre les chiffres. (Veuillez noter que « 0 » est représenté par dix clignotements :
3. Si vous n'effectuez aucune pression supplémentaire sur la touche après que le voyant ait clignoté deux fois , la télécommande quitte le mode effacement sans supprimer les fonctions apprises.
4. Si vous appuyez une nouvelle fois sur la touche périphérique 30 secondes après les deux clignotements du voyant , vous pouvez terminer le mode d'effacement qui supprime toutes les données apprises sur le dispositif. Le voyant clignote trois fois pour valider.
5. Si vous appuyez une nouvelle fois sur la touche Dispositif avec la touche 3 30 secondes après les deux clignotements du voyant, toutes les fonctions apprises sur ce périphérique sont supprimées et vous quittez le mode effacement. Le voyant clignote trois fois pour confirmer.

Lecture des numéros de code mémorisés

Lorsque vous ouvrez l'emballage de votre télécommande et insérez les piles pour la première fois, elle est en mesure de commander certains éléments Arcam automatiquement (par exemple des amplis, des tuners ou des lecteurs disques). Pour cela, nous préprogrammons les codes correspondant aux appareils Arcam sur les touches de mode périphérique qui conviennent, et verrouillons ensuite des modes périphérique pour que vous ne puissiez pas les reprogrammer par inadvertance. Si vous souhaitez neutraliser ces réglages par défaut, pour commander un autre amplificateur, par exemple, il vous faut tout d'abord déverrouiller le mode AMP avant de pouvoir utiliser l'une des méthodes décrites au début de ce guide pour configurer la télécommande.

Verrouillage/ Déverrouillage d'un mode périphérique particulier

Mode périphérique	Statut par défaut	Codes par défaut
AMP	Verrouillé	001 (Code Arcam 16)
AV	Déverrouillé	Code d'apprentissage seul
SAT	Déverrouillé	128 (Sky+)
PVR	Déverrouillé	018 (Humax 9300)
GAME	Déverrouillé	Code d'apprentissage seul
LINE	Déverrouillé	Code d'apprentissage seul
AUX	Déverrouillé	Code d'apprentissage seul
STB	Déverrouillé	030 (Bush, Goodmans, Grundig)
TV	Déverrouillé	108 (TV Philips)

Les réglages d'usine par défaut sont :

Français

lecture d'un disque

Vous devrez changer le code système de l'appareil que vous souhaitez commander, ainsi que celui de la télécommande.

1. Les touches de l'appareil qui peuvent être verrouillées ou déverrouillées.
2. Les fonctions Verrouiller et Déverrouiller sont des sélecteurs (elles alternent de Verrouiller à Déverrouiller à Verrouiller, etc.).
3. Appuyez longuement sur la touche de périphérique et la touche 6 pendant trois secondes.
4. Le voyant d'alimentation reste allumé, indiquant qu'il est en mode configuration de verrouillage / déverrouillage.
5. Si aucune touche n'est activée pendant 30 secondes, le voyant s'éteint et la télécommande quitte le mode configuration de verrouillage / déverrouillage.
6. Pour vérifier l'état d'un périphérique, appuyez successivement sur les touches **3 6 9** :
7. Si le mode verrouillage est configuré, le voyant clignote trois fois :
8. Si le mode déverrouillage est configuré, le voyant clignote cinq fois :
9. Si vous appuyez sur une touche du périphérique valide dans les 30 secondes, le voyant clignote trois fois : et la télécommande quitte le mode configuration de verrouillage / déverrouillage.

Contrôle du volume des autres périphériques

Par défaut, les touches de volume et la touche mute contrôlent le volume de l'amplificateur.

Vous pouvez configurer ces touches pour qu'elles envoient les commandes de volume vers un autre appareil. Dans l'exemple suivant, les commandes de volume sont envoyées à un dispositif audiovisuel relié (votre téléviseur, par exemple) :

1. Appuyez sur **AV + 5** pendant trois secondes, jusqu'à ce que le voyant apparaisse et reste allumé.
2. Appuyez sur **VOL UP**.
3. Appuyez de nouveau sur **AV**. Le voyant clignote trois fois .

Les touches volume et mute peuvent maintenant envoyer les commandes de volume sur le téléviseur.

Pour configurer les touches de volume afin de contrôler l'amplificateur une nouvelle fois, répétez les étapes précédentes, à l'exception de la touche **AMP** sur laquelle il faut appuyer à l'étape 3.

Si vous appuyez sur une touche du périphérique valide dans les 30 secondes, le voyant clignote trois fois : et la télécommande quitte le mode configuration de verrouillage / déverrouillage.

Commandes cachées

Commande	Effet
AMP+▲	Envoie une commande de mise sous tension
AMP+▼	Envoie une commande de mise hors tension

Réinitialisation par défaut

Vous pouvez réinitialiser votre télécommande sur les paramètres par défaut.

Maintenez appuyer les touches (HOME) et MENU ensemble pendant environ cinq secondes jusqu'à ce que le voyant d'alimentation clignote cinq fois .

L'ensemble de la programmation et des codes de configuration que vous avez saisis dans la télécommande sont effacés et la télécommande retrouve ses paramètres par défaut.

Codes périphérique

Les tableaux indiqués à "device code tables" on page DC-1 (à la fin de ce manuel) liste les codes à 3 chiffres d'appareils de fabricants différents. Vous pouvez configurer ces codes lorsque vous configurez votre télécommande afin de commander ces appareils, comme décrit dans "Configuration de code directe (Méthode 1)" on page F-20.

Si plus d'un code est indiqué, essayez le premier numéro. Si les résultats ne sont pas bons, essayez les autres codes pour ce fabricant jusqu'à ce que vous obteniez le meilleur réglage pour la fonctionnalité requise.

Si le fabricant de votre appareil ne figure pas dans la liste, vous pouvez essayer la configuration recherche sur "Recherche sur bibliothèque (Méthode 2)" on page F-20. Celle-ci vous permet de passer en revue l'ensemble des codes contenus dans la mémoire de la télécommande.

Informations du disque

Maintenez enfoncez la touche INFO de la télécommande pour afficher la barre d'informations en haut l'écran de votre téléviseur. Un exemple est donné ci-dessus, mais les informations varient selon le type de disque.

Elles comprennent en général le type de disque, la piste, le nombre total de pistes et la durée écoulée sur la piste.

Maintenez de nouveau enfonce INFO pour arrêter de l'afficher.

Sélection de la piste audio

Certains disques comprennent plusieurs pistes audio, par exemple une piste audio classique Dolby Digital 5.1 et une piste audio surround haute-définition Dolby TrueHD. Vous pouvez changer de piste audio durant la lecture. Vous pouvez également choisir une piste audio secondaire (commentaire du réalisateur, par exemple) sur un disque Blu-ray (le cas échéant), si d'autres pistes sont proposées.

Remarque : Pour modifier la langue audio, utilisez le menu de configuration : voir "Langue" on page F-28.

Appuyez sur AUDIO pour parcourir les flux audio disponibles.

Menu principal

De nombreux disque vidéo BD et DVD contiennent un menu de disque, un menu principal ou un menu contextuel qui vous indiquera les fonctions du disque.

Le contenu des menus et les opérations correspondantes dépendent du disque.

Menu contextuel : Appuyez sur la touche POP UP pour que le menu « contextuel » s'affiche sur le téléviseur.

Utilisez les touches de navigation de la télécommande pour parcourir les menus.

Surlignez une option et appuyez sur OK pour la sélectionner, ou appuyez sur la touche POP UP pour quitter ce menu.

Sous-titres

Certains disques comportent plusieurs options de sous-titrage. Vous pouvez changer les sous-titres durant la lecture. Vous pouvez également changer une piste vidéo secondaire (commentaire du réalisateur, par exemple) sur un disque Blu-ray (le cas échéant, si d'autres pistes sont proposées).

REMARQUE

- Pour modifier la langue des sous-titres, utilisez le menu de configuration. Reportez-vous à "Langue" on page F-28

REMARQUE

- Pour modifier la langue des sous-titres, utilisez le menu de configuration. Reportez-vous à "Langue" on page F-28
- Appuyez sur SUBT pour afficher les informations sur le sous-titrage en cours : Continuez à appuyer sur la touche SUBT pour parcourir tous les sous-titres de disque disponibles.

Bonusview et BD-Live

Les fonctions Bonusview et BD-Live sont typiques du format Blu-ray.

Bonusview propose les fonctions d'image dans l'image et de Virtual Package pour les disques compatibles. Les disques BD-Live proposent en outre un éventail de fonctionnalités via internet. Les informations de Virtual Package/BD-LIVE doivent être sauvegardées sur un périphérique de mémoire USB branché sur le Solo. Pour pouvoir profiter de ces fonctions, branchez un support mémoire USB (d'une capacité minimum de 1 Go, et de préférence de 2 Go ou plus) prenant en charge le FAT 32 et l'USB 2.0 High Speed (480 Mbit/s) sur le connecteur USB. (Pour les détails, reportez-vous à "Connexion USB" on page F-11)

Si l'espace de stockage est insuffisant, les données ne pourront pas être copiées/téléchargées. Supprimez tout contenu inutile ou utilisez un nouveau périphérique mémoire USB.

■ Si le support mémoire USB que vous utilisez comprend déjà d'autres contenus (enregistrés auparavant), il est possible que cela gêne la lecture vidéo et audio.

■ Si jamais le support mémoire USB est débranché de l'appareil en cours de lecture de contenu Virtual Package/BD-LIVE, la lecture du disque s'arrêtera.

■ Le chargement (lecture/écriture) de contenu peut prendre un certain temps.

REMARQUE

- Si l'espace mémoire sur le périphérique USB est insuffisant, il se peut qu'il soit impossible d'utiliser les fonctions BD-Live. Dans ce cas, veuillez consulter "Système" on page F-30 pour effacer les contenus de Virtual Package et les contenus BD-Live sur le support mémoire USB.

- Le fonctionnement des supports mémoire USB n'est pas garanti.

- Branchez le périphérique mémoire USB sur le connecteur USB (n'utilisez pas de rallonge ou de prise multiple).

BD-Live

Le Solo est compatible avec le BD-Live, ce qui permet l'accès à des fonctions diverses avec des disques compatibles BD-Live. Le BD-Live permet de télécharger, à partir d'internet vers une mémoire USB, des contenus tels que les dernières bandes-annonces de film et des interactifs BD-J.

Les fonctions BD-Live disponibles dépendent du disque Blu-ray. Reportez-vous au mode d'emploi du disque pour en savoir plus.

REMARQUE

- Pour pouvoir utiliser les fonctions BD-Live, une connexion internet sur l'I-Solo est nécessaire. Reportez-vous à "Réseau" on page F-28
- Vous pouvez désactiver l'accès internet BD-Live à l'aide du paramètre d'accès internet BD-Live sur le menu Système. Voir "Réseau" on page F-28
- Vous aurez peut-être à utiliser les touches de couleur sur la télécommande pour effectuer les opérations de lecture.

REMARQUE

- Les méthodes de lecture varient en fonction du disque — consultez le manuel du disque.

- Vous aurez peut-être à utiliser les touches de couleur sur la télécommande pour effectuer les opérations de lecture.

fonctionnement réseau / USB

Lecture de fichiers multimédia

L'icône **MY MEDIA** s'affiche à l'écran à la mise en marche initiale de l'Solo. Pour faire passer des fichiers vidéo ou photo (par exemple un diaporama) ou des fichiers audio, positionnez-vous sur l'icône **MY MEDIA** et appuyez sur **OK**.



Les fichiers vidéo et audio peuvent être lus à partir du réseau uPnP, d'un media USB ou de CD-R/CD-RW. Pour une liste des formats de fichiers audio et vidéo compatibles, reportez-vous à "formats de disque et de fichier" on page F-14.

Pour pouvoir lire des fichiers multimédia, insérez le périphérique USB ou le disque de données dans le lecteur. Le menu **MY MEDIA** s'affiche et indique les symboles de fichiers musicaux, vidéo et/ou photo :

Pour faire passer tous les fichiers disponibles sans faire de sélection, appuyez sur **OK** pour aller au menu de Lecture, comme décrit ci-dessus.

Pour sélectionner des fichiers précis, utilisez les touches de navigation **▲/▼** de la télécommande pour surigner le périphérique multimédia à parcourir dans le menu **MY MEDIA**. Appuyez sur **OK** pour sélectionner le périphérique multimédia et afficher les fichiers et répertoires.

REMARQUE

Lorsque le support ou le répertoire sélectionné ne contient pas de fichiers ou répertoires pouvant être lus, le message « Vide » s'affiche. Vous pouvez faire passer un seul fichier ou une liste d'écoute (comportant jusqu'à 100 fichiers sélectionnés). Utilisez les touches de navigation **▲/▼** de la télécommande pour surigner un élément du menu et appuyez sur **OK** pour le sélectionner. Les touches **◀ et ▶** peuvent être utilisées pour accéder à la page suivante ou à la page précédente. Les touches **◀ et ▶** peuvent être utilisées pour accéder à la 10ème page suivante ou à la 10ème page précédente.

Application MusicLife

MusicLife vous permet de contrôler votre Solo avec votre appareil iOS. Il peut être utilisé pour diffuser de la musique vers votre produit à partir d'un serveur UPnP, par exemple un lecteur NAS, ou de la musique stockée localement sur l'appareil iOS. En outre, l'application dispose d'une interface de commande à distance, qui contient les fonctions les plus courantes de la télécommande infrarouge, ainsi que des informations utiles telles que l'entrée actuelle, le volume, le décodeur audio et l'adresse IP des appareils

Lecture d'un fichier musique

Utilisez les touches **▲/▼** pour mettre un fichier de musique en surillance et appuyez sur **OK** ou **▶** pour en lancer la lecture.

Lecture d'un fichier vidéo

Utilisez les touches **▲/▼** pour mettre un fichier vidéo en surillance et appuyez sur **OK** ou **▶** pour en lancer la lecture. Appuyez sur **DISPLAY** pour afficher les informations relatives à la lecture du fichier vidéo.

REMARQUE
L'option « Network Media » de l'Solo devra être activée. Pour obtenir des instructions sur la façon de le faire, veuillez-vous reporter à «Système» on page F-30.

Lecture accélérée

Appuyez sur **◀** ou sur **▶** (en cours de lecture) pour activer la fonction de lecture accélérée vers l'avant ou vers l'arrière. Si vous continuez à appuyer sur ces touches, la vitesse de lecture change. Des vitesses de 2x, 4x, 8x, 16x et 32x la vitesse normale sont proposées. Appuyez sur **▶** pour reprendre la lecture normale.




Téléchargement de l'application

Téléchargez l'application de l'App StoreSM.



Pour votre commodité, vous pouvez scanner le code QR ci-dessous dans votre téléphone pour télécharger l'application.



Version de système d'exploitation minimum requise pour l'application : iOS 7

écouter la radio

Réglage / Sélection des canaux

Radio numérique DAB/DAB+

Lorsque vous mettez la source tuner interne en marche, l'Solo se positionne sur la dernière bande tuner utilisée, FM ou DAB/DAB+. Si vous appuyez à plusieurs reprises sur **RADIO**, cela vous permet de parcourir les bandes tuner disponibles sur votre Solo.

Radio analogique FM

La recherche de fréquence sur la bande FM se fait à partir des touches **◀** et **▶** sur la télécommande en mode **RADIO**. Vous pouvez rechercher le signal fort suivant (ou précédent) en utilisant les touches **◀** et **▶**. Vous pouvez arrêter une recherche à tout moment en appuyant sur la touche **◀** ou **▶**.

En Europe, la radio FM interne est capable de recevoir des signaux radio texte RDS (Radio Data System) transmis sur certaines stations. Les informations RDS comprennent en général le nom de la station de radio, le genre musical ou le type d'émission ainsi que des informations sur l'émission en cours. Sur les stations de musique, qui suivent, l'écran repasse à l'affichage de la station en cours d'écoute.

DAB/DAB+

Type de programme
Radiotexte (si disponible)
Format audio
Puissance du signal

FM

Type de programme
Radiotexte (si disponible)
Format audio
Puissance du signal

Sauvegarde et sélection des prérglages

Radio numrique DAB/DAB+

La sélection des prérglages se fait à partir des touches **◀** et **▶** de la télécommande pour parcourir et **OK** pour sélectionner le prérglage lorsque la télécommande est en mode périphérique **RADIO**.

L'Solo est capable de stocker jusqu'à 50 prérglages. Appuyer sur la touche **OK** fait afficher le prochain numéro disponible, appuyer de nouveau sur la touche **OK** enregistre la fréquence/le canal actuel(le) dans cette présélection. Si vous souhaitez un autre numéro de prérglage, il suffit d'appuyer sur les touches **◀** ou **▶** jusqu'à ce que le numéro requis s'affiche avant d'appuyer sur la touche **OK** une seconde fois.

Suppression des prérglages

En mode de parcours tuner (en utilisant les touches **◀** et **▶** pour parcourir les prérglages), la touche jaune de la télécommande permet de supprimer la station ou la fréquence en surbrillance (mais qui n'est pas en cours de diffusion).

Langue

solo movie / solo music


OSD – choix de la langue d'affichage sur écran (OSD).

solo movie

Disc Menu – choix de la langue du menu disque et du menu contextuel. Le choix de langues dépend du disque. « Auto » permet de choisir la langue prioritaire du disque.

Disc Audio – choix de la langue de la piste audio. Le choix de langues dépend du disque. « Auto » permet de choisir la langue prioritaire du disque.

Disc Subtitle – choix de la langue des sous-titres. Le choix de langues dépend du disque. Sélectionnez « None » pour ne pas afficher les sous-titres.

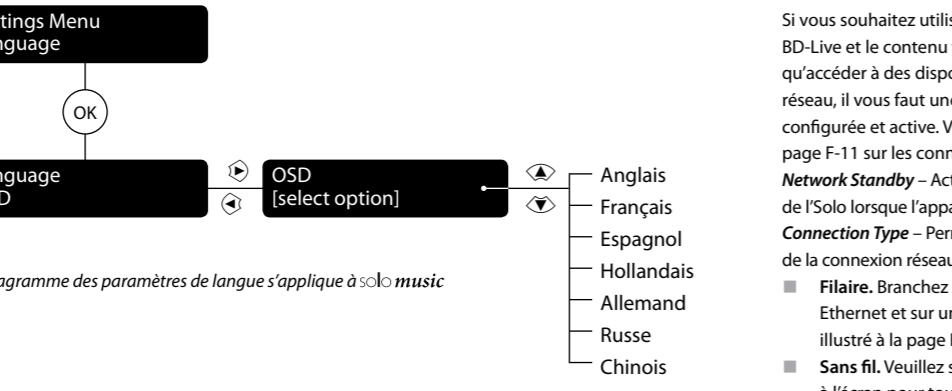

Réseau

solo movie / solo music

Si vous souhaitez utiliser les sites internet BD-Live et le contenu téléchargé ainsi qu'accéder à des dispositifs de médias sur le réseau, il vous faut une connexion internet configurée et active. Voir "Connexion réseau" on page F-11 sur les connexions réseau.

Network Standby – Active ou désactive le contrôle de l'Solo lorsque l'appareil est en veille.

Connection Type – Permet de sélectionner le type de la connexion réseau requise. Les options sont :

- **Filaire.** Branchez un câble réseau sur la prise Ethernet et sur un routeur câblé comme illustré à la page F-11.
- **Sans fil.** Veuillez suivre les instructions à l'écran pour toutes les étapes requises pour se connecter à un réseau sans fil. L'Solo peut se connecter à un réseau WiFi selon trois méthodes différentes, qui sont brièvement décrites ci-dessous. Notez que vous devez avoir les informations suivantes disponibles : le nom du réseau (également appelé SSID ou nom du point d'accès), le mode de sécurité du réseau et la clé de sécurité du réseau.

Recherche. Cette méthode recherche tous les réseaux sans fil disponibles. Choisissez le réseau auquel vous souhaitez vous connecter (indiqué dans la rubrique « AP ») et saisissez la clé du réseau en utilisant le clavier à l'écran.

Manuel. Choisissez cette méthode si vous connaissez le nom du point d'accès auquel vous souhaitez vous connecter. Une fois qu'il est saisi, le mode de sécurité du point d'accès sera présenté. Si le réseau choisi est un réseau sécurisé, vous serez invité à saisir la clé de sécurité du réseau sur l'écran suivant.

Auto. Cette dernière méthode permet à l'Solo de se connecter automatiquement à un routeur sans fil qui est compatible avec WiFi Protected Setup (WPS) ou de saisir un code PIN unique sur le point d'accès. Veuillez consulter le manuel d'utilisation de votre routeur pour obtenir les instructions concernant la façon d'activer WPS ou de saisir le code PIN requis.

Information – Sélectionnez et appuyez sur OK pour afficher ou régler les paramètres de connexion réseau :

Connection Test – Lorsque votre lecteur teste la connexion internet, il envoie une adresse IP.

Appuyez sur OK pour effectuer un test du réseau. Ceci permet également de configurer automatiquement les paramètres de réseau s'ils n'étaient pas déjà configurés et si la configuration automatique (DHCP) n'est pas prise en charge par le réseau.

Si ce test échoue, vérifiez les connexions de votre réseau domestique. Vérifiez que votre câble réseau est correctement relié au routeur et à l'appareil. Vérifiez que votre routeur est bien connecté à votre câble ou modem DSL.

Il peut y avoir un problème de routeur ou d'opérateur internet. Contactez votre opérateur si vous avez besoin d'aide

IP Setting – Vous pouvez régler votre lecteur pour qu'il obtienne automatiquement une adresse IP lorsqu'il se connecte à votre opérateur internet. Certains opérateurs demandent à ce qu'une adresse IP fixe soit saisie : cela se fait par un réglage « Manuel ».

Mettez « Auto » ou « Manual » en surbrillance, puis appuyez sur OK.

Les réglages suivants ne sont disponibles que si le Mode IP Setting réglé sur Manuel :

IP Address – Utilisez les flèches de navigation pour passer d'un élément à un autre et utilisez les touches de 0 à 9 sur la télécommande pour saisir l'adresse IP attribuée à votre appareil par

votre administrateur réseau. Appuyez sur OK pour mettre ce paramètre en mémoire.

Subnet Mask – Utilisez les flèches de navigation pour passer d'un élément à un autre et utilisez les touches de 0 à 9 sur la télécommande pour saisir le masque de sous-réseau de votre réseau. Appuyez sur OK pour mettre ce paramètre en mémoire.

Default Gateway – Utilisez les flèches de navigation pour passer d'un élément à un autre et utilisez les touches de 0 à 9 sur la télécommande pour saisir l'adresse de la passerelle internet. Appuyez sur OK pour mettre ce paramètre en mémoire.

DNS1 – Utilisez les flèches de navigation pour passer d'un élément à un autre et utilisez les touches de 0 à 9 sur la télécommande pour saisir l'adresse IP de votre serveur DNS primaire. Appuyez sur OK pour mettre ce paramètre en mémoire.

DNS2 – Utilisez les flèches de navigation pour passer d'un élément à un autre et utilisez les touches de 0 à 9 sur la télécommande pour saisir l'adresse IP de votre serveur DNS secondaire. Appuyez sur OK pour mettre ce paramètre en mémoire.

solo movie

BD-Live Connection – Règle le niveau d'accès du BD-Live Internet. Les niveaux d'accès sont :


■ **Permis** : Tous les disques BD-Live pourront accéder aux sites internet BD-Live.

■ **Partiellement permis** : L'accès internet n'est autorisé que lorsque le contenu BD-Live comprend un certificat valide.

■ **Interdit** : aucun disque BD-Live n'est autorisé à accéder aux sites internet BD-Live.


REMARQUE

- Les fonctions en ligne disponibles dépendent du disque.
- Reportez-vous aux instructions du disque BD-Live pour en savoir plus sur l'accès au contenu en ligne.
- Pour pouvoir accéder au contenu en ligne, il faut que le Solo soit connecté sur internet et correctement configuré. Voir "Connexion réseau" on page F-11 pour les connexions réseau et "Réseau" on page F-28 pour les paramètres réseau.

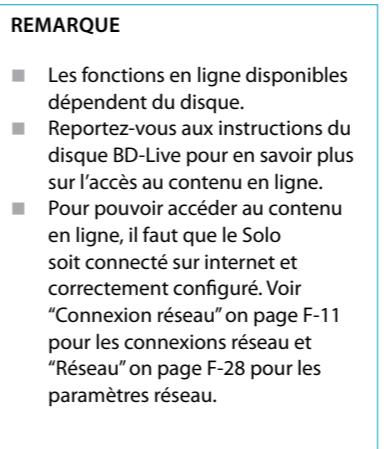

solo movie / solo music

Proxy Setting – Si vous accédez au réseau en utilisant un serveur proxy, saisissez ses paramètres ici.

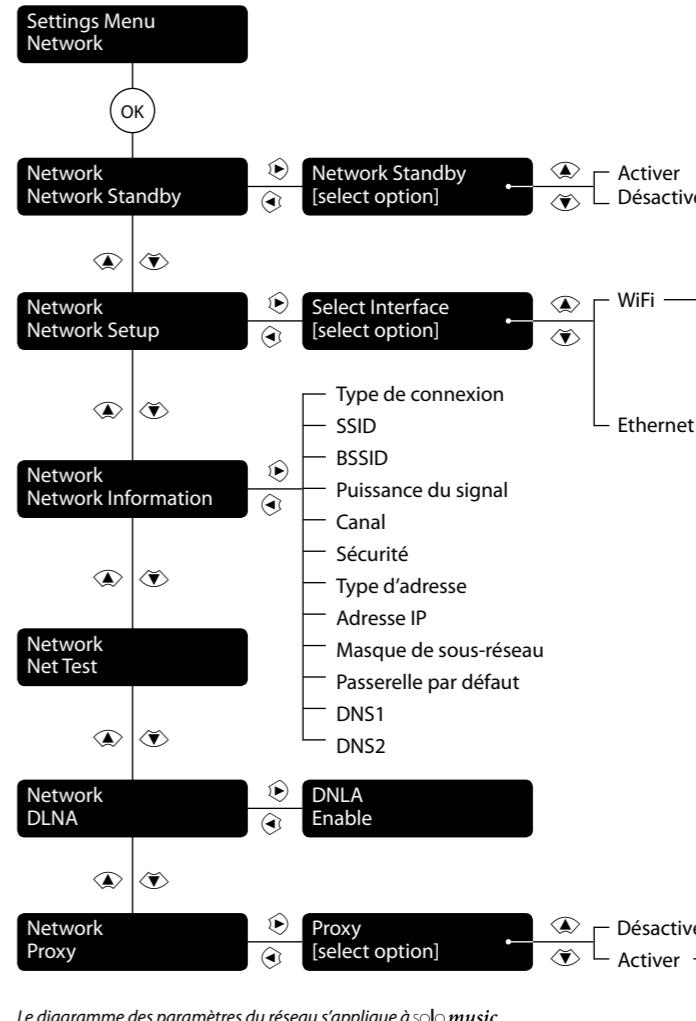

Système

solo movie

Screen Saver – définit la durée d'affichage d'une image statique avant que l'écran de veille ne se mette en marche. Les options sont : **5/10/15/20/25/30 minutes ou Off**. Une pression sur une touche de l'appareil ou de la télécommande permet de désactiver l'écran de veille.

solo movie/solo music

Disc Auto Playback – pour activer ou désactiver la lecture automatique d'un disque optique (par exemple un disque BD, DVD ou CD) après son chargement.

- **On** : La lecture des disques optiques démarre automatiquement.

- **Off** : il faut appuyer sur play pour démarrer la lecture d'un disque.

CEC – L'option CEC (Consumer Electronics Control) permet de regrouper tous les appareils connectés par HDMI en un seul système.

Il est possible d'activer ou de désactiver le CEC pour associer ou désassocier les appareils compatibles.

Firmware Update – Si l'Solo est connectée à Internet, vous pouvez vérifier si des mises à jour du logiciel de votre appareil sont disponibles en sélectionnant cette option et en appuyant sur **OK** pour mettre « Réseau » en surveillance, et en appuyant une nouvelle fois sur **OK**.

Un message s'affiche si aucune mise à jour n'est disponible. Sinon, suivez les instructions à l'écran. Un message vous indique lorsque la mise à jour est terminée.

Load Defaults – Appuyez sur **OK** lorsque cette option est en surveillance pour rétablir l'ensemble des paramètres d'usine du système (y compris les contrôles parentaux, les stations de radio pré-réglées, les appareils appariés, etc.).

Il vous sera demandé de confirmer que vous voulez rétablir les paramètres par défaut. Pour indiquer « Non », appuyez sur **OK**; pour indiquer « Oui », appuyez sur **OK** puis sur **OK**.

System Information – Mettez cette option en surveillance et appuyez deux fois sur **OK** pour afficher les informations sur le système. Le panneau System Information affiche des informations sur votre appareil, telles que le nom du produit, la version du logiciel, les adresses MAC et les informations du service d'assistance.


solo movie

BD-Live Storage – Cette dernière option Système vous permet d'étudier ou de supprimer les données BD-Live enregistrées sur un périphérique USB externe. Les options sont :

- **Information** : Mettez en surveillance puis appuyez sur **OK** pour afficher les informations sur les données BD-Live.
- **Erase data** : Mettez en surveillance et suivez les instructions à l'écran pour effacer les données de stockage BD-Live.

solo movie/solo music

NETWORK MEDIA – L'Solo est capable de lire des contenus UPnP. Notez que l'Solo movie lira les fichiers audio et vidéo, alors que l'Solo music ne lira que du contenu audio. Cette fonction peut être désactivée en étant mise sur **Off**.

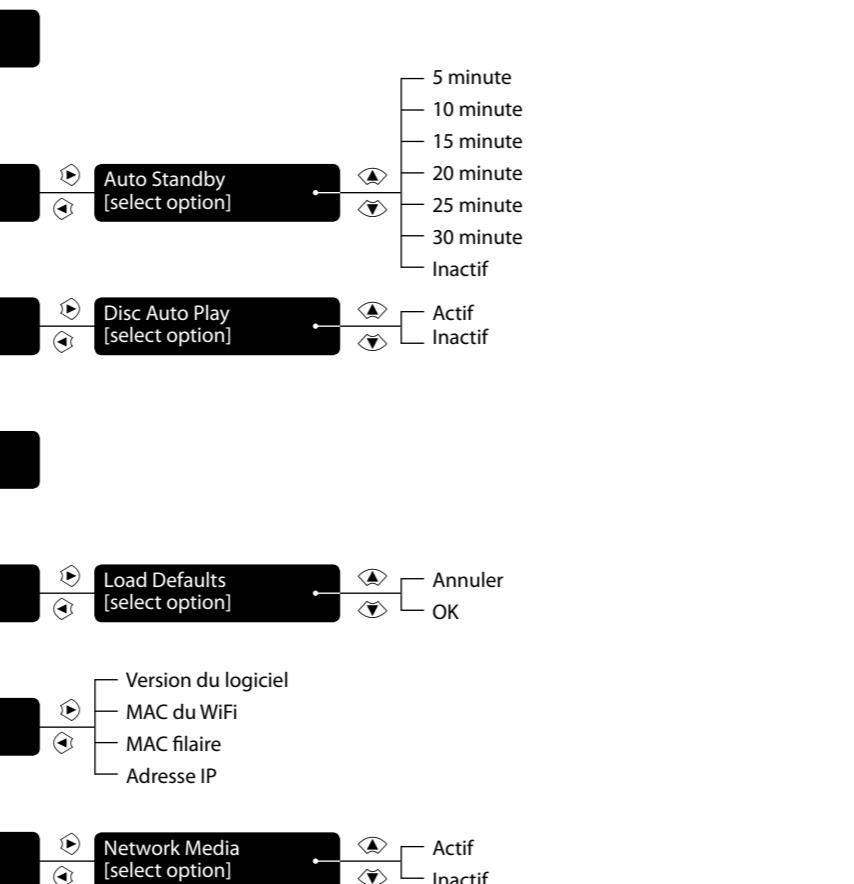

Sécurité/Contrôle parental

solo movie

Change Password – Pour définir ou changer le code à 4 chiffres. Appuyez sur les touches **0 À 9** pour saisir le mot de passe actuel (le mot de passe initial est **0000**), puis appuyez sur **OK**. Saisissez le nouveau mot de passe pour confirmer, puis appuyez sur **OK**.

Parental Control – La configuration du contrôle parental permet d'éviter que des enfants puissent voir du contenu ne convenant pas à leur âge. Selon le niveau défini, un disque pourra être bloqué, ou certaines scènes du disque pourront être coupées ou remplacées par d'autres scènes, selon le disque.

Pour régler le niveau du contrôle parental :

1. Sélectionnez « Settings » → « Security » → « Parental Control » →
2. Saisissez votre mot de passe en utilisant les touches numériques de la télécommande. Le mot de passe par défaut est **0000**.
3. Lorsque vous avez pu accéder au menu Parental Control (Contrôle parental), appuyez sur les touches de navigation **▲/▼** puis sur **OK** pour sélectionner les options suivantes

REMARQUE

- Une fois le niveau de contrôle parental est défini, si vous essayez de faire passer un disque de niveau supérieur à celui du niveau de contrôle parental, une fenêtre demandant un mot de passe s'ouvre.
- Pour modifier le contrôle parental et le niveau de contrôle parental, il faut saisir un mot de passe.

Avertissement de Cinavia

Ce produit utilise la technologie Cinavia permettant de limiter l'utilisation de copies non autorisées de certains films et vidéos produits commercialement ainsi que de leurs bandes sonores. Si une utilisation illégale d'une copie non autorisée est détectée, un message s'affichera et la lecture ou la copie sera interrompue.

Plus d'informations sur la technologie Cinavia sont disponibles auprès du Centre d'information des consommateurs en ligne de Cinavia à l'adresse www.cinavia.com.

Pour obtenir des renseignements supplémentaires sur Cinavia par courrier, envoyer une carte postale avec votre adresse postale à :

Cinavia Consumer Information Centre,
P.O. postale 86851,

San Diego,

CA, 92138

États-Unis d'Amérique

Dépannage

Français

Problème	Vérifiez que...	Problème	Vérifiez que...	Problème	Vérifiez que...	Problème	Vérifiez que...
Aucun voyant n'est allumé sur l'appareil	<ul style="list-style-type: none"> ■ le câble d'alimentation est branché sur l'Solo et que la prise de courant sur laquelle il est branché fonctionne. ■ l'appareil est sous tension. ■ Un voyant rouge signifie que l'Solo est en veille. Appuyez sur une touche de la façade ou de la télécommande. 	Le son ne sort que de certaines enceintes	<ul style="list-style-type: none"> ■ vous avez sélectionné la source surround qui convient. ■ le disque BD/DVD est codé dans le bon format, et que le bon format est sélectionné sur le menu de démarrage du disque du lecteur BD (le cas échéant). ■ la fenêtre d'affichage indique que le disque lu est un enregistrement multicanal (il vous faudra peut-être appuyer sur la touche INFO plusieurs fois pour obtenir « format entrant »). ■ toutes les enceintes sont bien raccordées aux bornes d'enceintes. ■ vous avez configuré l'Solo pour inclure l'ensemble des enceintes dans votre système. 	Il y a des interférences de réception radio ou télévision	<ul style="list-style-type: none"> ■ d'où proviennent ces interférences. Éteignez chaque source tour à tour, puis tout autre équipement. La plupart des appareils électroniques génèrent de faibles niveaux d'interférences. ■ essayez de réorganiser le câblage pour éloigner la source nuisible des autres câbles. ■ vérifiez que les câbles utilisés sont de bonne qualité, conviennent à l'emploi, et sont correctement gainés. ■ si le problème persiste, veuillez contacter votre revendeur. 	Si vous ne pouvez pas vous connecter à un réseau câblé	<ul style="list-style-type: none"> ■ le câble Ethernet que vous utilisez est bien connecté à l'Solo et au matériel de réseau. ■ le réseau est configuré pour des adresses IP fixes et que l'Solo est configurée pour utiliser DHCP. ■ le réseau est configuré pour DHCP et l'Solo est configurée avec une adresse IP fixe.
L'appareil ne répond pas bien ou pas du tout à la télécommande	<ul style="list-style-type: none"> ■ il y a des piles neuves dans la télécommande. ■ la fenêtre d'affichage de la façade est visible et que vous dirigez la télécommande vers elle. 	L'affichage de la façade est vide	<ul style="list-style-type: none"> ■ l'écran n'a pas été éteint. Appuyez sur la touche DISPLAY de la façade ou de la télécommande. 	Impossible de sélectionner les modes de décodage	<ul style="list-style-type: none"> ■ L'Solo ne peut appliquer le décodage qu'aux sources codées dans le même format. Vérifiez que : <ul style="list-style-type: none"> ■ la source numérique est sélectionnée et raccordée. ■ la source diffuse un matériel au codage approprié. ■ le disque BD/DVD est codé dans le bon format, et que le bon format est sélectionné sur le menu de démarrage du disque du lecteur BD (le cas échéant). 	Lorsqu'un périphérique de mémoire USB est raccordé, « USB » n'apparaît pas sur la liste des répertoires du client réseau	<ul style="list-style-type: none"> ■ un périphérique USB est raccordé et conforme à la classe de stockage de masse. ■ un concentrateur USB n'est pas utilisé.
L'image comporte des bords lumineux ou des « fantômes »	<ul style="list-style-type: none"> ■ la commande « netteté » de votre écran soit désactivée ou réglée au minimum. ■ pour des connexions HDMI, essayez un câble plus court ou d'une autre marque. 	Lors de la lecture d'un BD/DVD, l'Solo sélectionne Dolby Pro Logic	<ul style="list-style-type: none"> ■ les disques BD/DVD contiennent parfois des données soit en début soit en fin du film principal qui n'est pas en format 5.1, mais en décodage deux canaux ou Dolby Pro Logic. 	Si des fichiers sur un périphérique de mémoire USB ne passent pas :	<ul style="list-style-type: none"> ■ le périphérique USB est formaté en FAT16 ou FAT32. ■ le périphérique USB ne comporte pas de partitions multiples. ■ le format des fichiers est compatible. 	Si des fichiers sur un ordinateur ne passent pas	<ul style="list-style-type: none"> ■ le format des fichiers est compatible. ■ l'ordinateur est connecté par réseau et non par USB. Le port USB de l'Solo ne peut pas servir de connexion directe sur un ordinateur
Aucun son n'est émis	<ul style="list-style-type: none"> ■ la bonne entrée est sélectionnée. ■ la bonne entrée est sélectionnée. Voir "Mode périphérique / Touches source" on page F-17. ■ l'appareil source est en marche, s'il fonctionne normalement, et est en mode « lecture » si nécessaire. ■ le volume est réglé à un niveau raisonnable et que le son de l'Solo n'est pas coupé. 	Bourdonnement sur l'entrée analogique	<ul style="list-style-type: none"> ■ tous les câbles sont correctement connectés. Si nécessaire, retirez le câble du connecteur et branchez-le à nouveau à fond (mettez hors tension avant de le faire). ■ les connexions à l'intérieur du connecteur du câble de la source sont brisées ou mal soudées. ■ si le bourdonnement ne survient que lorsqu'un composant source particulier est raccordé, qu'un câble d'antenne ou une parabole sur cette source dispose d'une isolation à la terre. Contactez votre installateur. 	Lorsqu'un périphérique de mémoire USB est raccordé, « USB » n'apparaît pas sur la liste des répertoires du client réseau	<ul style="list-style-type: none"> ■ un périphérique USB est raccordé et conforme à la classe de stockage de masse. ■ un concentrateur USB n'est pas utilisé. 	Si des fichiers sur un ordinateur ne passent pas	<ul style="list-style-type: none"> ■ le format des fichiers est compatible. ■ l'ordinateur est connecté par réseau et non par USB. Le port USB de l'Solo ne peut pas servir de connexion directe sur un ordinateur
Le son est mauvais ou déformé	<ul style="list-style-type: none"> ■ vous avez sélectionné la bonne taille d'enceintes par rapport à votre système sur le menu de configuration. 						

Mise à jour du logiciel par USB

Le logiciel de votre Solo peut être mis à niveau à l'aide d'une clé USB contenant les fichiers de mise à niveau du logiciel. Vous pouvez télécharger la dernière version du logiciel, ainsi que les instructions de mise à niveau, sur le site Internet d'Arcam (www.arcam.co.uk)

spécifications techniques

Solo movie 5.1

Puissance de sortie continue par canal	
Piloté par 2 canaux, 1 kHz, 0,2 % DHT (8 Ω/4 Ω)	75 W/120 W
Piloté par 5 canaux, 1 kHz, 0,2 % DHT (8 Ω/4 Ω)	60 W/75 W
Bruit résiduel et bourdonnement (A-réf)	300 µV
Entrées de ligne stéréo	
Entrée maximum	2,1 VRMS
Impédance d'entrée	10 kΩ
Rapport signal/bruit (A-wtd réf. 100 W)	90 dB
Réponse en fréquence	20 Hz - 20 kHz ± 0,1 dB
Sortie casque	
Niveau de sortie maximum sur 32 Ω	2,5 Vrms
Impédance de sortie	1 Ω
Vidéo	
Formats HDMI In/Out compatibles	4K2K (24/30 Hz), 1080p (50/60 Hz), 1080i (50/60 Hz), 720p (50/60 Hz), 480p/576p, 480i/576i
Interfaces numériques	
USB	USB 2.0 High Speed (480 Mbit/s)
Réseau	10 BASE-T / 100 BASE-TX
S/PDIF optique	44,1 kHz, 48 kHz, 88,2 kHz, 96 kHz
S/PDIF coaxial	44,1 kHz, 48 kHz, 88,2 kHz, 96 kHz, 192 kHz
Bluetooth	SBC, AAC, aptX, aptX-LL

Politique d'amélioration continue

Arcam améliore continuellement ses produits. Les conceptions et les spécifications peuvent donc faire l'objet de modifications sans préavis.

Solo movie 2.1 / Solo music

Généralités	
Tension principale	110–120 V ou 220–240 V, 50–60 Hz
Consommation électrique (maximum)	1 kW (Dissipation thermique environ 3400 BTU/heure)
Consommation d'énergie (en veille, typique)	60 W (Dissipation thermique environ 200 BTU/heure)
Consommation d'énergie (en veille)	<0,5 W
Dimensions (L x P x H)	420 x 410 x 90 mm
Poids (net)	11,5 kg
Poids (emballé)	16,0 kg
Accessoires fournis	Câble d'alimentation secteur Télécommande 2 piles AAA Le manuel de l'utilisateur Antenne DAB/FM Antenne Bluetooth Antenne Wi-Fi
E&OE	
REMARQUE : toutes les valeurs techniques sont typiques sauf mention contraire	

Politique d'amélioration continue	
Arcam améliore continuellement ses produits. Les conceptions et les spécifications peuvent donc faire l'objet de modifications sans préavis.	

Puissance de sortie continue par canal	
Piloté par 2 canaux, 1 kHz, 0,2 % DHT (8 Ω/4 Ω)	80 W/125 W
Bruit résiduel et bourdonnement (A-réf)	
300 µV	
Entrées de ligne stéréo	
Entrée maximum	2,1 VRMS
Impédance d'entrée	10 kΩ
Rapport signal/bruit (A-wtd réf. 100 W)	90 dB
Réponse en fréquence	20 Hz - 20 kHz ± 0,1 dB
Sortie casque	
Niveau de sortie maximum sur 32 Ω	2,5 Vrms
Impédance de sortie	1 Ω
Vidéo	
Formats HDMI In/Out compatibles	4K2K (24/30 Hz), 1080p (50/60 Hz), 1080i (50/60 Hz), 720p (50/60 Hz), 480p/576p, 480i/576i
Interfaces numériques	
USB	USB 2.0 High Speed (480 Mbit/s)
Réseau	10 BASE-T / 100 BASE-TX
S/PDIF optique	44,1 kHz, 48 kHz, 88,2 kHz, 96 kHz
S/PDIF coaxial	44,1 kHz, 48 kHz, 88,2 kHz, 96 kHz, 192 kHz
Bluetooth	SBC, AAC, aptX, aptX-LL
E&OE	
REMARQUE : toutes les valeurs techniques sont typiques sauf mention contraire	

garantie du produit

Garantie internationale

Cette garantie vous donne droit à des réparations gratuites de l'appareil, durant les deux ans à compter de la date d'achat, si l'achat a été fait auprès d'un revendeur Arcam agréé. Le revendeur Arcam est responsable de l'ensemble du service après-ventes. Le fabricant ne peut être tenu responsable de défauts provoqués par un accident, une mauvaise utilisation, une utilisation abusive, une usure normale, de la négligence ou des réglages et/ou réparations non autorisés, et n'accepte pas non plus la responsabilité des dommages et pertes encourus durant le transport vers ou à partir de la personne réclamant les réparations sous garantie.

Cette garantie couvre :

Les frais de pièces et main d'œuvre pendant deux ans à compter de la date d'achat. Au bout de deux ans, il vous faut payer les frais de pièces et de main d'œuvre. **La garantie ne couvre en aucun cas les frais de transport.**

Réclamations sous garantie

Cet équipement doit être renvoyé dans son emballage d'origine au revendeur **auprès duquel il avait été acheté**. Il doit être expédié par l'intermédiaire d'un transporteur réputé – **pas** par la poste. Aucune responsabilité ne peut être acceptée durant le transit de l'appareil vers le revendeur ou le distributeur et il est donc conseillé aux clients d'assurer l'appareil contre toute perte ou dommage durant le transport.

Pour en savoir plus, veuillez contacter Arcam à l'adresse support@arcam.co.uk.

Des problèmes ?

Si votre revendeur Arcam n'est pas en mesure de répondre à vos questions sur cet appareil ou tout autre appareil Arcam, veuillez vous adresser au service après-vente d'Arcam à l'adresse ci-dessus. Nous ferons de notre mieux pour vous aider.

Enregistrement en ligne

Vous pouvez enregistrer votre produit en ligne à www.arcam.co.uk.