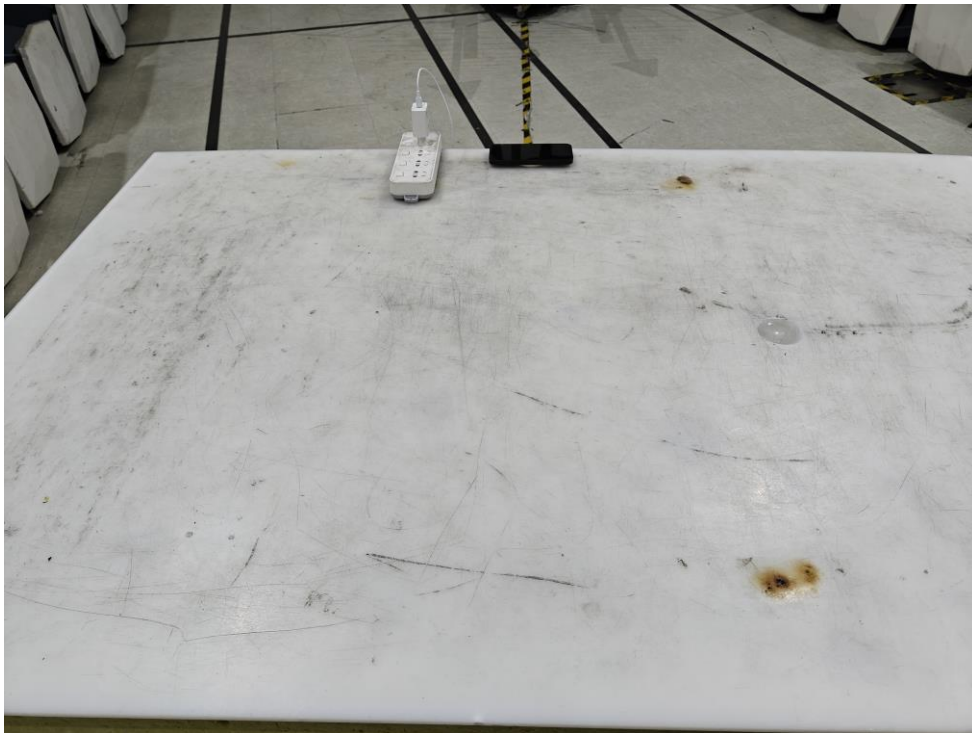Front

Back

The EUT is placed at the center of turntable