

# ***SYLVANIA***

## **SP233 Users' Manual**



## **Congratulations**

Congratulation on your purchase. For a better use of your new device, we recommend you to read carefully this user manual and keep it for record.

## **Package Contents**

Bluetooth Speaker x 1

Instruction manual x 1

USB cable x 1

## **Features**

Bluetooth sound system supporting stereo music

Hands-free for answering calls

Equipped with digital signal processing technology

## **Safety Precaution**



Read, keep and follow these instructions.

Heed all warnings on the product and in the instruction manual.

For your safety, read and follow this manual carefully to ensure proper use of the product and avoid any danger or physical damage.

- Place the unit on a flat surface and ventilated condition. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc. to avoid overheating and malfunction.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The apparatus shall not be exposed to dripping or splashing, no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Keep the appliance away from rain and any moisture. Do not place the unit in moist and humid conditions, which could lead to malfunction.

- When the unit is suddenly moved from a cold environment to a warm one, if moisture forms inside it, it may not operate properly. To correct this problem wait about one hour for the moisture to evaporate.
- Do not expose the unit under direct sunlight or nearby objects that radiate heat to avoid damaging the unit
- The apparatus should be used in moderate climate.
- The plug of the appliance shall remain readily operable.
- Do not pull on the connection cord, but rather on the plug, to separate the appliance from the mains.

	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;"><b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b></p>	
<p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons</p>	<p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance</p>

## Technical Specification

Bluetooth specifications: Bluetooth V3.0

Working frequency scope: 2.402GHz- 2.480GHz unlicensed ISM band

Maximum connecting distance: 10 meters

Output power: 2.5W X2 RMS

Supporting Profiles: HFPV1.5, A2DPV1.2, AVRCPV1.0


Dimensions: 258× 101×170 (mm) (L x W x H)

Charging voltage: 5 V DC

Charging current: 400 mA max.


# Installation and Maintenance


## Top View

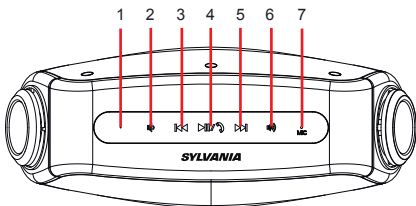

1. ◦ : Blue LED indicator lamp
2. 🔊 : Volume Down button
3. ⏮ : Short press in Bluetooth mode to select the previous music.
4. ⏪ : Press the key for more than 3 seconds in search mode for pair status; Short press for play and pause in the music mode; Short press to pick up and cancel the phone in the hand free mode.
5. ⏩ : Short press in Bluetooth mode to select the next music
6. 🔊 : Volume Up button
7. MIC

## Back View

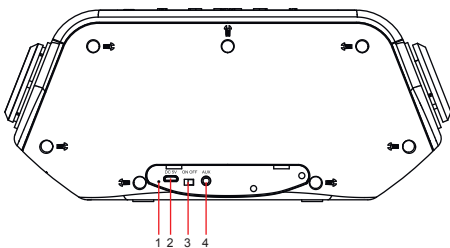

- 1、: The indicator lamp of the battery
- 2、DC 5V : Charge jack
- 3、ON OFF: Power on/off
- 4、AUX IN JACK: 3.5mm audio input

## **LED INDICATOR LAMPS:**

**Blue lamp on the top:** When a Bluetooth Connection is being established, the Blue LED will flash. After connection, the Blue LED flashes once every three seconds.

**Blue lamp on the top:** The blue indicator lamp will keep ON during the Aux in Mode.



**Red lamp on the back:** The red LED stays lit while charging the 3.7 V lithium battery. The red LED turns off once the battery is fully charged.

### **Startup:**

Switch the “ON/OFF” switch at the back of the machine “ON “ to power the machine.

- 1) During the first use, the blue LED lamp will flicker to access to PAIR mode.
- 2) Following initial pairing the Blue LED will flash once every second to access SEARCH mode. Subsequent Bluetooth connection will then be made automatically.





### **Bluetooth Pair Mode**

- 1.Press “ ” for more than 3 seconds, the blue LED will flash.
- 2.Activate the Bluetooth function of your Bluetooth device. So that the device starts to search for the SP233.
- 3.Select “SP233” when it appears in the Bluetooth search.
- 4.In case of some kinds of cell phones, users have to key in the identification code “0000”and press ENTER key to match the product and mobile phone and after success, the blue LED will flash slowly.

### **Bluetooth Connection Memory List:**


When the paired equipment number exceeds the maximum capacity & 4 units, the product will automatically clear the first equipment in its memory.

### **In Bluetooth music play mode, users can:**


1. Shortly press “ ” or “ ”key or press for a longer time to adjust the volume.
2. Shortly press “ ” key to play/pause the music play.

## **Users use Hands-free Function:**


### **Answer Calls**

The speaker will ring up when there are incoming calls during music play, just press “ ” key shortly to answer.



### **Hang up calls**

Press “ ” key shortly during hands-free call to hand up calls and then return to the music play mode.

### **Refuse Calls**

When there are incoming calls, just press for a longer time “ ” key for more than 3 seconds to refuse calls .The caller is directed to the voicemail of the smartphone.

### **AUX IN MODE:**

When AUX-IN line is connected to AUX-IN Jack, the system will automatically pause the Bluetooth, the blue LED turns on and the unit enters into AUX-IN model. Then users can press “ ” or “ ” to adjust the volume.

When user disconnected AUX-IN line completely out of AUX-IN jack, the unit will re-enter into the Bluetooth SEARCH MODE and search for the equipment connected to last time.

### **Mobile phones Support**

This device supports most mobile phones and related Bluetooth devices for playing music.

### **Power off**

Switch the ON/OFF switch at the back of the device to “OFF” to switch off the Bluetooth Speaker

## **Troubleshooting**

### **Speaker does not respond (no power):**

Make sure unit is completely charged and switched ON.

Check that all connections are correctly and properly plugged in.

Make sure your device is properly paired with the speaker.

**No sound:**

Make sure volume is up.

Check that all connections are correct and properly plugged in.

Make sure your device is properly paired with the speaker.

Increase the volume on your device.

**Sound is garbled:**

Make sure the speaker is fully charged.

Turn down the volume on your device and the speaker.

Keep both devices within close distance.

**Trouble pairing device with the speaker:**

Confirm that your device is Bluetooth compatible.

Power cycle the speaker and your device, then try pairing again.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure requirement. The device can be used in portable exposure condition without RF striction

# ***SYLVANIA***

## **SP233 Guide d'utilisation**





## **Félicitations**

Merci pour votre achat. Pour plus de confort dans l'utilisation de votre nouvel appareil, nous vous recommandons de lire attentivement cette notice et de la conserver.

## **Contenu de l'emballage**

Enceinte Bluetooth x 1

Notice d'utilisation x 1

Cable USB x 1

## **Caractéristiques**

Enceinte Bluetooth stereo

Appels entrants main libres

Technologie de traitement numérique du signal

## **Consignes de sécurité**

Lisez, conservez et respectez toutes ces consignes.

Tenez compte de tous les avertissements présents sur l'appareil et dans sa notice d'utilisation.

Pour votre sécurité, lisez attentivement les consignes de cette notice d'utilisation et respectez-les afin de garantir l'utilisation correcte de cet appareil et de vous prémunir contre les risques et dommages potentiels.

- Placez l'appareil sur une surface plane et bien ventilée. Il convient que l'aération ne soit pas gênée par l'obstruction des ouvertures d'aération par des objets tels que journaux, nappes, rideaux, etc.
- Il convient de ne pas placer sur l'appareil de sources de flammes nues, telles que des bougies allumées.
- L'appareil ne doit pas être exposé à des égouttements d'eau ou des éclaboussures, aucun objet rempli de liquide tel que des vases ne doit être placé sur l'appareil.
- Veillez à ce que l'appareil ne soit exposé ni à de l'humidité. Ne placez pas l'appareil dans un endroit mouillé ou humide, car cela peut provoquer un dysfonctionnement.

- Quand l'appareil passé très rapidement d'un environnement froid à un environnement chaud, de l'humidité peut se former à l'intérieur, ce qui peut perturber son fonctionnement. Si cela se produit, attendez une heure environ que l'humidité s'évapore.
- N'exposez pas l'appareil à la lumière directe du soleil et ne le placez pas près d'objets dégageant de la chaleur pour éviter qu'il ne soit endommagé.
- L'appareil doit être utilisé dans les climats tempérés.
- La prise du réseau d'alimentation doit demeurer aisément accessible. Ne tirez pas sur le fil pour débrancher l'appareil, tirez toujours sur la prise mâle

	<p style="text-align: center;"><b>ATTENTION</b></p> <p style="text-align: center;"><b>RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR</b></p>	
<p>Le symbole d'un éclair avec la pointe d'une flèche dans un triangle équilatéral sert à alerter l'utilisateur sur l'existence d'une « tension dangereuse » dans le boîtier du produit pouvant être suffisamment importante pour présenter un risque de choc électrique.</p>	<p>AVERTISSEMENTS ! AFIN DE RÉDUIRE LES RISQUES DE CHOC ÉLECTRIQUE, NE DÉMONTÉZ PAS LE BOÎTIER (OU LE CAPOT ARRIÈRE) DE L'APPAREIL. AUCUNE PIÈCE INTERNE DE CET APPAREIL N'EST RÉPARABLE PAR L'UTILISATEUR. POUR TOUTES LES RÉPARATIONS, FAITES APPEL À UN RÉPARATEUR QUALIFIÉ.</p>	<p>LE SYMBOLE D'UN POINT D'EXCLAMATION DANS UN TRIANGLE SERT À VOUS ALERTER SUR LA PRÉSENCE D'INSTRUCTIONS IMPORTANTES FOURNIES AVEC L'APPAREIL.</p>

## Spécifications techniques

Spécifications du Bluetooth: Bluetooth V3.0

Fréquences de fonctionnement: 2.402GHz- 2.480GHz unlicensed ISM band

Portée de connexion: 10 mètres

Puissance de sortie: 5W X 2 RMS

Profils compatibles: HFPV1.5, A2DPV1.2, AVRCPV1.0


Dimensions: 258× 101×170 (mm) (L x W x H)

Tension de charge : courant continu 5 V

Courant de charge : au max. 400 mA


# Installation et entretien

## Vue Haut

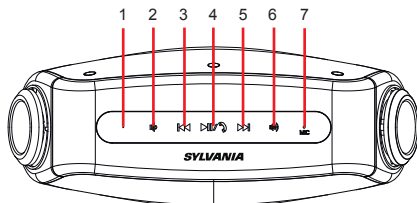

1. ◦ : Bleu voyants
2. 🔊 : Baisser le volume.
3. ⏮ : Appui court en mode Bluetooth pour sélectionner la musique précédente
4. 🔍 : En mode recherché, appuyer pendant plus de 3 secondes sur la touché pour l'état de la liaison. En mode musique, appuyer brièvement pour démarrer et interrompre la lecture. En mode mains libres, appuyer brièvement pour répondre au téléphone et annuler.
5. ⏭ : Appui court en mode Bluetooth pour sélectionner la musique suivante
6. 🔊 : Monter le volume.
7. MIC

## Vue arrière

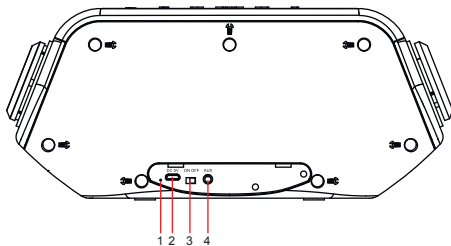

1. Témoin de charge: allumé en rouge lorsque la batterie est en charge, éteint lorsque la batterie est entièrement chargée.
2. DC 5V : Chargez prise
3. ON OFF: Marche/arrêt
4. AUX IN JACK: Entrée audio 3.5mm

## **VOYANTS:**

**Lampe bleue sur le dessus** :Le voyant bleu clignote pendant l'établissement de la connexion Bluetooth.Après la liaison, le voyant bleu clignote toutes les trois secondes.

**Lampe bleue sur le dessus** :Le voyant bleu permet de garder pendant la Aux en mode.


**Lampe rouge sur le dos** : Le voyant rouge reste allumé après le chargement de la batterie au lithium de 3,7 V. La voyant rouge s'éteint lorsque la batterie est complètement chargée.

## **MISE EN MARCHÉ:**

Mettez l'interrupteur ON/OFF situé sur le dos de l'appareil sur ON pour allumer liaison.

- 1) Lors de la première utilisation, le voyant bleu clignote pour activer le mode liaison.
- 2) Pendant le couplage initial, la LED bleue clignote une fois par seconde pour indiquer que l'appareil est dans le mode RECHERCHE. Les connexions Bluetooth ultérieures s'effectueront automatiquement.




## **Mode de couplage Bluetooth**

- 1.Appuyez sur “  ” plus de 3 secondes, la LED bleue clignote.
- 2.Activez la fonction Bluetooth de votre périphérique Bluetooth, pour qu'il se mette à rechercher le SP233
- 3.Sélectionnez “SP233” lorsqu'il s'affiche dans la liste de recherche Bluetooth.
- 4.Pour certains téléphones portables, il faut saisir le code d'identification “0000”, puis appuyer sur ENTRER pour qu'ils se connectent à l'appareil. Une fois la connexion établie, le voyant bleu clignote lentement.

## **Mémoire de couplage Bluetooth:**


Lorsque le nombre de périphériques couplés dépasse 4, l'appareil supprime automatiquement le premier d'entre eux de sa mémoire.

## **Dans le mode de lecture Bluetooth ,l'utilisateur peut effectuer les operations suivantes:**


1. Pour régler le volume, appuyez brièvement ou longuement sur la touché “  ” or “  ”.
2. Pour démarrer la lecture ou la mettre sur pause, appuyez brièvement sur la touche “  ”.

## **Utilisation du mode mains libres**


### **Répondre à un appel**

Pendant la lecture audio,l'enceinte sonne s'il y a un appel entrant. Appuyez brièvement sur la touche “  ” pour répondre.


### **Terminer un appel**

Appuyez brièvement sur la touche “  ” pendant un appel dans le mode mains libres pour terminer l'appel et retourner au mode de lecture audio.

### **Refuser un appel**

Quand il y a un appel entrant, appuyez sur la touche “  ” pendant plus de 3 secondes pour refuse l'appel.L'appelant est redirigé vers la boîte vocale du telephone portable.

### **Mode AUX-IN**

Quand un câbleaudio est branché dans la prise AUX-IN,l'enceinte désactive automatiquement le Bluetooth, la LED bleue s'allume et l'appareil entre dans le mode AUX-IN.Pour régler le volume, appuyez sur la touche “  ” ou “  ”

Lorsque vous débranchez le câble audio de la prise AUX-IN,l'appareil reactive automatiquement le mode RECHERCHE du Bluetooth pour rechercher le périphérique auquel il éteint connecté.

### **Prise en charge de téléphones mobiles**

Cet appareil prend en charge la plupart des telephones mobiles et appareils Bluetooth pour la lecture de morceaux de musique.

## **éteindre**

Mettez l'interrupteur ON/OFF en bas de l'appareil sur OFF pour éteindre le haut-parleur Bluetooth.

## **Dépannage**

### **Le haut-parleur ne répond pas(aucune alimentation):**

Assurez-vous que l'unité est complètement chargée et qu'elle est mise en fonction.

Assurez-vous que tous les raccords sont effectués correctement et bien branchés.

Assurez-vous que votre dispositif est jumelé correctement avec le haut-parleur.

### **Le haut-parleur ne répond pas(aucune alimentation):**

Assurez-vous que l'unité est complètement chargée et qu'elle est mise en fonction.

Assurez-vous que les raccords sont effectués correctement et bien branchés.

Assurez-vous que votre dispositif est jumelé correctement avec le haut-parleur.

### **Aucun son:**

Assurez-vous que le niveau de volume est réglé correctement.

Assurez-vous que tous les raccords sont effectués correctement et bien branchés.

Assurez-vous que votre dispositif est jumelé correctement avec le haut-parleur.

## **Le son est saccadé**

Assurez-vous que le haut-parleur est pleinement chargé

Augmentez le niveau de volume de votre dispositif et de votre haut-parleur.

Les dispositifs doivent se trouver à proximité l'un de l'autre.

