Popis částí

1. Po nasazení kartáčové hlavy je mezi její spodní částí a rukojetí mezerammm, aby se zajistilo normální kmitání kartáčové hlavy.
2. Zapnutí: Pro zapnutí kartáčku krátce stiskněte tlačítko Switch/Mode.
3. Přepnutí režimu: Pro přepnutí režimu stiskněte tlačítko znovu během 5 po zapnutí.
4. Pozastavení: Stisknutím tlačítka pozastavíte činnost zubního kartáčku na 4 s v jakémkoli režimu.Automaticky se vypne po 10 vteřinách pozastavení.
5. Vypnutí: Pro přepnutí mezi všemi režimy do 4 s po spuštění zubní kartáčkistisknutím tlačítka vypněte.
6. Světelný kroužek: rozdělený do čtyř oblastí, které představují čtyři hlavní oblasti ústní dutiny (oblast vlevo nahoře, oblast vlevo dole, oblast vpravo nahoře, oblast vpravo dole). Po vyčištění zubu světelný kroužek poskytuje zpětnou vazbu o aktuální situaci čištění zubů a oblast zmeškaného čištění se rozsvítí červeně.
7. Indikátor režimu: Zleva doprava 1 světlo, 2 kontrolky a 3 kontrolky představují Setmě čištění, Každodenní čištění a režim bělení.
8. Vypnutí: Po uplynulé pauzy nebo doby kartáčování se automaticky vypne, není ovládán a zůstane v klidu po dobu 10 sekund.

Velikost: 26.8×27.72×250.45mm (s nainstalovanou hlavou kartáčku)

Bezpečnostní opatření

Abyste předešli nebezpečí, jako jsou poruchy, úrazy elektrickým proudem, zranění osob, požár a poškození zařízení nebo majetku, dodržujte následující bezpečnostní opatření.

1.Toto zařízení mohou používat děti ve věku 8 let a také se sníženou fyzickou, smyslovou nebo duševní schopností nebo nedostatkem dovedností a znalostí, za předpokladu, že jsou pod dohledem nebo poučením o bezpečném používání zařízení a rozumí nebezpečím, která s ním souvisejí. Děti by si se zařízením neměly hrát. Čištění a údržba uživatelem by neměly provádět děti bez dozoru.

2.Tento produkt musí být dodáván pouze s extra nízkým bezpečným napětím odpovídajícím označení na tomto produktu.

3.Nevystavujte zařízení nebo baterii nadměrným teplotám; Uvědomte si riziku, že svorky zařízení nebo baterie ovládané baterií dočasně kovové předměty.

4.Toto zařízení obsahuje baterie, které lze vyměnit pouze kvalifikovaným personálem.

5.Pokyny pro zařízení IPX6 (If nazmáčený), je musí být k dispozici pouze pro SELV.

6.Nerozebírejte tento produkt bez výměny. Před vyjmutím baterie odpojte napájení; Vyberejte baterii před demontáží. Při demontáži zlastového pouzdra použijte vhodné nástroje, abyste zabránili poškození baterie nebo způsobili krátký obvod ; Po vyjmutí, vyjměte drátěz z baterie a umístěte baterii do ekologického kontejneru pro bezpečné zpracování.

7.Tento produkt obsahuje vestavěnou dobíjecí baterii. Nedávejte sluneční světlo na oheň, nevystavujte vysoké teplotě nebo netlačte ve vlhké oblasti. To může vést k úniku baterie, přehřátí a / nebo explozi; Po dokončení nabíjení odpojte nabíjecí kabel a vypněte napájení.

8.Tento produkt neupravujte, neopravujte ani nerozebírejte sami. Nepoužívejte tento produkt během vany, sprchy nebo sauny. Při nabíjení udržujte nabíjecí kabel a nabíjecí rozhraní zařízení v suchu a čistotě. Nesnažte se odstranit skvrny nebo nedostatky, protože by to mohlo ohrozit bezpečnost procesu nakládky.

9.Pokud máte závažnou periodontitidu, podstupujete zubní ošetření nebo máte ortální nepohodlí, poraďte se se svým zubařem před použitím tohoto přípravku. Lidé, kteří používají ortodoncii, kteří podstoupili zubní ošetření nebo zubní implantáty, by měli poslouchat zubaře.

10.Když zahrnete tento produkt používat, může se při zvýšenuli na proces čištění objevit mírné krvácení. Měl by to vyřešit za jeden až dva týdny. Krvácení, které přetrvává déle než dva týdny, může naznačovat abnormality dásní. V takovém případě přerušte produkt používat a poraďte se se svým zubařem.

11.Před použitím tohoto produktu zkontrolujte známky poškození. Pokud je rozbitý, prasklý, rozsvítí atd., Přestaňte jej používat okamžitě. Pokud je zástrčka nebo napájecí kabel poškozen, vyměňte je před použitím.

12.Tento produkt je určen k čištění úst. Nepoužívejte jej k žádnému jinému účelu. Pokud během používání dojde k nepohodlí nebo bolesti, přestaňte okamžitě používat a poraďte se se svým zubařem.

13.Tento produkt splňuje bezpečnostní normy pro elektromagnetická zařízení. Máte-li dotazy týkající se kardiostimulátorů nebo jiných implantovaných zařízení, poraďte se s lékařem nebo výrobcem zařízení před použitím.

14.Uchovávejte tento produkt mimo dosah dětí a dětí. Tento produkt má malé části, například "hrot hlavy kartáče" , které by se neměly spolknout. Při použití nového produktu nebo výměně hlavy kartáče zlékvidujte krytHlavy.

15.Používejte napájení s výkonem nepřesahujícím 15 W za normálních nebo neobvyklých pracovních podmínek.

Elektromagnetická pole (EMF)
ELEKTROMAGNETICKÁ KOMPATIBILITA

Toto zařízení splňuje všechny normy týkající se elektromagnetických polí. Jeho používání je bezpečné, pokud se s ním zachází správně podle pokynů uvedených v této příručce. Pokud máte kardie nulátor nebo jiné implantované zařízení, poraďte se před použitím s lékařem a výrobcem zařízení.

Postup čištění

Poznámka: Kartáček změní frekvenci každých 30 sekund, aby vám připomněl, že je třeba změnit oblast čištění. Když zas dosáhne 2 minut, kartáček změní frekvenci, aby se připomněl 3krát. Když zas dosáhne 4 minut, kartáček se automaticky zastaví. Doporučujeme čistit si zuby pokaždé alespoň 2 minuty. Čistěte zuby po částech a každou oblast čistěte přibližně 30 s.

Popis režimu



Setmě čištění **Každodenní čištění** **Režim bělení**

Setmě čištění: čistí zuby jemnou silou; vhodné pro citlivé dásně nebo začátečníky.

Každodenní čištění: Čištění zubů mírnou silou; vhodné pro běžné čištění.

Režim bělení: Čistení a bělení zubů velkou silou; vhodné pro hloubkové čištění.

Poznámka: Výchozí doba čištění je 4 minuty. Zubní kartáček se automaticky vypne po 4 minutách čištění.

Nabíjení

1.Zubní kartáček byl nabit při výrobě a je připraven k použití.
2. Když bliká červené LED kontrolka, nabijte prosím kartáček co nejdříve. aterie bude plně nabitá za 4 až 5 hodin.
3.Zubní kartáček nabijte pomocí napájecího adaptéru USB, který splňuje příslušné normy. Během nabíjení umístěte zubní kartáček do suchého prostředí.
4.Ujistěte kartáček nabít před úplným vybitím baterie.



Ochrana životního prostředí

Všechny výrobky označené tímto symbolem jsou odpadní elektrická a elektronická zařízení (OEEZ podle směrnice 2012/19/EU), která by se neměla míchat se směsným domovním odpadem.
Spíše byste měli chránit lidské zdraví a životní prostředí a odevzdat odpadní zařízení na určeném sběrném místě pro recyklaci odpadních elektrických a elektronických zařízení, které určí vláda nebo místní úřady. Správná likvidace a recyklace pomůže zabránit možným negativním důsledkům pro životní prostředí a lidské zdraví.
Prosím kontaktujte výrobce nebo místní úřady, kde získáte další informace o umístění a podmínkách těchto sběrných míst.

Varování: Dobíjecí baterii vyjměte až po vyřazení spotřebiče. Při odstranění baterie se ujistěte, že je ujištěné prázdná.

Informace o výrobku

Název produktu: P20 PRO Oscilační-Vibračního Elektrický čistící zubní kartáček
Značka: usmile
Model výrobku: usmile P20 PRO
Jmenovitý příkon: 5W
Jmenovitý příkon: 5V⎓ 1A
Krytí: IPX6
Spec:Fiacee baterie: Lithiová baterie 3.7V 2500 mAh
Výrobce: Guangzhou Stars Pulse Co., Ltd.
Kontakt na zákaznický servis: service@usmile.com
Vyrobeno v Číně

Poruchy a způsoby odstranění

Poruchy	Možné důvody	Odstranění
Nejde zapnout po stisknutí tlačítka ZAP/VYP.	Výrobek je ve stavu ochrany při nabíjení.	Přestaňte ho nabíjet
	Baterie je příliš vybitá.	Připojte napájecí kabel a výrobek nabijte.
Nelze nasadit hlavici kartáčku na hřídelku motoru	V konektoru je cizí předmět.	Pomocí nástroje cizí předměty z konektoru odstraňte.
	Na hřídelce motoru je cizí předmět	Odstraňte hřídelku motoru.
	Nejedná se o hlavici kartáčku usmile	Nahraďte ji hlavicí kartáčku usmile.
Hlavice kartáčku jen slabě vibruje	Hlavice kartáčku není správně nasazena.	Opětovně nasaďte hlavici kartáčku.
	Mezi hlavicí kartáčku a nabíjecím zařízením je cizí předmět.	Sejměte hlavici kartáčku a odstraňte cizí předměty ze konektoru.
Kontrolka baterie během nabíjení nesvítí.	Napájení není normální.	Správné připojte silové napětí
Doba fungování po nabití je příliš krátká.	Teplota prostředí je příliš nízká.	Výrobek nabíjejte a používejte při vnitřní teplotě 15°C-35°C.
	Doba nabíjení je příliš krátká	Nabijte výrobek.
Výrobek nelze zapnout.	Baterie je vybitá.	Nabijte výrobek.

Environmental Protection

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health.
Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.
Warning: Only remove the rechargeable battery when you discard the appliance. Make sure the battery is completely empty when you remove it.

CE This product is charged by Type-C charging cable, adapter output voltage/current is 5V⎓1A, **if** you use a third-party charger, the recommended output voltage/current of the adaptor is 5V⎓1A, and the adapter shall be CE approval type. Using unauthorized charger may cause danger.
Hereby, our company of Guangzhou Stars Pulse Co., Ltd., declares that this product is in compliance with the applicable Directives and European Norms and amendments.

FC This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
The transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Nastavení režimu Letadlo

Vstup do režimu letadla: stisknutím přepínacího tlačítka na 5 sekund přejděte do režimu letadla.
Ukončení režimu letadla: Stiskněte tlačítko pro ukončení režimu letadla.Když je zubní kartáček v režimu letadla, krátkým stisknutím této klávesy režim letadla ukončíte.

Nastavení systému

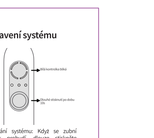

Resetování systému: Když se zubní kartáček probudí, dlouze stiskněte přepínací tlačítko na 10 sekund, dokud nezačne blikat bílá kontrolka, abyste resetovali systém.

Čištění a skladování

Po vyčištění a oteření umístěte tento výrobek na chladný a suchý povrch nebo jej zavěste na stojan, aby nedošlo k poškození výrobku v důsledku naklonění nebo pádu.
Hlavici kartáčku pravidelně vyměňujte, obecně se doporučuje její výměna každé 3 měsíce.

Stahování aplikace

Naskenujte QR kód pomocí mobilního telefonu nebo vyhledejte „usmile " na trhu s aplikacemi a stáhněte a nainstalujte aplikaci; stáhněte a nainstalujte aplikaci a vyzkoušejte si nastavení parametrů elektrického zubního kartáčku a další funkce.
Pokud jste si stáhli aplikaci usmile do mobilního telefonu, ujistěte se, že je verze aplikace nejnovější.

Přehled jednoleté omezené záruky

Zaručujeme, že příložené hardwarové výrobky, materiály a zpracování jsou bezchybné. Pokud se výrobek porouchá do 365 dnů od data převzetí výrobku, zaručujeme jeho bezplatnou výměnu.Nepokrýváme záruku na poškození vzniklá během odtržení, nehodami nebo nesprávným používáním. Podle předložení platné reklamace, která podléhá závazným podmínkám uvedeným v elektronické příručce usmile, vaše hardwarové zařízení podle potřeby opravíme, vyměníme nebo vrátíme.

Description of Parts

1.After the brush head is mounted, there is a gap of 0.5 mm~1 mm between its bottom and the handle to ensure that the brush head vibrates normally.
2. Turn-on: Short press the Switch/Mode button to turn on the toothbrush.
3.Mode switch: Press the button again within 4s after start up to switch between modes.
4.Pause: Press the button to pause; after the toothbrush continues working for 4s in any mode, it turns off automatically after a 10-second pause.
5.Turn-off: Press the button to turn off the toothbrush after switching between all modes within 4s after startup.
6.Light ring: divided into four areas, representing the four major areas of the oral cavity: upper left area, lower left area, upper right area, lower right area). After brushing your teeth, the light ring gives feedback on the current brushing situation; and the missed brushing areas light up in red.
7.Mode indicator: From left to right, 1 light, 2 lights, and 3 lights, represent Gentle Clean, Daily Clean, and Whitening Mode.
8.Power off: Automatically power off after pausing or when the brushing timer ends if there is no further action for 10 sec.

Size: 26.8×27.72×250.45 mm (with brush head installed)

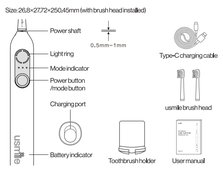

Safety Precautions

In order to avoid hazards, such as faults, electric shocks, bodily injury, fire and equipment or property damage, please observe the following safety precautions:

1.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2.This product must only be supplied at safety extra low voltage corresponding to the marking on this product.
3.Do not expose the appliance or battery to excessive temperatures. Be aware of the risk of terminals of the battery-operated appliance or battery being short circuited by metal objects.
4.This appliance contains batteries that are only replaceable by skilled persons.
5.Instructions for class II appliances states that it must only be supplied at SELV.
6.Do not disassemble this product unless for disposal. Disconnect the power supply before removing battery. Exhaust battery power before disassembling. Use proper tools when disassembling the plastic case to avoid damaging the battery or causing a short-circuit. After removal, cut the battery wire(s) and put the battery into the proper environmental receptacle for safe processing.
7.This product contains a built-in rechargeable battery. Do not place into fire, sunlight, expose it to high temperatures, or charge within a humid area. It could lead to battery leakage, overheating, and/or an explosion. Once charging is complete, detach charging cable and cut off power.
8.Do not modify, repair, or disassemble this product by yourself. Do not use this product while bathing, showering, or in a sauna. While charging, ensure that the charging cable and device charging interface stays dry and clean. Do not attempt to remove stains or impurities as it could compromise the safety of the charging process.

9.Consult your dentist before using this product if you have severe periodontitis, are undergoing dental treatment, or are experiencing oral discomfort. People using orthodontics, have had dental work, or tooth implants should listen to their dentist.
10.When beginning to use this product, slight bleeding of the gums could occur while they become accustomed to the cleaning process. If this bleeding persists for more than two weeks, bleeding that persists for more than two weeks can indicate gum abnormalities. If that case, discontinue use of product and consult with your dentist.
11.Check for signs of damage before using this product. If it is broken, cracked, rusted, etc., please stop using it at once. If the power plug or cord is damaged, please replace it before using.
12.This product is designed for cleaning your mouth. Do not use it for any other purposes. If you feel discomfort or pain during use, please discontinue use and consult your dentist immediately.
13.This product complies with electromagnetic device safety standards. For any questions related to pacemakers or other implanted devices, consult your physician or the device's manufacturer before using.
14.Keep this product out of the reach of children and infants. This product has small parts such as the "Brush Head Cover" that should not be swallowed. When using the product new or when replacing the brush head, discard the brush head cover.
15.Use a power supply with an output of no more than 15W under normal or abnormal working conditions.
Reminder: All images of products, parts and user interfaces in this manual are for illustration and reference purposes only. The actual product may vary in the event of product updating and upgrading.

Electromagnetic fields (EMF)
ELECTROMAGNETIC COMPATIBILITY

This device complies with all standards regarding electromagnetic fields. It is safe to use if handled properly according to the instructions provided in this manual. If you have a pacemaker or any other implanted device, consult your physician and the device manufacturer prior to use.

Brushing Procedure

Note: The toothbrush will change frequency every 30 seconds to remind you to change the brushing area. When the time reaches 2 minutes, the toothbrush will change the frequency to remind 3 times. When the time reaches 4 minutes, the toothbrush will automatically stop. We recommend that you brush your teeth for at least 2 minutes each time. Clean each segment of the teeth for about 30 sec.

Mode Description

Gentle Clean **Daily Clean** **Whitening Mode**

Gentle Clean: Clean teeth with gentle force, suitable for sensitive gums or for new users to adapt.

Daily Clean: Clean teeth with moderate force, suitable for daily cleaning.

Whitening Mode: Clean and polish teeth with strong force, suitable for deep cleaning.

Note: The default brushing time is 4 minutes. The toothbrush will automatically turn off after 4 minutes of brushing.

About Charging

1.The toothbrush has been charged before factory release, and is ready for use.
2.When the LED flashes red, please charge the toothbrush as soon as possible. The battery will fully charge in 4 to 5 hours.
3.Charge the toothbrush with a USB power adapter that complies with the applicable standards. Place the toothbrush in a dry environment while charging.
4.Try to charge the toothbrush before the battery runs out.

Product Information

Product name: P20 PRO Oscillating-Vibrating Electric Toothbrush
Brand name: usmile Product model: usmile P20 PRO
Rated input power: 5W Rated input: 5V⎓1A
Waterproof level: IPX6
Battery specification: Lithium battery 2500mAh
Manufacturer: Guangzhou Stars Pulse Co., Ltd.
Customer service contact: service@usmile.com
Made in China

Faults and Processing Methods

Faults	Possible Reasons	Solutions
Failure to turn it on by pressing the ON/OFF button.	The product is in the charging protection status.	Stop charging it
	The battery is too low.	Connect to the power cable to charge the product.
Failure to insert the brush head into the drive shaft.	There is foreign matter in the jack.	Use a tool to take the foreign matters out of the jack.
	There is foreign matter on the drive shaft.	Clean the drive shaft.
	The brush head isn't a usmile product.	Replace it with a compatible usmile brush head.
The brush head vibrates weakly.	The brush head isn't attached in place.	Reattach the brush head.
	There is foreign matter between the brush head and the brush Holder.	Get the brush head out to remove the foreign matters.
The battery indicator isn't on during charging.	The power connection is abnormal.	Properly connect the power cord.
The product functions for a very short time after charging.	The environmental temperature is too low.	Charge and use the product indoors at 15° to 35°.
	The charging time is too short.	Charge the product.
The product doesn't turn on.	The battery is low.	Charge the product.

Flight Mode Settings

Enter Flight Mode: Long press the power button for 5 seconds to enter flight mode.
Exit Flight Mode: When the toothbrush is in flight mode, short press the power button to exit flight mode.

System Settings

System Reset: When the toothbrush is awake, long press the power button for 10 seconds until the white light flashes to reset the system.

Cleaning and Storage

Please place this product on a cool and dry surface or hang it on a rack after cleaning and drying to avoid tilting over or falling, which may cause damage to the toothbrush.
Replace the brush head regularly, generally every 3 months.

Download the App

Scan the QR code with your phone or search for usmile Oral Care in the App Store to download and install the App. Download and install the App to modify toothbrush parameters or other functions.
If the usmile Oral Care App is already downloaded on your phone, please ensure it is the latest version.

One-Year Limited Warranty Summary

usmile guarantees that the attached hardware product is free from defects in materials and workmanship for 365 days from the date of receipt. Any product malfunction occurring within this period is eligible for our free replacement guarantee. usmile does not cover damage caused by normal wear and tear, accidents, or misuse. According to the warranty policy provided in the usmile electronic manual, when you submit a valid claim under this warranty policy, usmile will, at its discretion, repair, replace, or refund your hardware device.