英语

Product Name:Mini PC
Model No.:MP200
Brand Name:Blackview

Follow Blackview community, a place where you can share and discuss with Blackview user keep posted with most up-to-date news

Blackview
Enjoy Smart Life

MP200

https://www.blackview.hk

English

User Manual

Dear users: Thank you for using this product. For your safety and benefit, Please read this product manual and all the accompanying materials carefully before using the product!

Disclaimer:

1. Please make sure to use the original power supply, and our company will not bear any responsibility for any problems or failures caused by any third-party adapters.
2. Users can use music videos, pictures and software provided by third parties, but we do not assume any responsibility for copyright issues or software failures.
3. If the product breaks down, we will strictly abide by the warranty clauses, but we will not assume any responsibility for any property loss or economic loss caused by product quality.
4. The equipment is supplied with the system software at the factory, which can be used after actual testing. However, if it is deleted or not defined when looking for compatibility or other issues, it will not incur any impact on the machine. Please note that it is not an issue related to product quality.
5. The company reserves the right to improve the product. If there is any change in product specification and design, no further notice is required! Please refer to the real object.

Quick installation

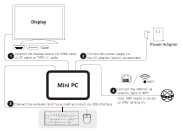

1

Packing List

Mini PC×1	HDMI Cable×1
User Manual×1	Base of Mini PC × 1
Power adapter × 1	Power cord × 1

Interfaces and buttons



2

The following practices may only be operated with power off

Disassembling the upper cover of main unit (as shown in the figure)



1. Unscrewing with a screwdriver
2. Take out by pushing the upper cover of main unit

Installation of DDR memory (as shown in the figure)

1. Insert the memory bar into the socket and slide it into place at an angle of 30°.

3

Installation of SSD card (as shown in the figure)

1. Align the groove on SSD with the bayonet of M.2 slot on the motherboard.

2. Slide SSD in and secure it with screws.



4

Installation of hard disk (as shown in the figure)

1. Disconnect the power cord, find the SATA terminal wire on the bottom case, remove the terminal wire sticker, and insert it into the hard disk interface.



2. Secure the hard disk to the bracket, tighten the screws, organize the SATA terminal wire, install the hard disk on the bottom case, and tighten the screws.



Attention: The SATA terminal wire may not be excessively bent, and the SATA terminal wire interface may not be inserted reversely.

5

Tips and FAQ

1. Turn off your Mini PC
If your Mini PC does not respond, press the power button for at least (4-6) seconds until your Mini PC is turned off.

2. Boot into the system for the first time
★ When you start-up your PC for the first time, you will be guided to configure your Windows operating system.

★ Start-up your Mini PC for the first time: Press the PC's power button. Wait for a few minutes until the installation interface appears.
Step 1: Select language/country/region
Step 2: Select the keyboard layout, click confirm
Step 3: Select the second inputting method, which can be "skipped"
Step 4: Networking: After selecting wifi, enter password to connect it. Or choose to plug network cable for connection. (Networking will be updated automatically, and the update process will stay on an interface for a long time, which prolong the start-up time. (Skipping network connections is strongly recommended)
Step 5: Accept License Agreement
Step 6: Set User Name and Password Once the installation process is complete, the desktop will appear.

3. Connect WiFi
●Connect Wi-Fi. Connect PC to the Wi-Fi network using the following steps:
●Click the icon from the taskbar.
●Click the wifi icon to turn on the wi-fi.
●Select an access point in the list of available Wi-Fi connections. Select one of the connections to start the network connection.
Note: You may be prompted to enter a security key to activate a Wi-Fi connection.

4. Enter the BIOS setting
●The BIOS (Basic Input/ Output System) is the first software loaded when the Mini PC starts.
●Press the "F2" or "Del" or "ESC" key.
●Under normal circumstances, the default BIOS settings apply in most cases to ensure optimum performance. Do not change the default BIOS settings. Except for the following situation.
(You have installed new system components that require further BIOS settings or updates)
●Warning: Inappropriate BIOS settings may cause instability or startup failure. We strongly recommend that you carefully change the BIOS settings with the help of technical service personnel.

6

Precautions

1. Please take extra care when executing operations that may cause damage or loss of documents.
2. Pay attention to virus protection during the use of mini-host, and try to use virus free.
3. Please turn off the mini-host and disconnect the power supply if you do not use it for a long time.
4. Do not switch on and off the mini-host frequently in a short period of time. It is recommended that the interval between two startup times should be at least 10 seconds, preferably not less than 60 seconds.
5. Pay attention to moisture-proof, and keep the use environment clean and ventilated. If there is dust on the
host machine, please wipe it with a dry soft cloth.
6. Do not place the machine in the place of strong light to mini-host, and do not approach strong magnetic field.
7. Do not get water, food and other fluids onto the mini-host, and do not pull the data cable, power cord, etc.

7

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance
with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment
Radiation Exposure Statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

8

俄语

Shenzhen DOKE Electronic Co.,Ltd
Address:801, Building3, 7th Industrial Zone, Yuli Community, Yutang Road, Guangming District, Shenzhen, China

Русский

Руководство пользователя

Уважаемые пользователи! Спасибо, что пользуетесь этим продуктом. Для вашей безопасности и максимальной пользы, пожалуйста, внимательно прочтите руководство пользователя и все сопутствующие материалы перед использованием продукта!

Заявление об ограничение ответственности

1. Пожалуйста, убедитесь, что вы используете оригинальный блок питания, наша компания не несет никакой ответственности за любые проблемы или сбои, вызванные любым сторонним адаптером.
2. Пользователи могут использовать музыкальные видео, изображения и программное обеспечение, предоставленное третьими сторонами, но мы не несем никакой ответственности за проблемы с авторским правом или сбои программного обеспечения.
3. В случае поломки товара, мы будем строго соблюдать условия гарантии, но мы не будем нести никакой ответственности за любой материальный или экономический ущерб, который может быть причинен качеством продукции.
4. Оборудование поставляется со встроенным программным обеспечением на заводе, которое можно пользовать после реальных испытаний. Однако, если оно будет или не будет удалено при поиске совместимости или другие случаи, это не повлияет на машину. Обратите внимание, что это вопрос, не связан с качеством продукта.
5. Компания оставляет за собой право улучшать продукт. Если есть изменения в спецификации и конструкции продукта, никакого дополнительного уведомления не требуется! Пожалуйста, обратитесь к реальному объекту.

Быстрая установка

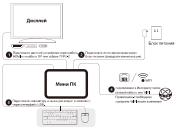

8

Товарная накладная

Мини-ПК*1	Кабель HDMI*1
Руководство пользователя*1	Основание для мини-ПК *1
Адаптер питания *1	Шнур питания*1

Интерфейс и кнопки



9

Следующие операции должны проводиться при выключенном питании

Снять верхнюю крышку главного устройства (как показано на рисунке).



1. Использовать отвертку, чтобы открутить винты
2. Толкать и потянуть за верхнюю крышку главного устройства, чтобы снять.

Установка DDR-памяти (как показано на рисунке)

1. Вставить планку ОП в гнездо ОП, вставить планку ОП под углом 30 градусов и задвинуть ее на место.



10

Установка карты SSD (как показано на рисунке)

1. Выровнять выемку на твердотельном жестком диске, со слотом M.2 на материнской плате.

2. Вставьте твердотельный жесткий диск и закрепите его винтами.



11

Установка жесткого диска (как показано на рисунке)

1. Отсоединив шнур питания, найдите клеммный провод SATA на корпусе нижней части, разорвите стикер на проводе клеммы и вставьте он в интерфейс жесткого диска, чтобы завершить.



2. Закрепите жесткий диск на кронштейне жесткого диска и затяните винты, проведя в порядке провод клеммы SATA, установите жесткий диск на корпус нижней части и затяните винты, чтобы завершить установку.



Примечание: провод клеммы SATA не может быть чрезмерно изогнут, интерфейс провода клеммы SATA не может быть ошибочно подключен.

12

Советы и часто задаваемые вопросы

1. Выключите мини-ПК
Если Ваш мини-ПК не отвечает, нажмите и удерживайте кнопку питания не менее (4-6) секунд, пока мини-ПК не выключится.

2. Войдите в систему при первом включении
● Если Ваш мини-ПК не отвечает, нажмите и удерживайте кнопку питания, пока Ваш мини-ПК не будет выключен.
● При первом включении ПК вам будет предложено настроить операционную систему Windows. Первый запуск вашего мини-ПК: Нажмите кнопку питания ПК. Подождите несколько минут, пока не появится интерфейс установки.
Шаг 1: Выберите язык/страну (регион)
Шаг 2: Выберите метод ввода и нажмите «Подтвердить»
Шаг 3: Выберите второй метод ввода, который можно «пропустить».
Шаг 4: Сеть. После выбора Wi-Fi введите пароль для подключения. Или выберите подключение сетевого кабеля для подключения. (Сеть будет обновляться автоматически, и процесс обновления будет оставаться на интерфейсе в течение длительного времени, что продлит время запуска. (Настоятельно рекомендуется пропускать сетевые подключения.)
Шаг 5: Примите лицензионное соглашение
Шаг 6: Установите имя пользователя и пароль. После завершения процесса установки появится рабочий стол.

3. Подключить Wi-Fi
●Подключите ПК к сети Wi-Fi, выполнив следующие действия.
●Выберите значок из панели задач.
●Щелкните значок вы-Fi, чтобы включить Wi-Fi.
●Выберите точку доступа в списке доступных соединений Wi-Fi.
Выберите одно из подключений, чтобы запустить сетевые подключения.
Примечание: У Вас могут запросить ввести ключ безопасности для активации подключения Wi-Fi.

4. Войдите в настройки BIOS
●BIOS (базовая система ввода/вывода) — это первое программное обеспечение, которое загружается при запуске мини-ПК.
●Войдите в BIOS: нажмите клавишу «Del» или «ESC».
●В нормальных условиях для обеспечения оптимальной производительности в большинстве случаев применяются настройки BIOS по умолчанию. Не изменяйте настройки BIOS по умолчанию. За исключением следующих обстоятельств.
(Вы установили новые системные компоненты, требующие дополнительных настроек или обновления BIOS.)
●Предупреждение! Неправильные настройки BIOS могут привести к нестабильности или сбою запуска. Мы настоятельно рекомендуем изменять настройки BIOS только с помощью персонала технической службы.

13

Меры предосторожности

1. Будьте особенно осторожны при выполнении операций, которые могут привести к повреждению или потере документов.
2. Обратите внимание на защиту от вирусов при использовании мини-хоста и попробуйте не использовать антивирусный брандмауэр.
3. Пожалуйста, выключите машину и отключите питание, если вы не используете его в течение длительного времени.
4. Не включайте и не выключайте машину часто в течение короткого периода времени. Рекомендуется, чтобы интервал между двумя запусками составлял не менее 10 секунд, предпочтительно не менее 60 секунд.
5. Обратите внимание на влагонепроницаемость и держите среду использования чистой и проветриваемой. Если на хост-машине есть пыль, протрите ее сухой мягкой тканью.
6. Избегайте прямого воздействия сильного света на мини-хост и не приближайтесь к сильному магнитному полю.
7. Не допускайте попадания воды, еды и других жидкостей на мини-хост. А также не тяните за данные кабель, шнур питания и т.д.

14